




INSTALLATION MANUAL CANOPY ISUZU D-MAX ALL NEW 2020

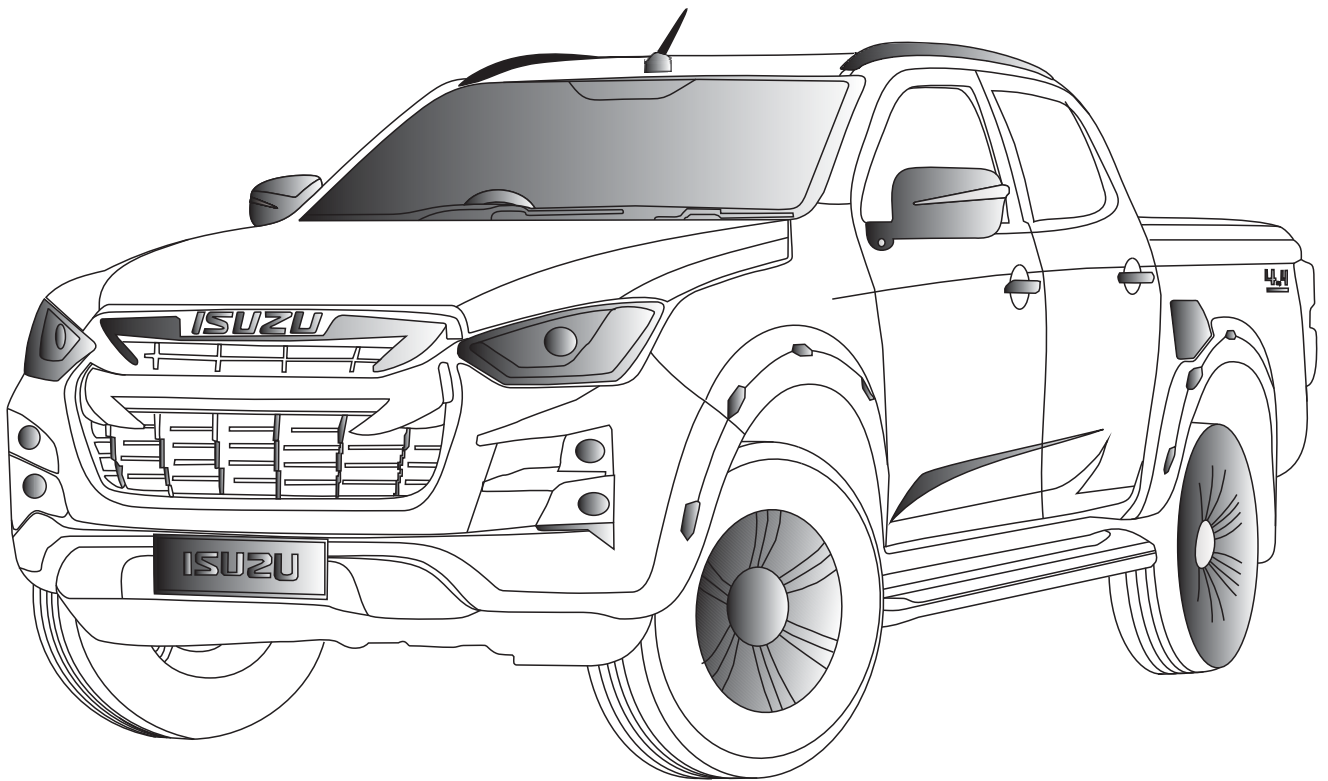



AEROKLAS CO., LTD.

62 Soi Bangna-Trad 25, Bangna-Trad Rd. Bangna, Bangkok 10260 THAILAND.
Tel: (662) 7443020 Direct Line: (662) 7443034-5 Fax: (662) 7443033
www.aeroklas.com E-mail: webinfo@aeroklas.com

STYLISH

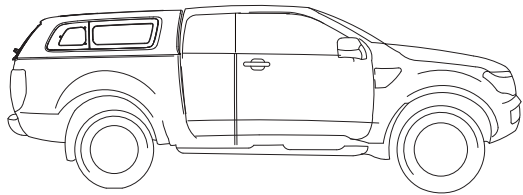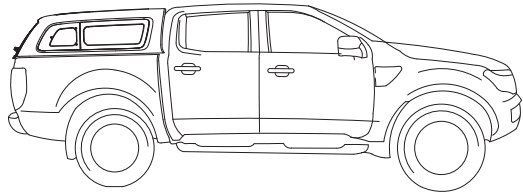

COMMERCIAL

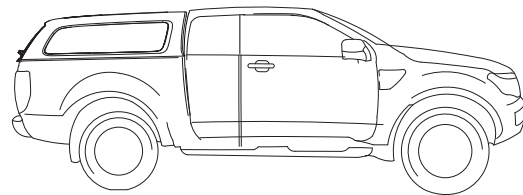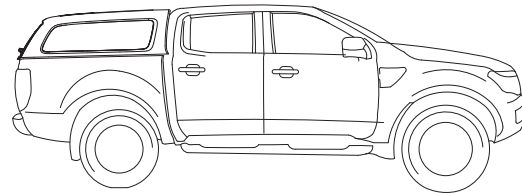


D/C

SP/C



 X4




X6




X6 (OPTIONAL)



X3

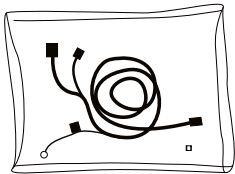


X1

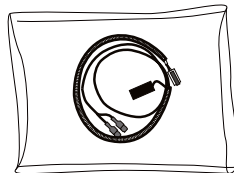

X1

(OPTIONAL FOR DEMISTER)

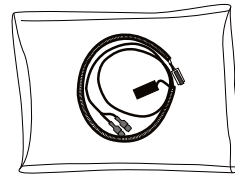


X1

(OPTIONAL FOR RKE)



SPECIAL TOOLS





No.10,12

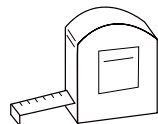



No.5

  


42 mm.

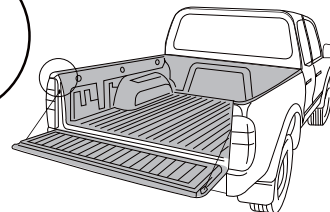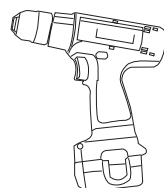

1-10

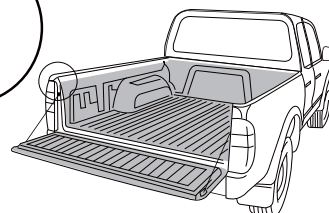
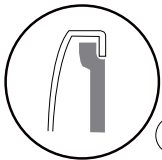


1-10





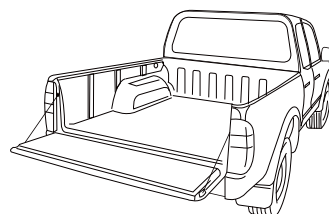


1-10



1

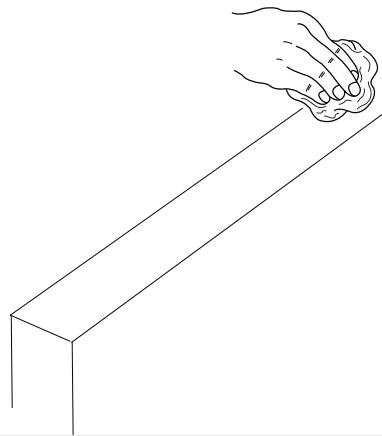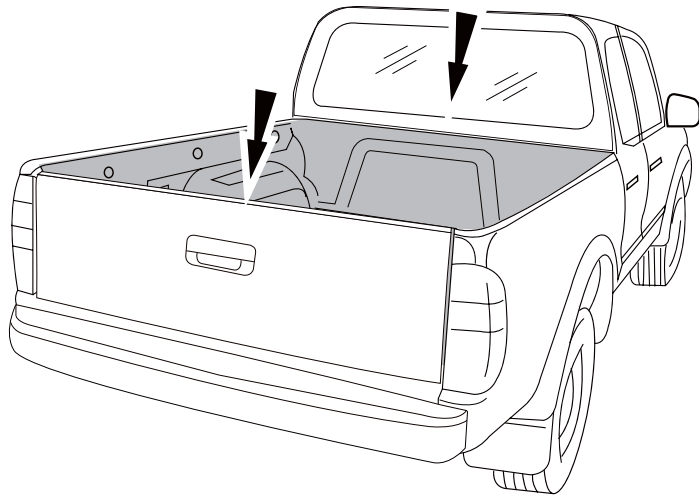


2

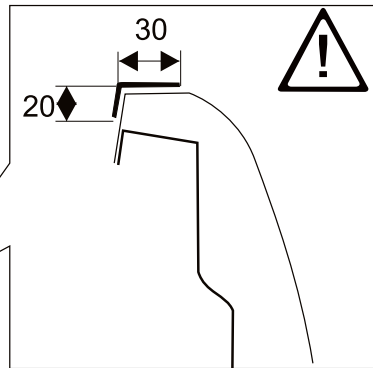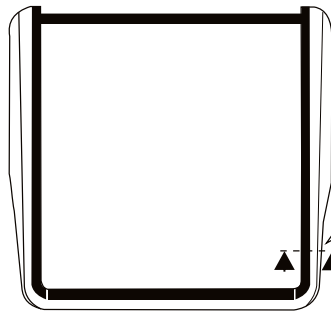
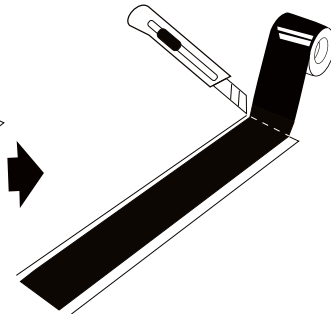
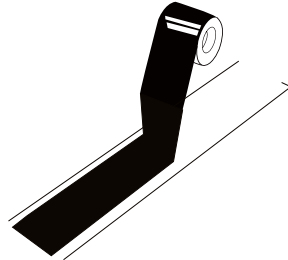
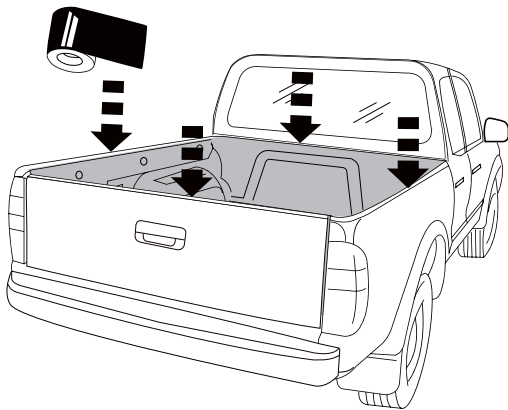


3


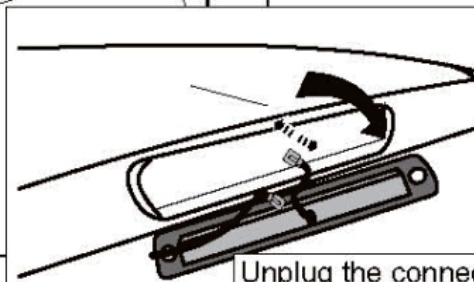
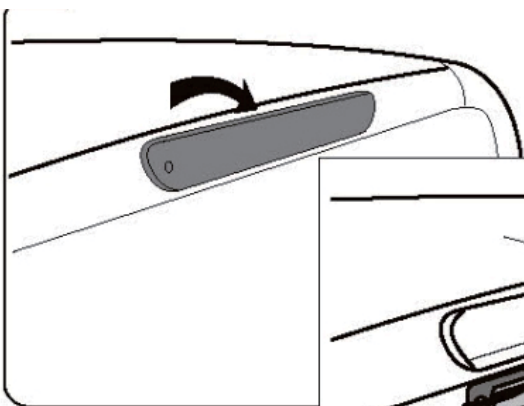


Unplug the connector

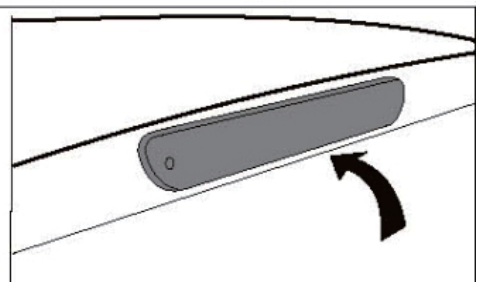

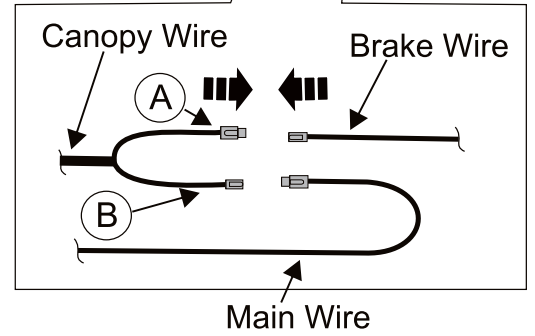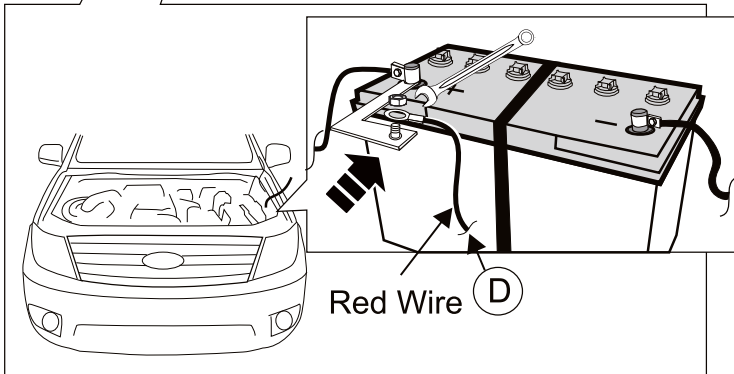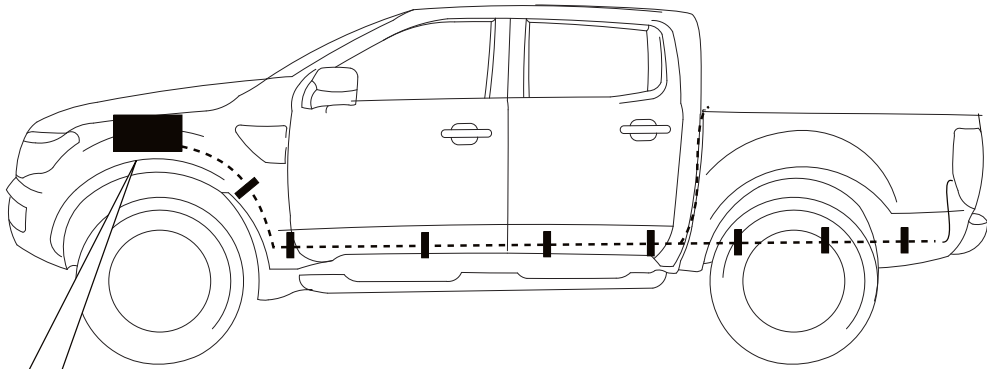
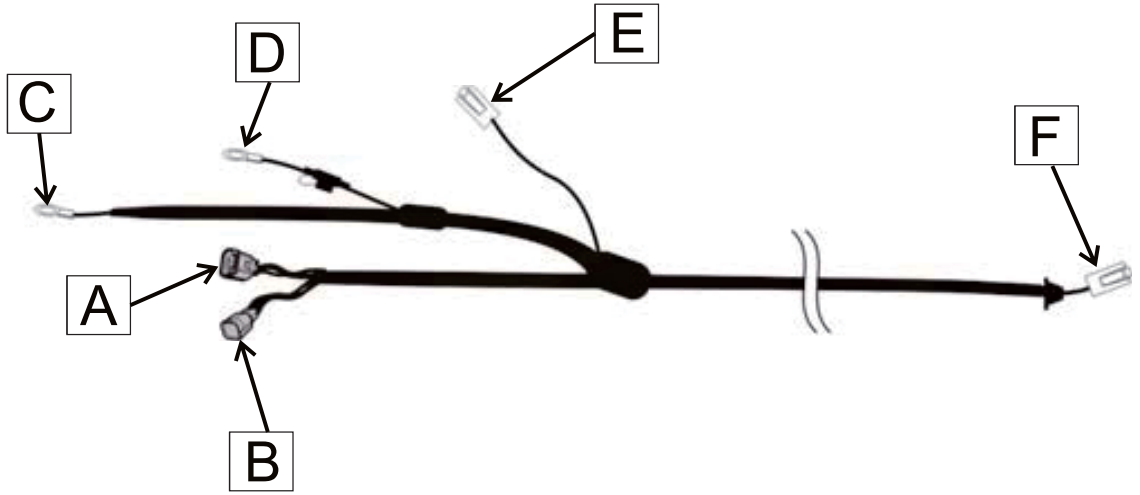


 4.1

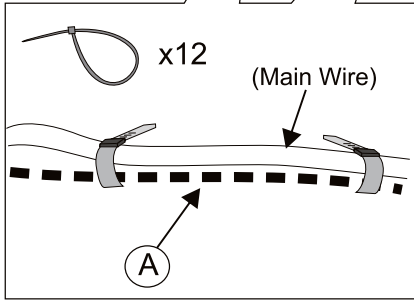
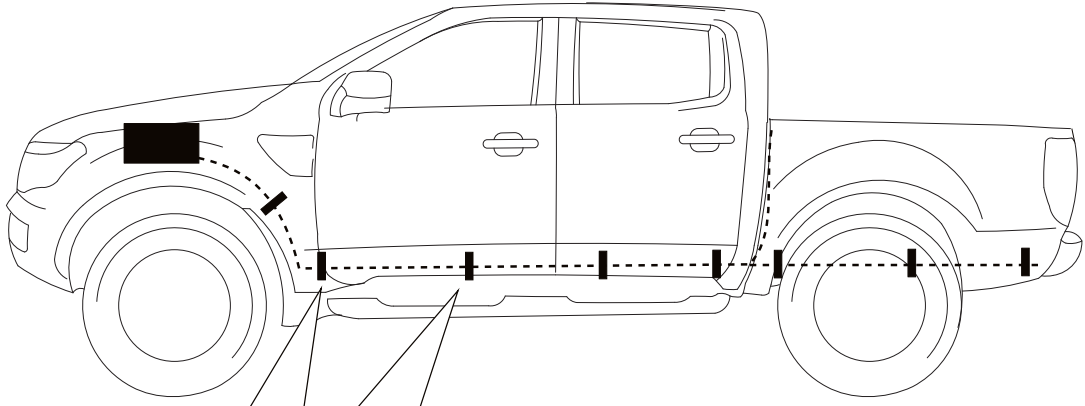


4.2



OPTIONAL FOR DEMISTOR

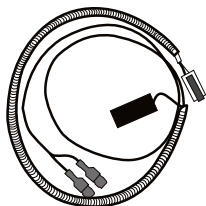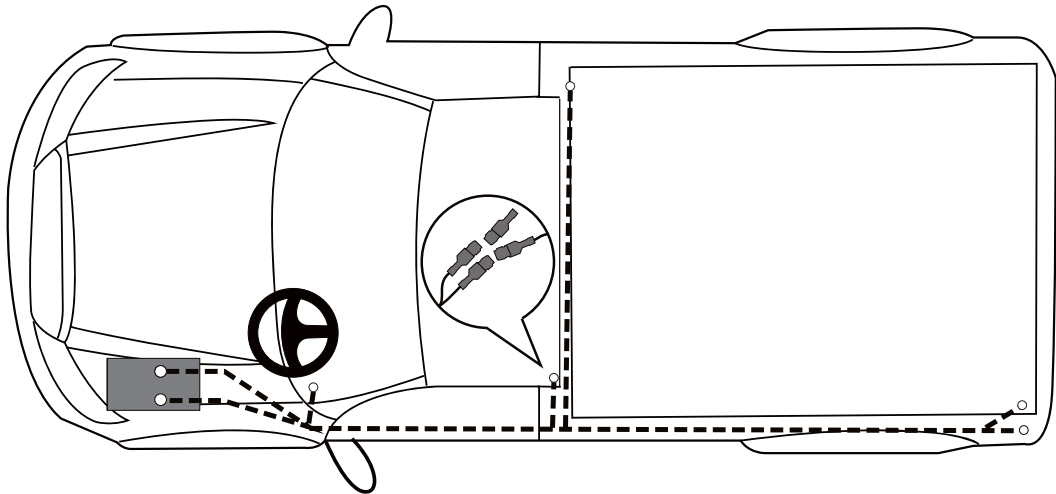


5

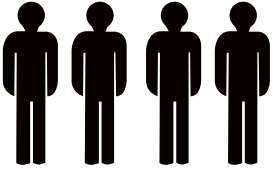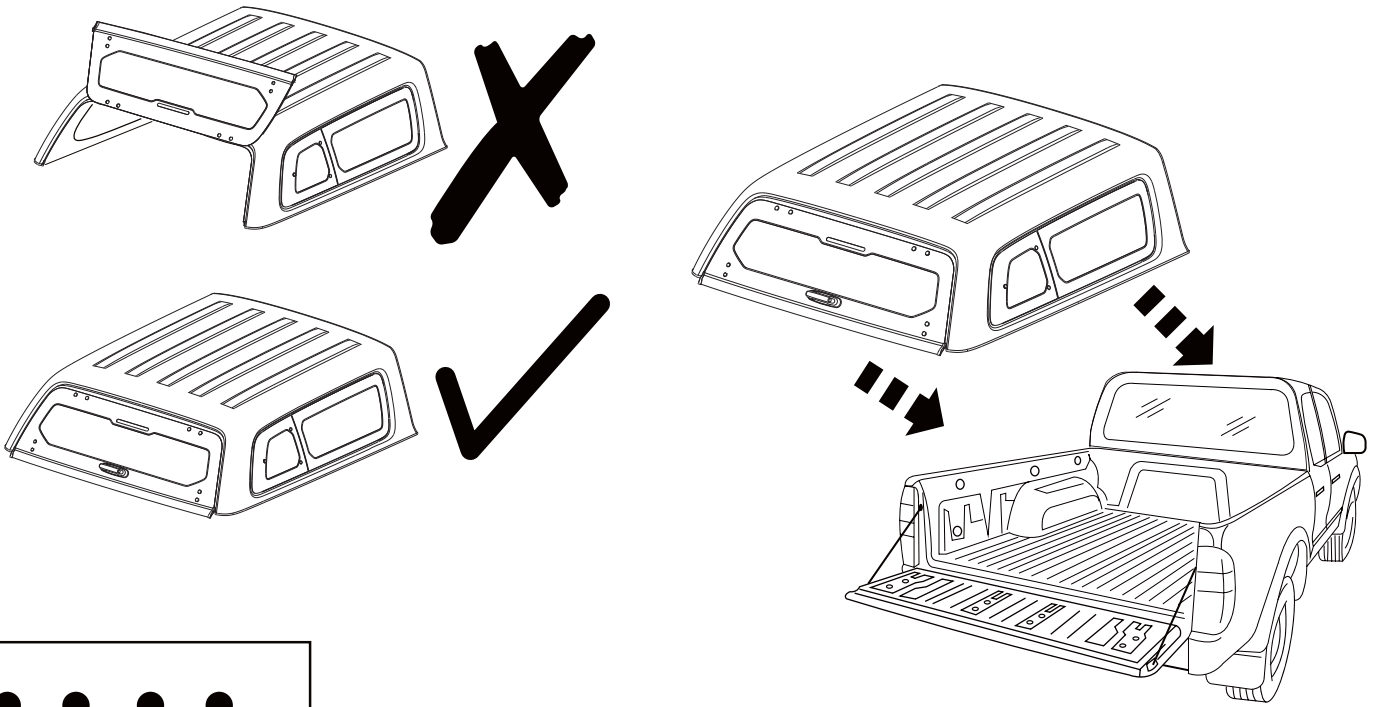


6

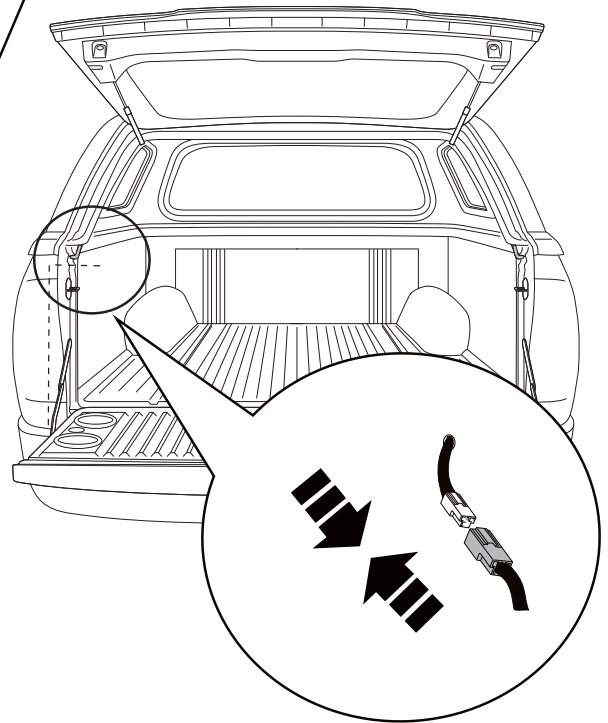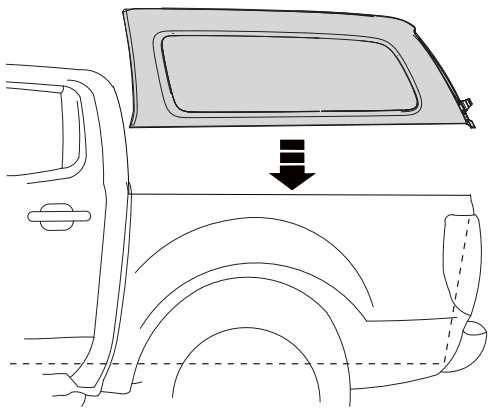



6.1

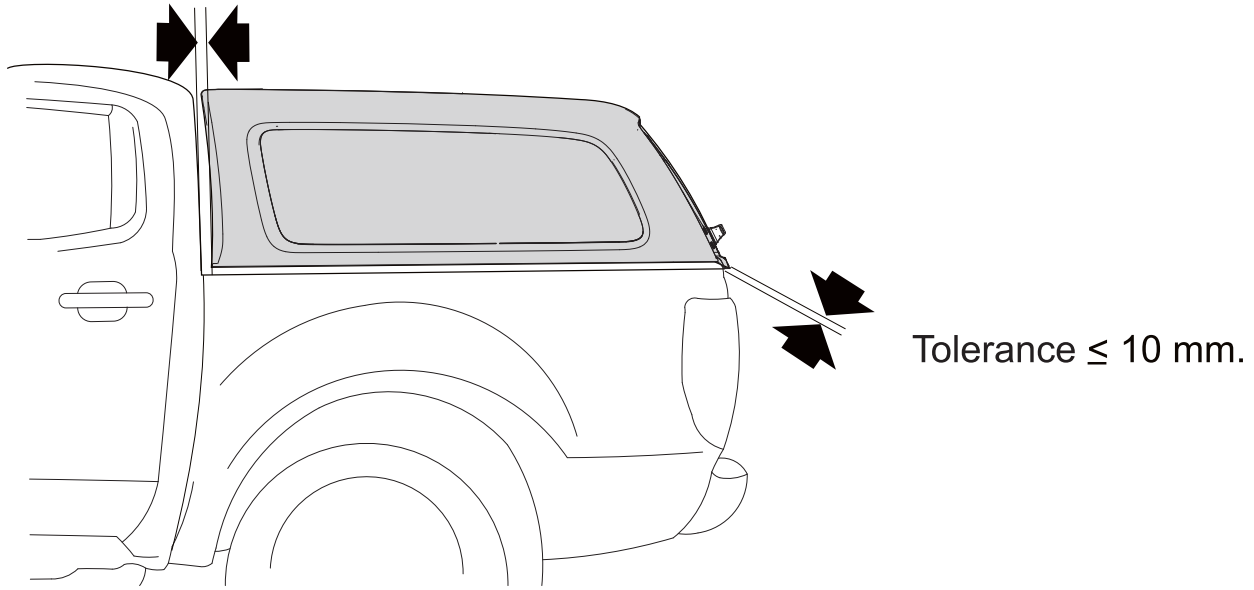


    
6.2

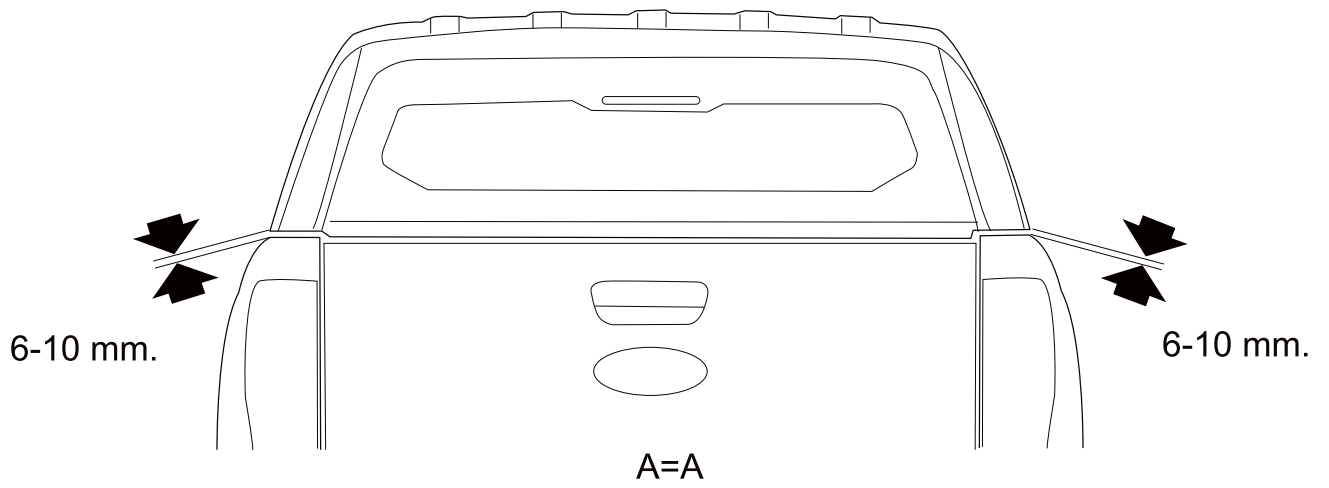




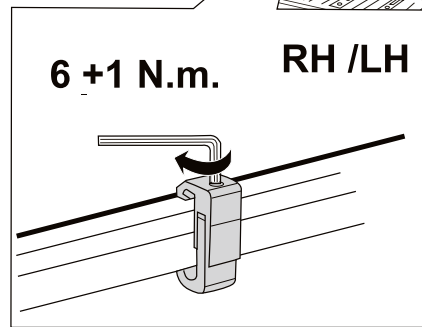
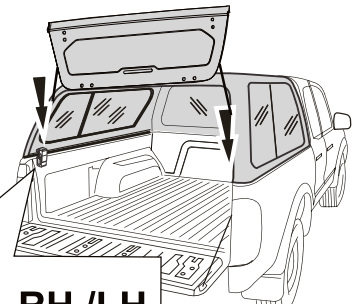
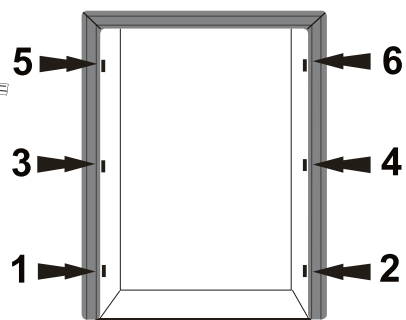
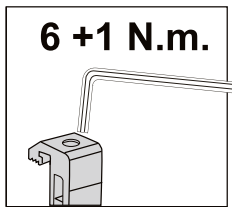
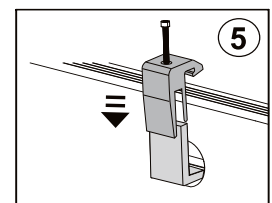
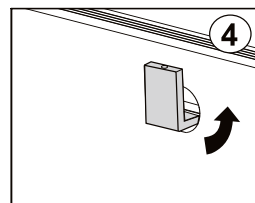
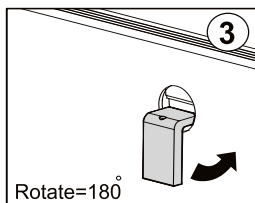
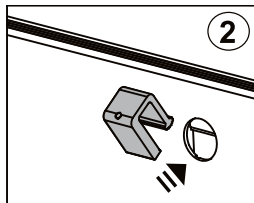
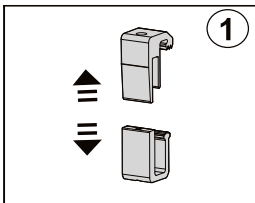
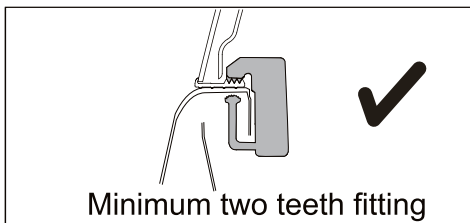
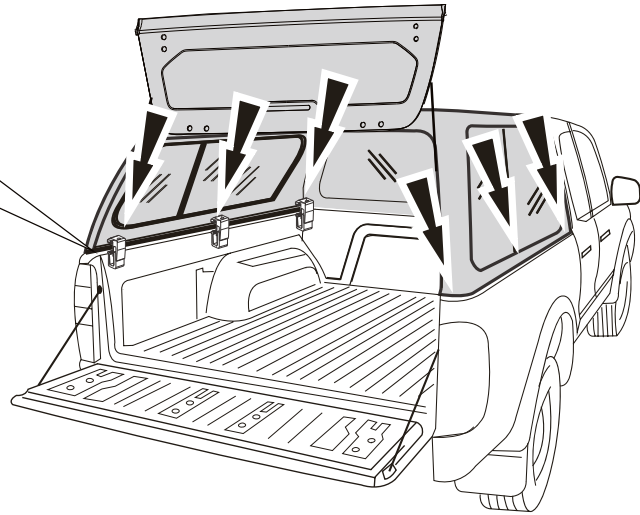
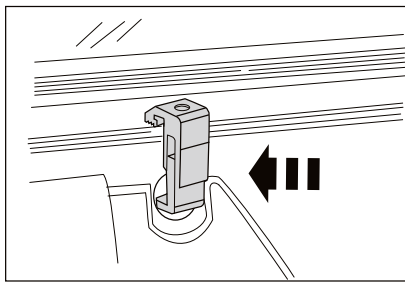
 x 6




 x 6





| | | |
|---|--|---|
|  |  |  |
| 150 | 540 | 540 |
| 160 | 690 | 690 |



9

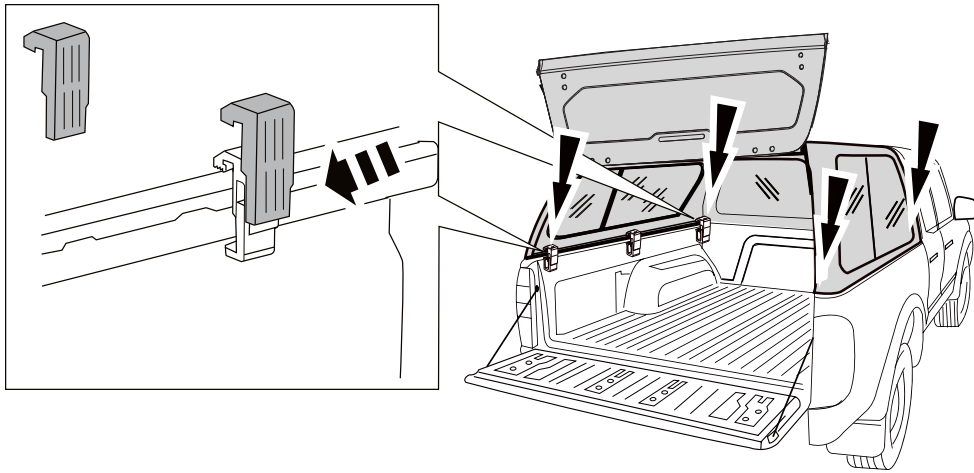


10

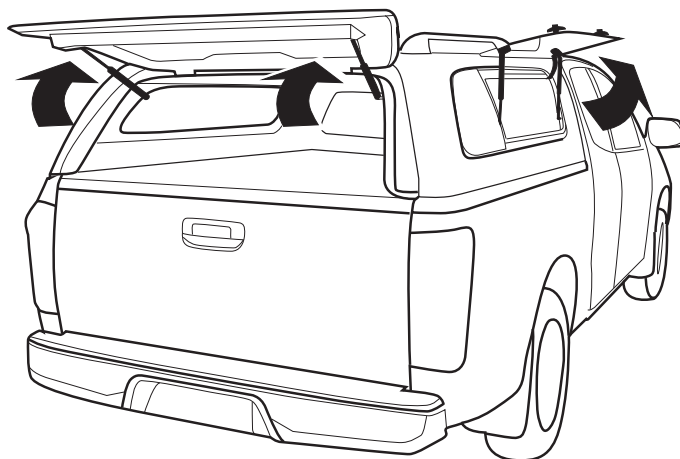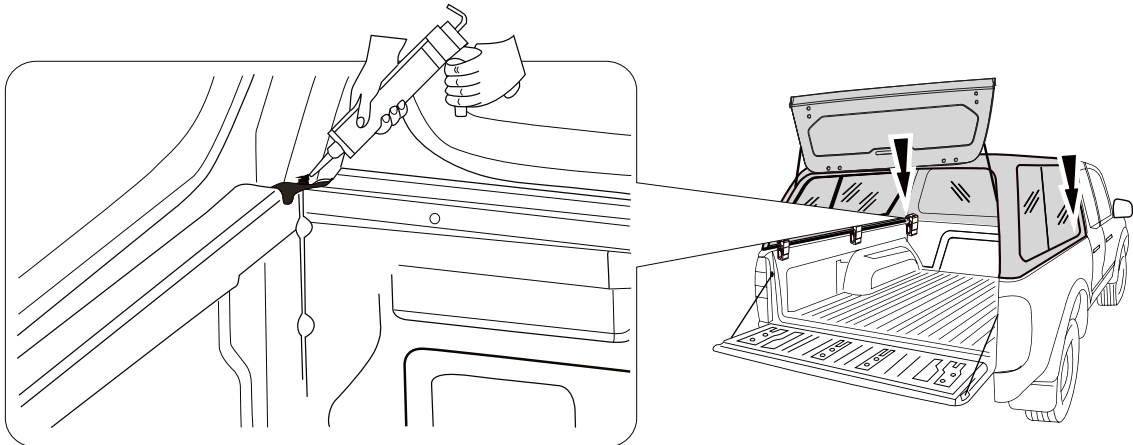

WARNINGS!



 5000 Km
3000 Miles




WARNING

Do not drive the vehicle at speed with the tailgate opened



5000 Km
3000 Miles

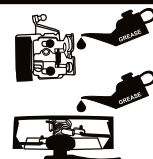


WARNING

Heated rear screen should be turned off after defrosting
Not for extended use




Wiring diagram for ISUZU d-max all new

Power electric wires

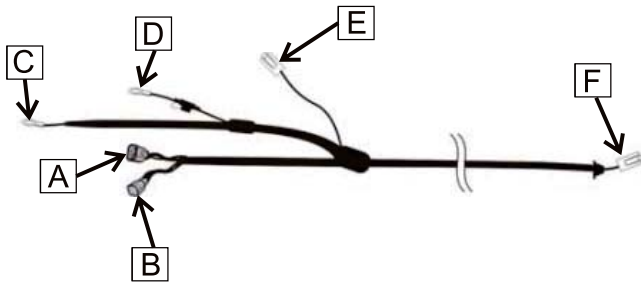


Demister (Optional)

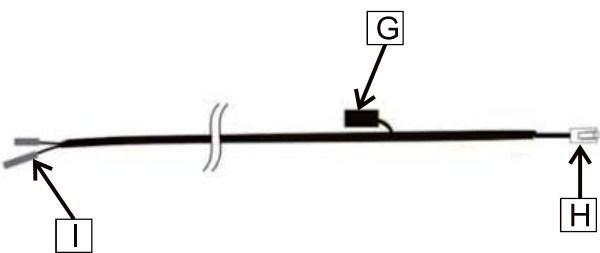

| Point | Photo | Function | Referencemaual |
|-------|-------|--|----------------|
| A | | Connect to Rear tail lamp | |
| B | | Connect to Rear tail lamp | |
| C | | Connect to Battery cathode | |
| D | | Connect to Battery anode | |
| E | | Connect to Demister(H) (Optional) | |
| F | | Connect to canopy | |
| G | | Relay & Fuse | |
| H | | Connect to power Electricwires(E) | |
| I | | Connect to Vehicle rear glass demister | |

AEROKLAS

**Remote Keyless Entry CANOPY
ISUZU D-MAX ALL NEW 2020**

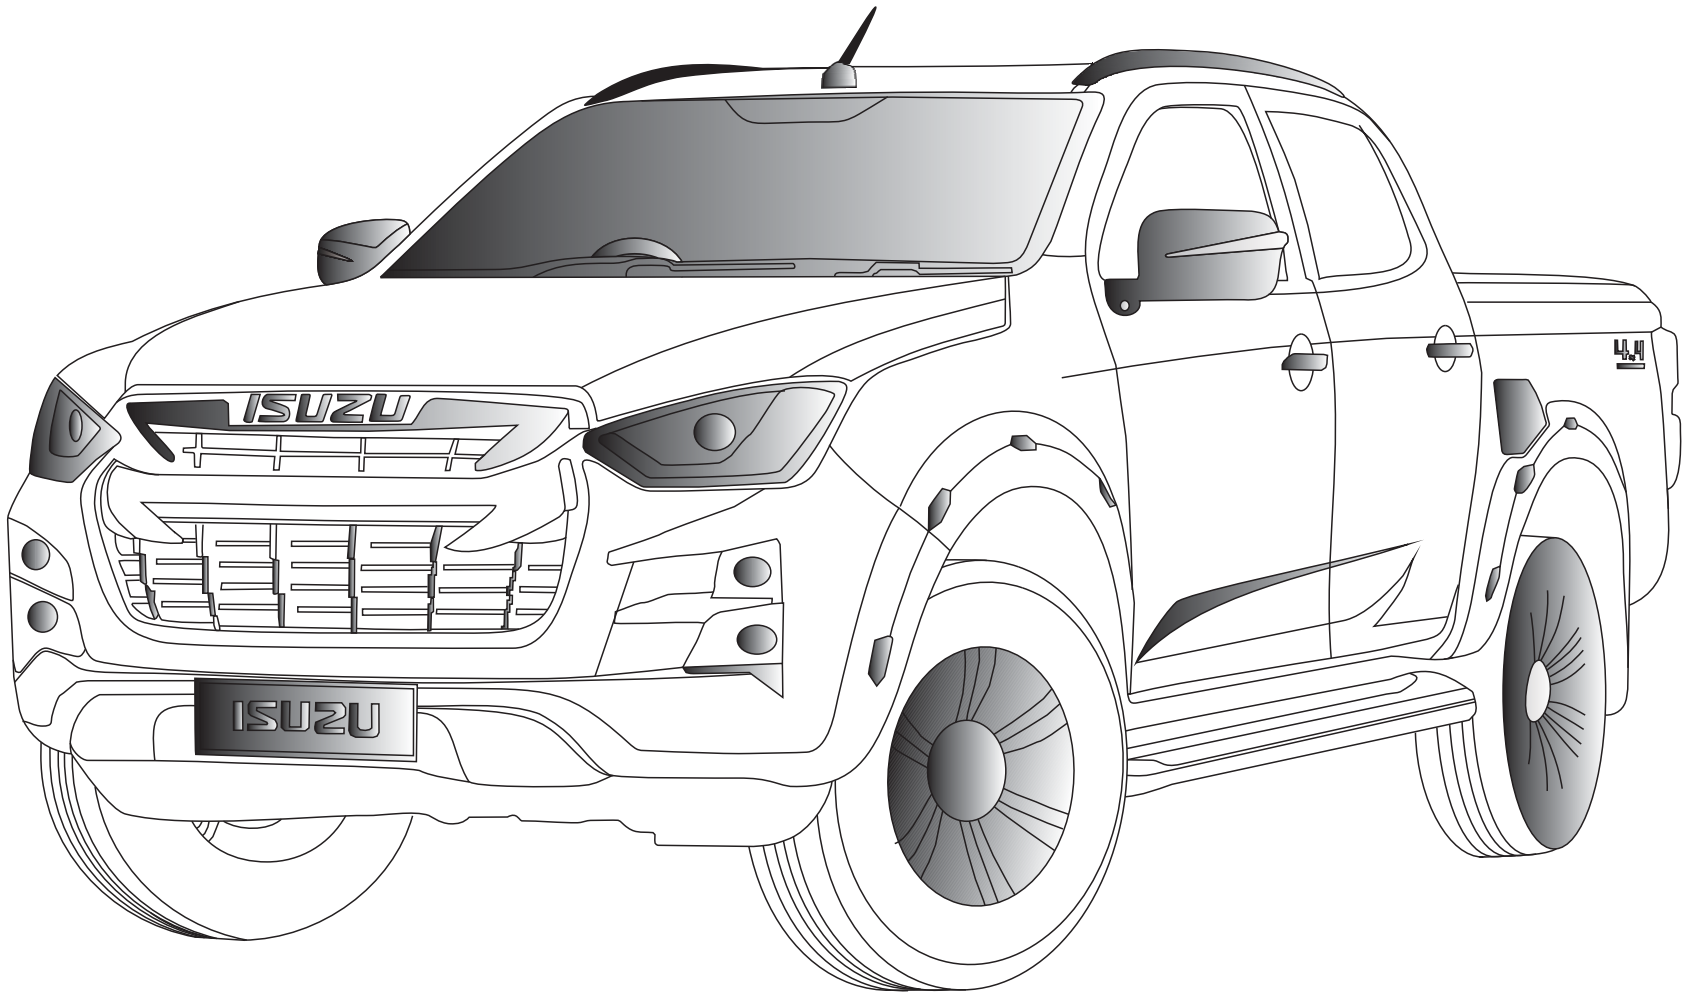


Important



Always refer to the vehicle's Workshop Manual when removing vehicle components.


- Note down all clock and radio settings.
- In the engine bay, disconnect the negative battery terminal (1).

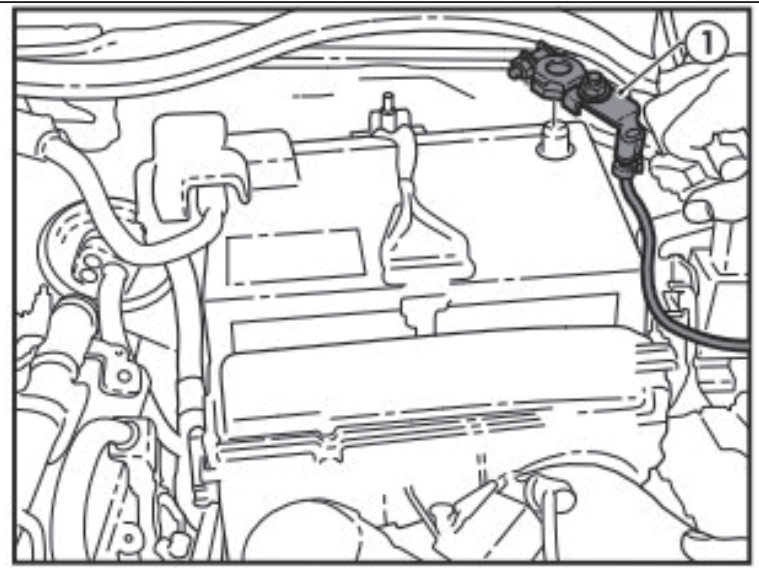

On RG-01 D-MAX, remove the RHS kick panel under the glove box.

Locate RHS door inline connector as shown

2) Remove the mounting bolt on the connector interface.

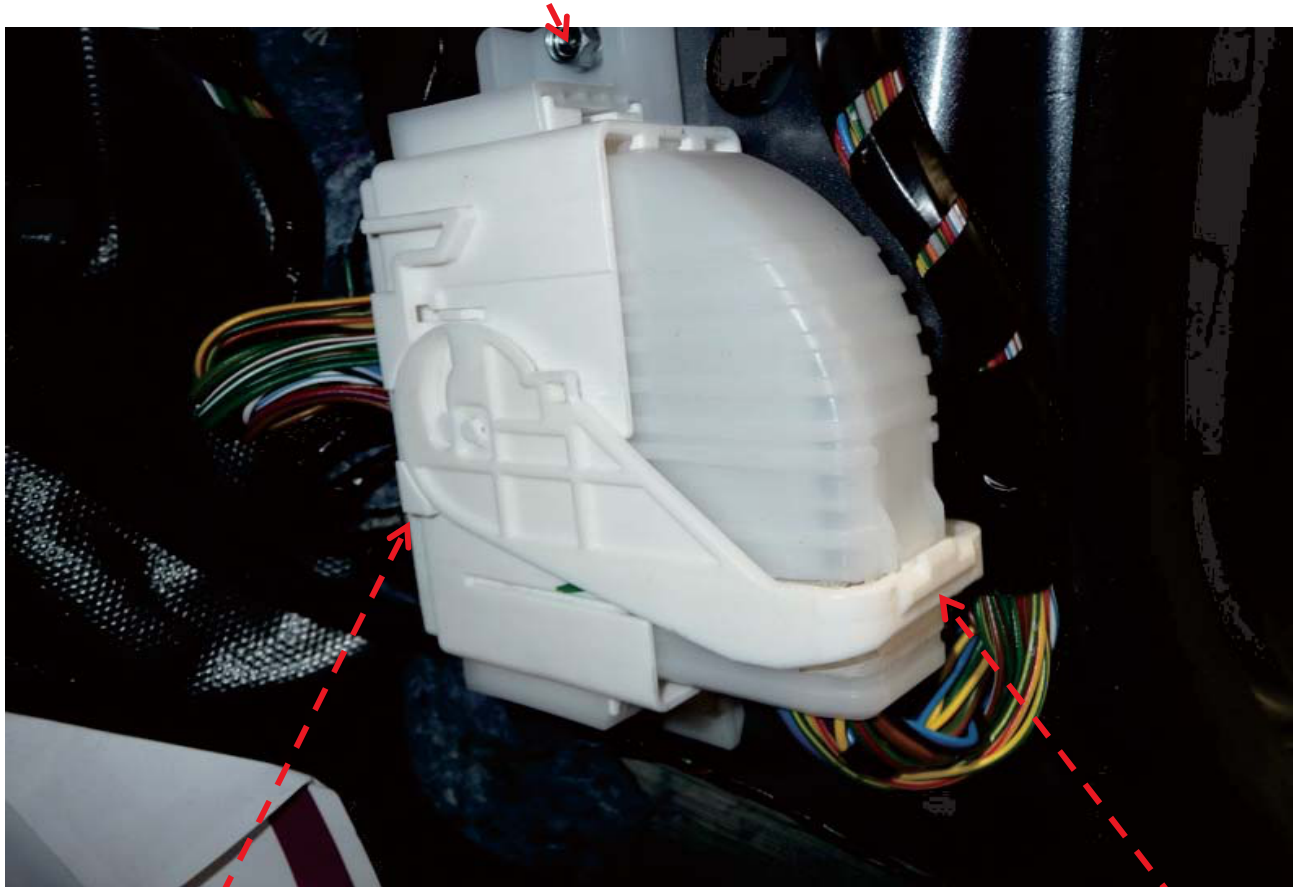


Once disconnected, turn over the connector interface to access the required circuits.

1) Remove the connector lever lock & disconnect from the interface.

Wiring harness for AU

Locate the Pale purple/Brown(3rd down on right) on the White 2nd from left "UNLOCK" signal. Using the scotch lock one the RKE cabin Harness,"UNLOCK" (GN/BK wire) as shown.

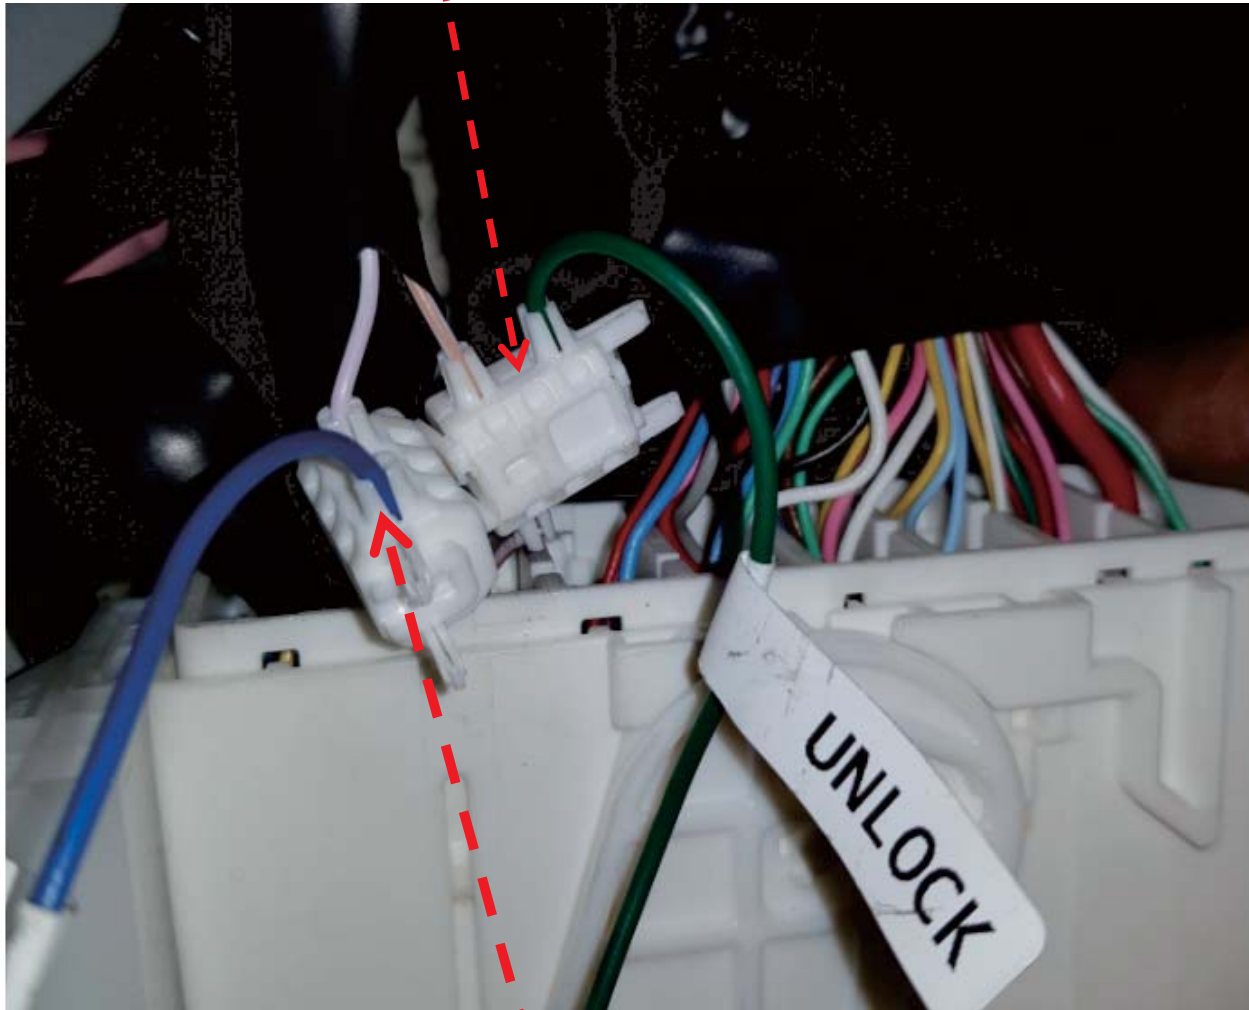

Locate the Pale purple/White (bottom corner cavity) on the green connector for door "LOCK" signal. Using the scotch lock one the RKE cabin Harness,connect"LOCK" (BL/BK wire) as shown.