



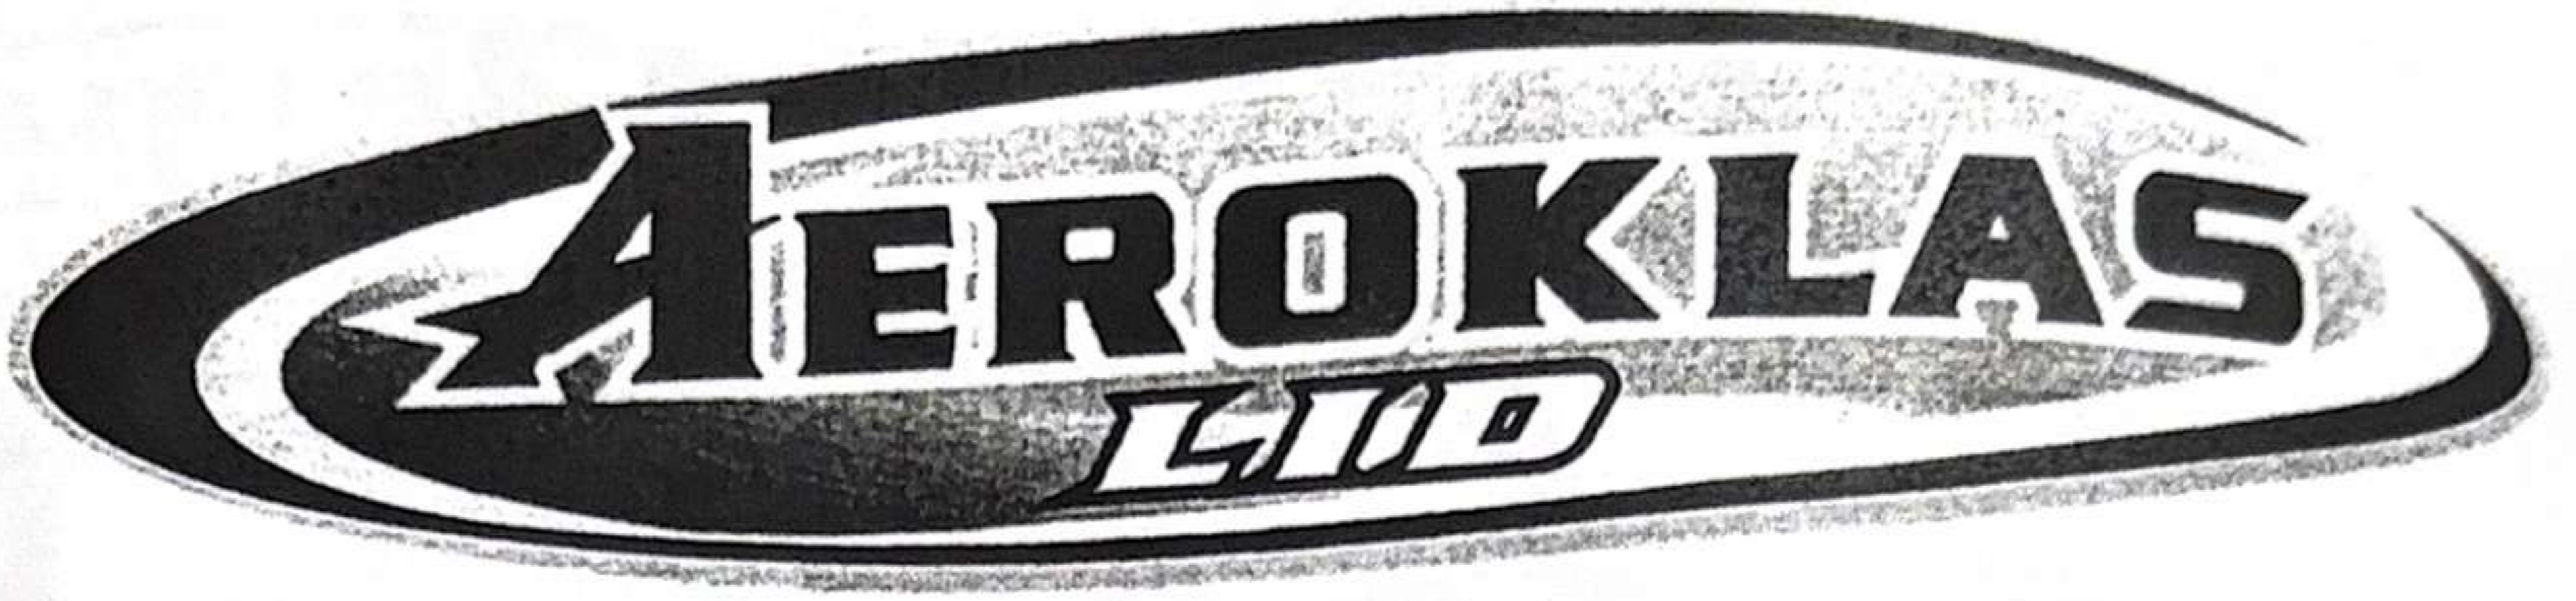

INSTALLATION INSTRUCTION

AEROKLAS LID

FOR FORD RANGER D/C WITH BED LINER

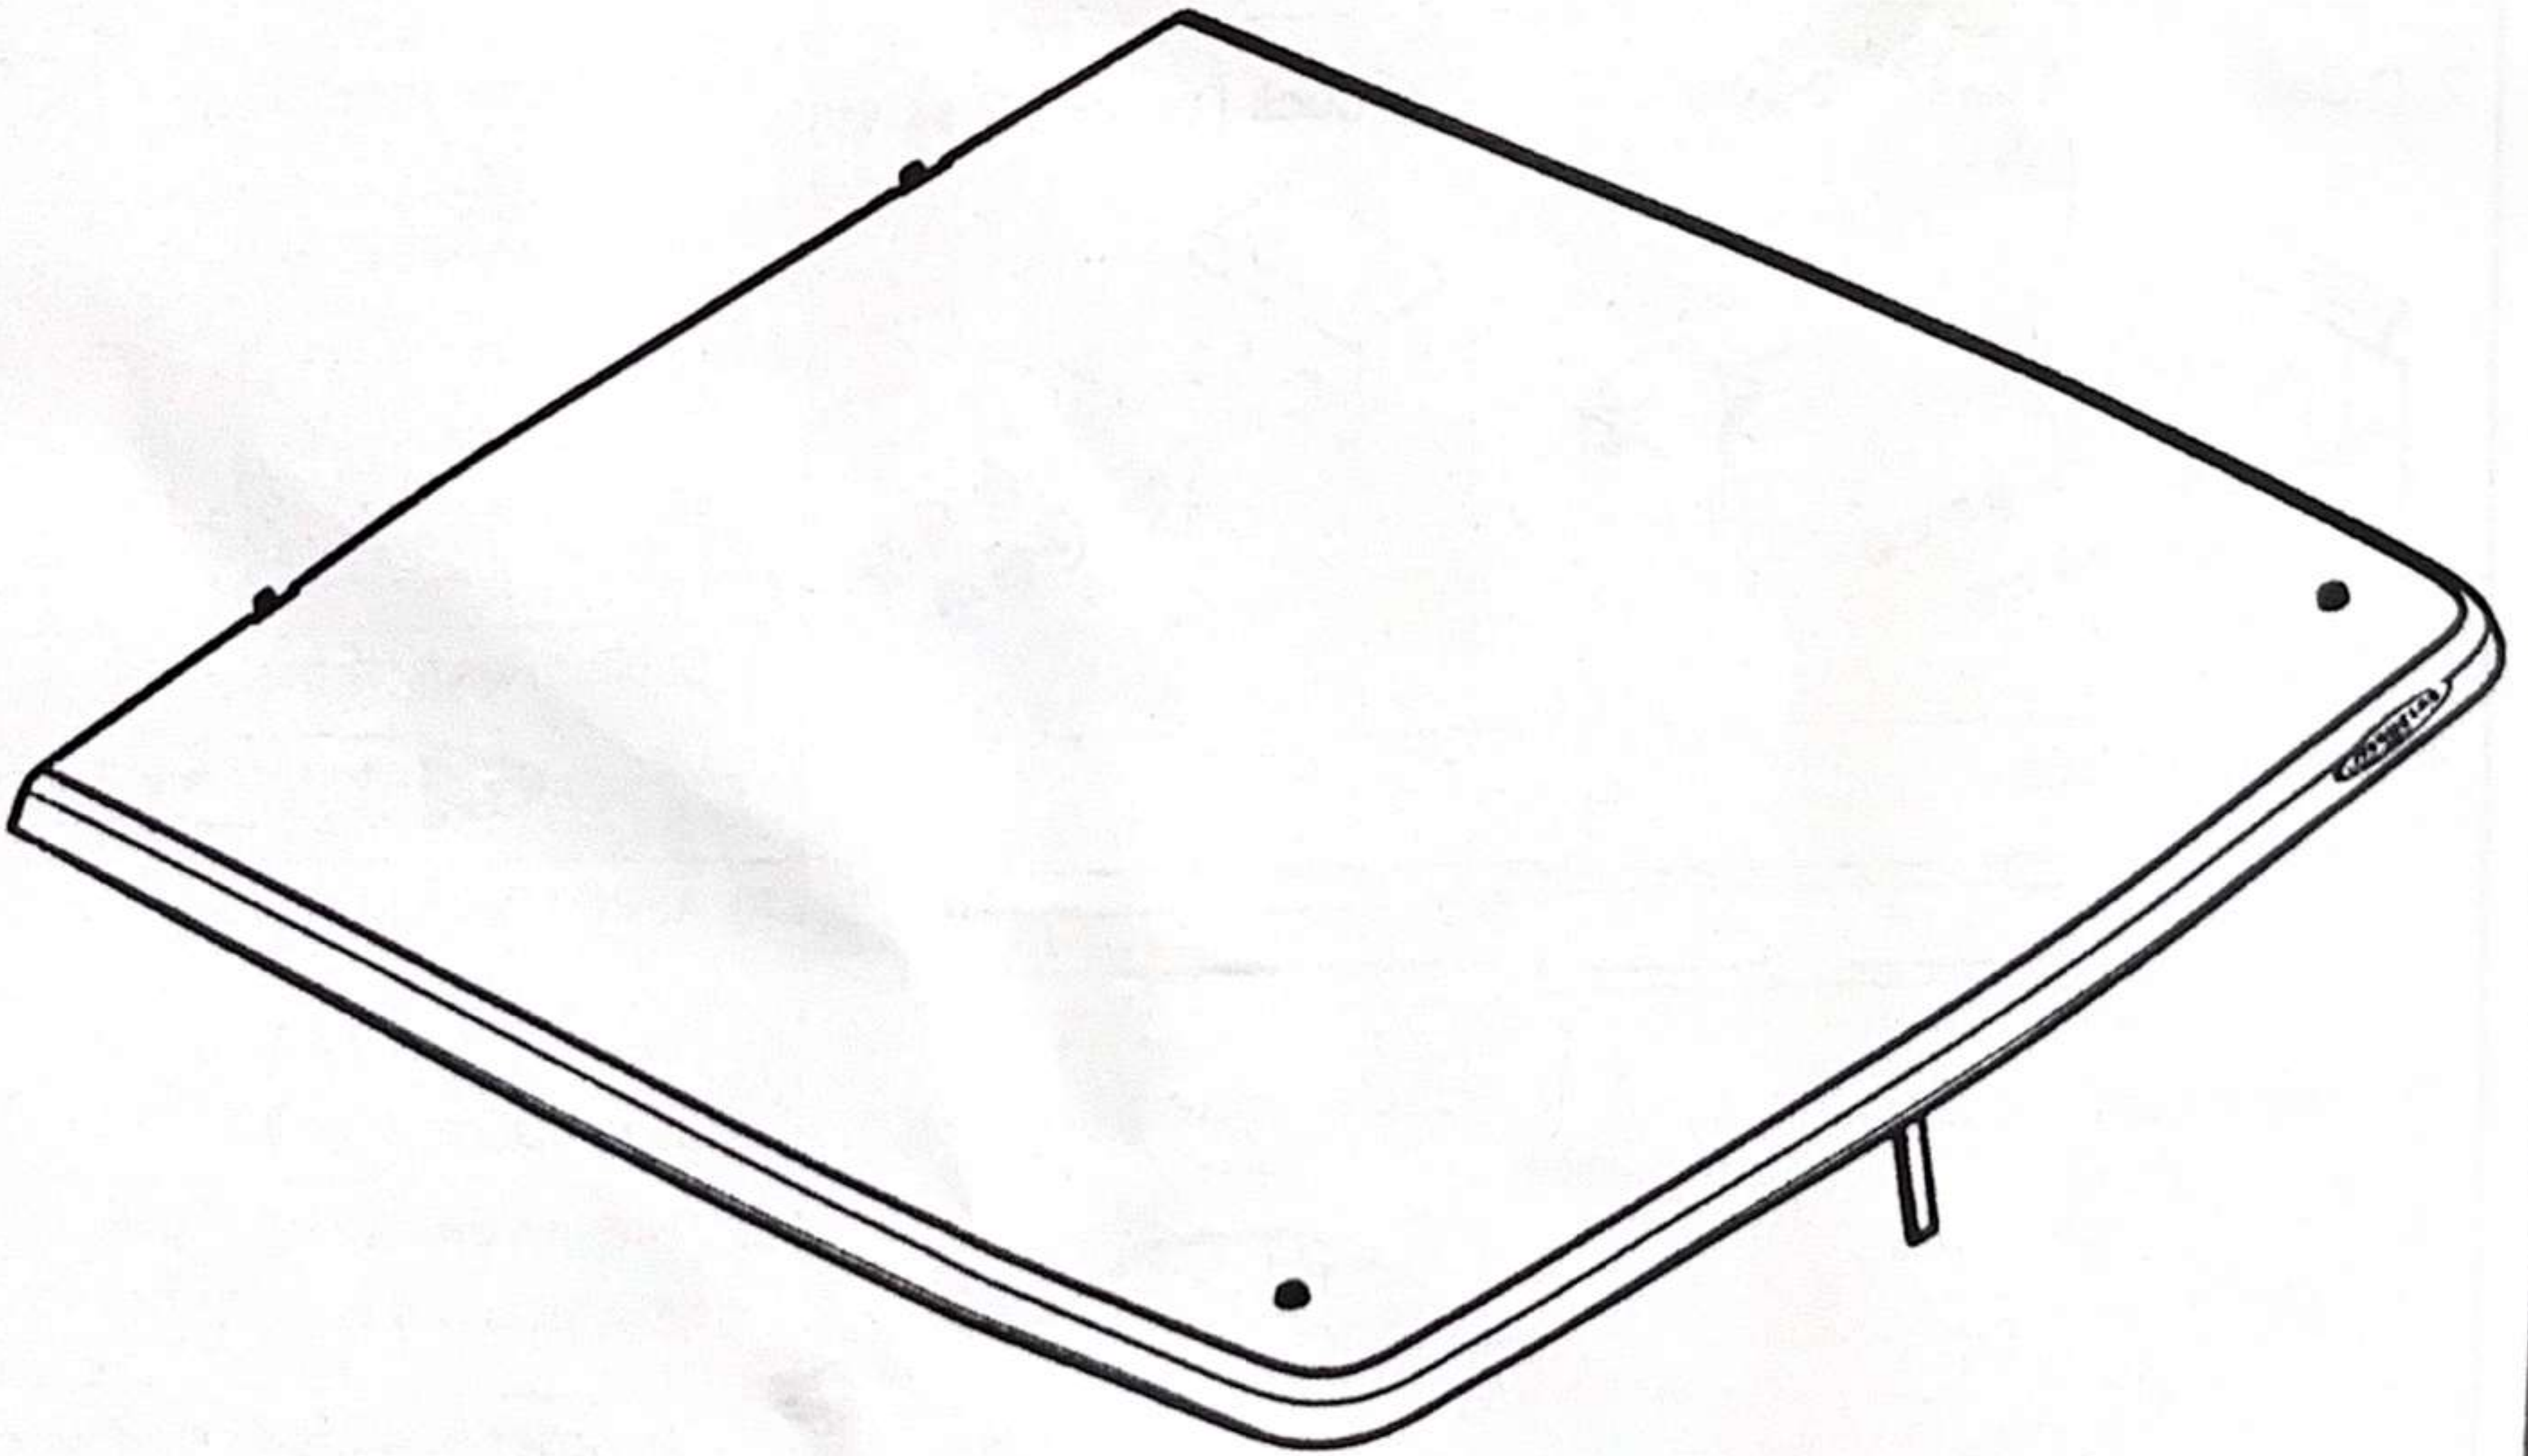


Installation Instruction




Pre-Install Parts

For Paintable version

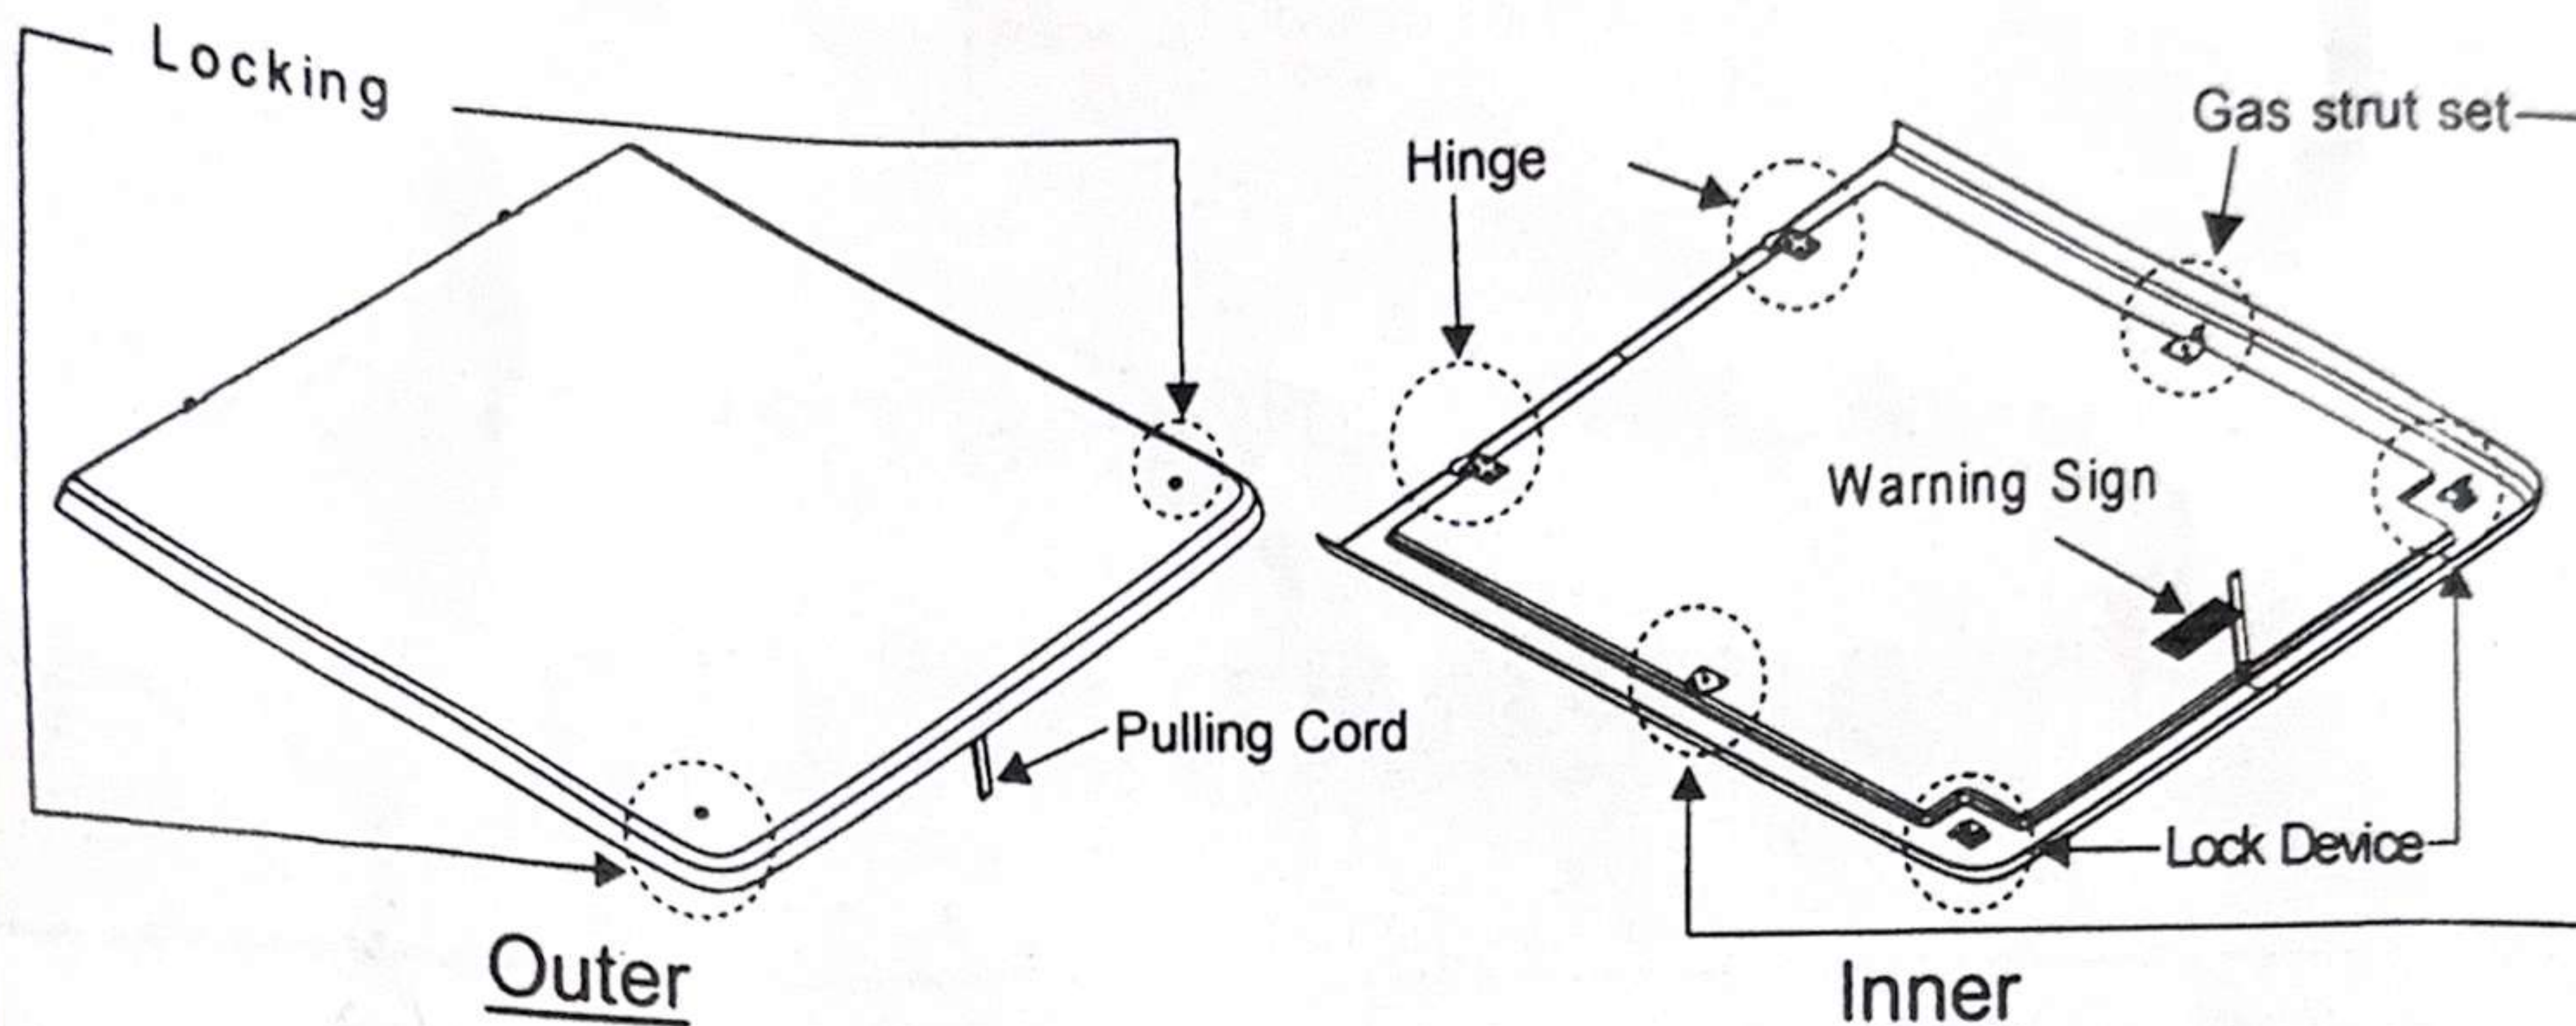


Parts List


1. Front Bar V.3 ; 1 set

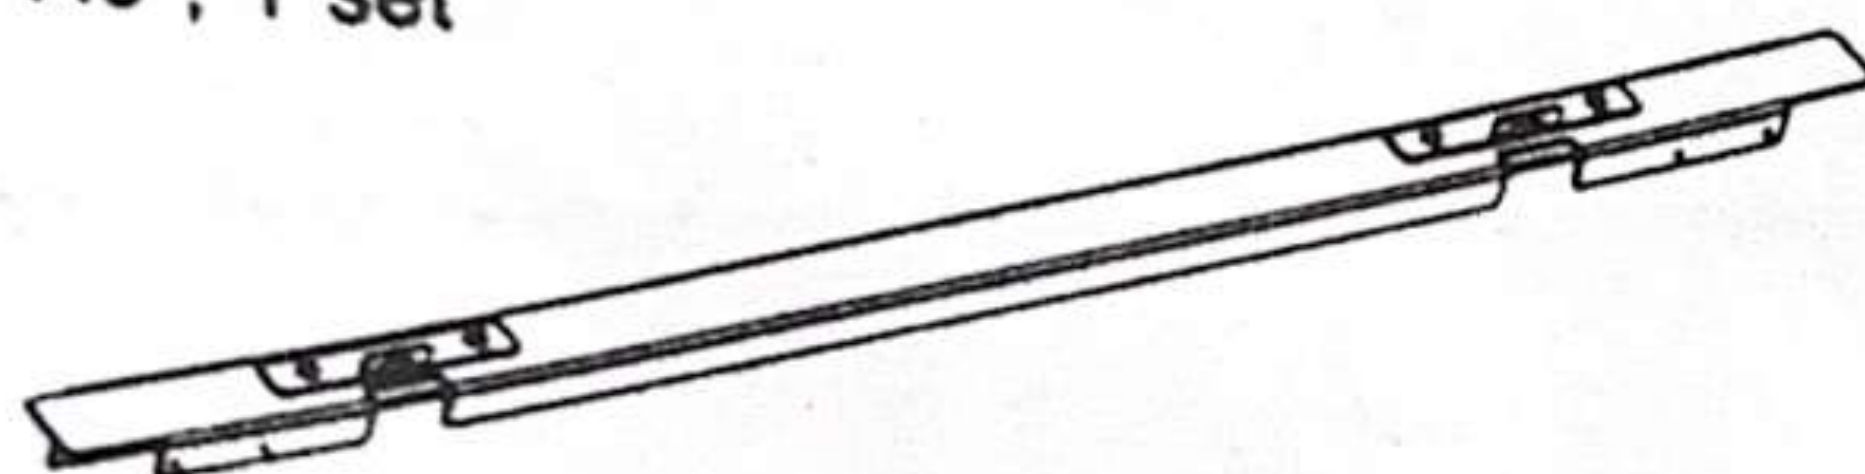


7. Key ; 2 pcs

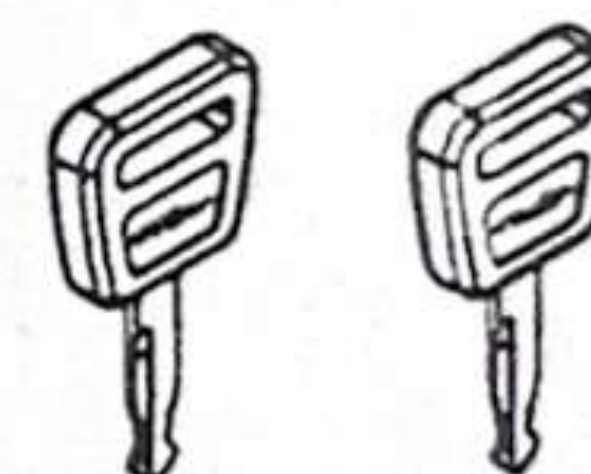

2. D-Gas Strut-05(Lower) ; 2 sets

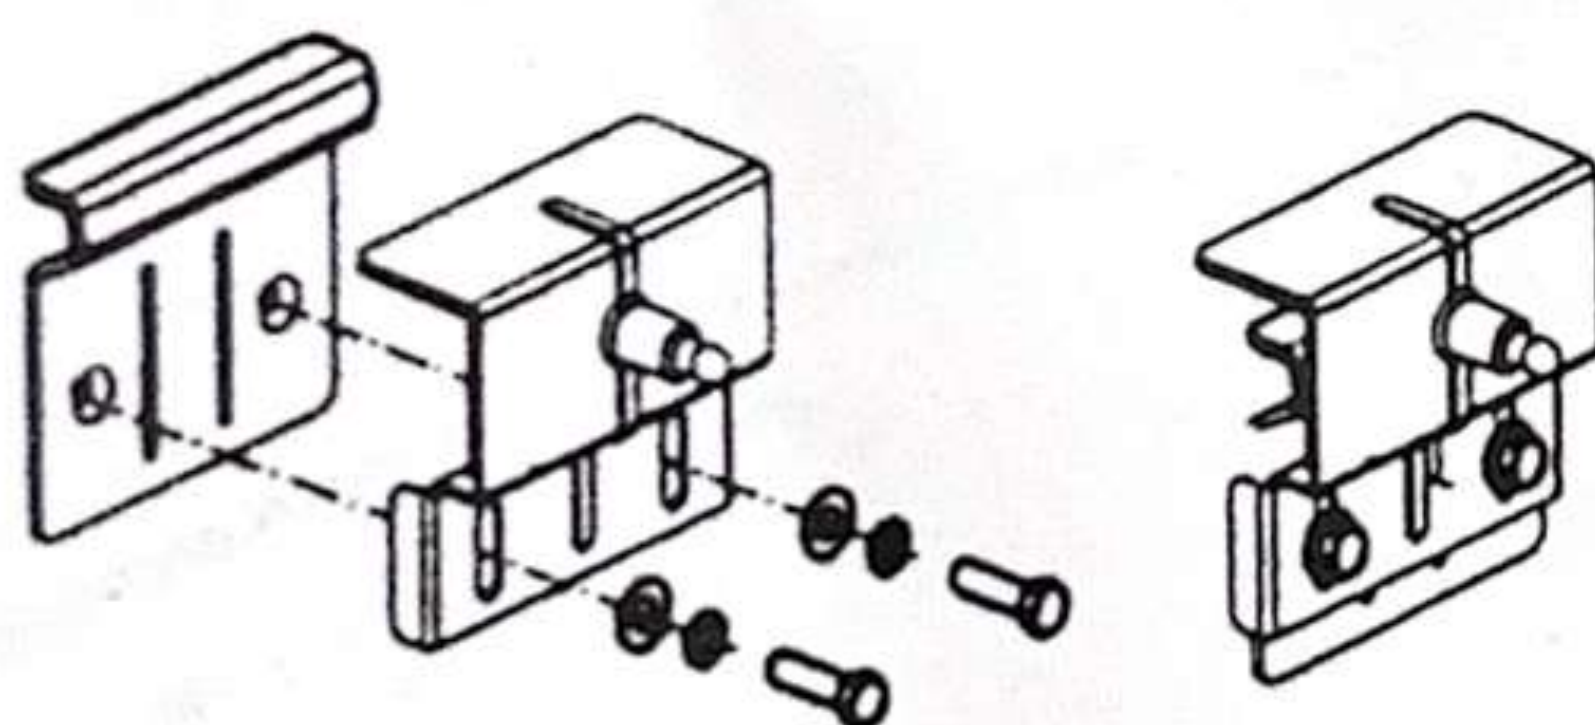


3. Lock Device ; 2 sets

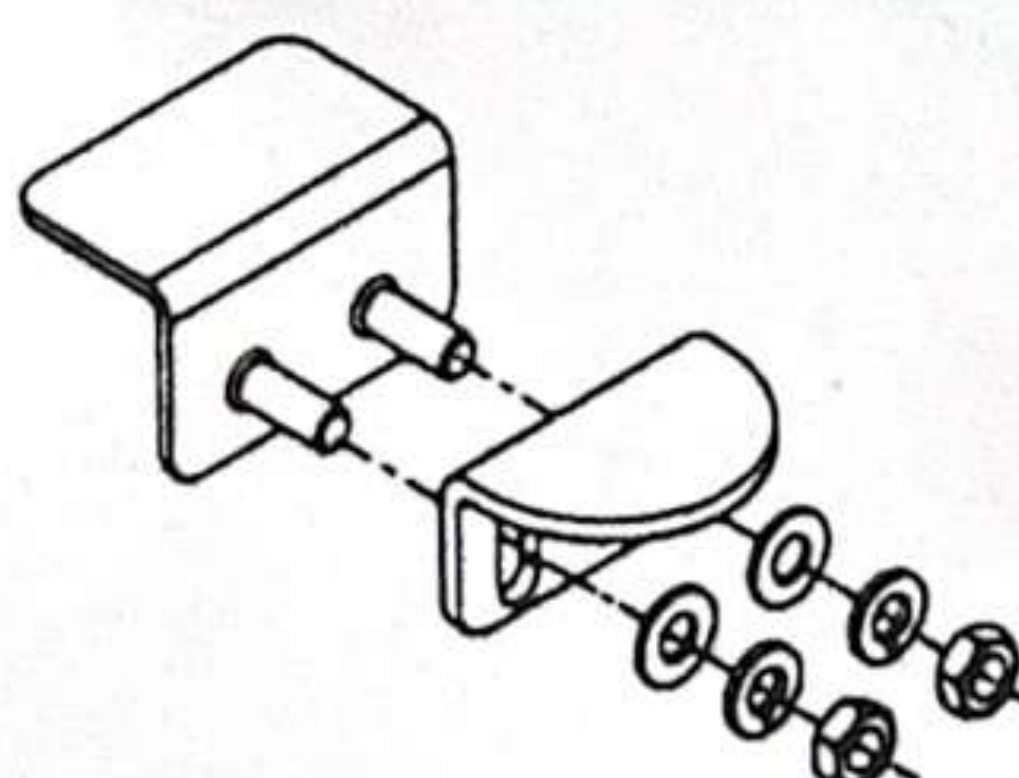

8. Installation Instruction ; 1 set



4. Gas strut ; 2 pcs.

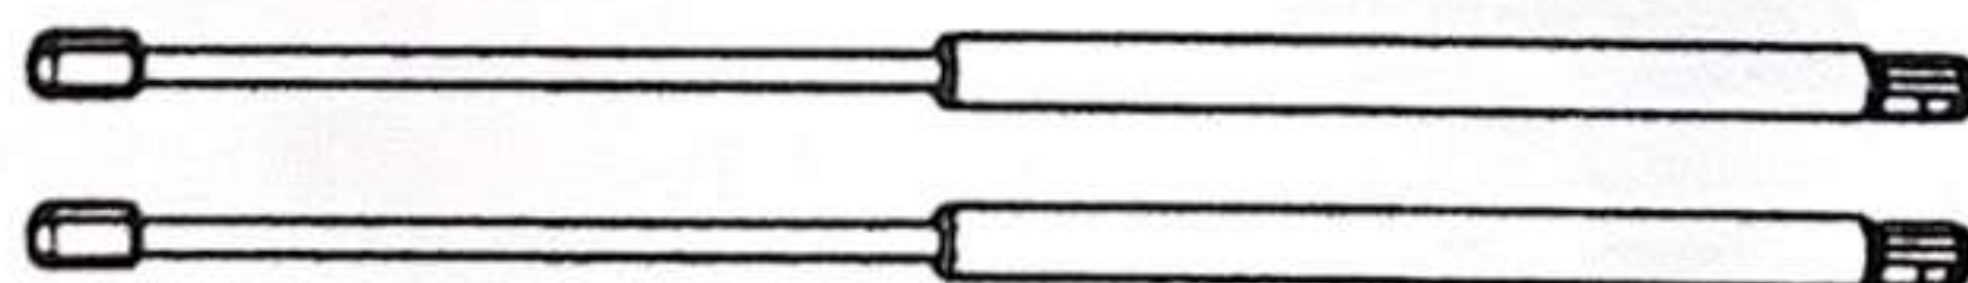

9. Sticker Resin ; 1 pcs.




10. AERO LINER TAPE 5 X 10 cm ; 2 pcs.

11. Foam Tape (1,2,3,4) ; 7 pcs.
(See detail as page 2/11)


12 . Rubber Seal (5,6) ; 3 pcs.
(See detail as page 2/11)

13 . D-Cover Front Rubber Seal
(7) ; 1 pcs.

5. Hinge system ; 2 sets

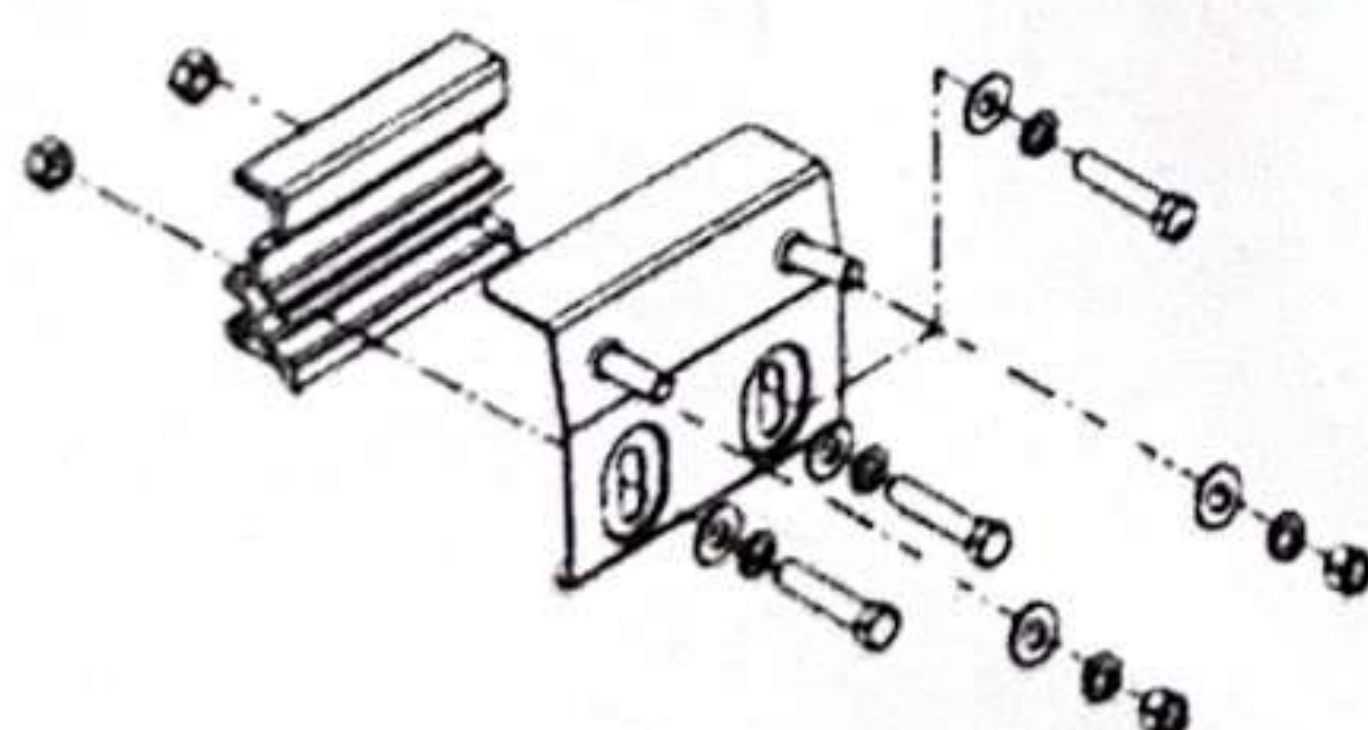


6. Adapter Plate ; 2 pcs.

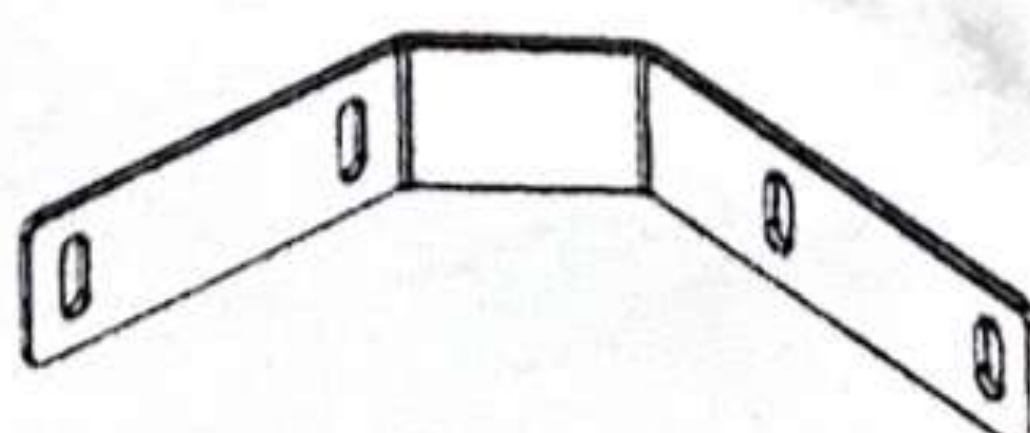

Installation Instruction



Instruction for Foam Tape & Rubber Seal (Paintable version only)

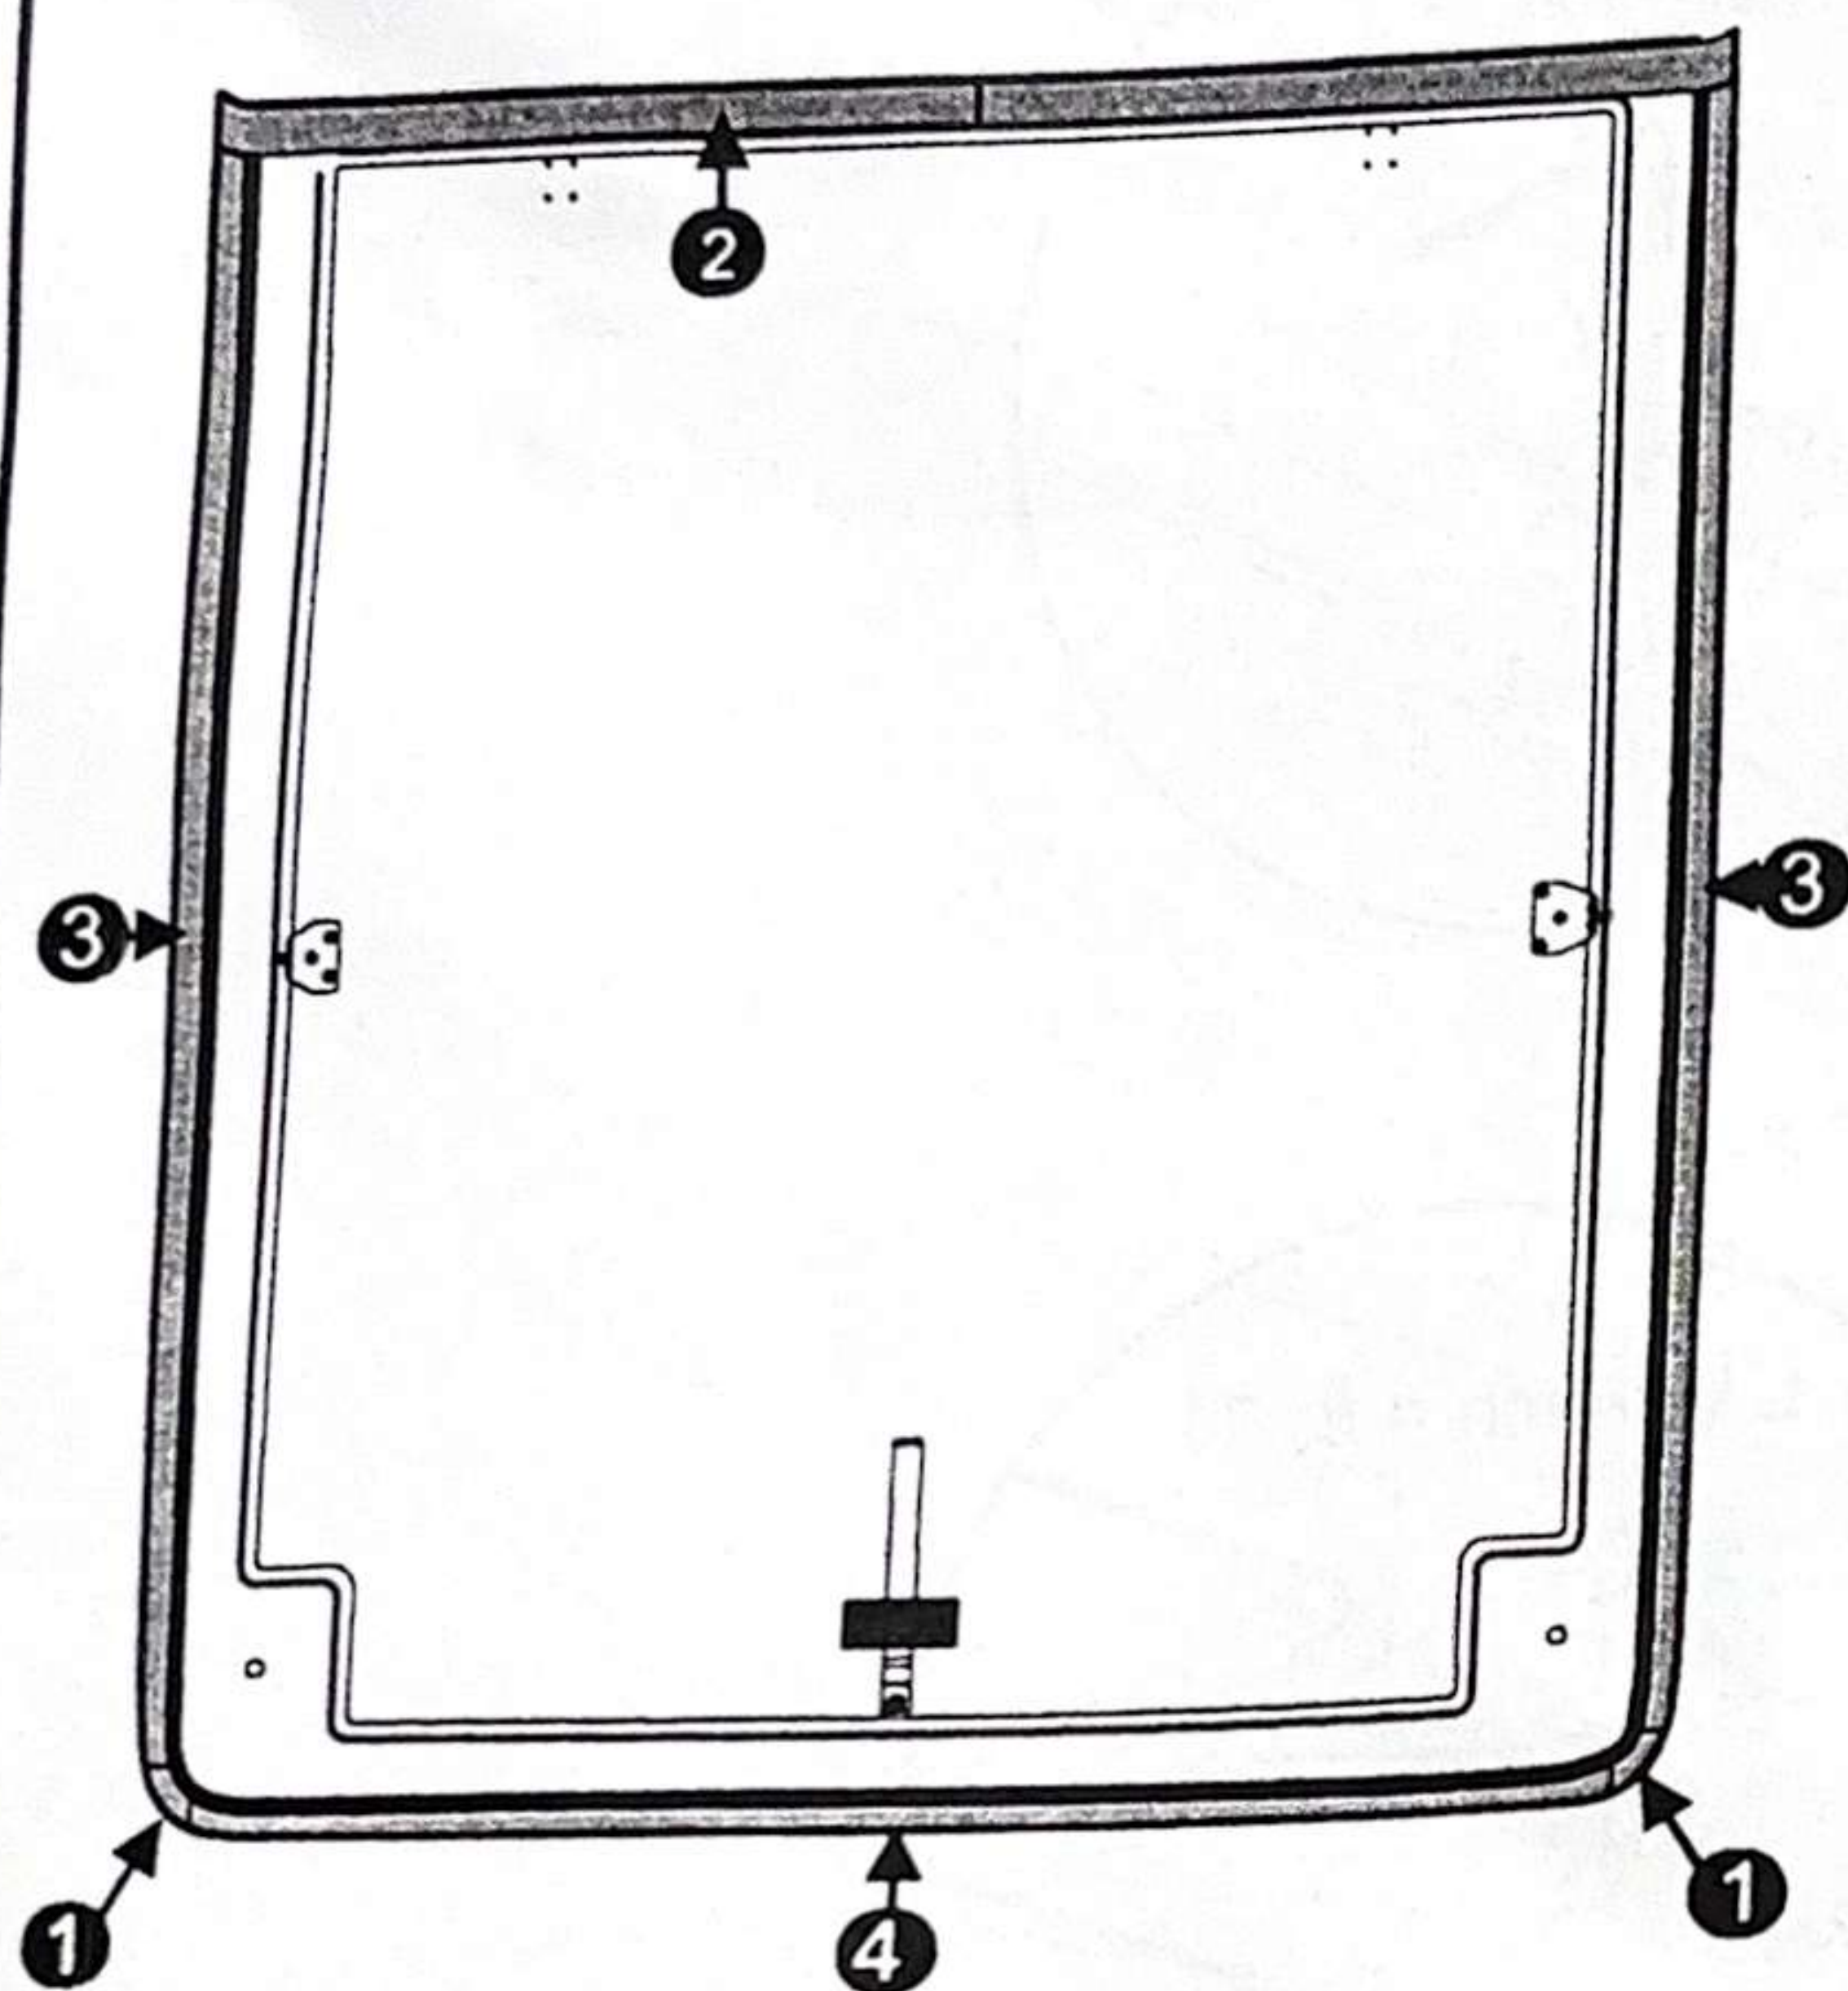


Tools

- Marker
- Drill $\varnothing 7, 9 \text{ \& } 12 \text{ mm.}$
- Wrench # 8, 10, 12 & 23
- L-Wrench # 4
- Drill
- Tape Measure
- Screw Driver
- Taper Gauge


Foam Tape

1

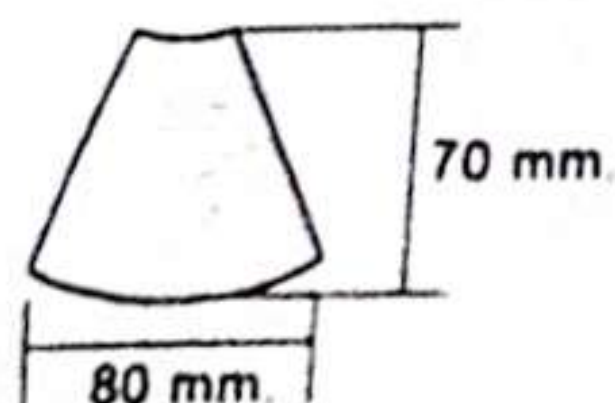


2 pcs.

2

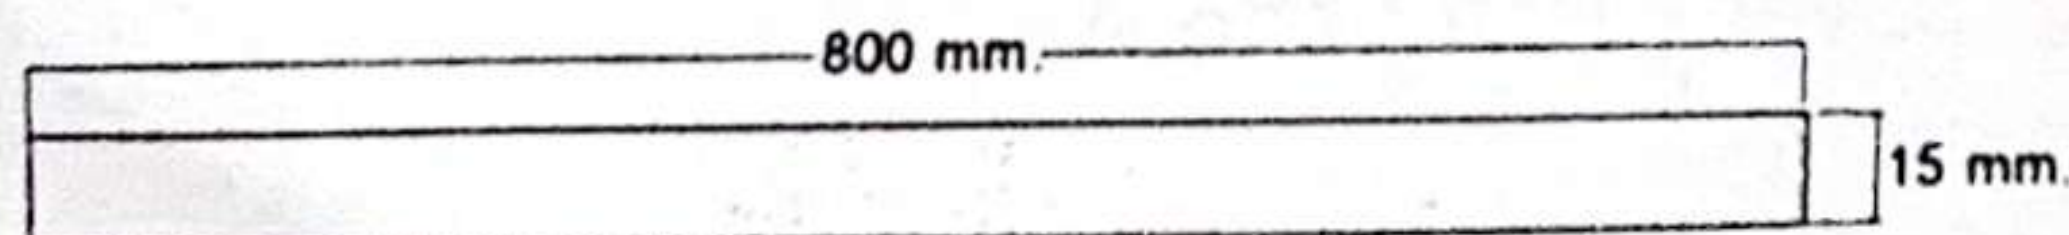


2 pcs.

3

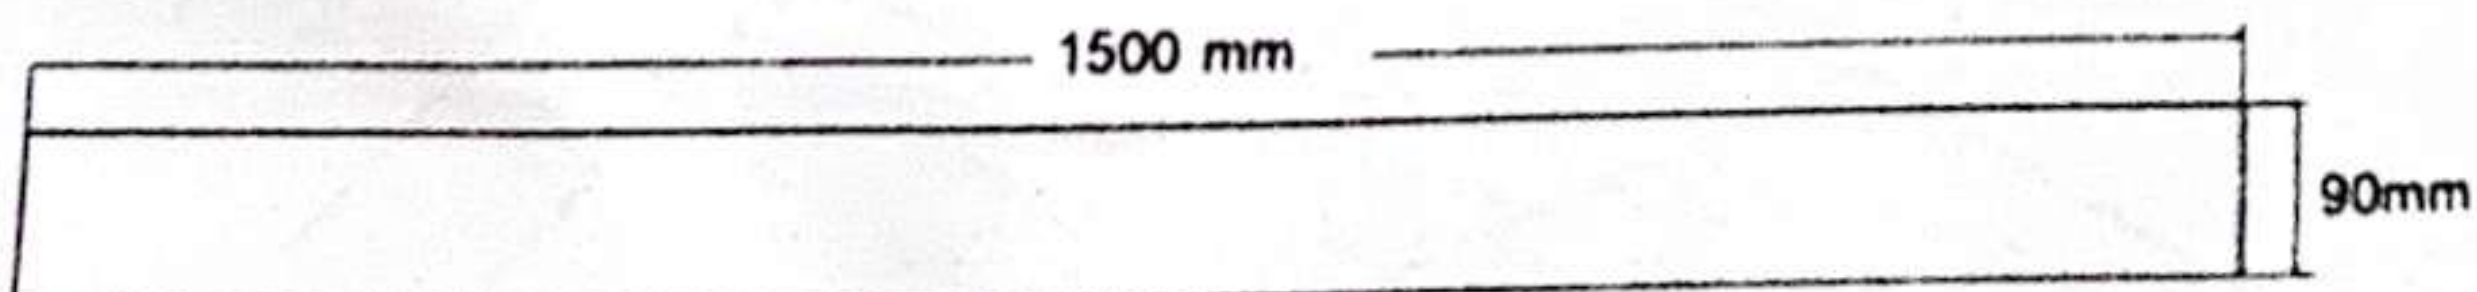

2 pcs.


4

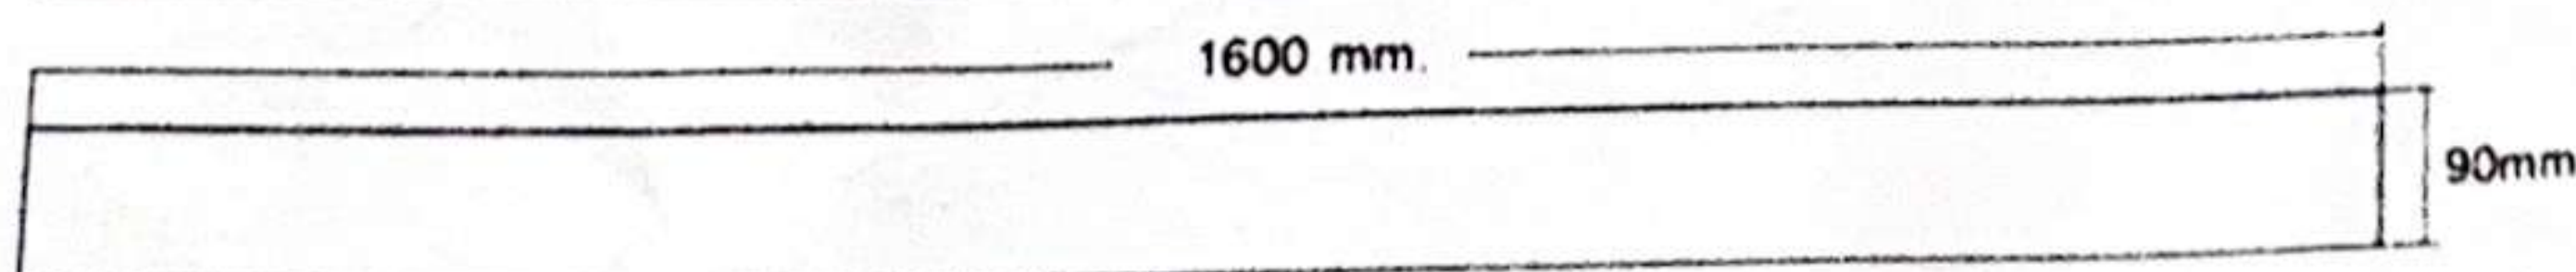

1 pcs.


Rubber Seal

5

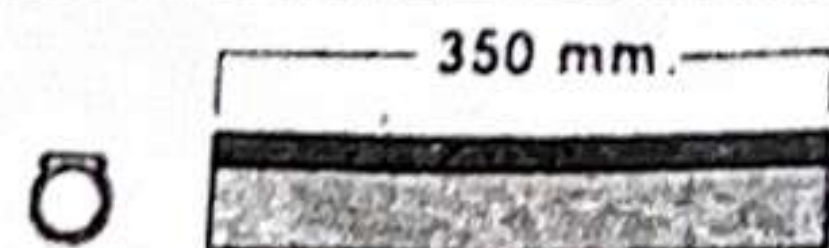


2 pcs.

6

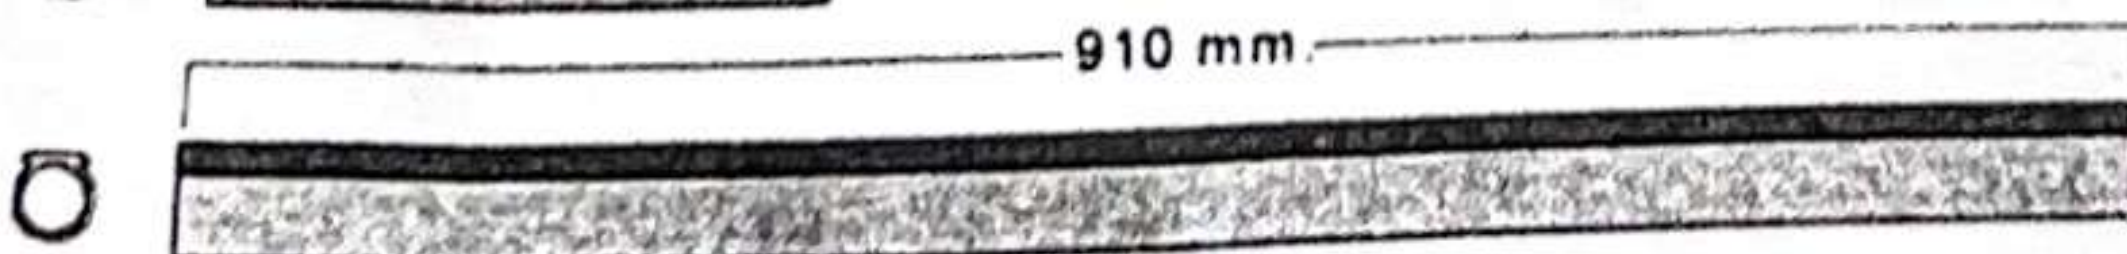

1 pcs.

7

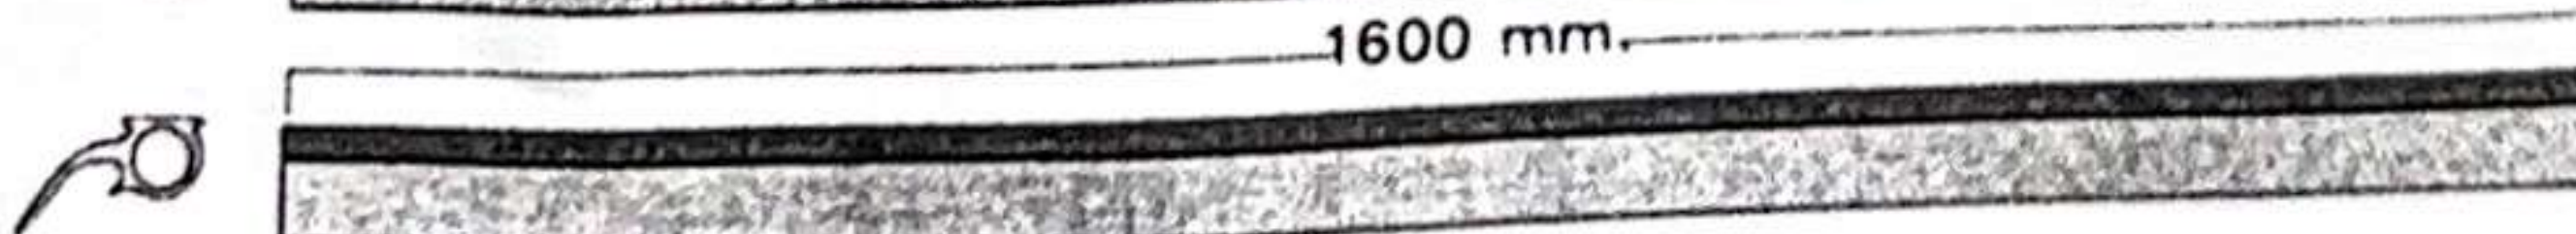


1 pcs.

Installation Instruction




Disassemble be for paint the cover


1. Remove hinge bracket on cover as shown

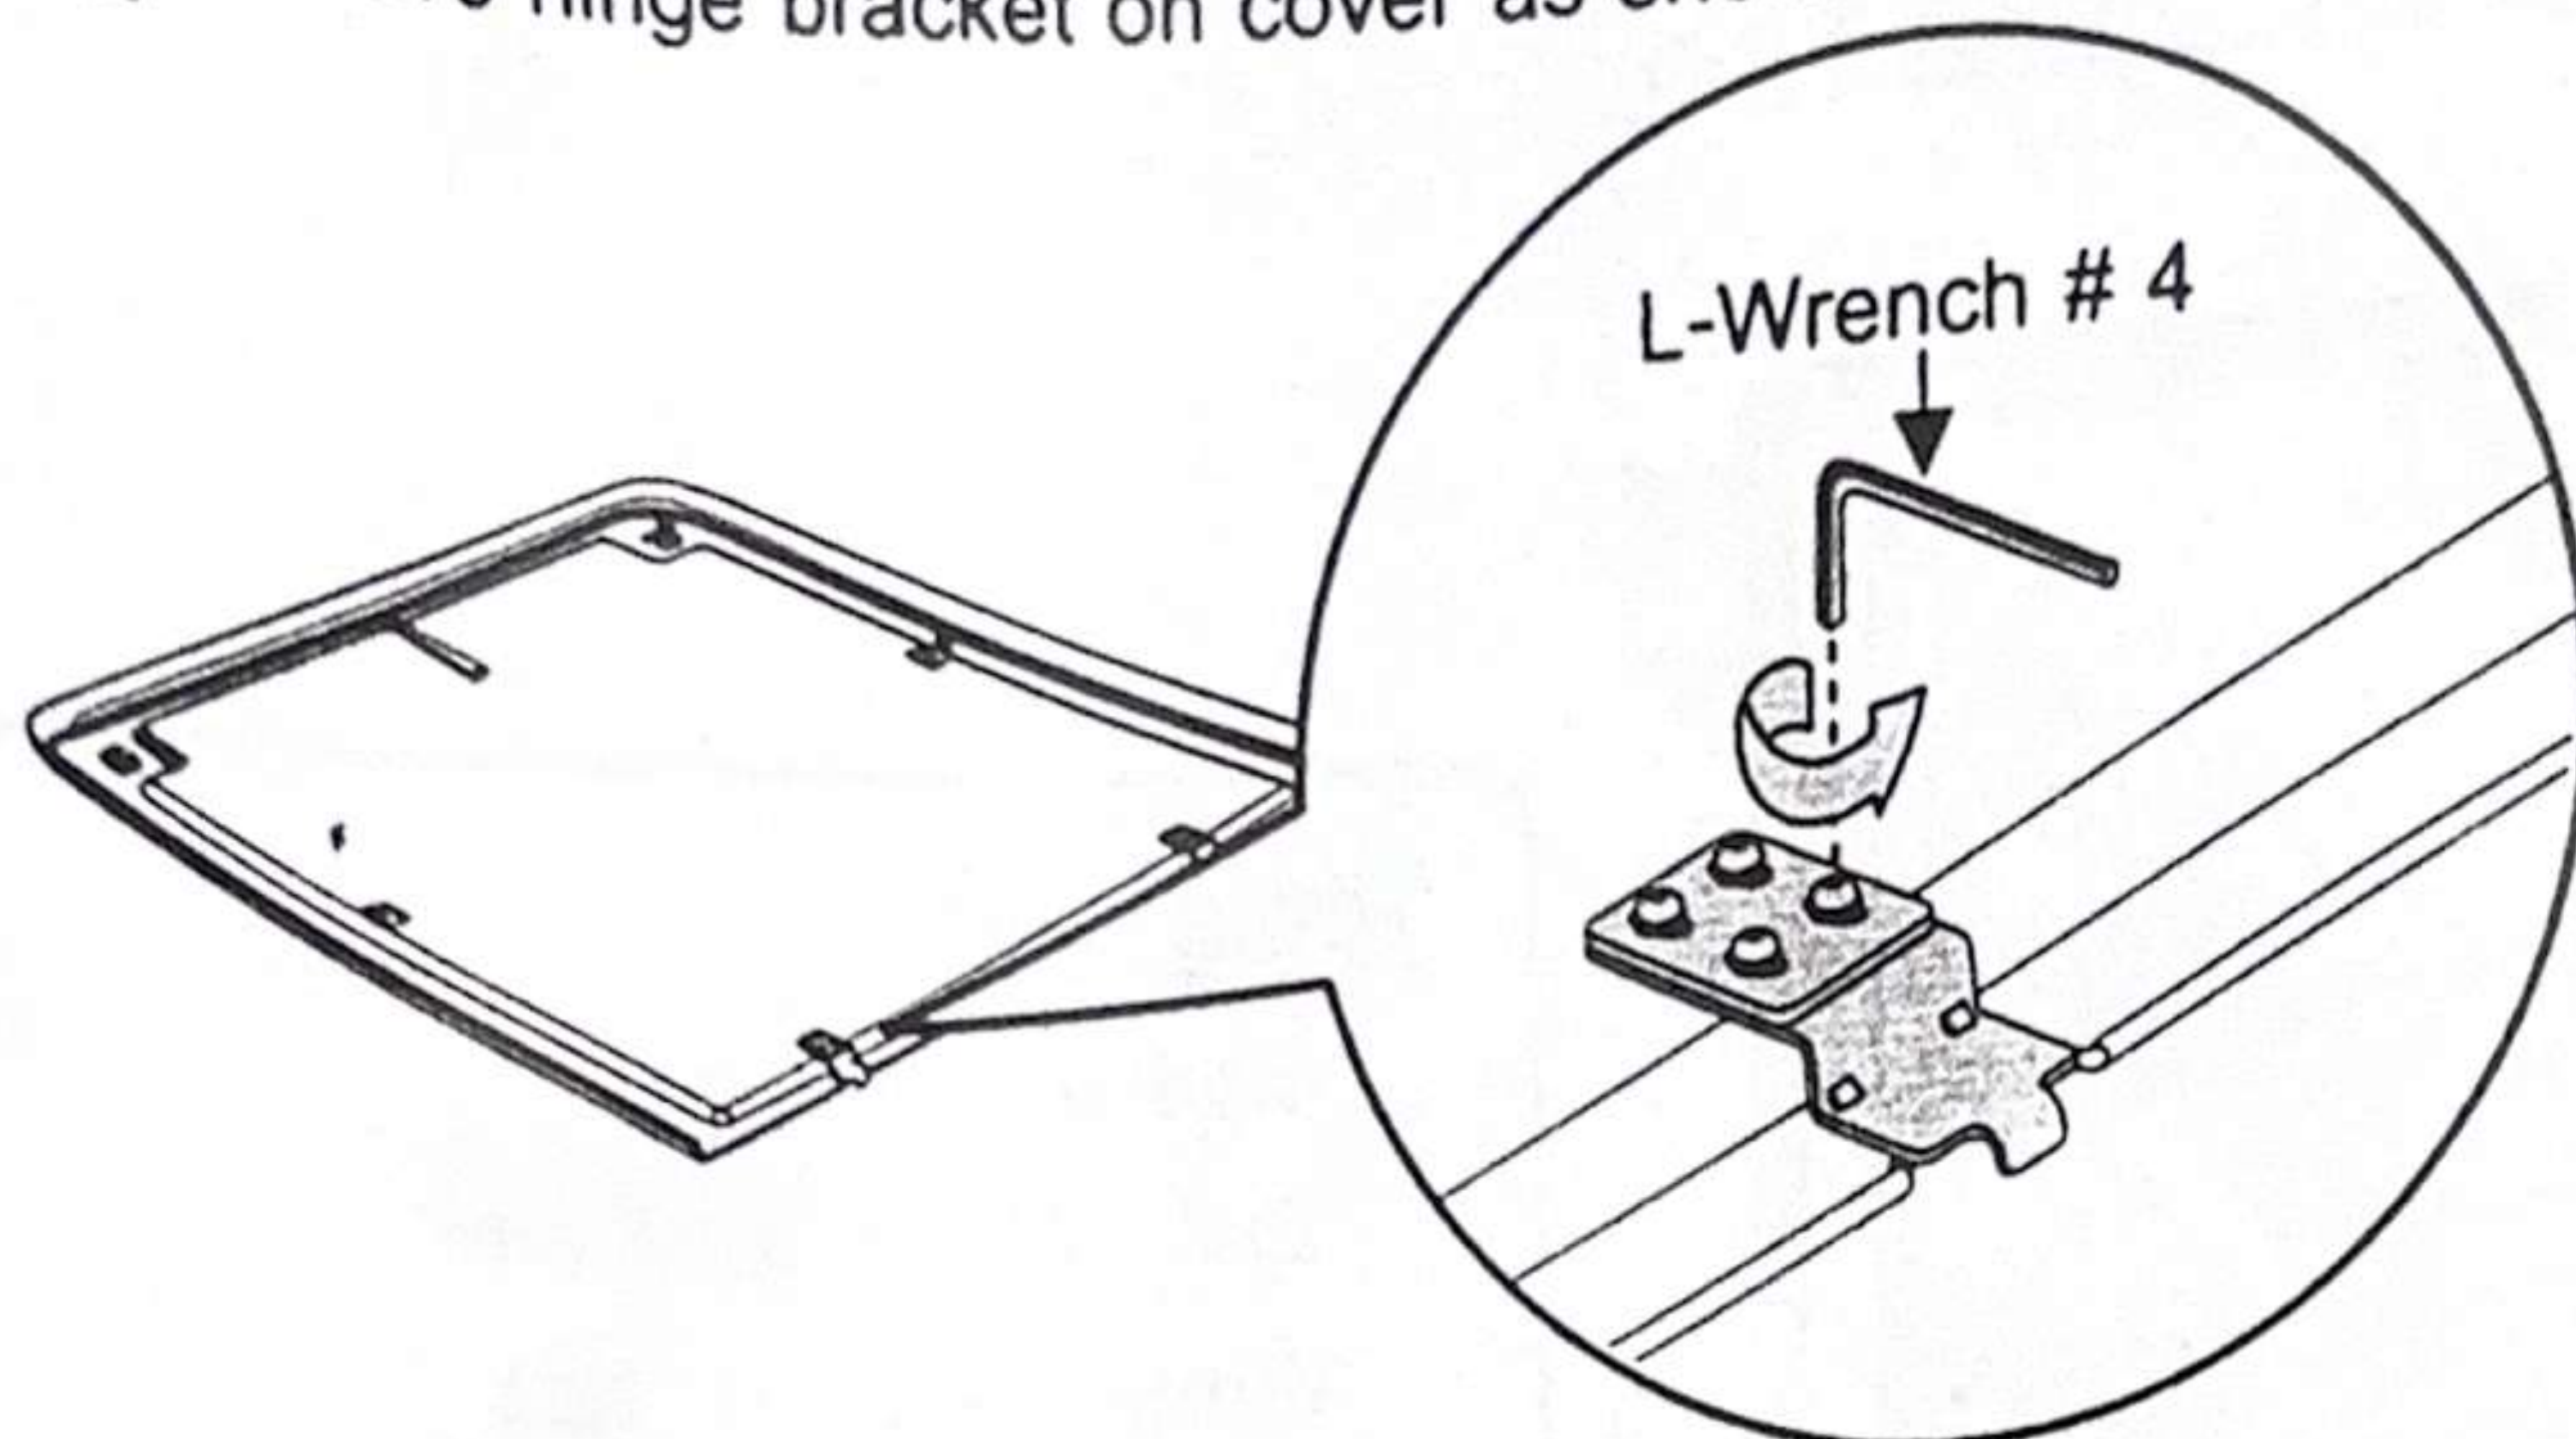

2. Remove lock device on cover as shown

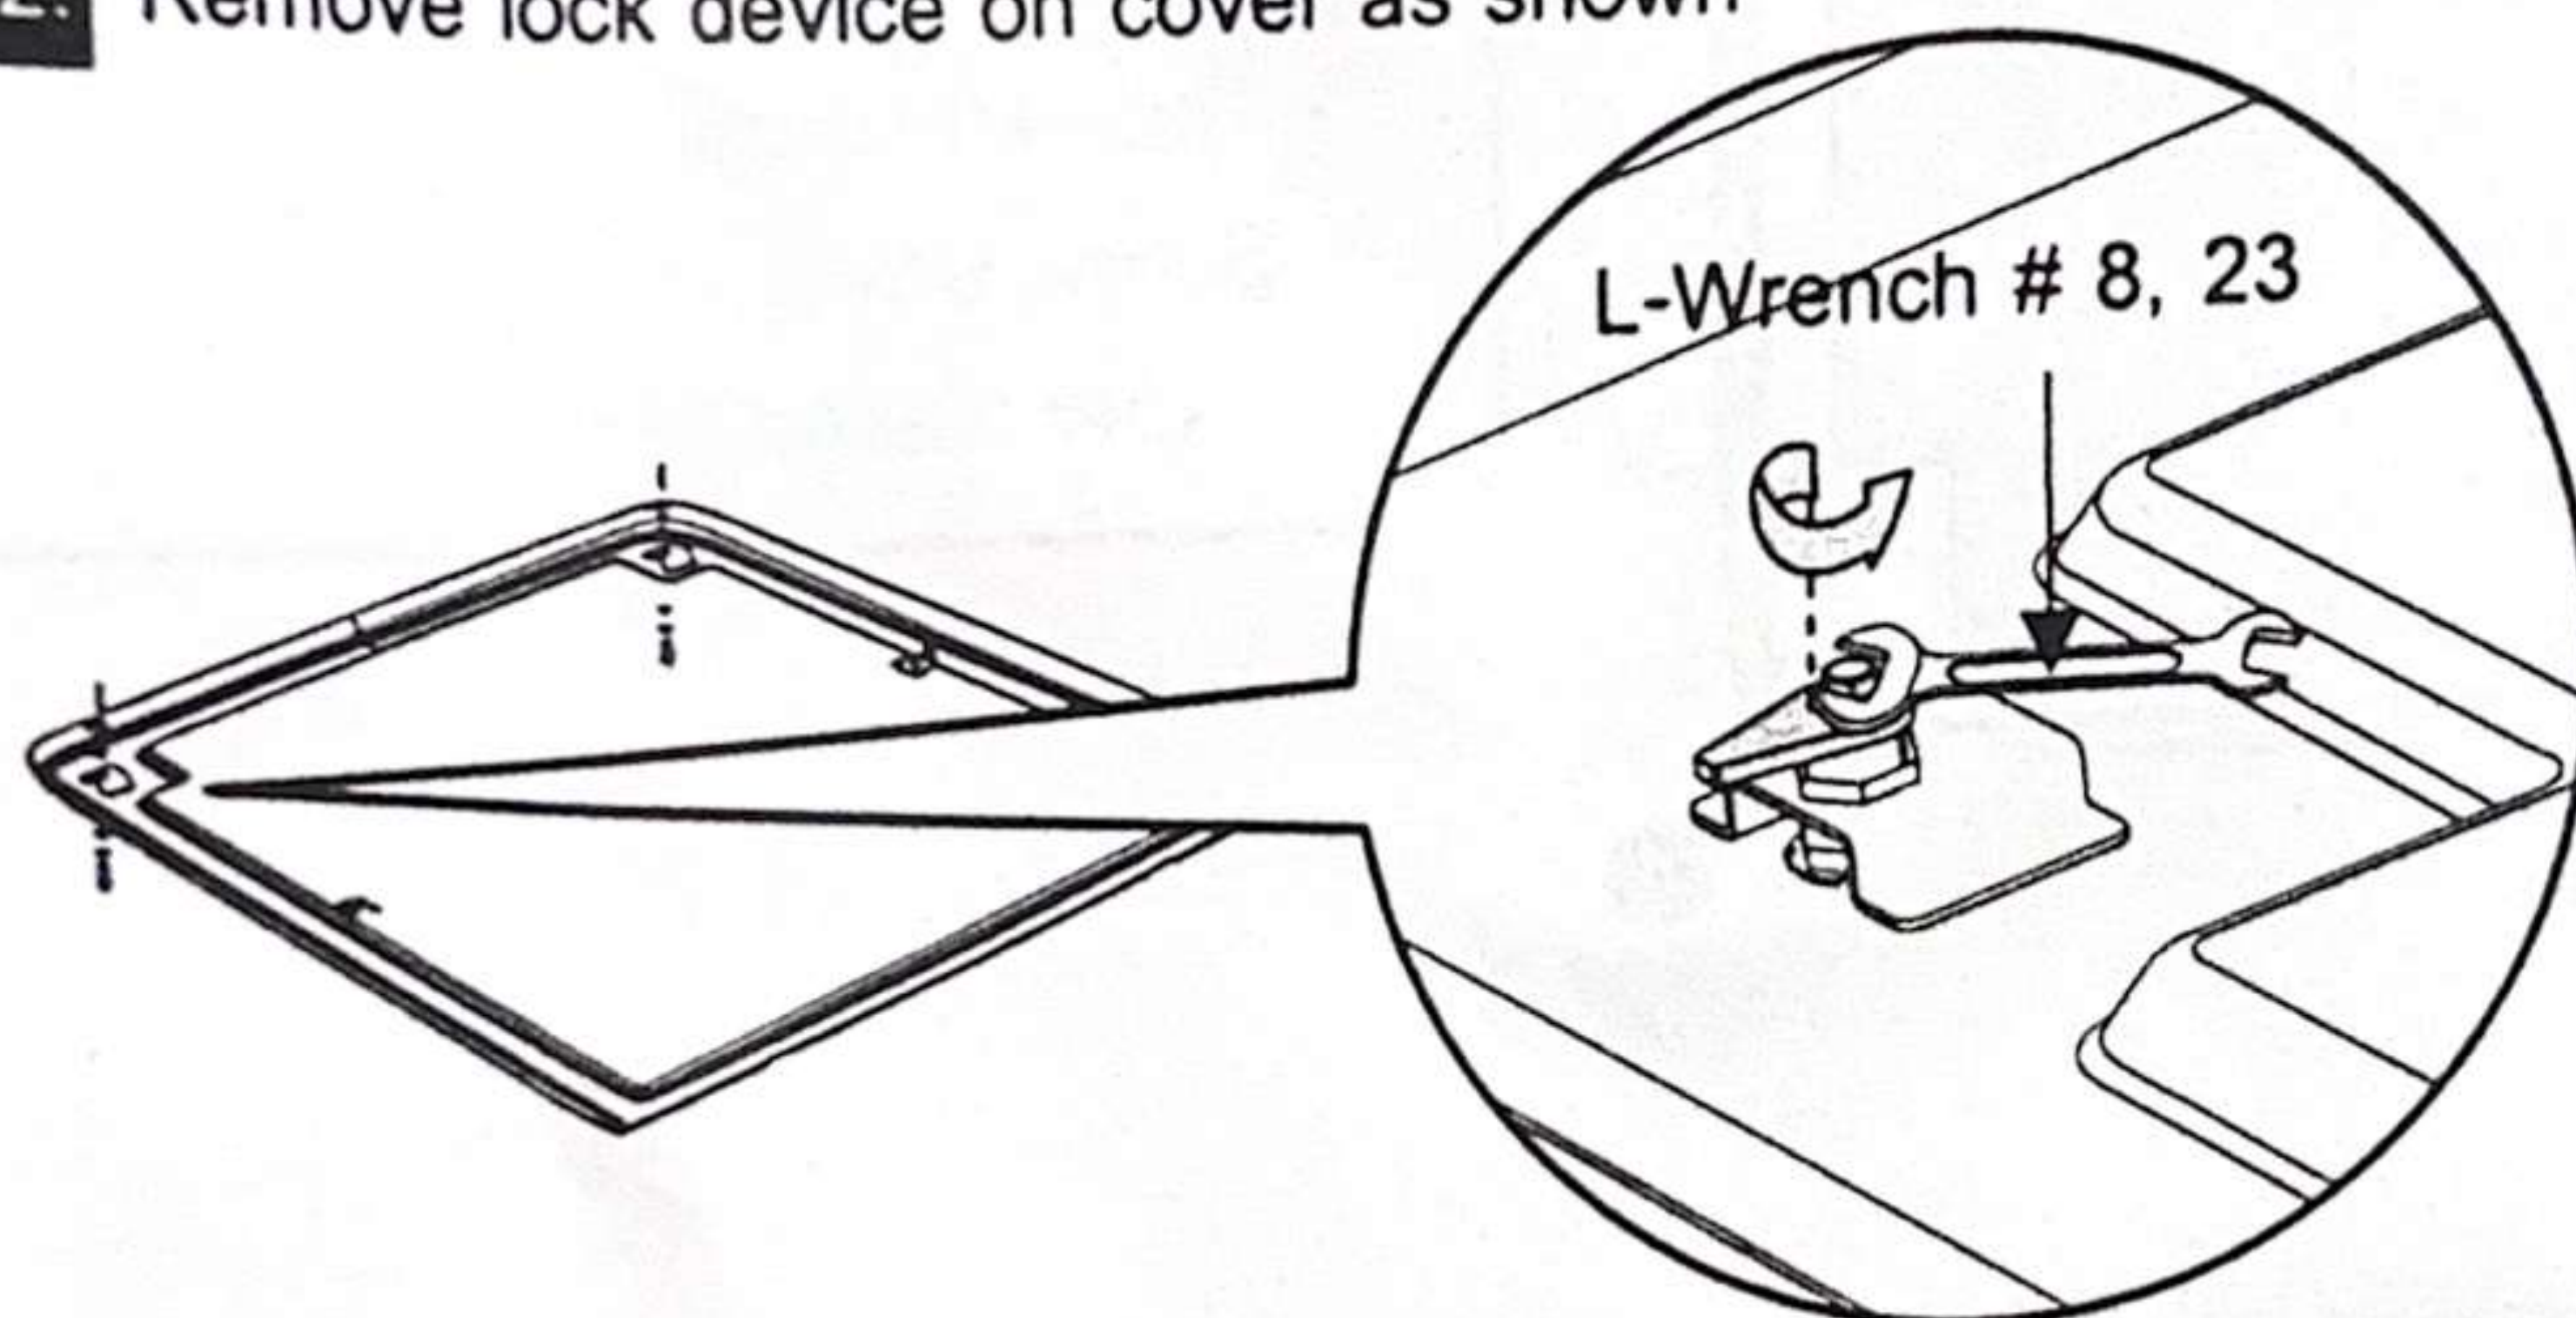


3. Painting process on cover (Paint shop)

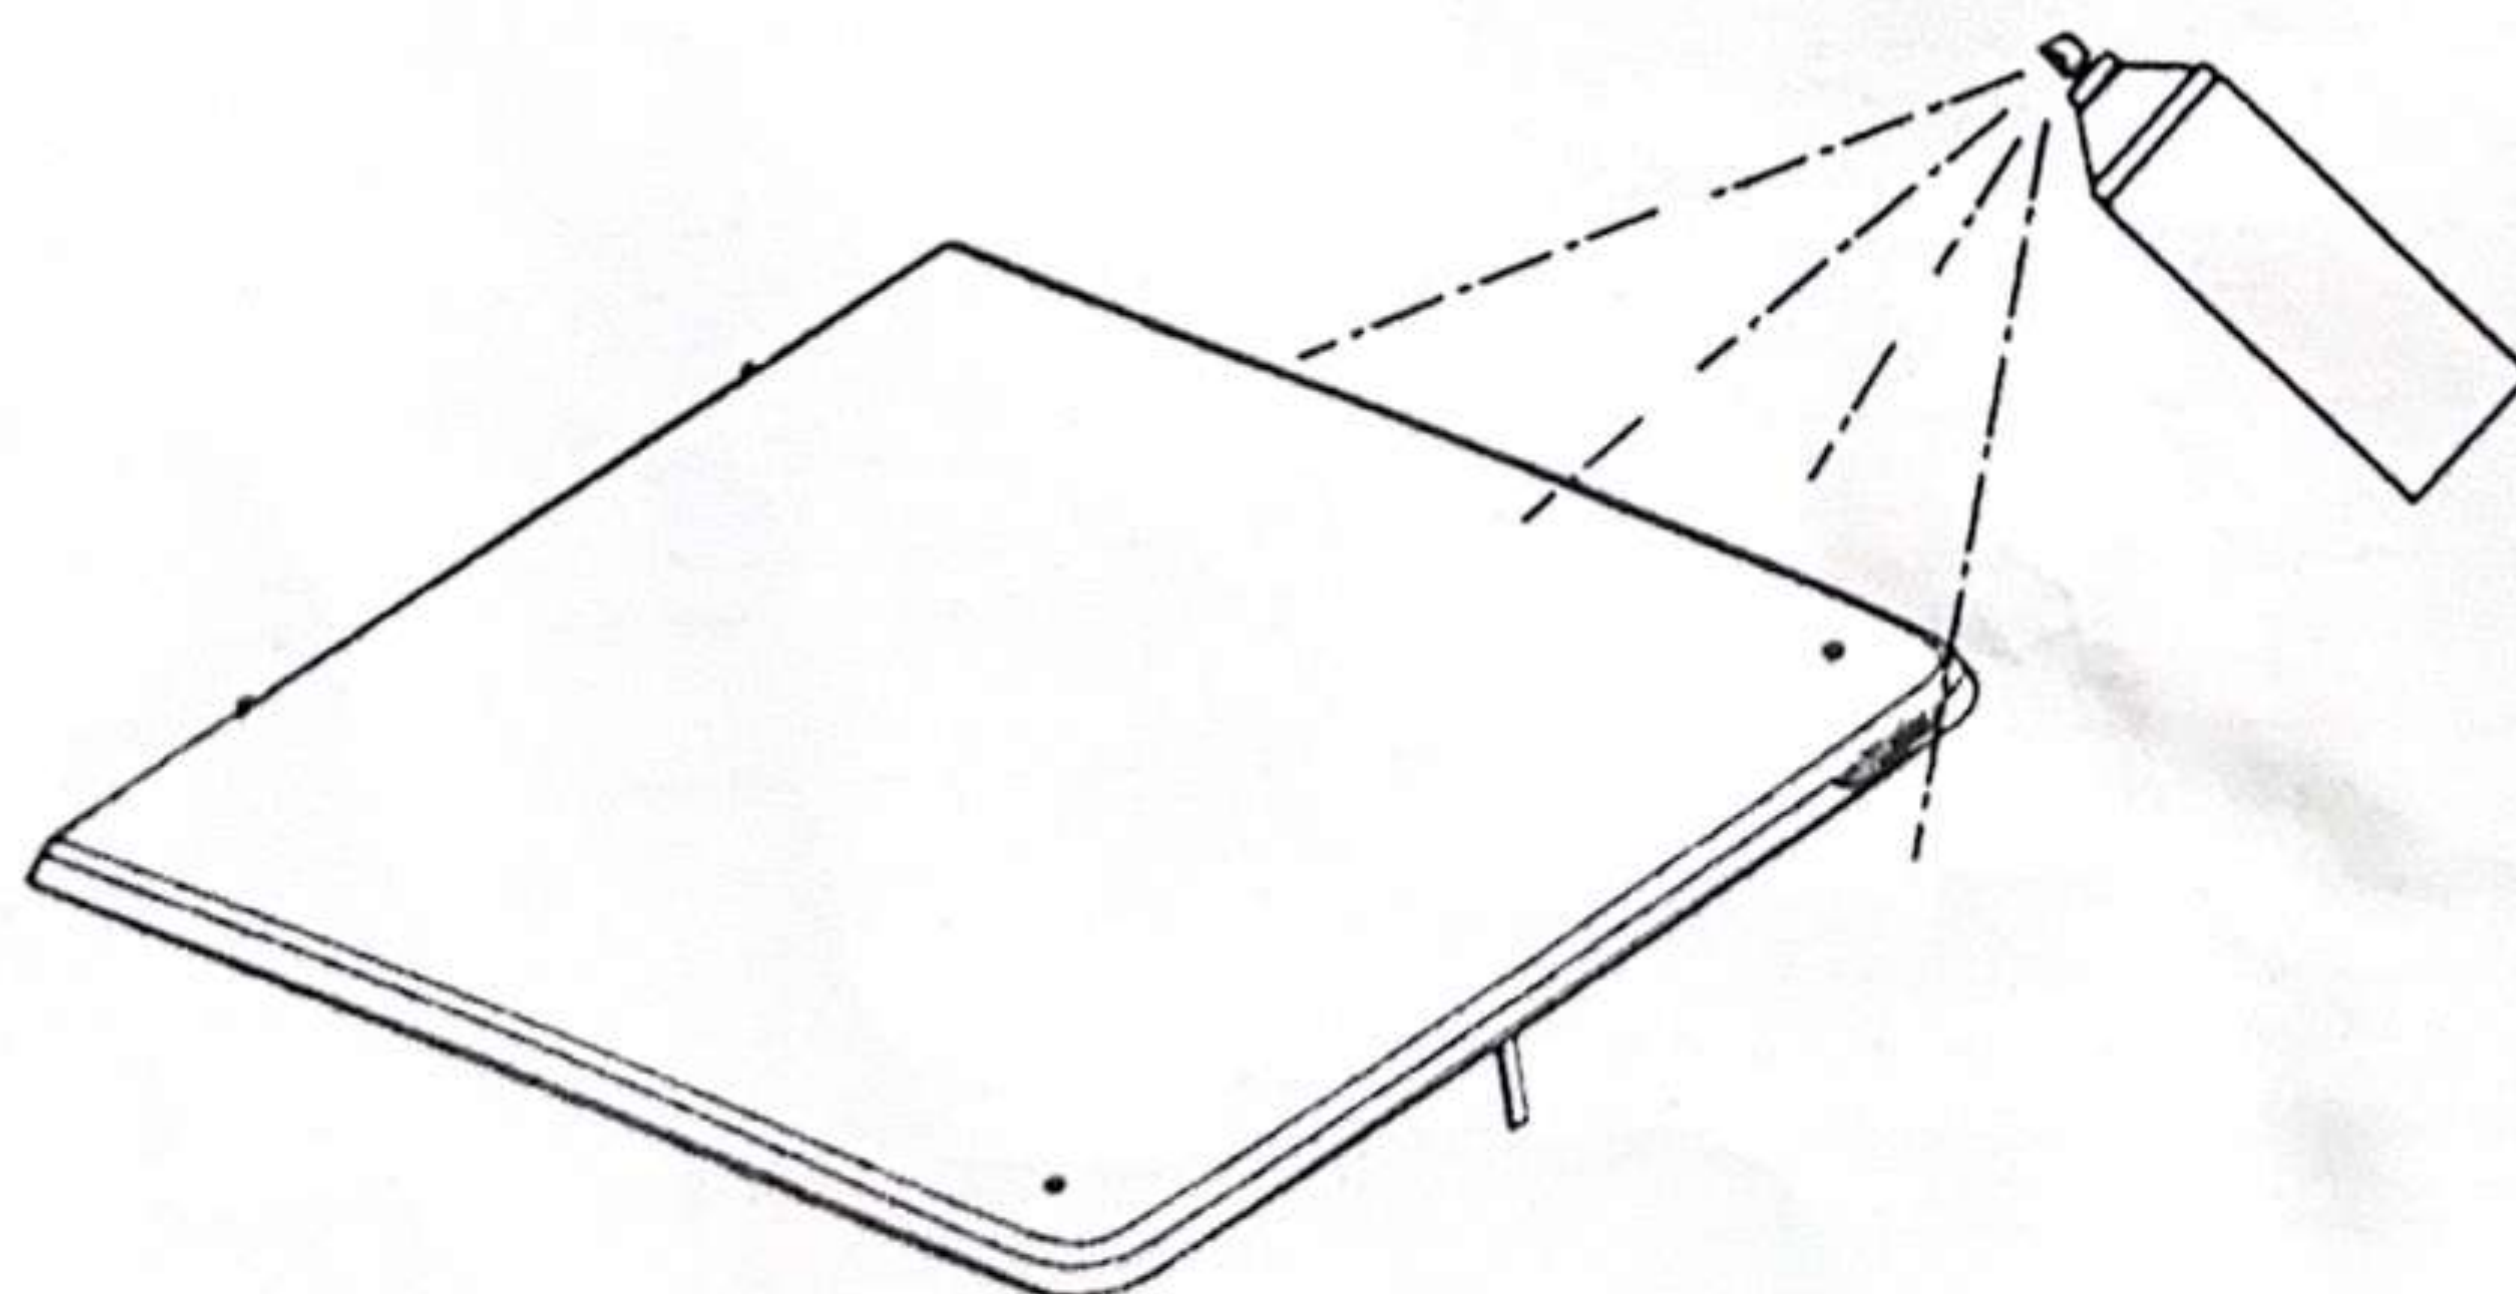






Installation Instruction


4. Affix foam Tape on position as shown

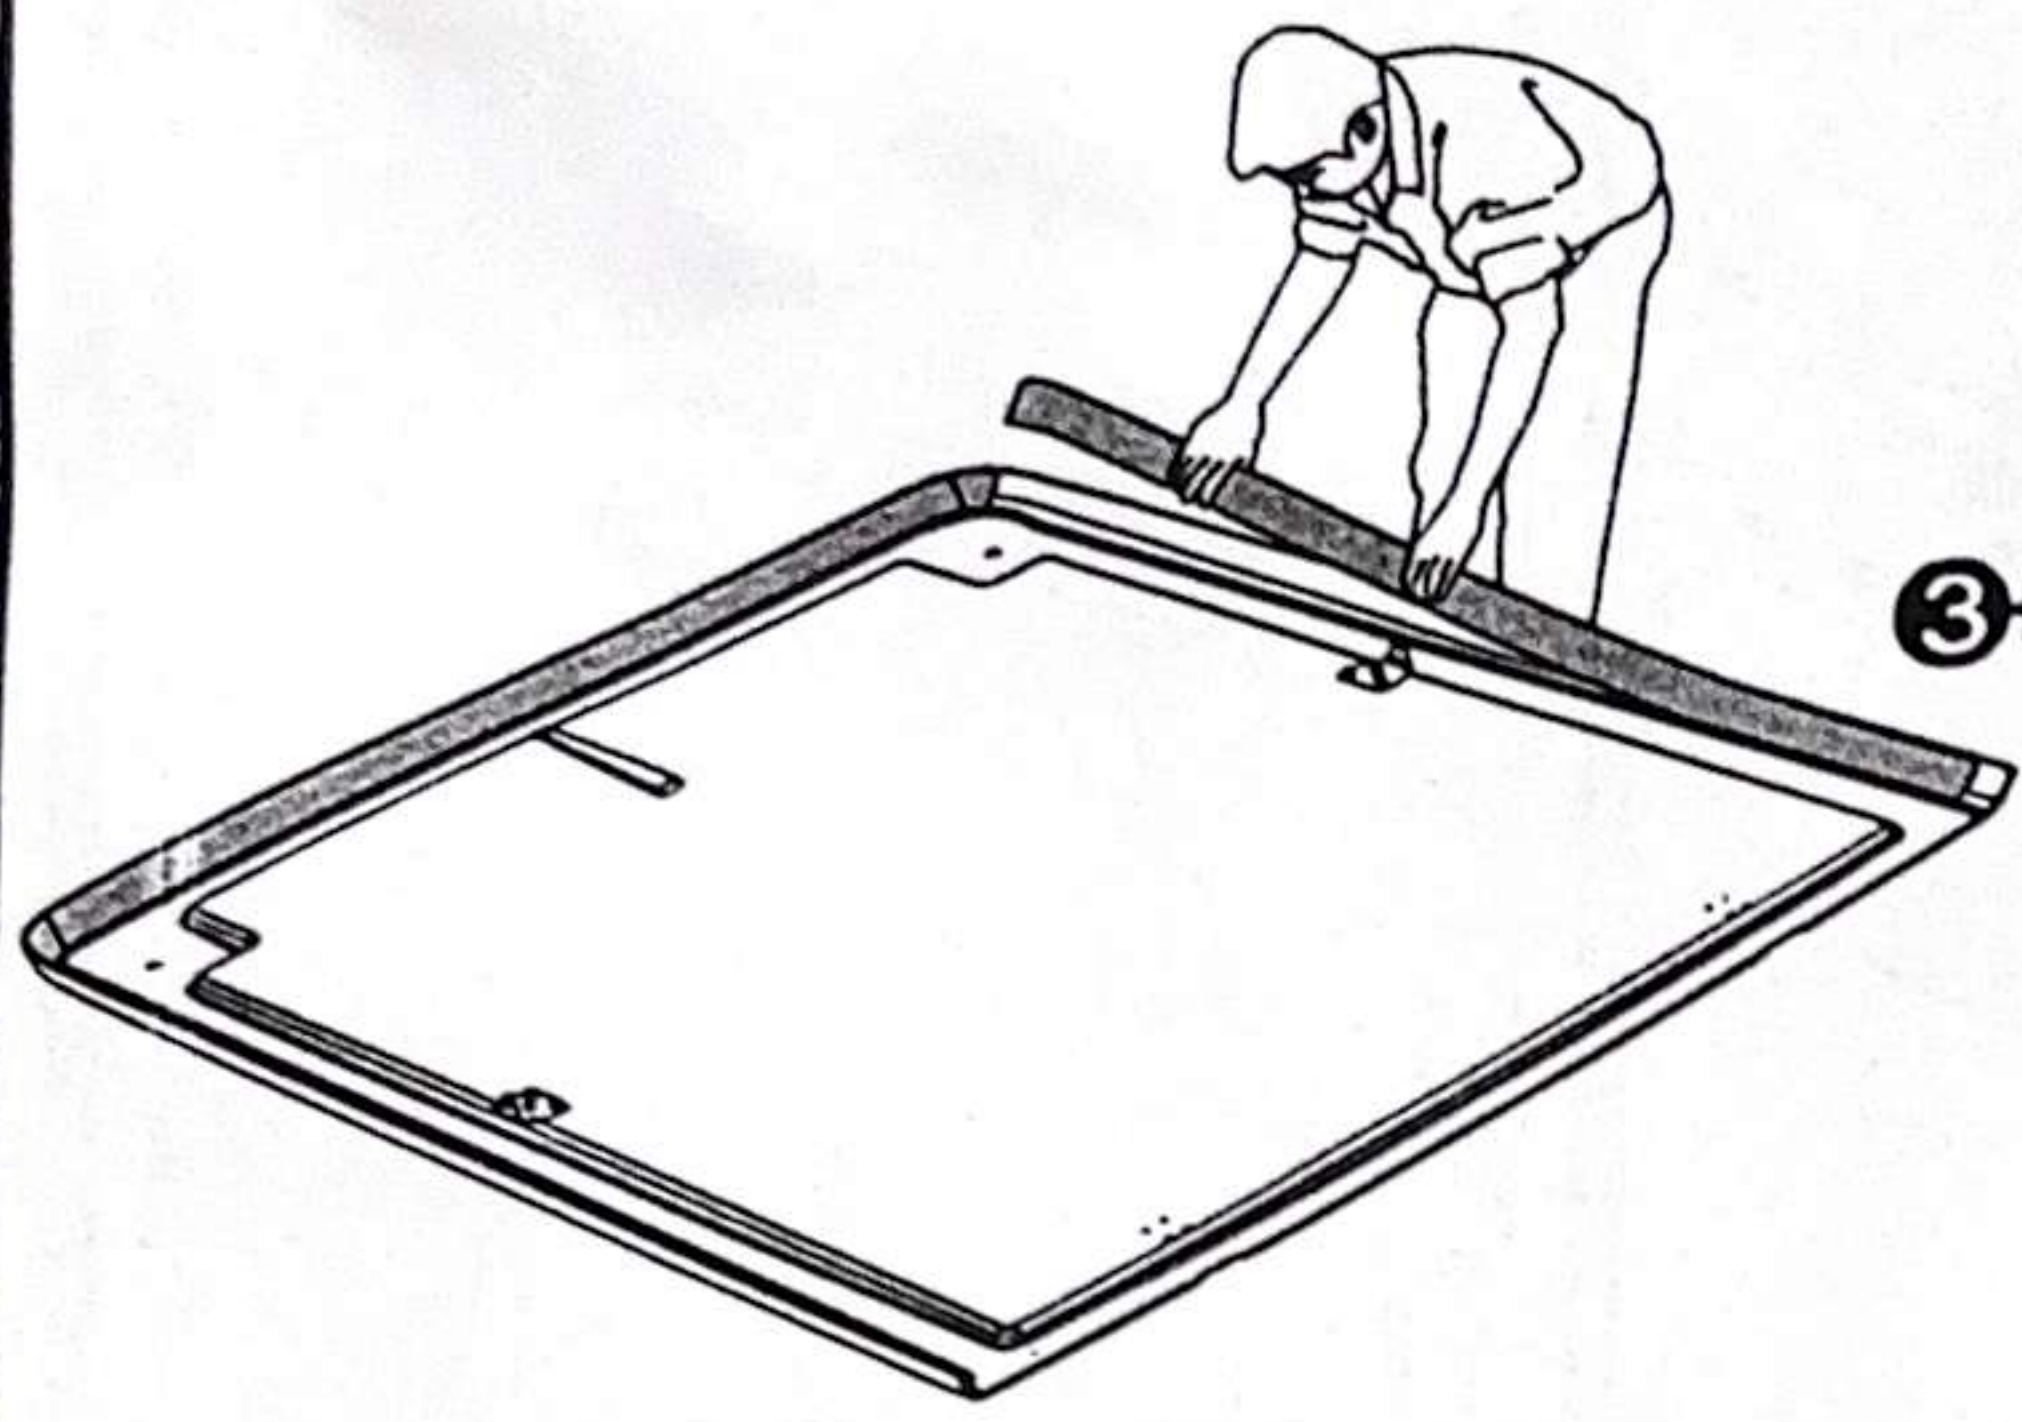

3

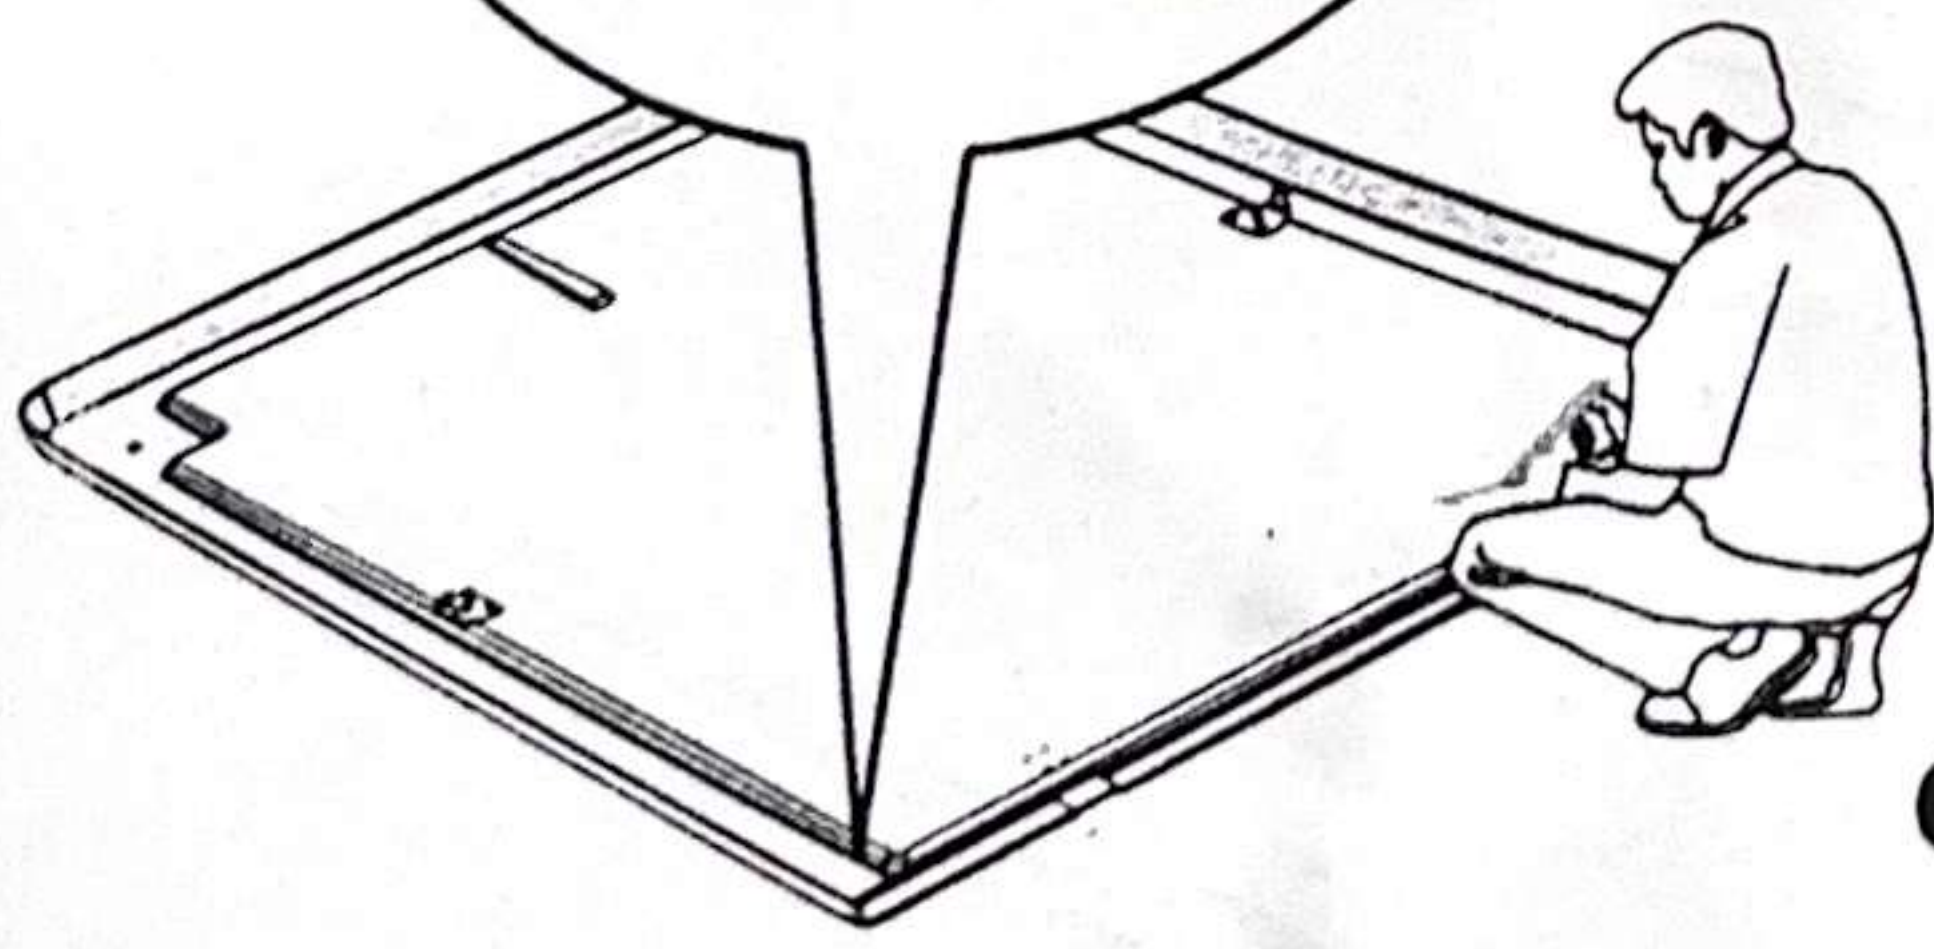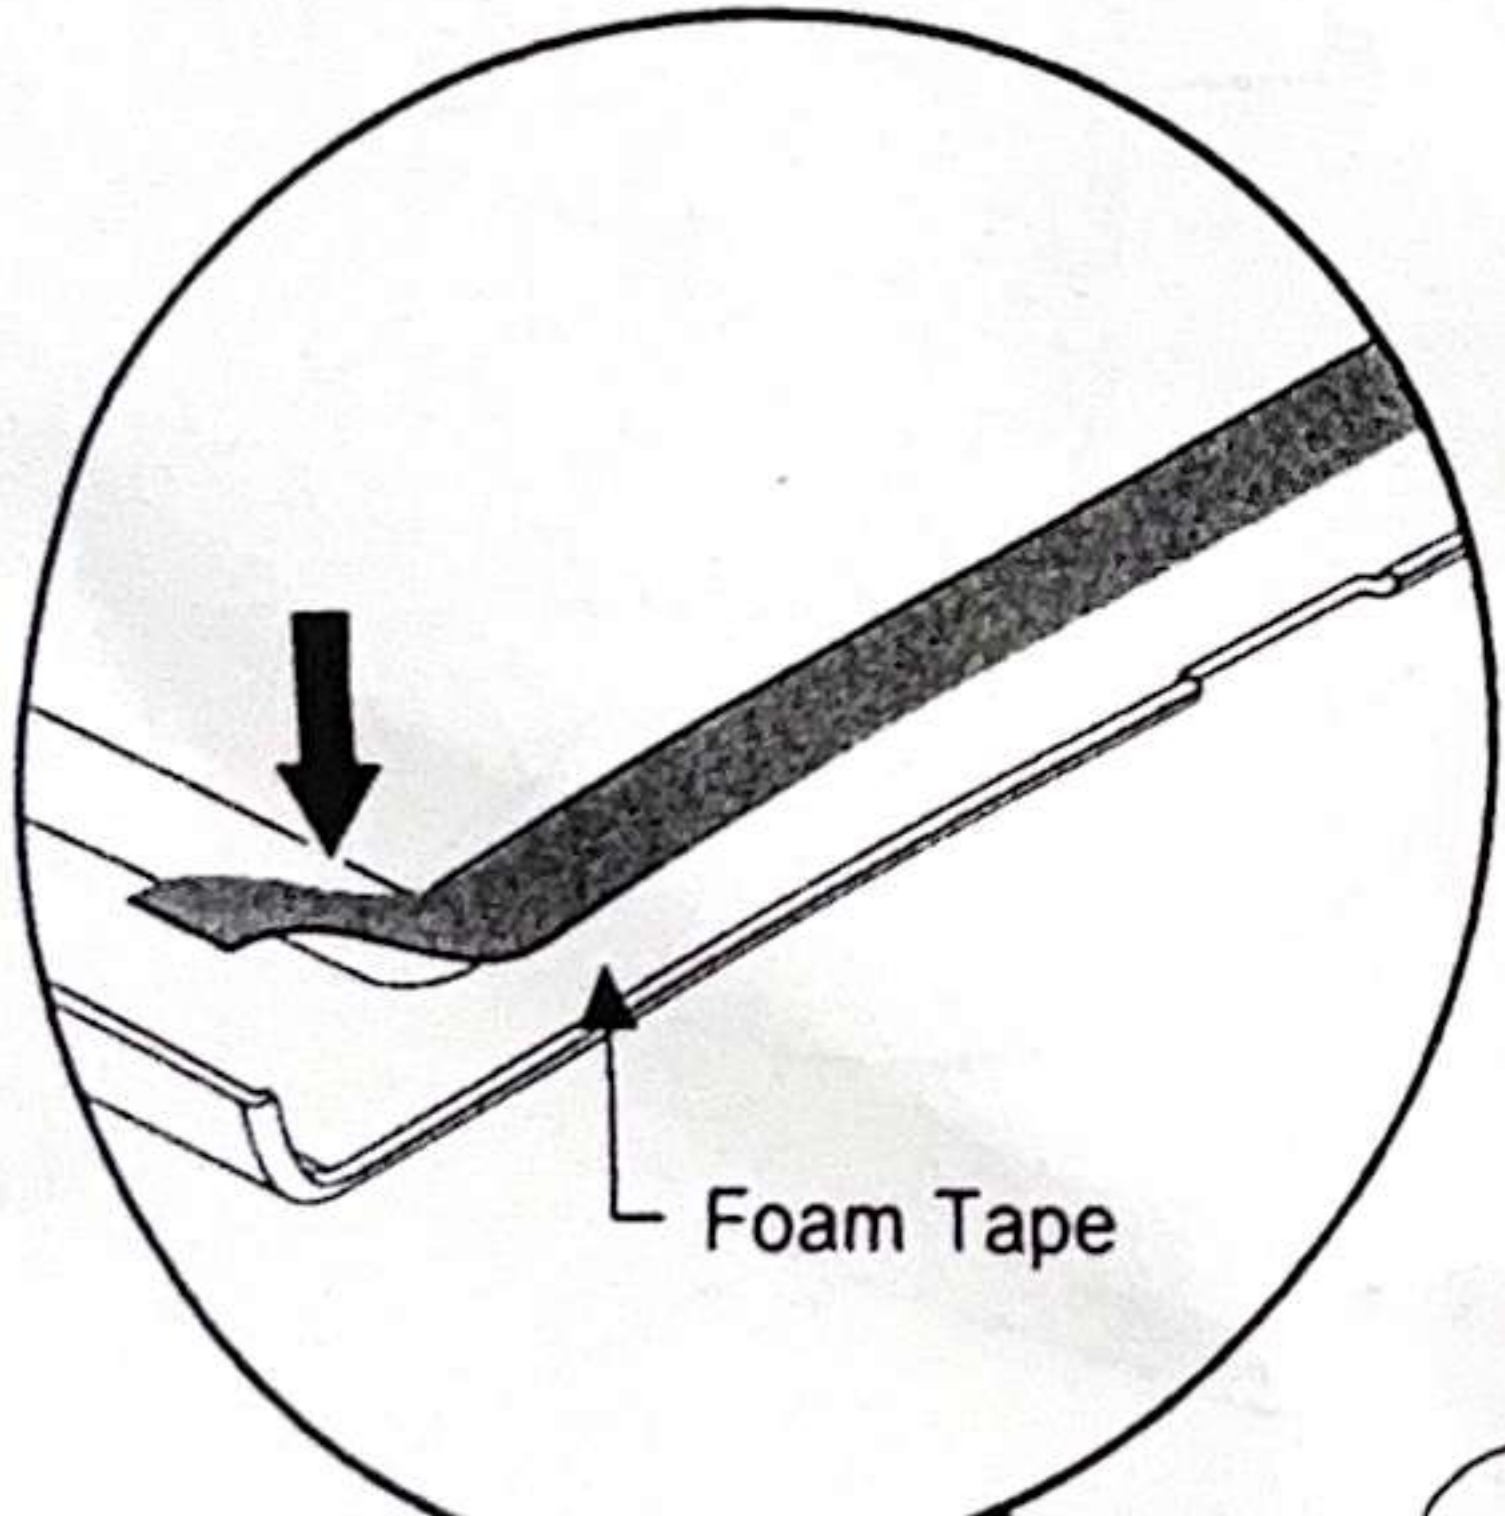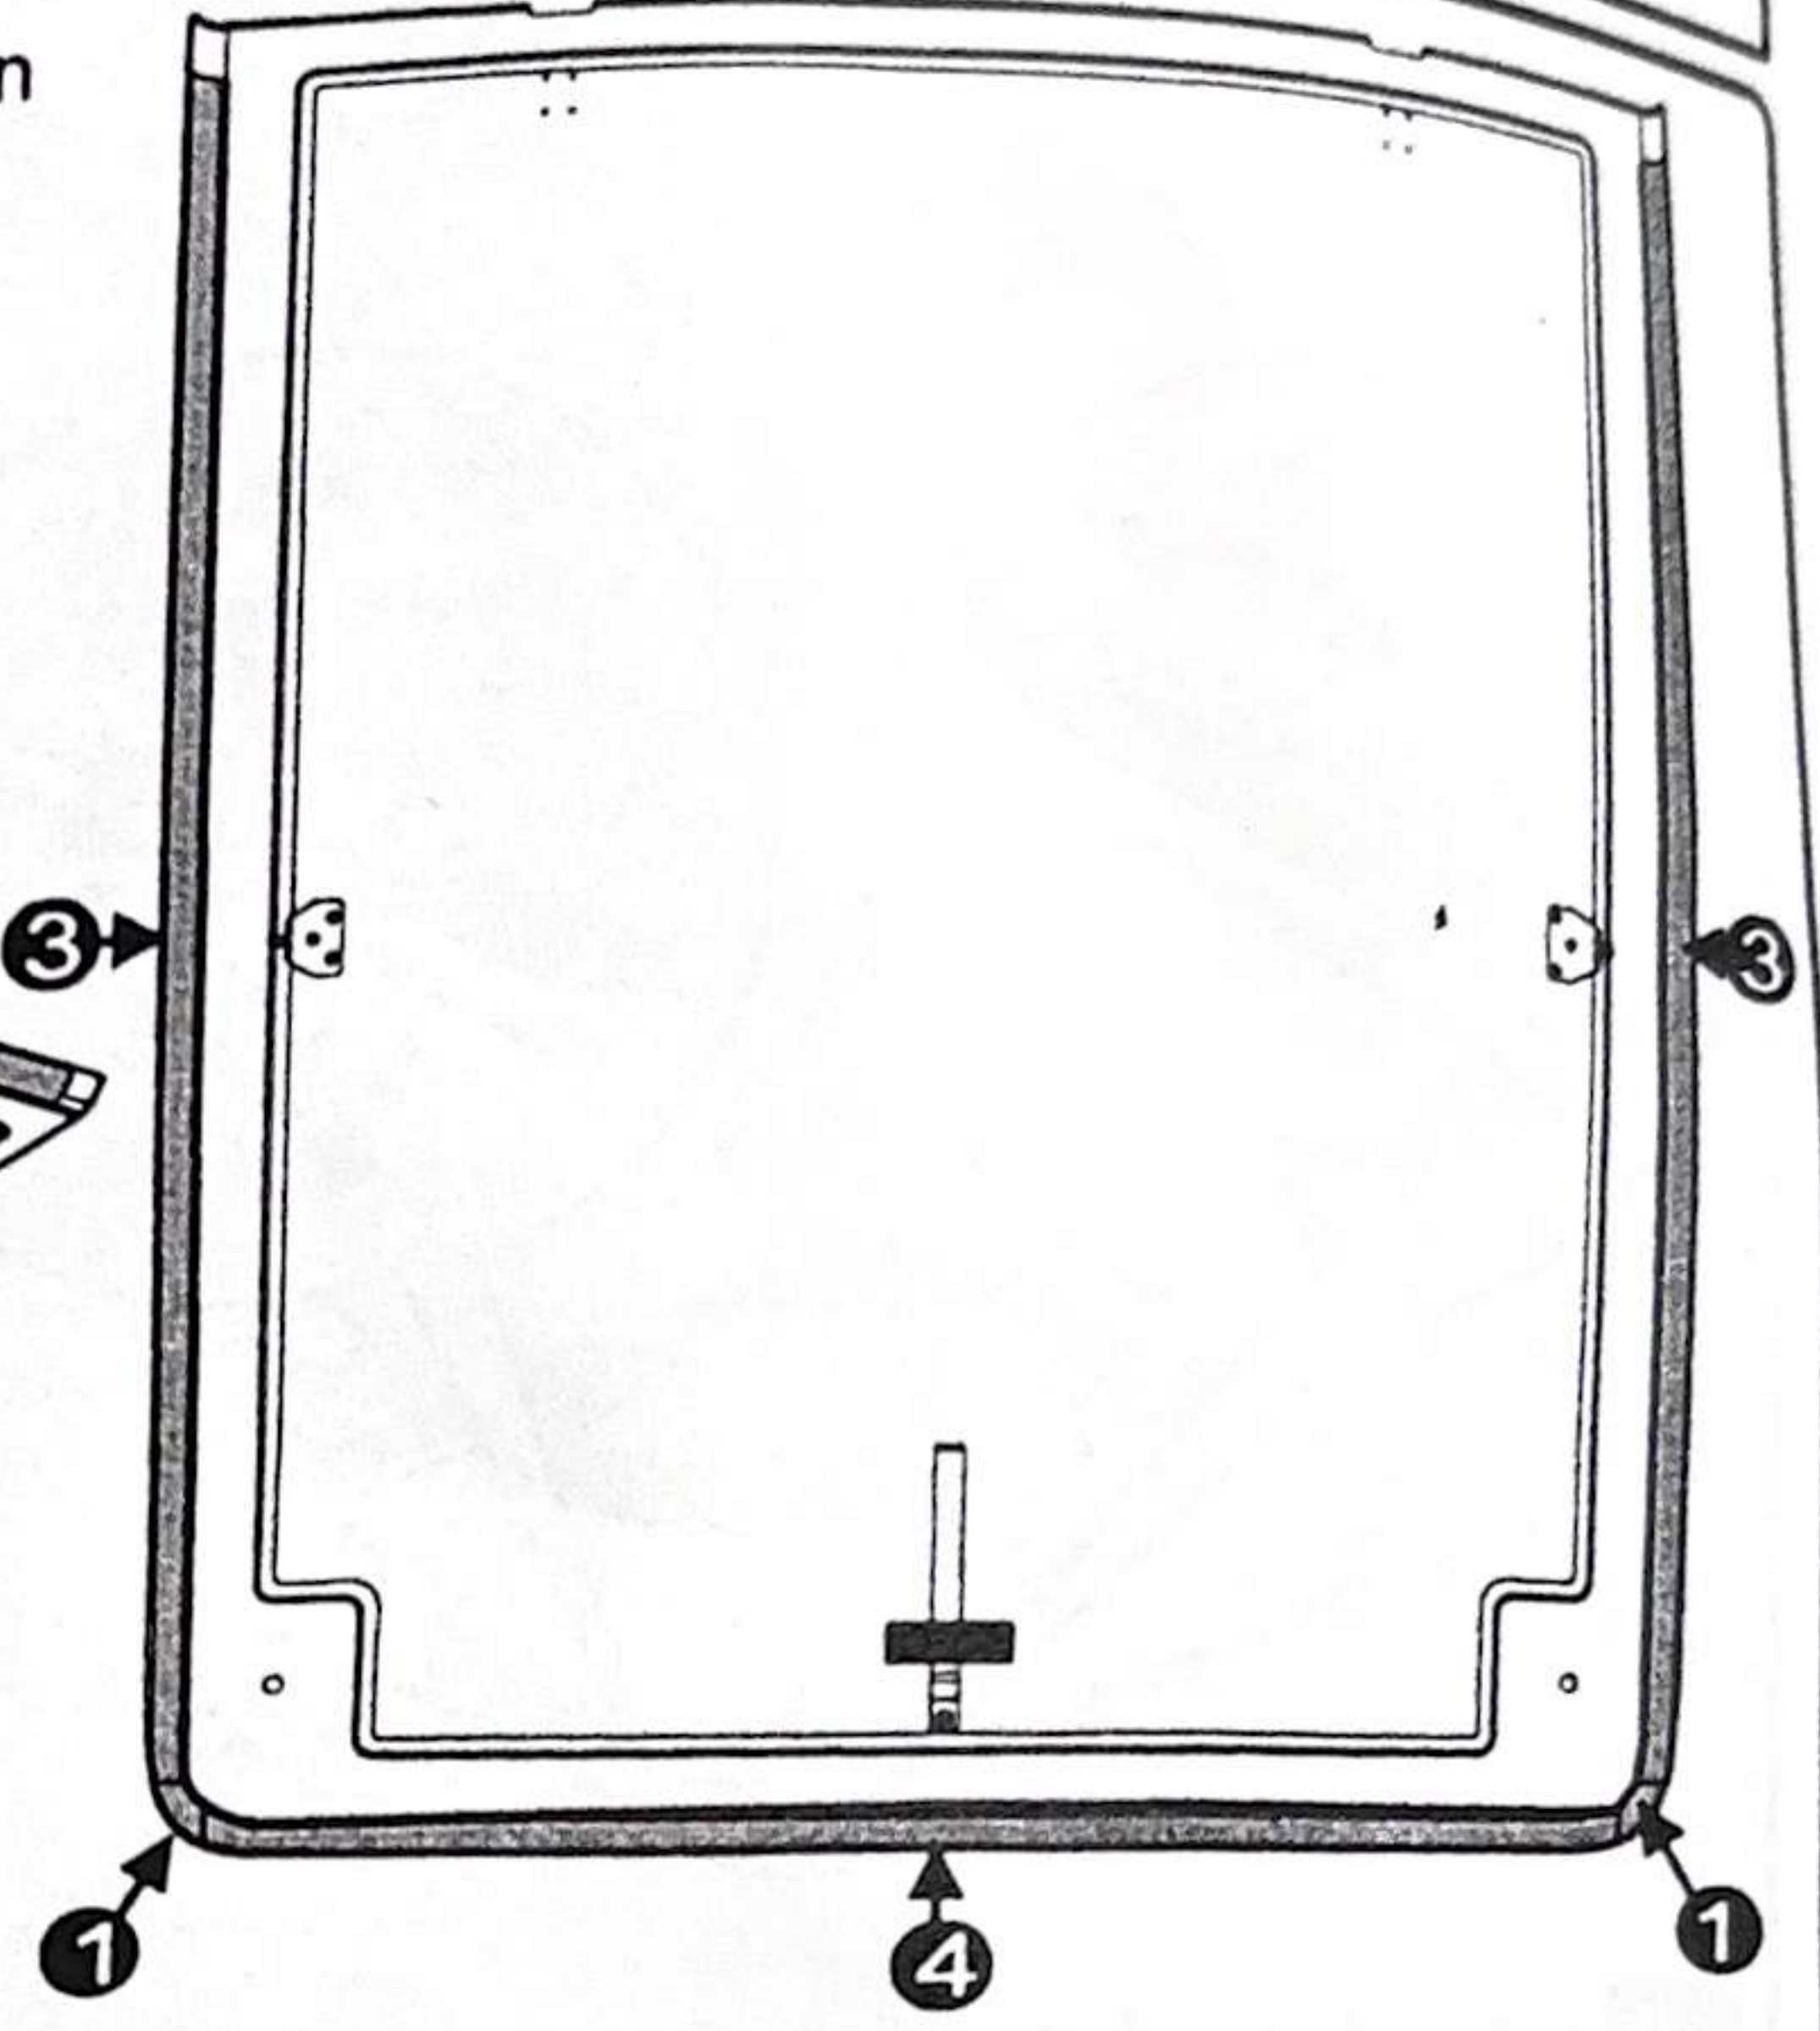



3

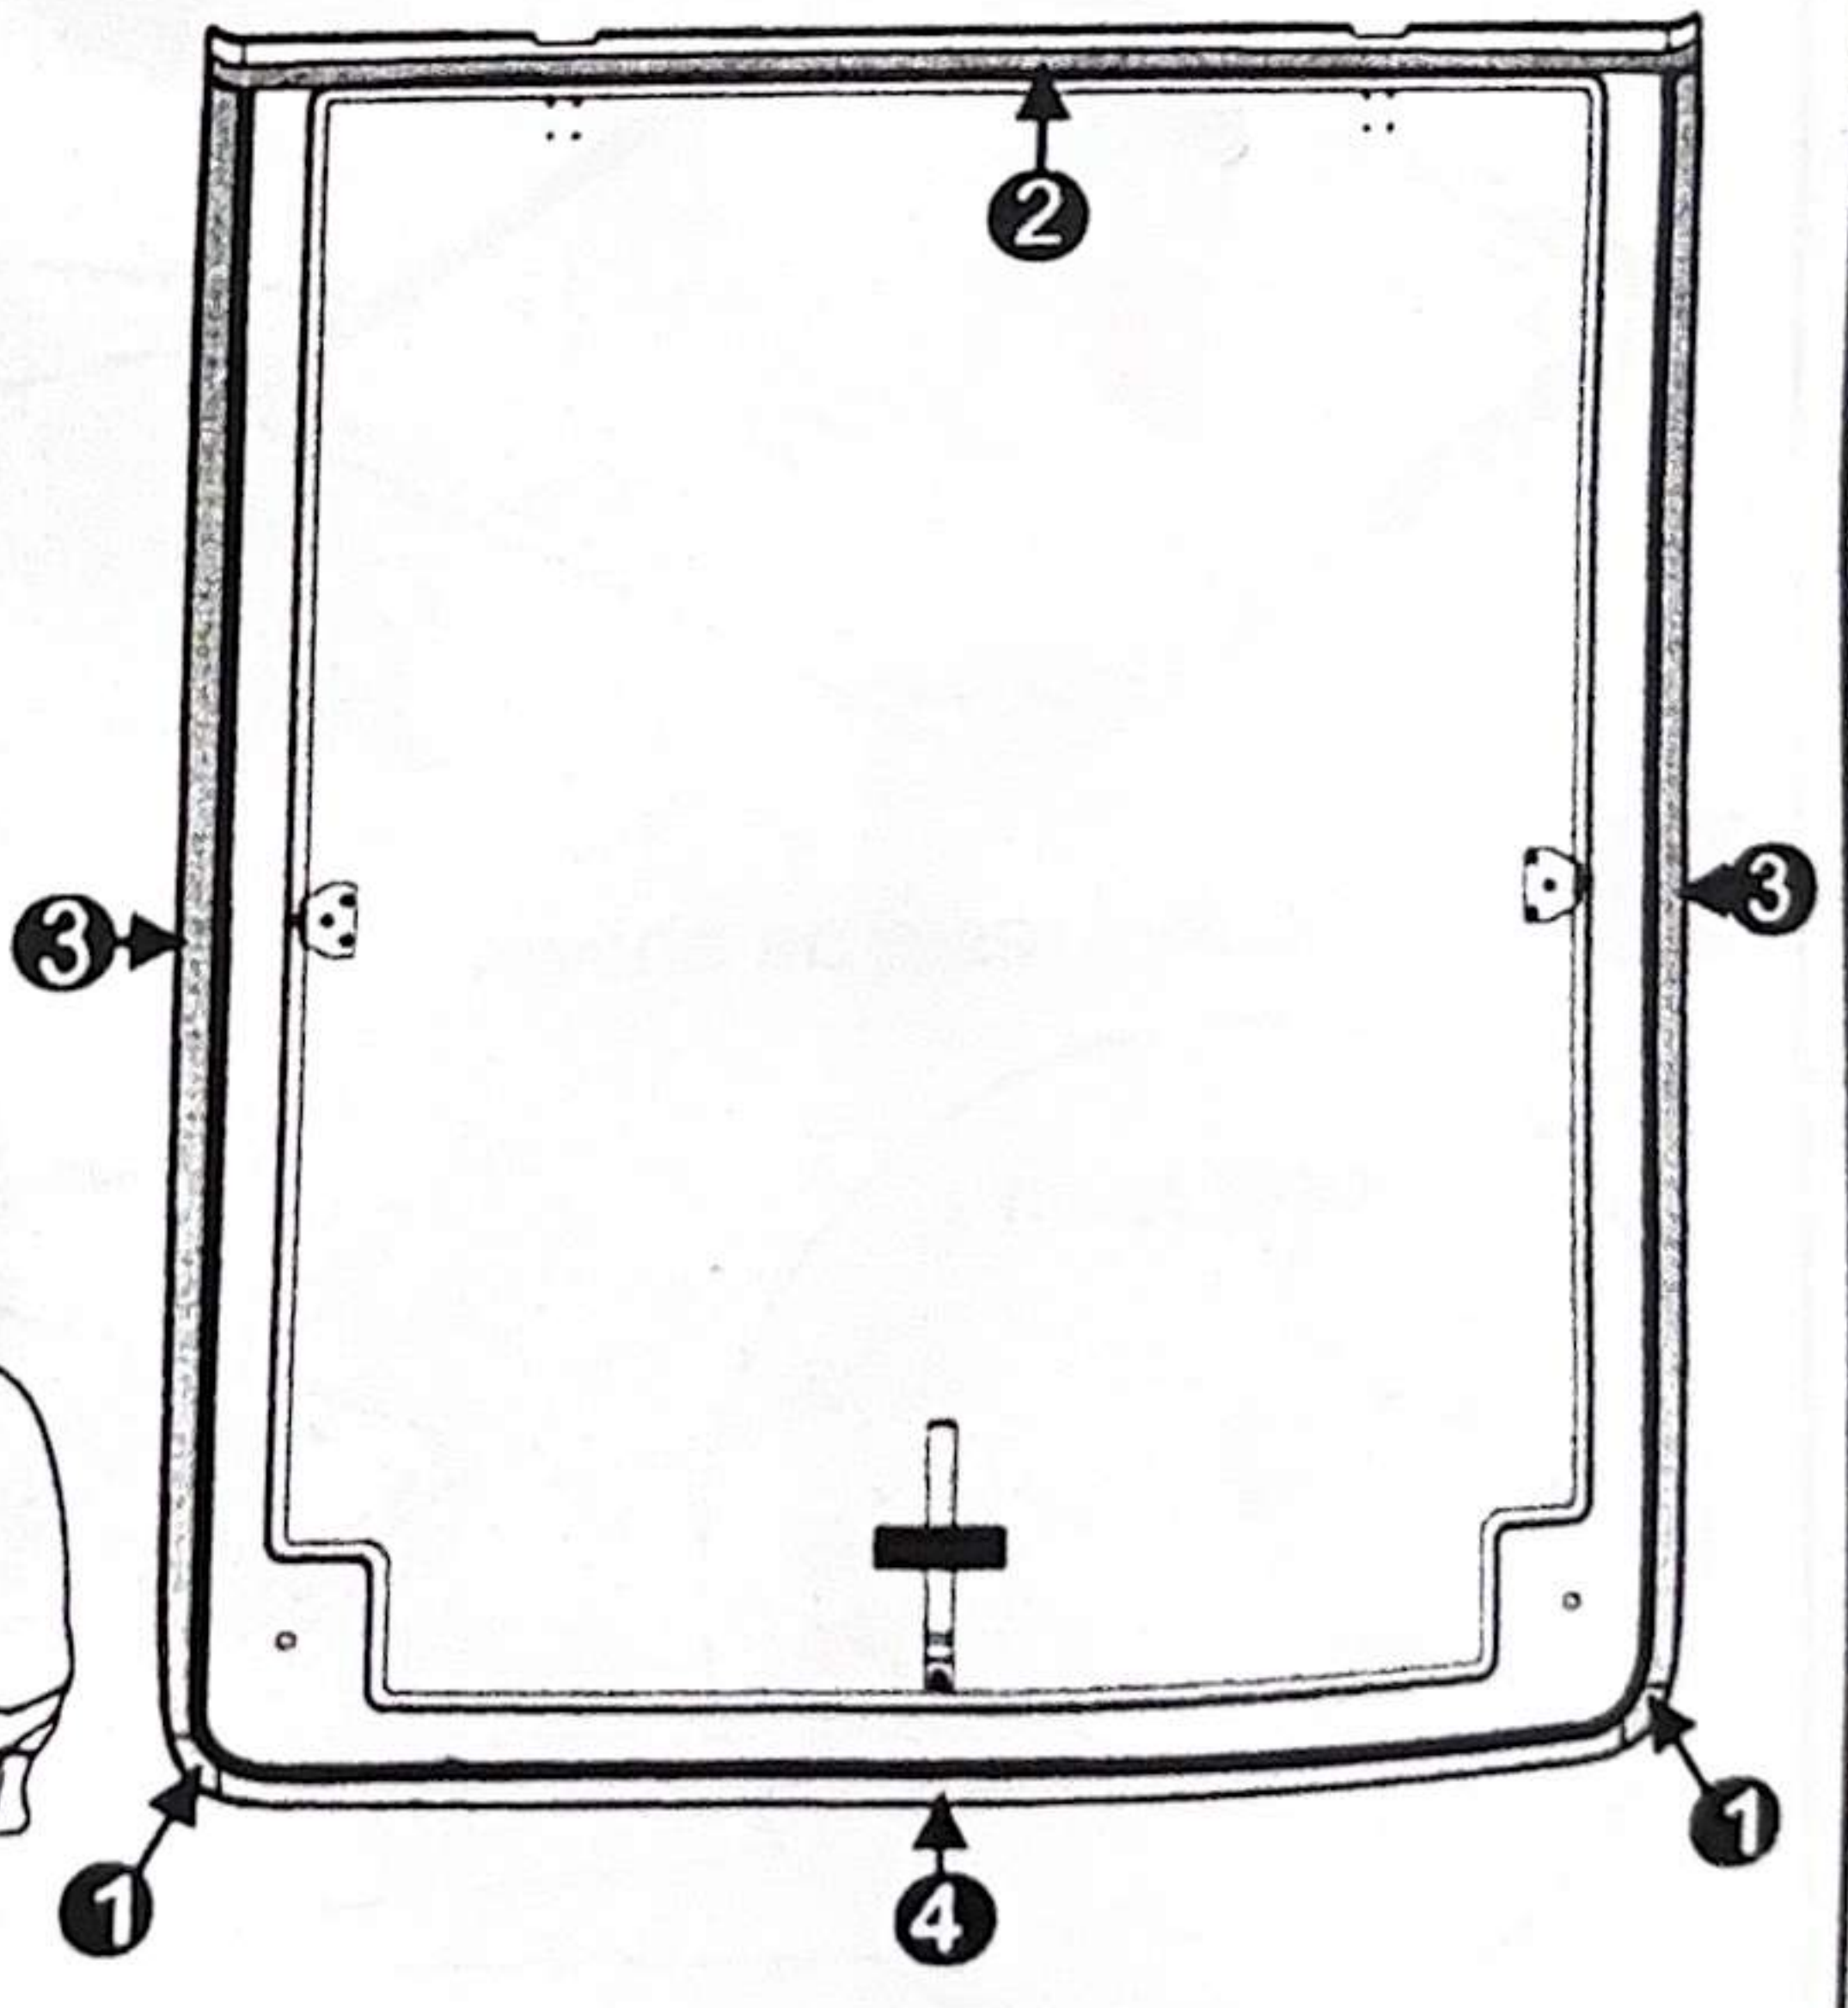


Installation Instruction




5. Put rubber seal on position as shown

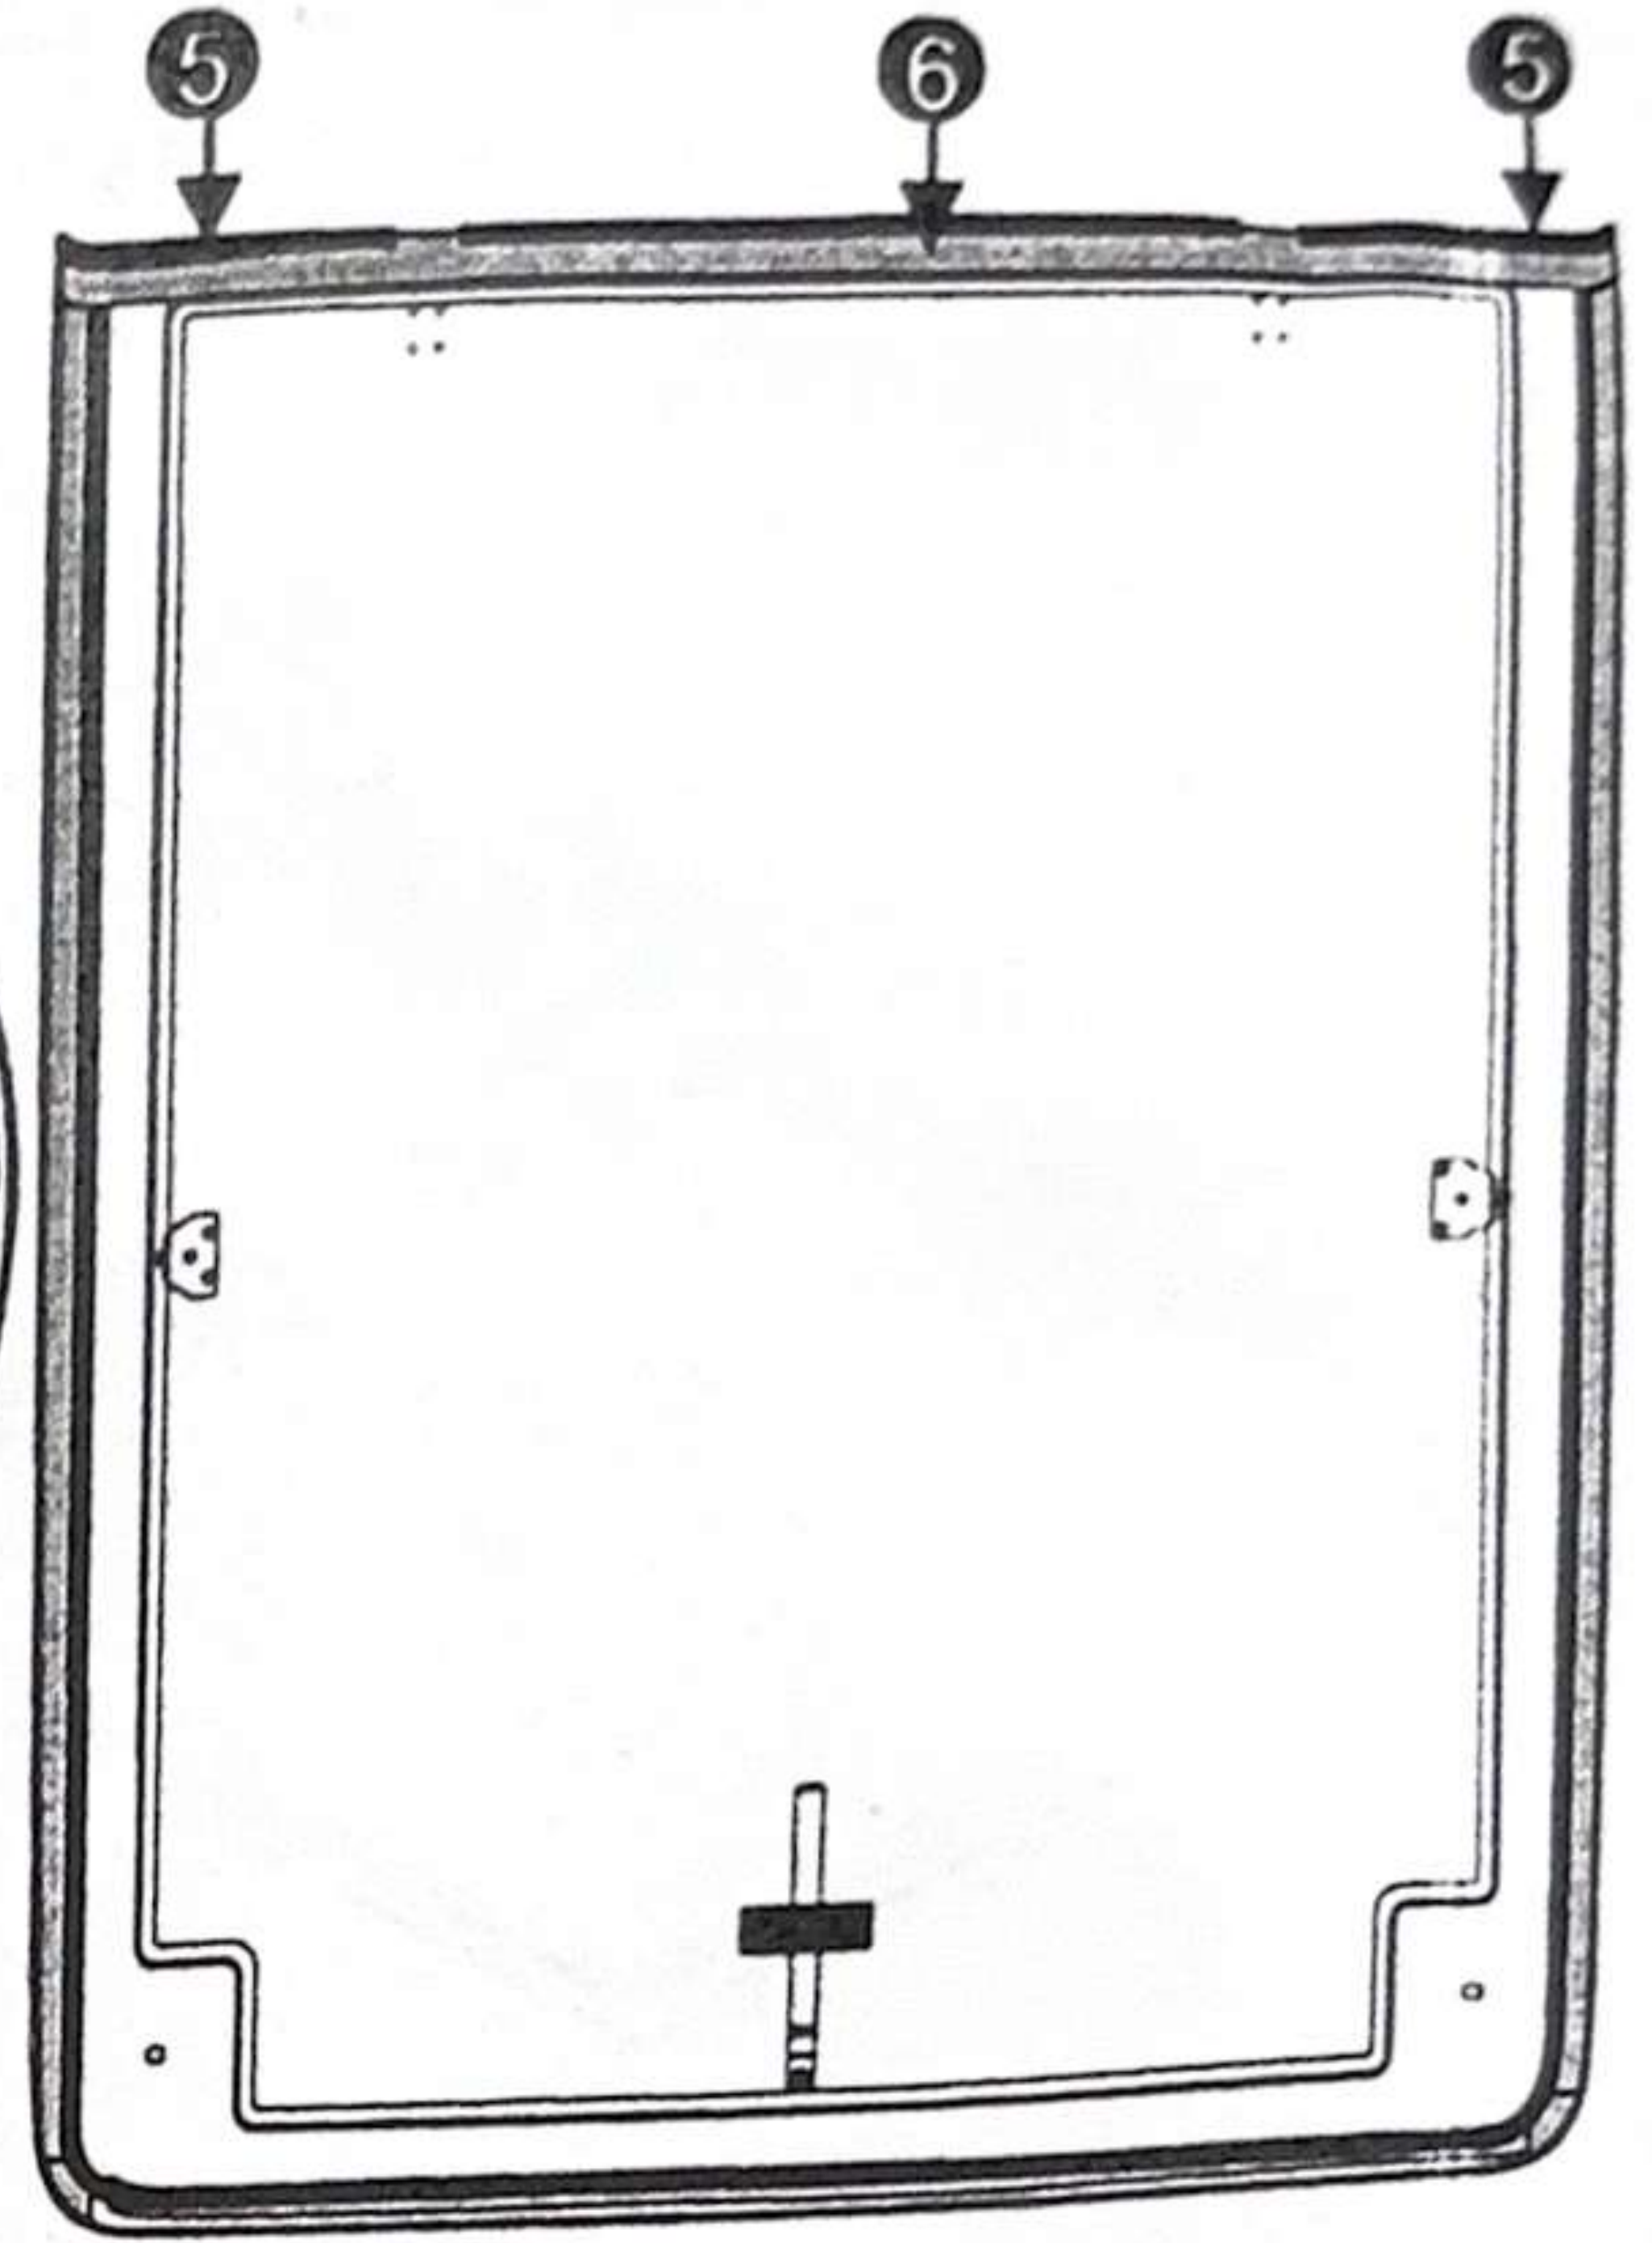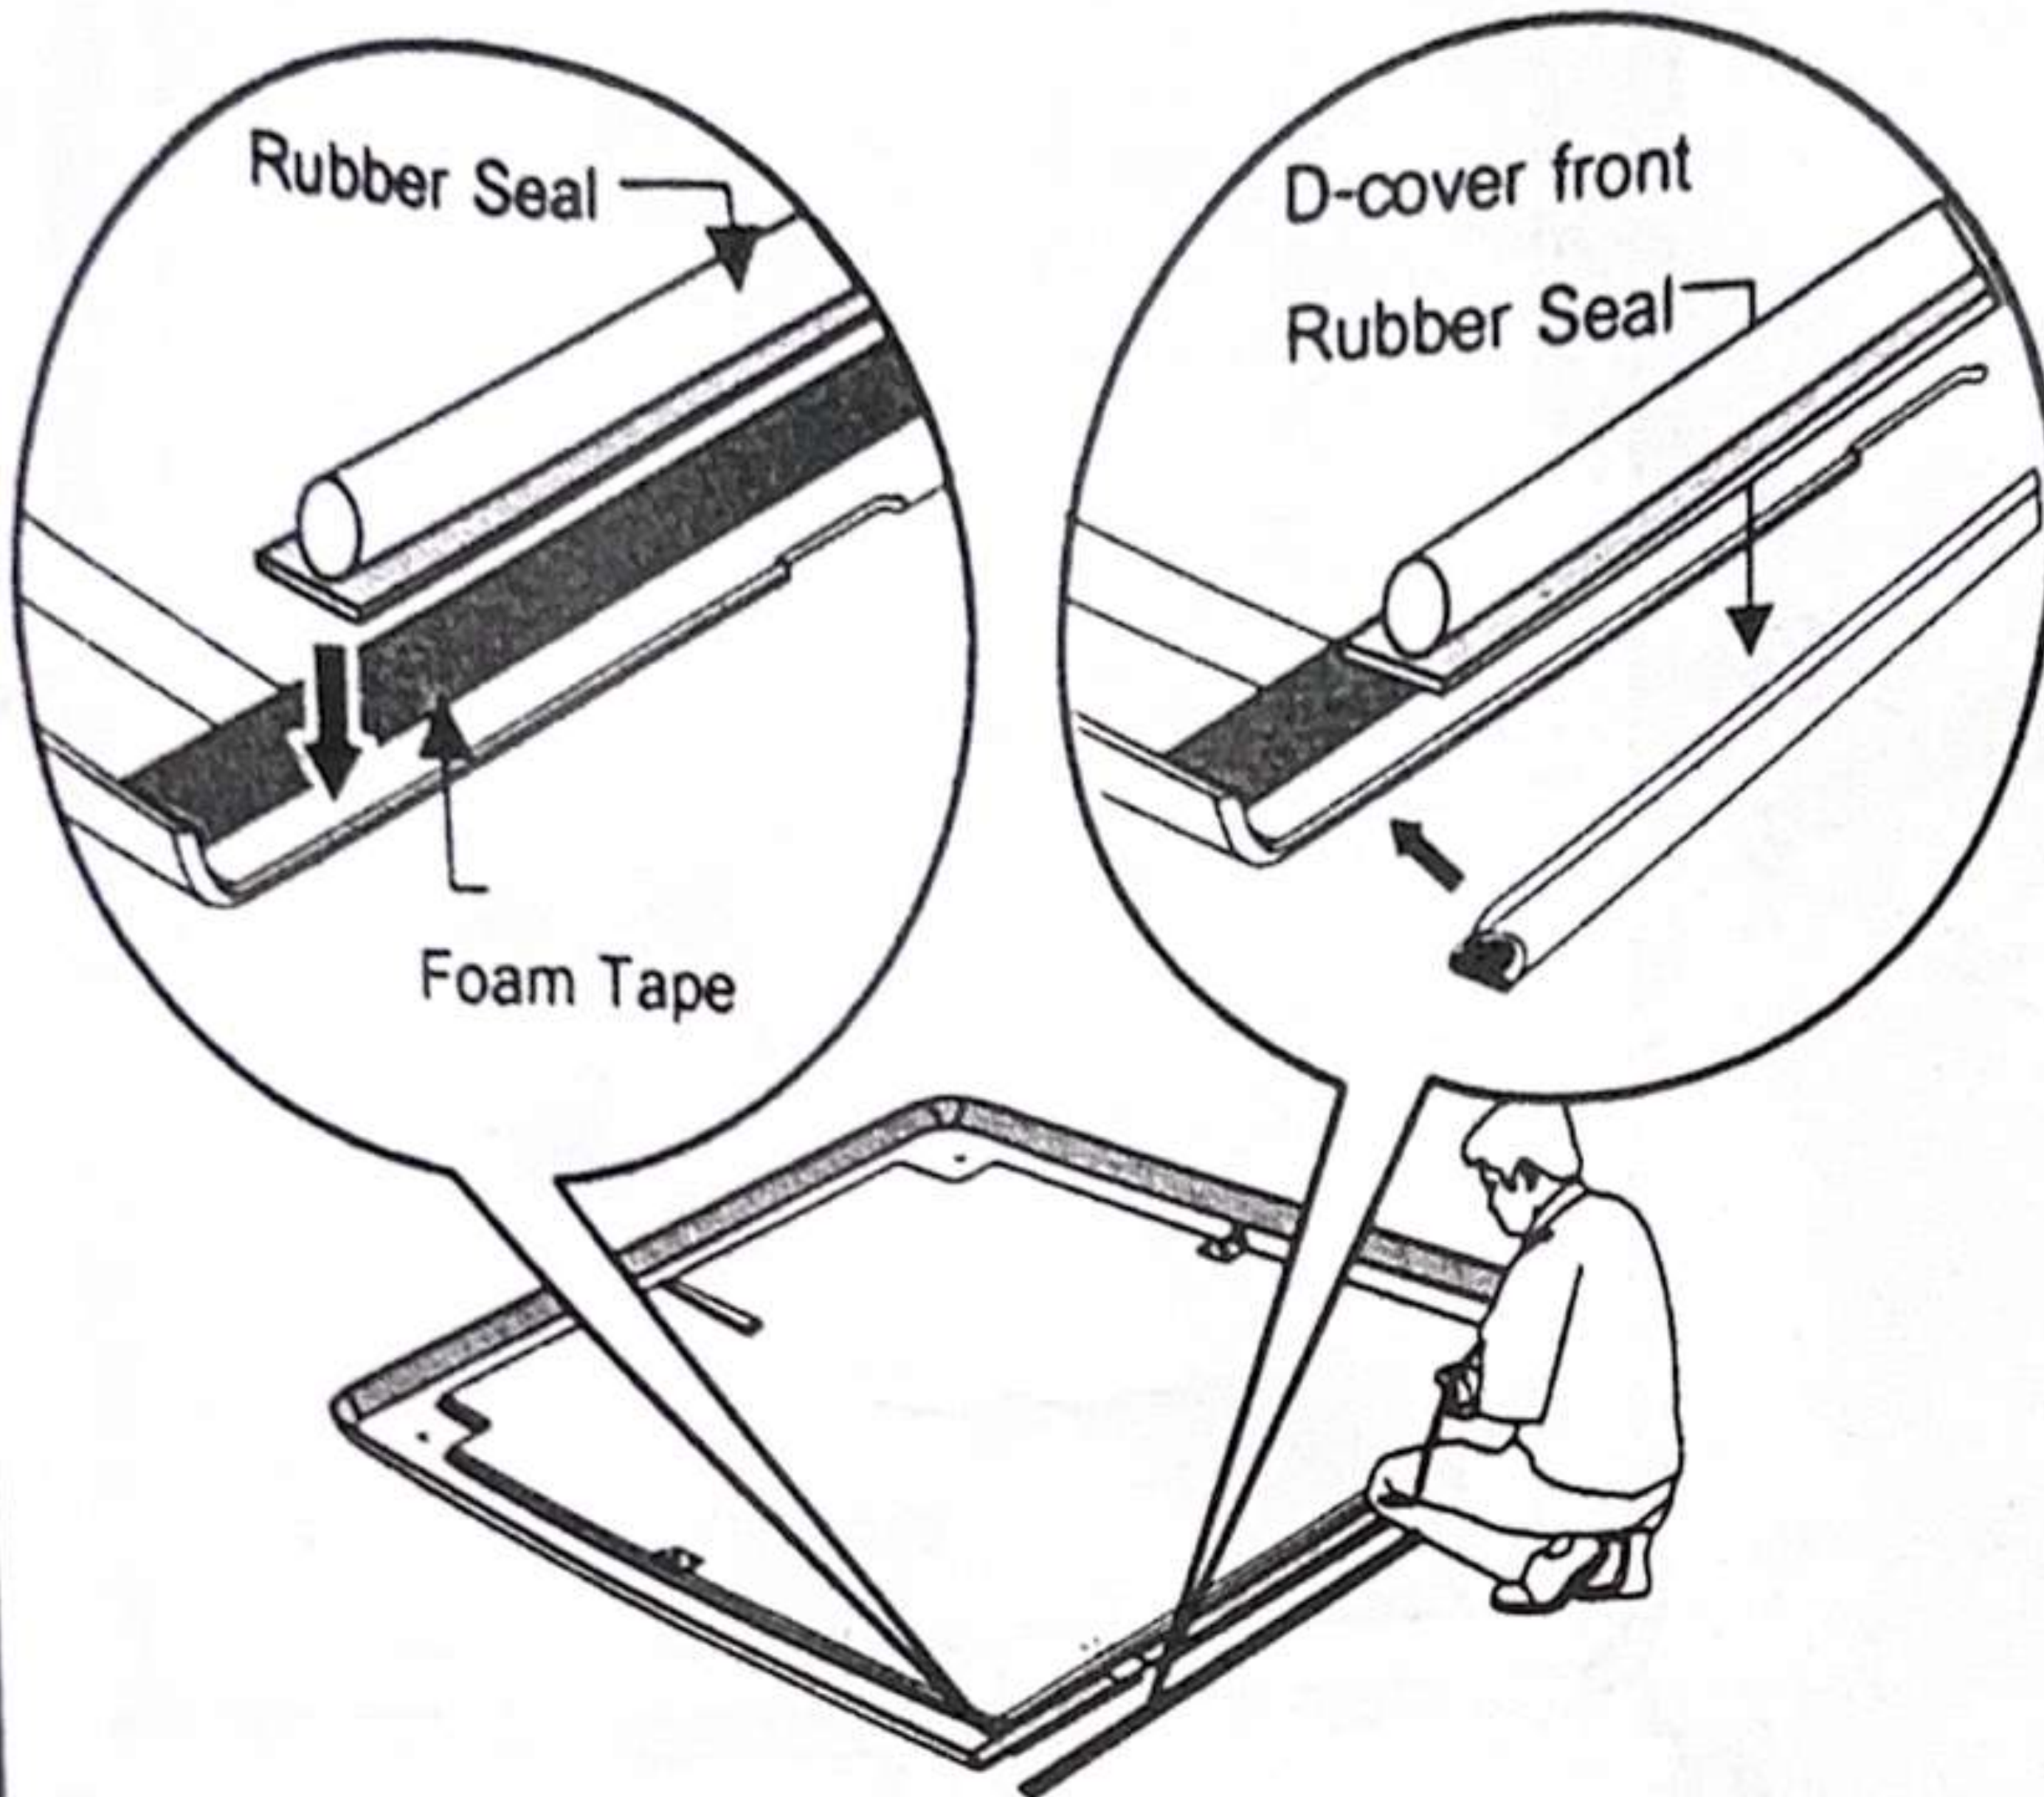

6. Install hinge Mitsubishi Triton at 10 mm. As shown

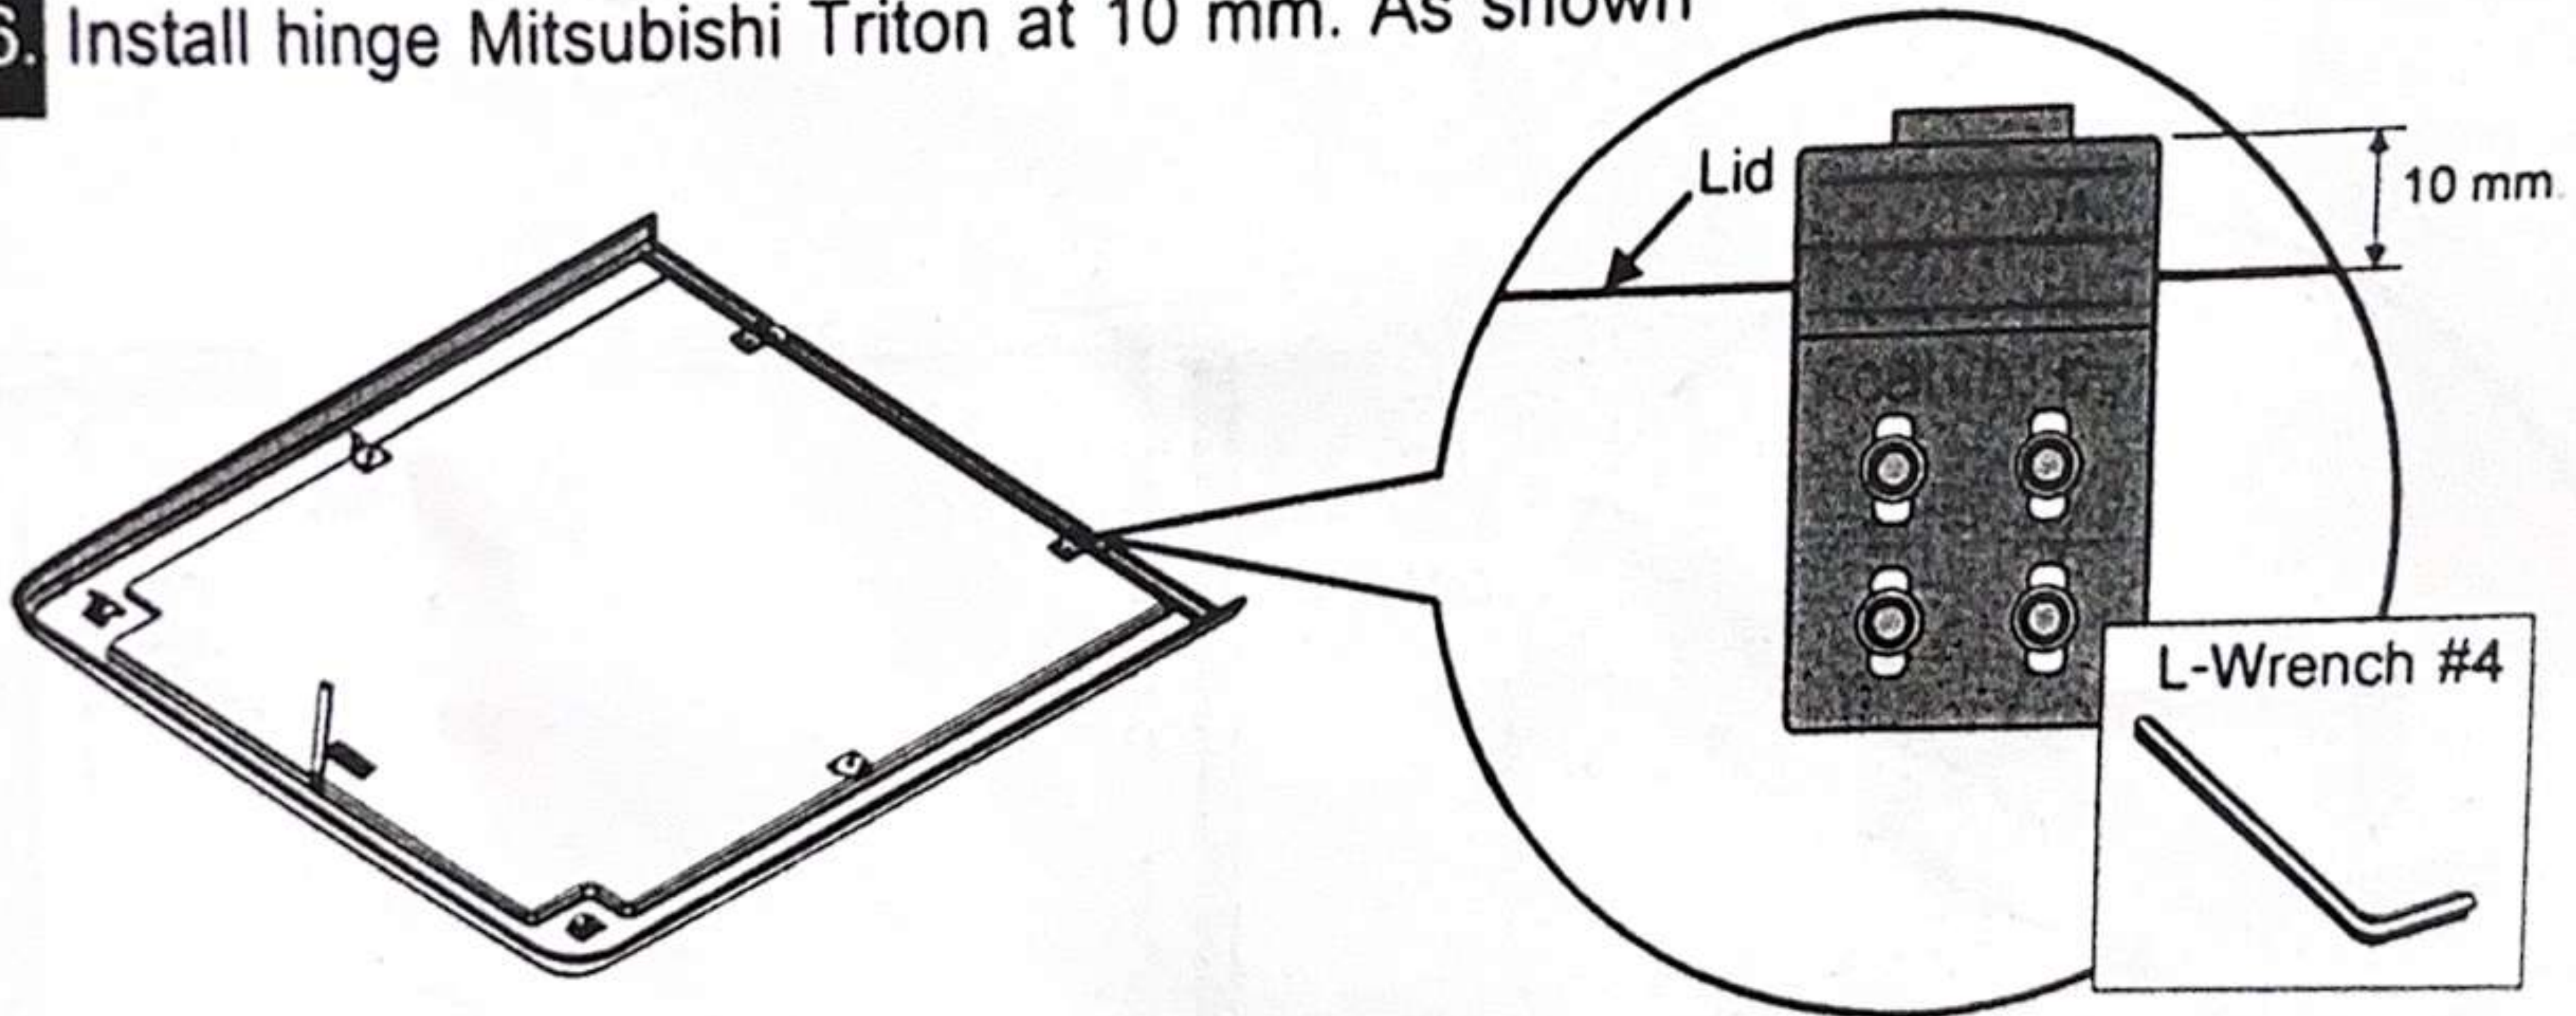







7. Insert Sticker resin as shown

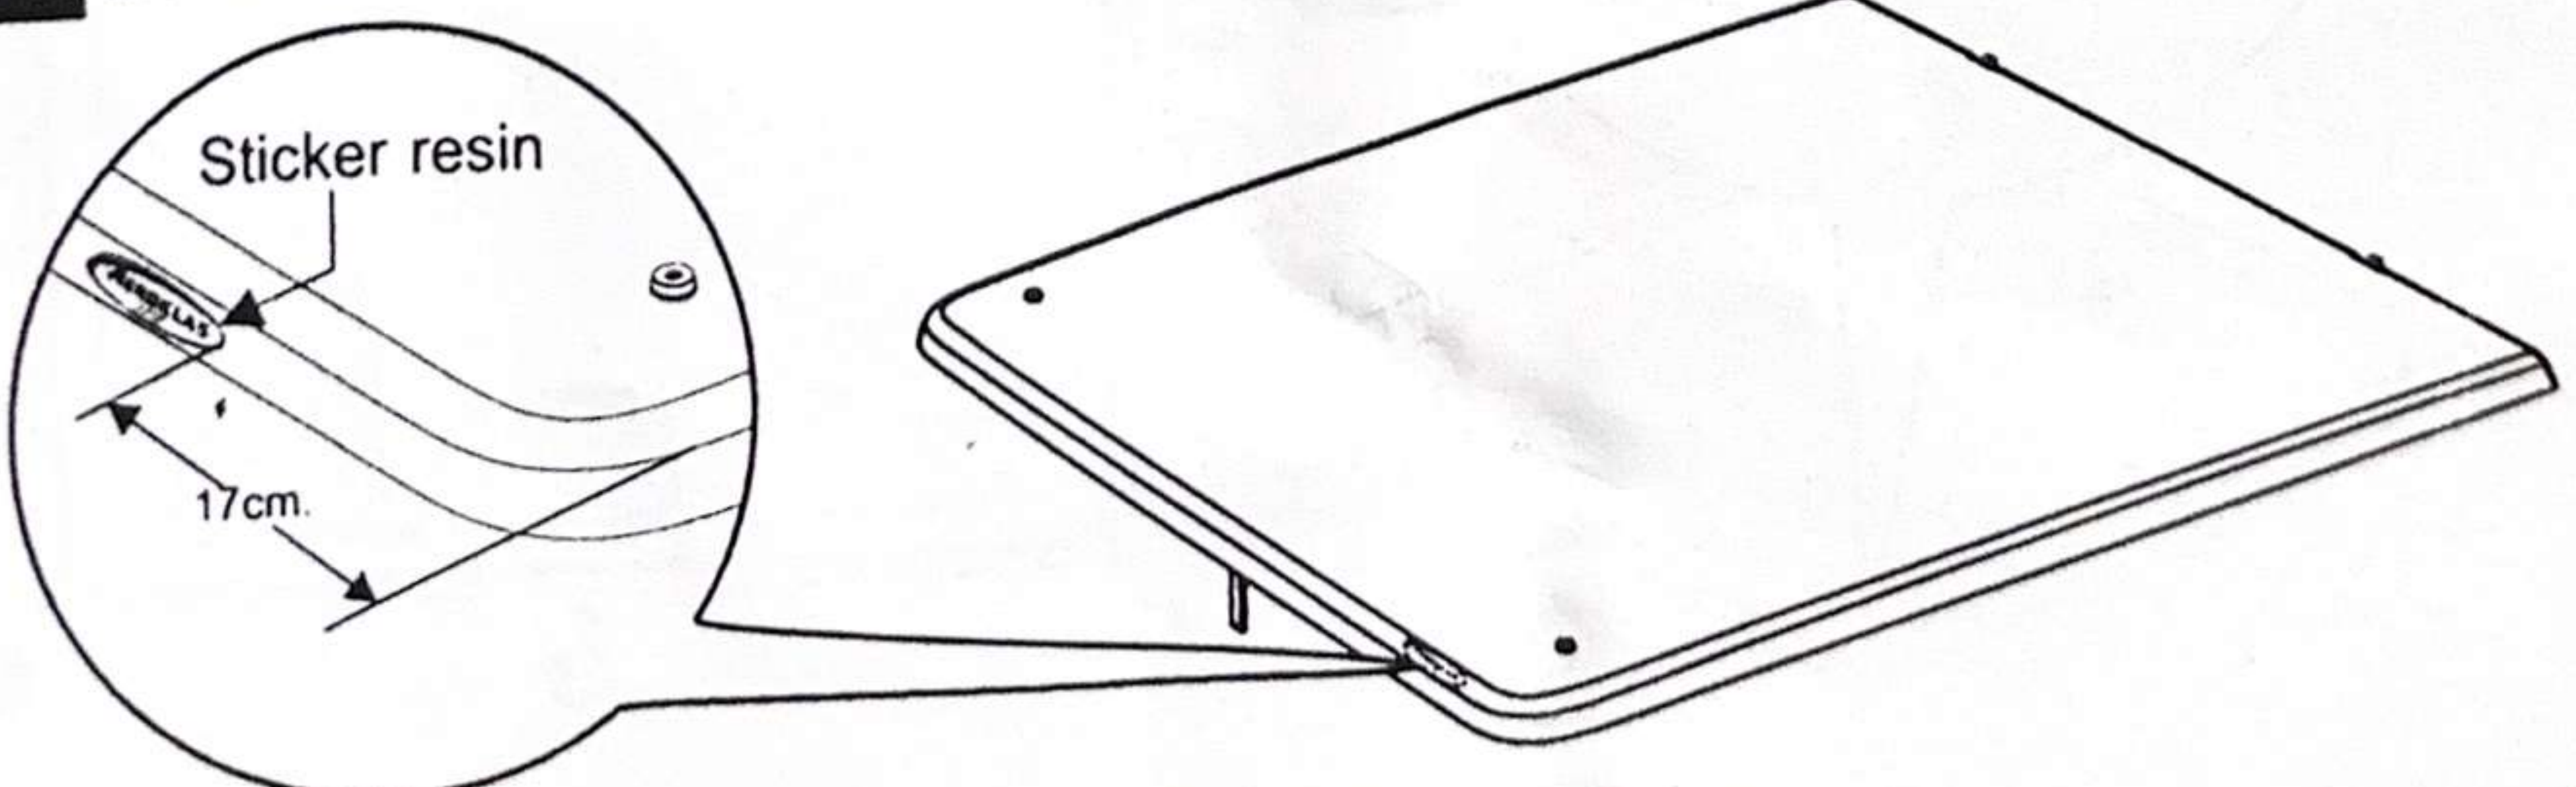



Installation Instruction


8. Install lock device on cover as shown

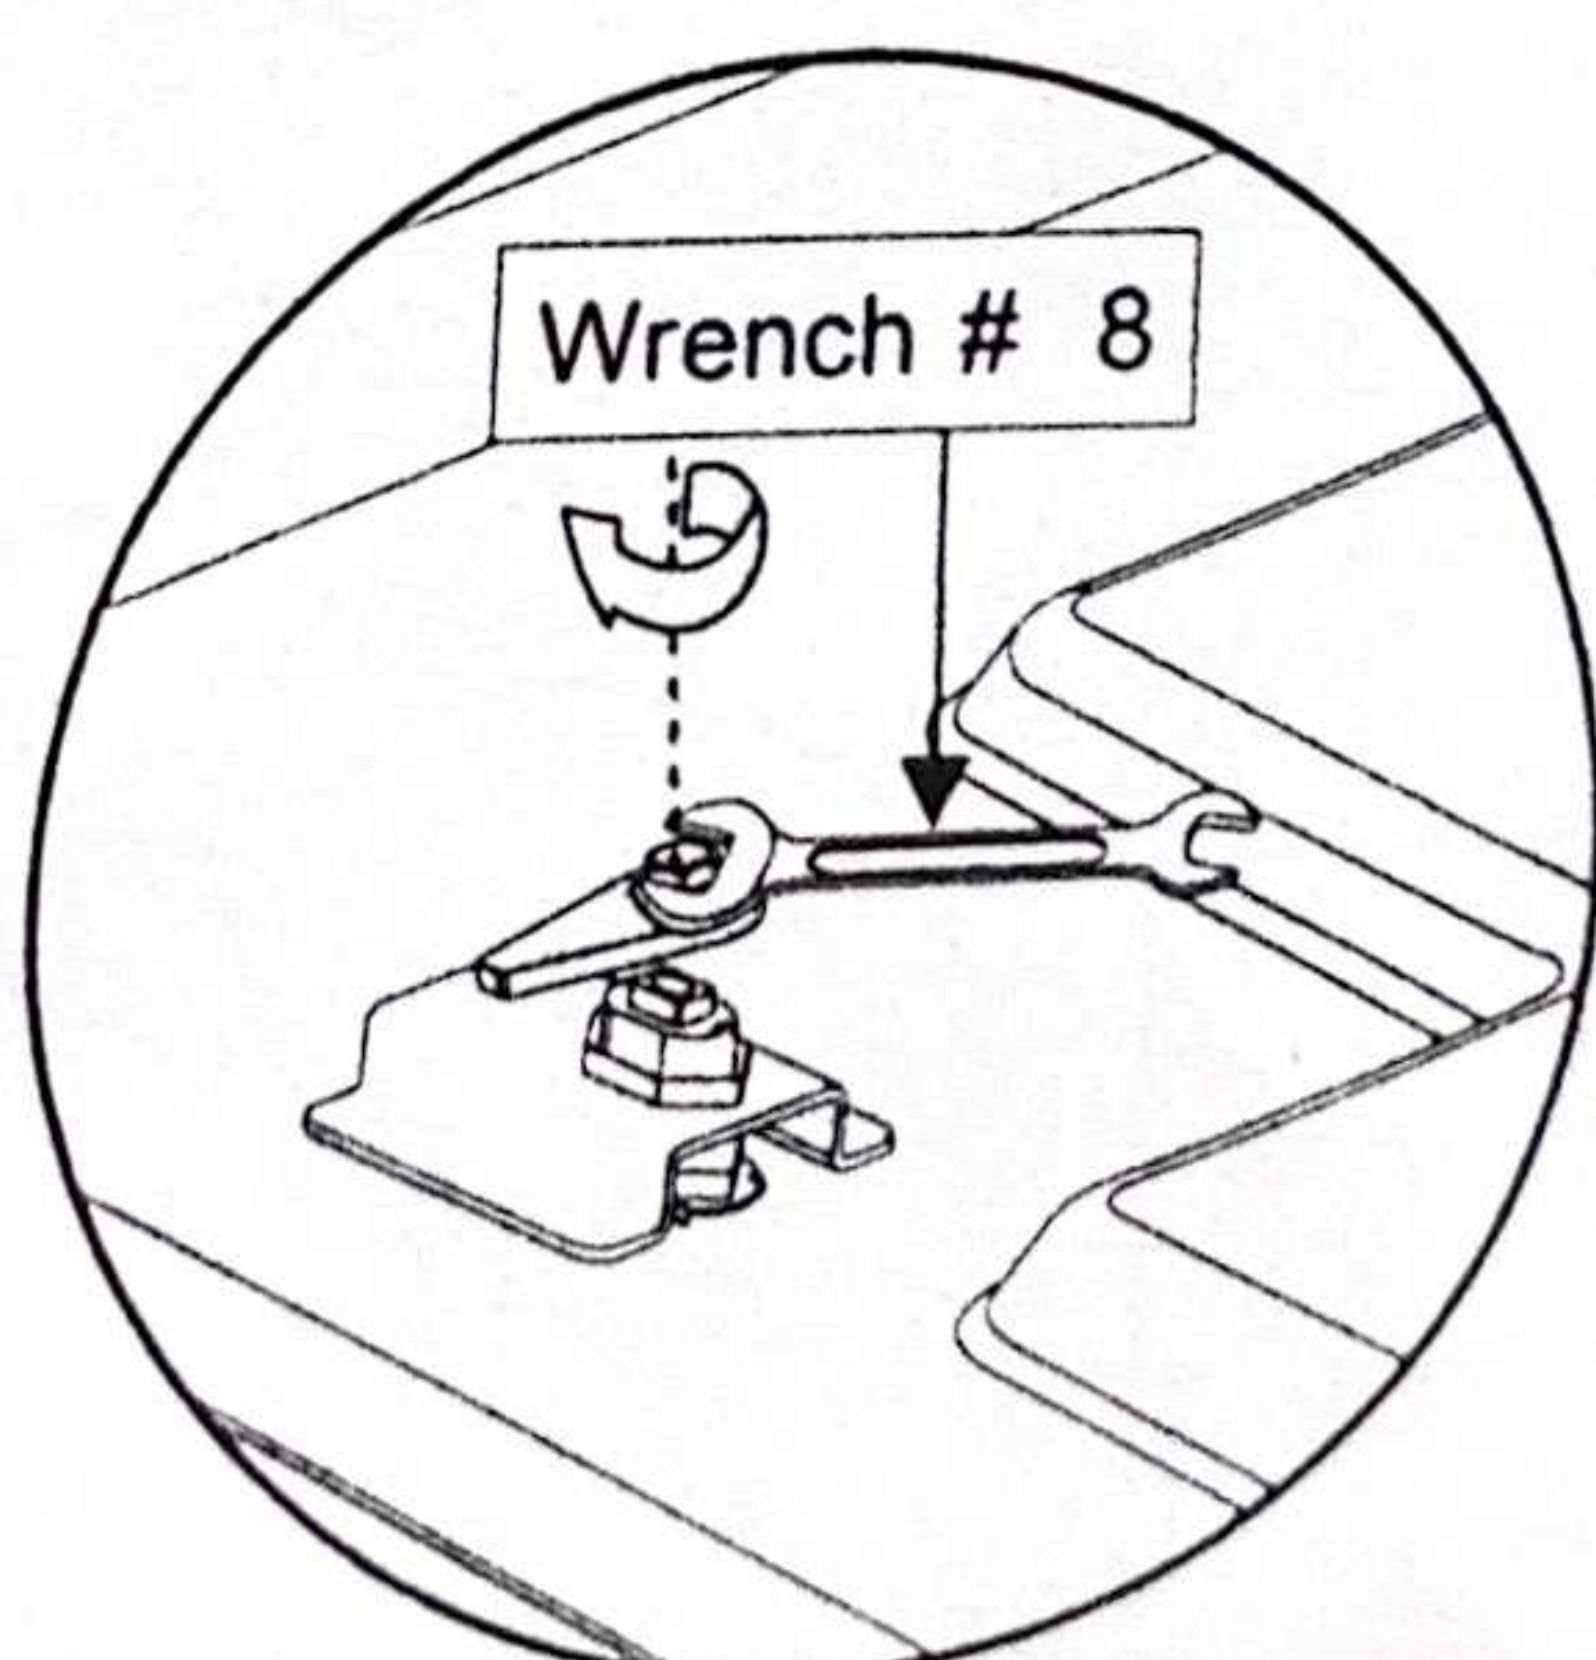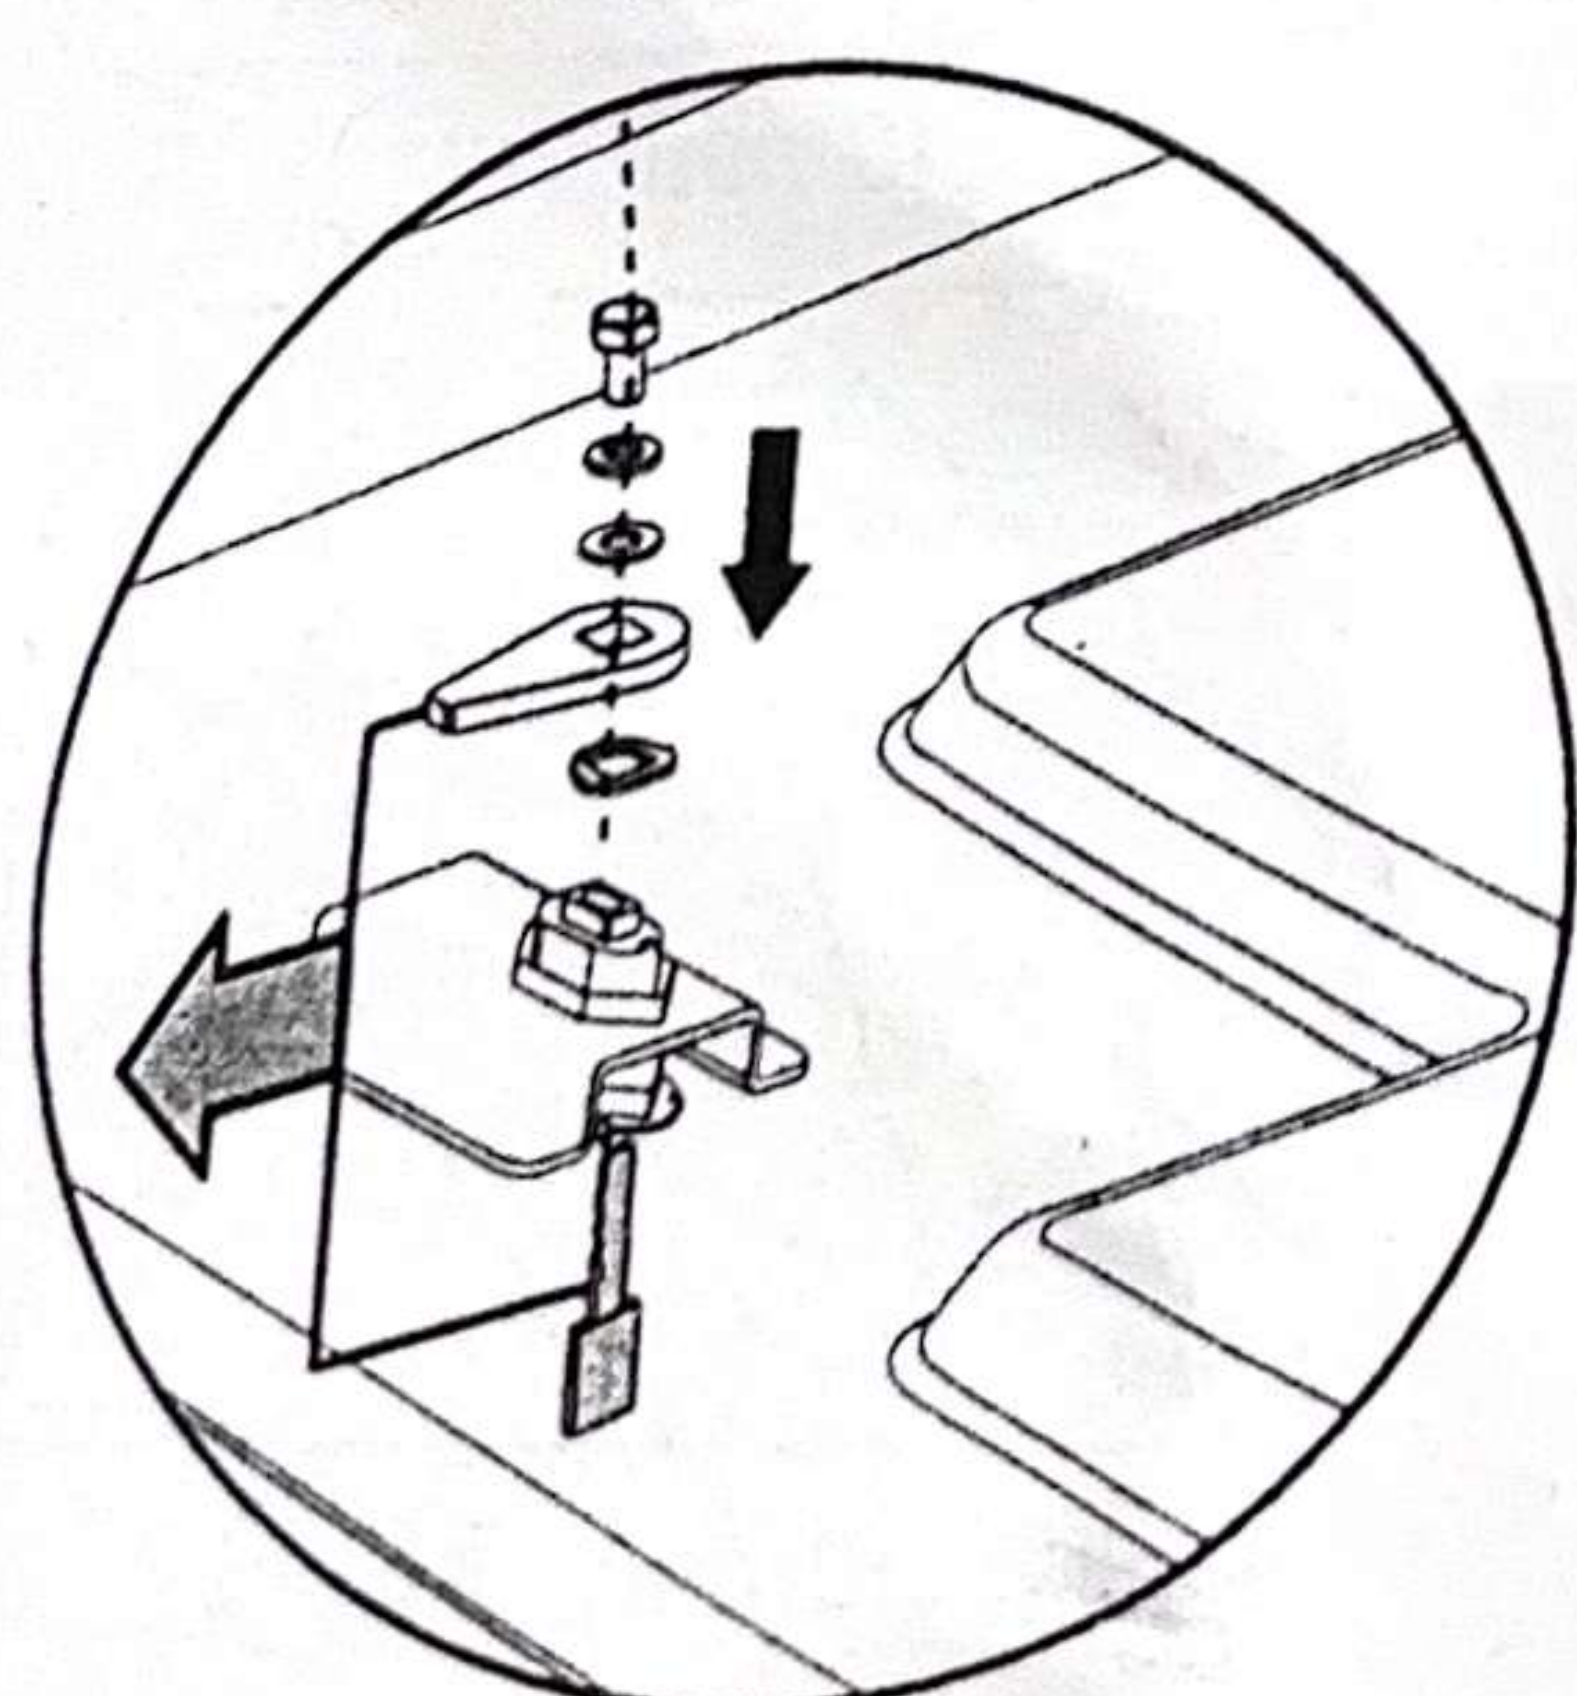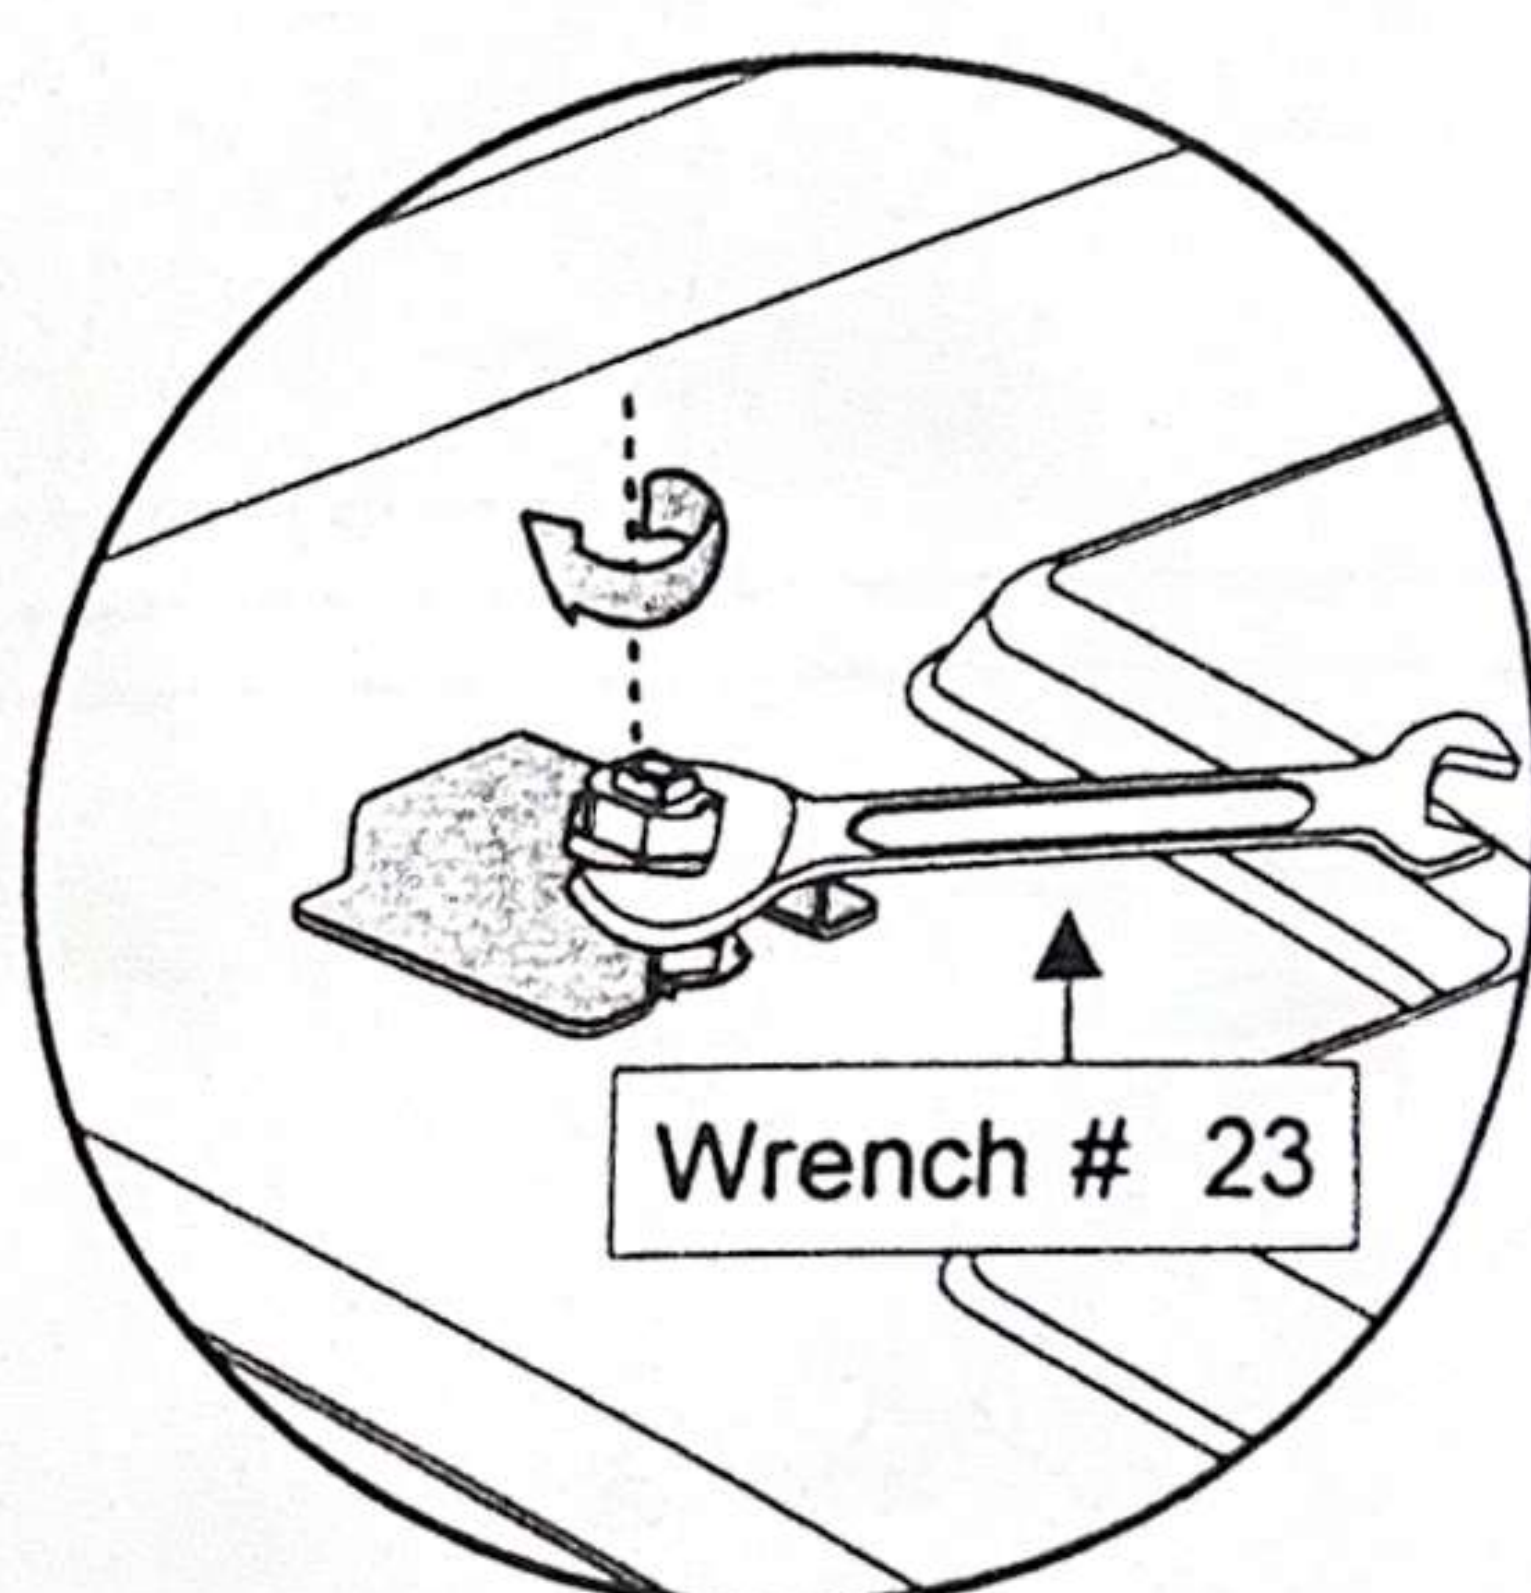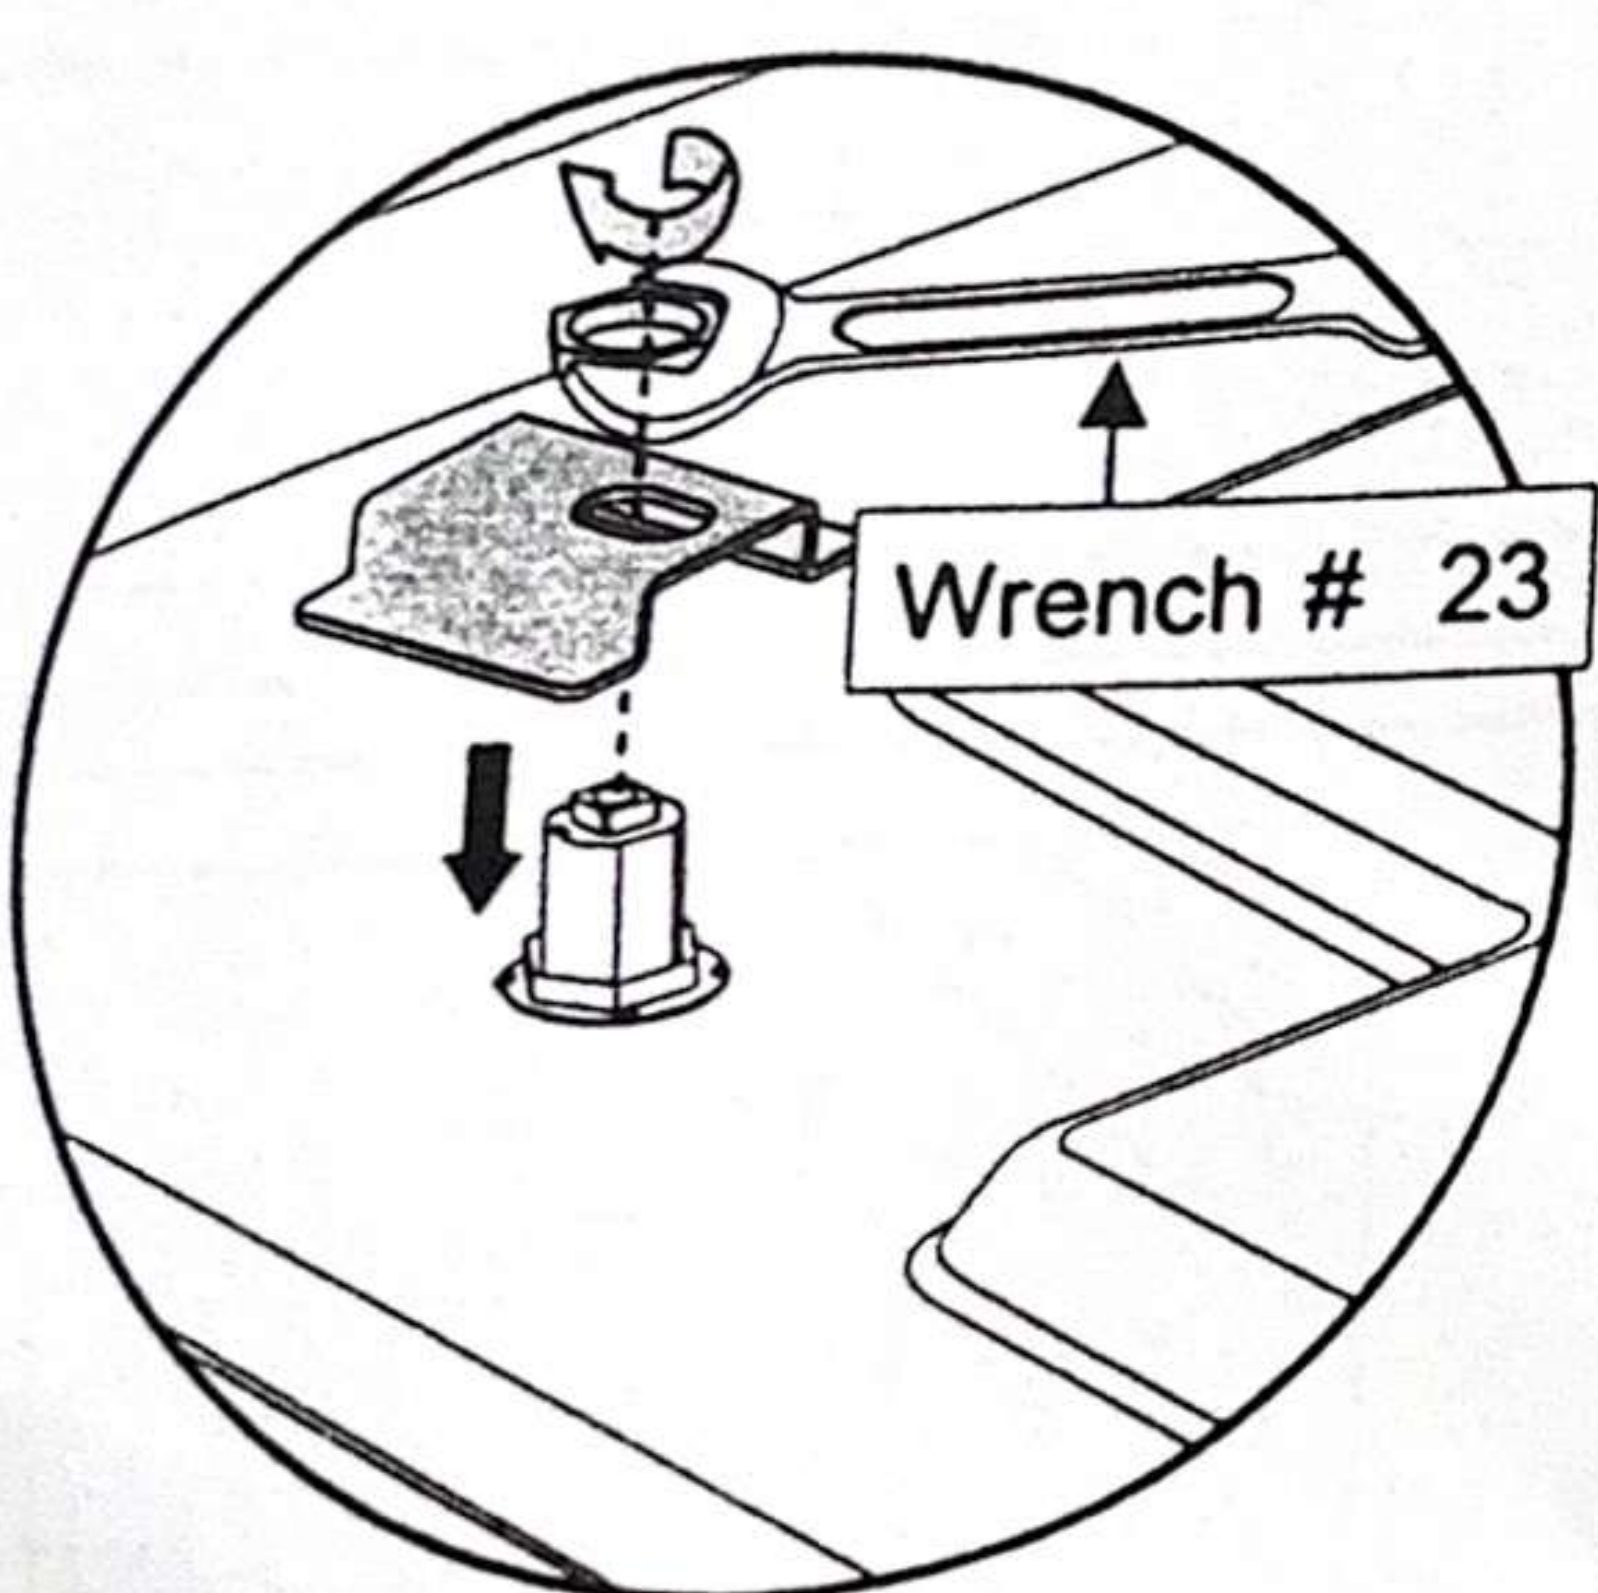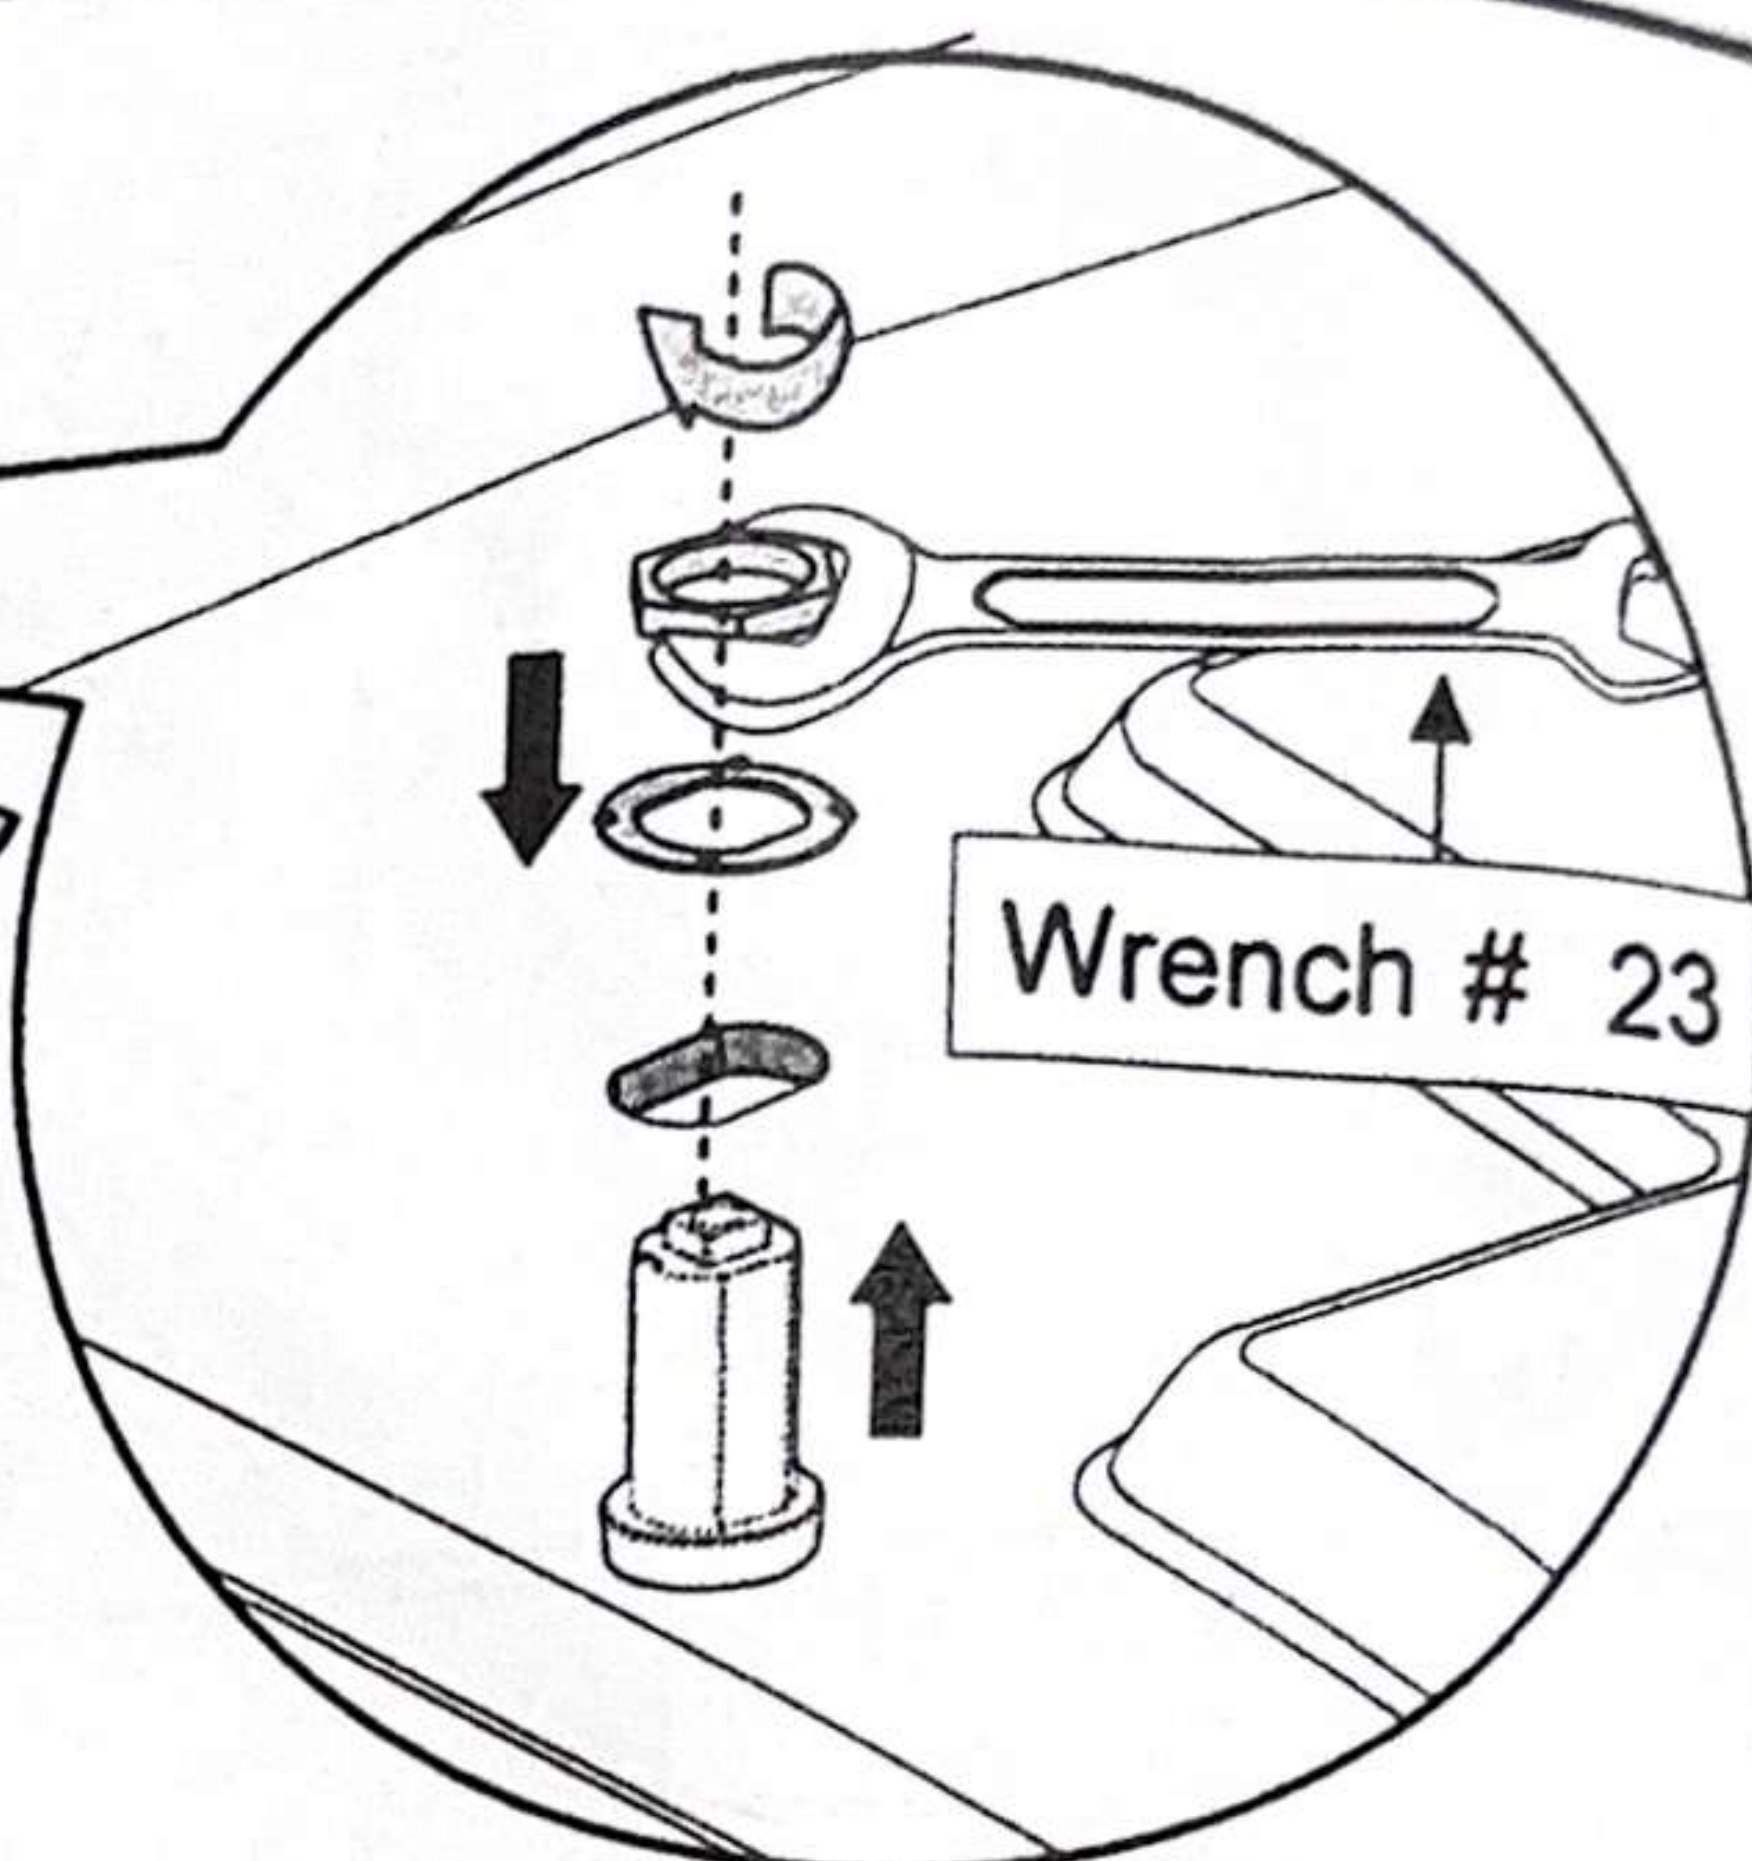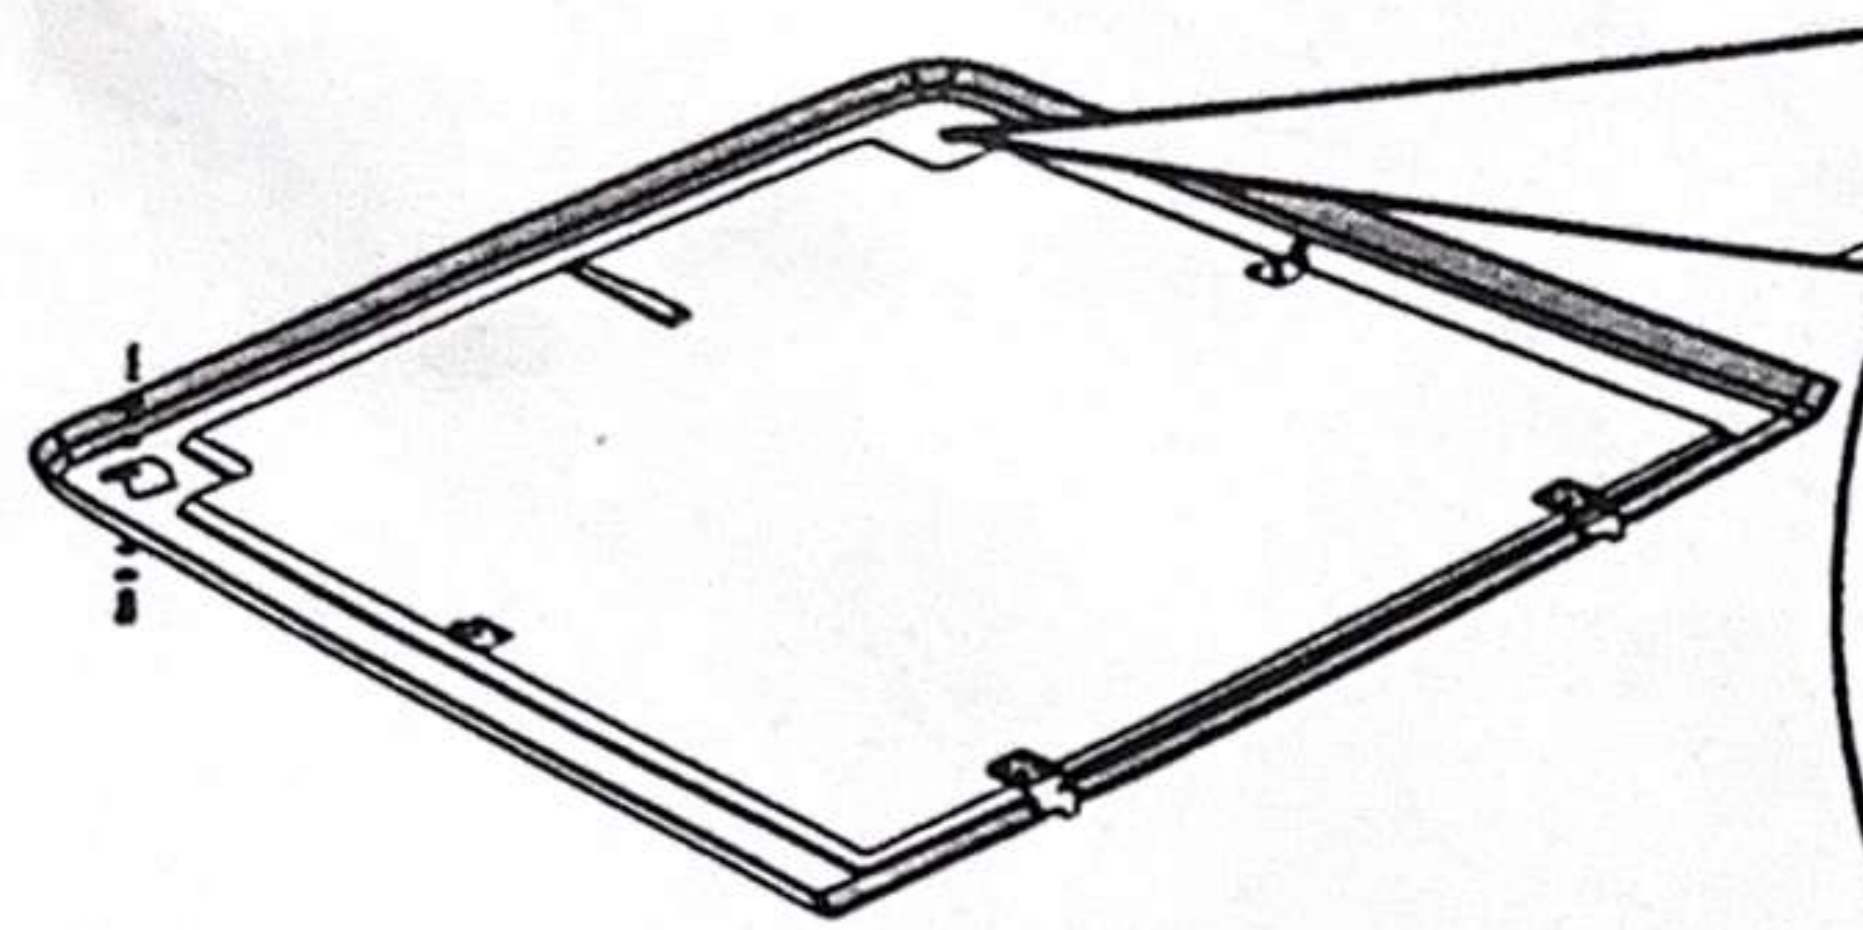



Installation Instruction




9. Mark the position for drill on bed liner as shown

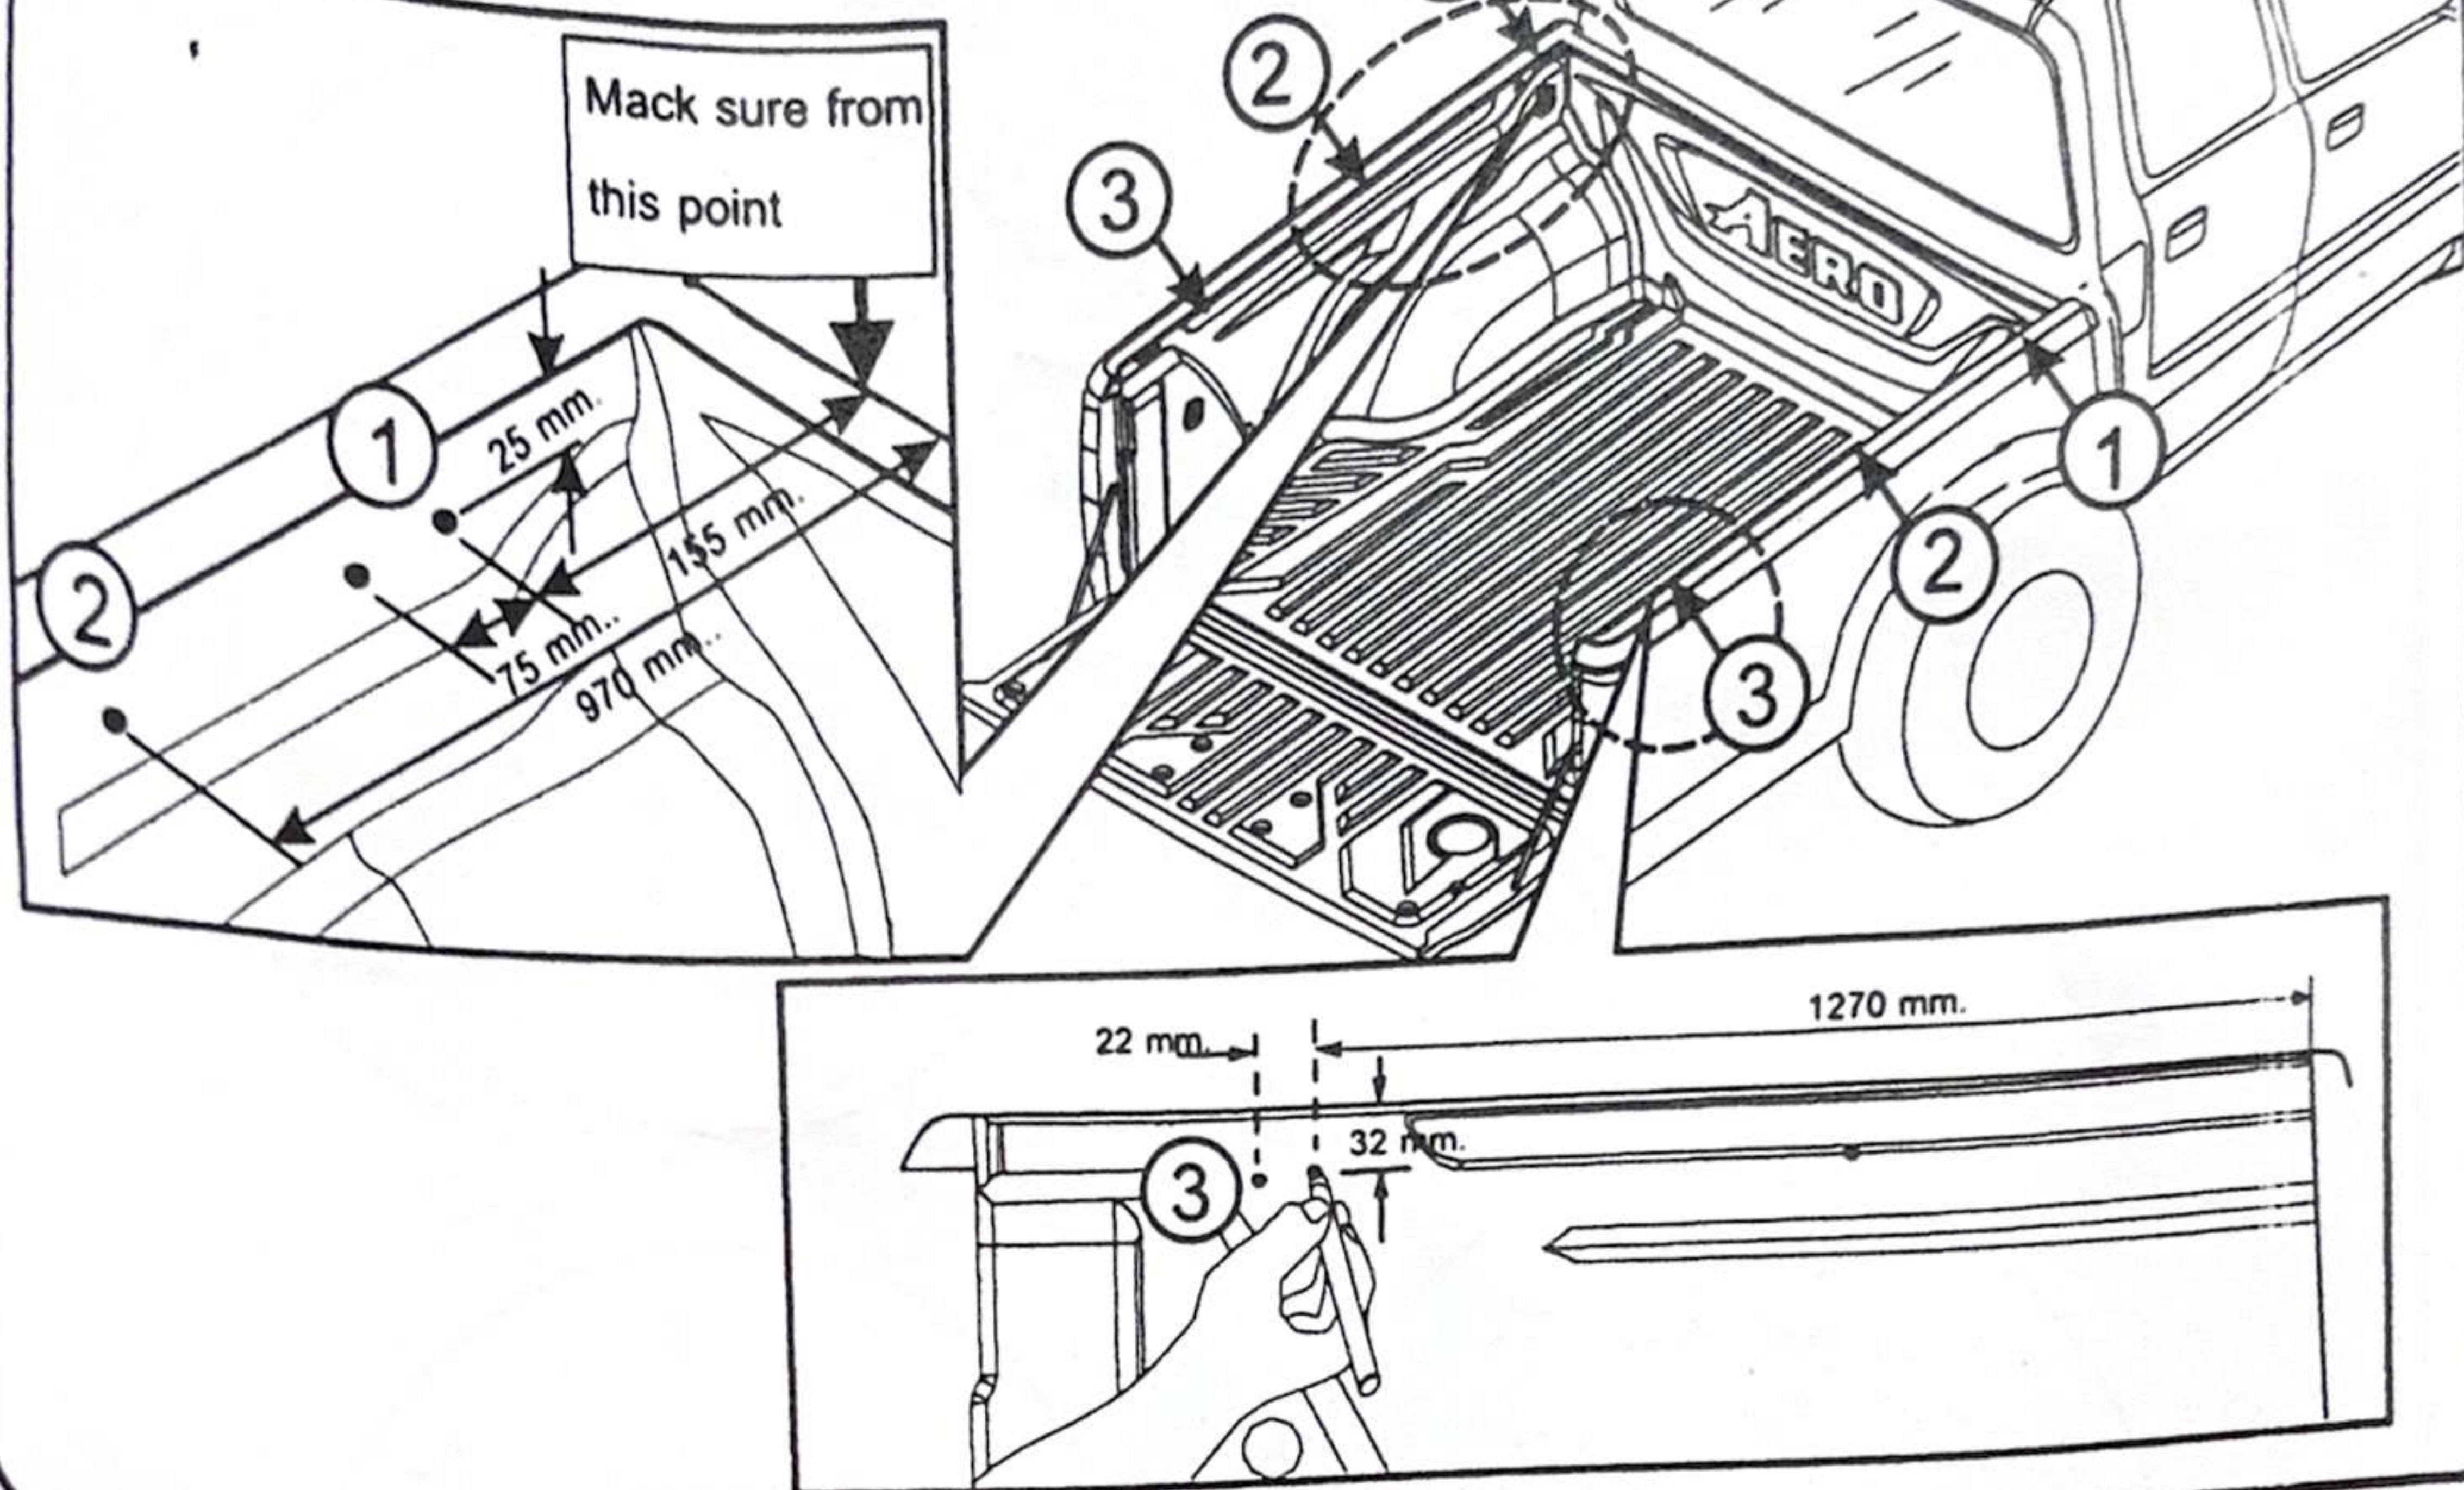


10. Drill at marked position

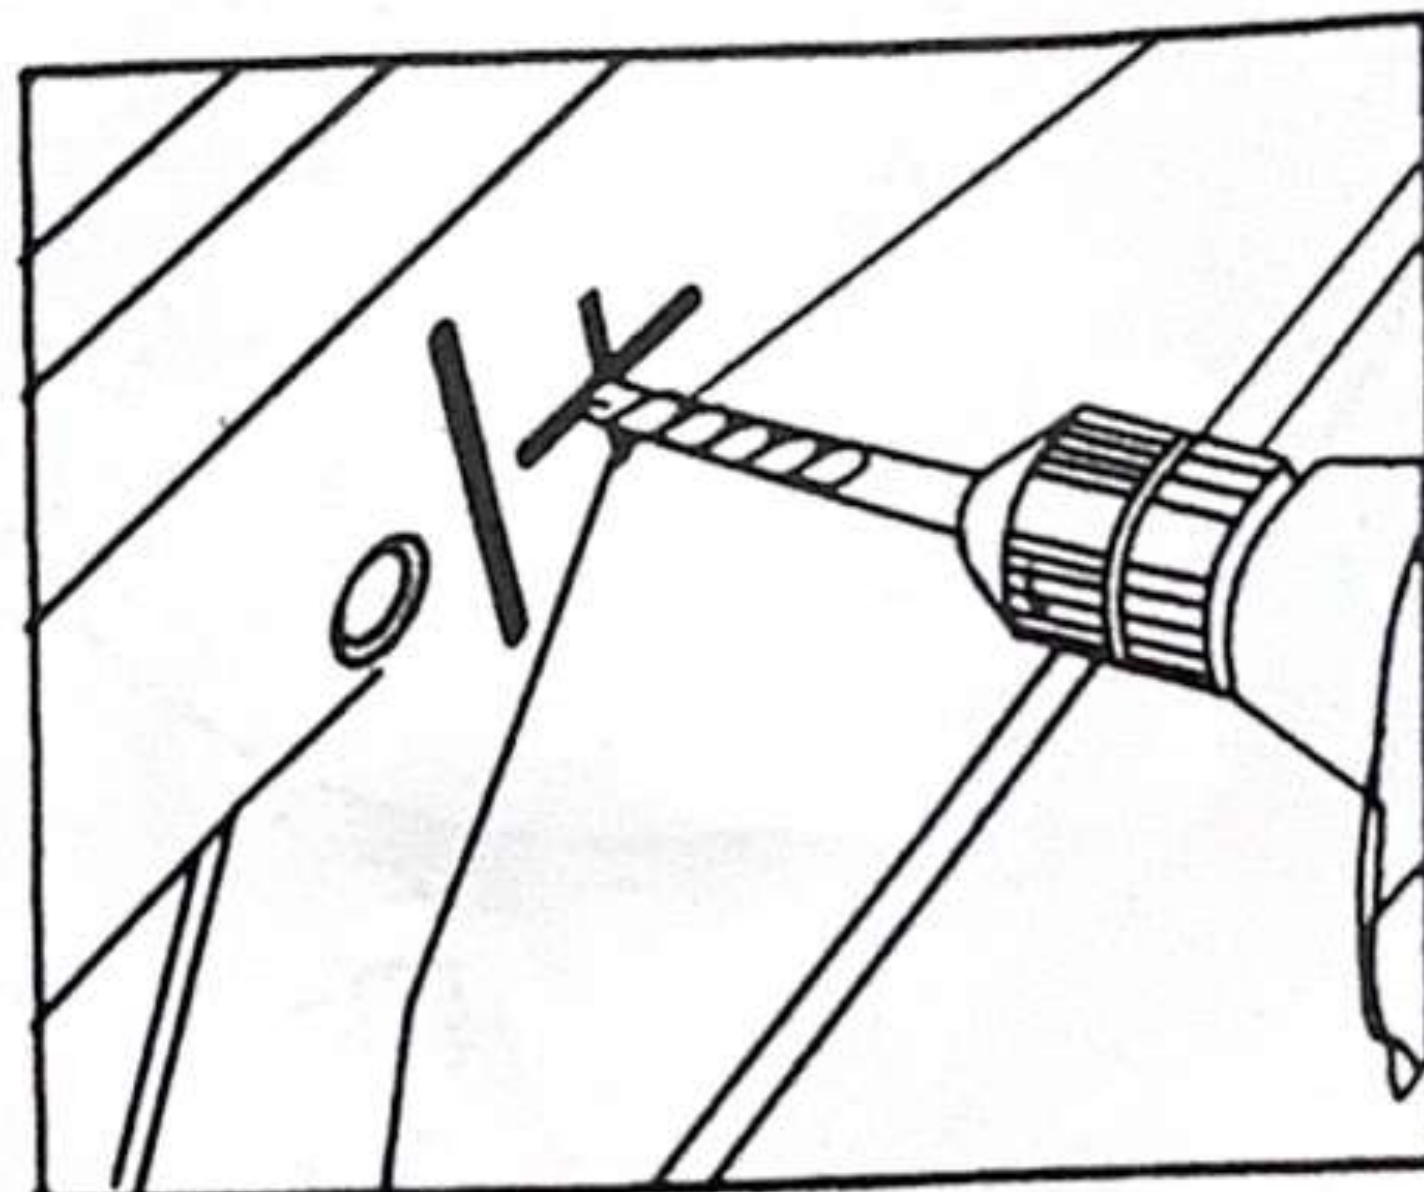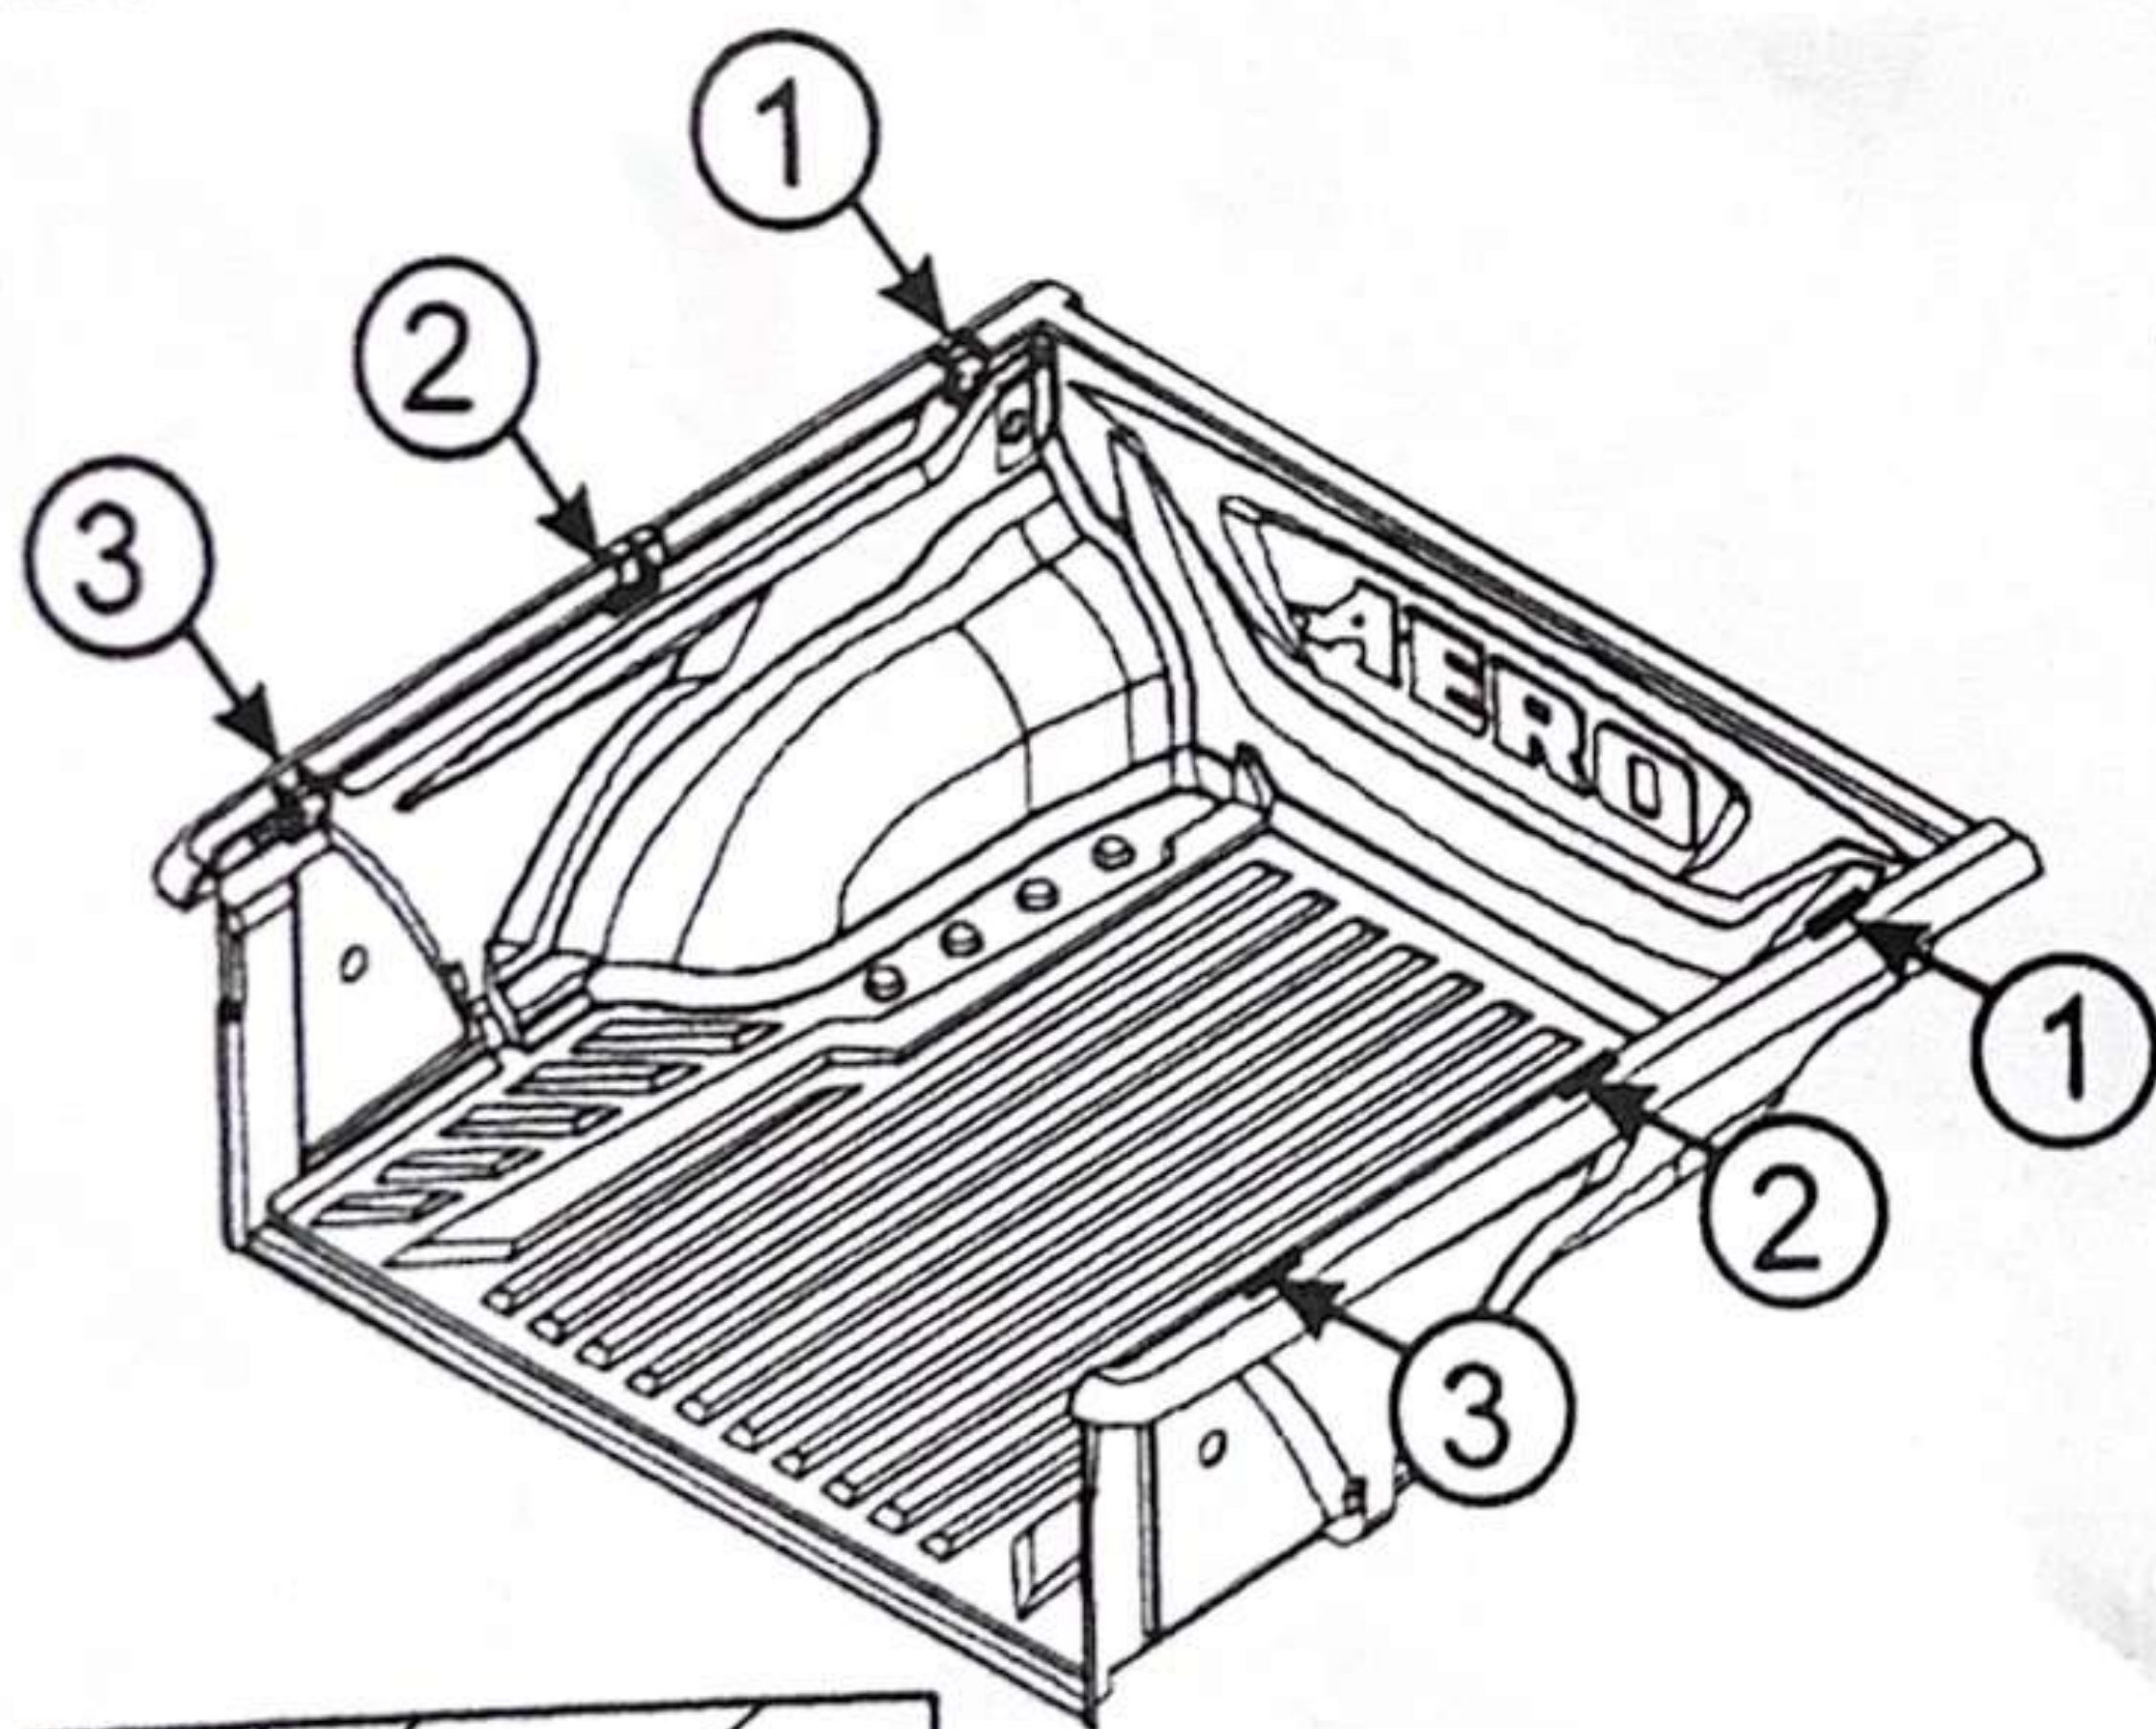

Drill $\varnothing$ 12 mm. at (1)

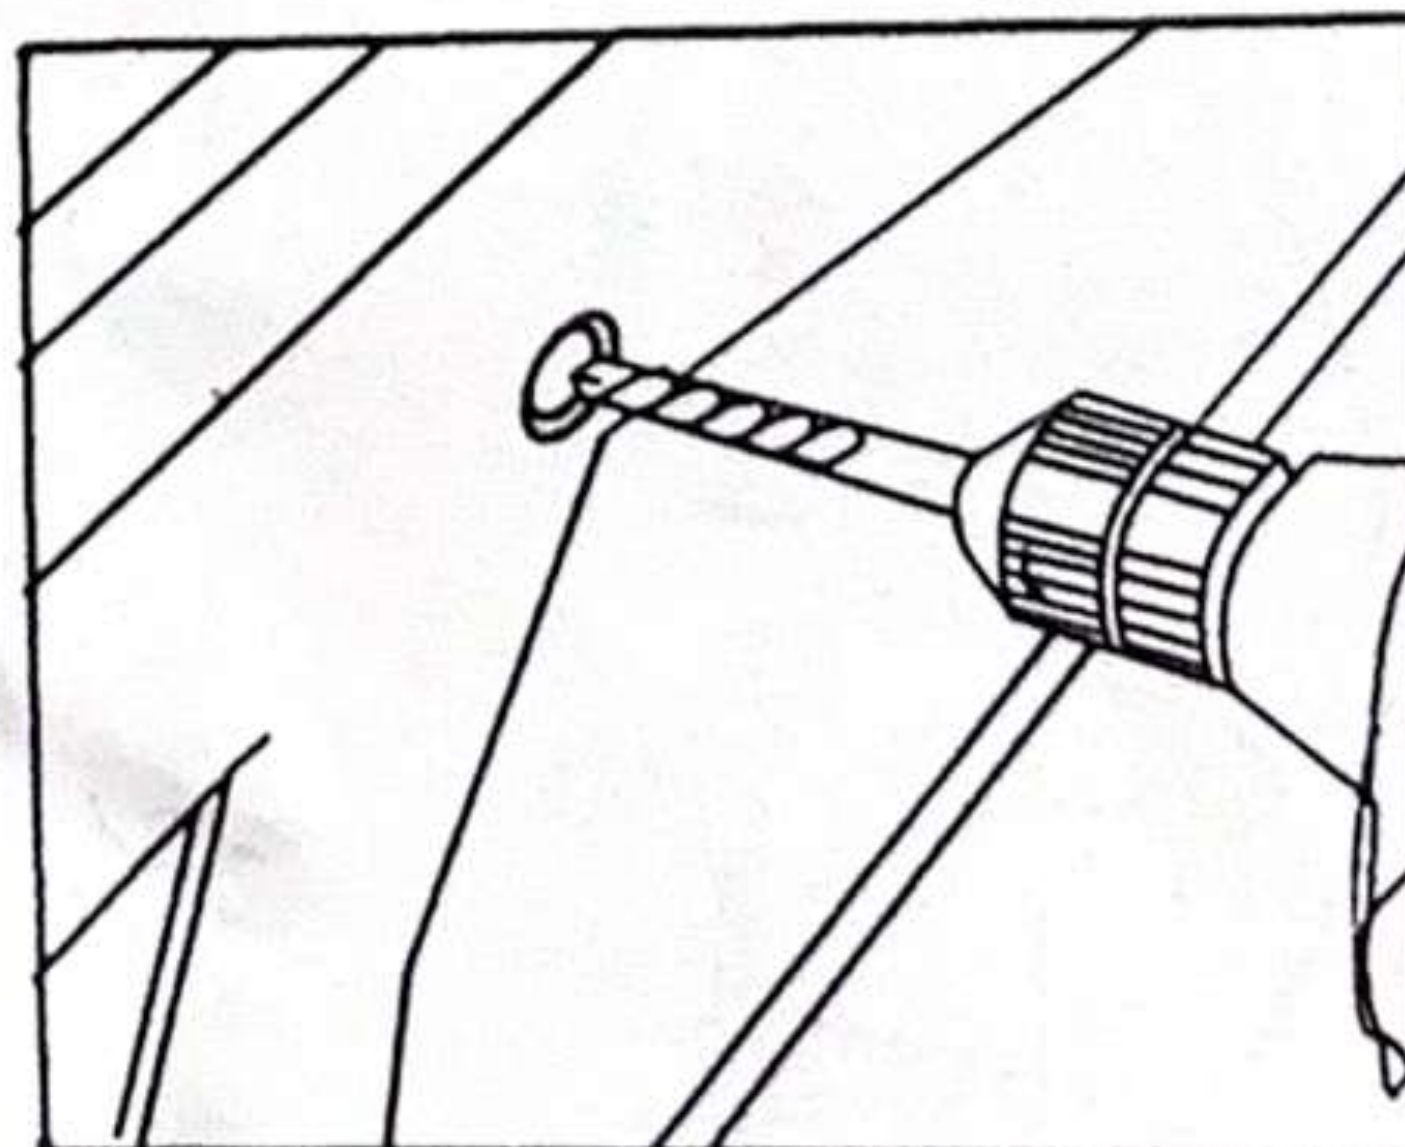

Drill $\varnothing$ 12 mm. at (2)

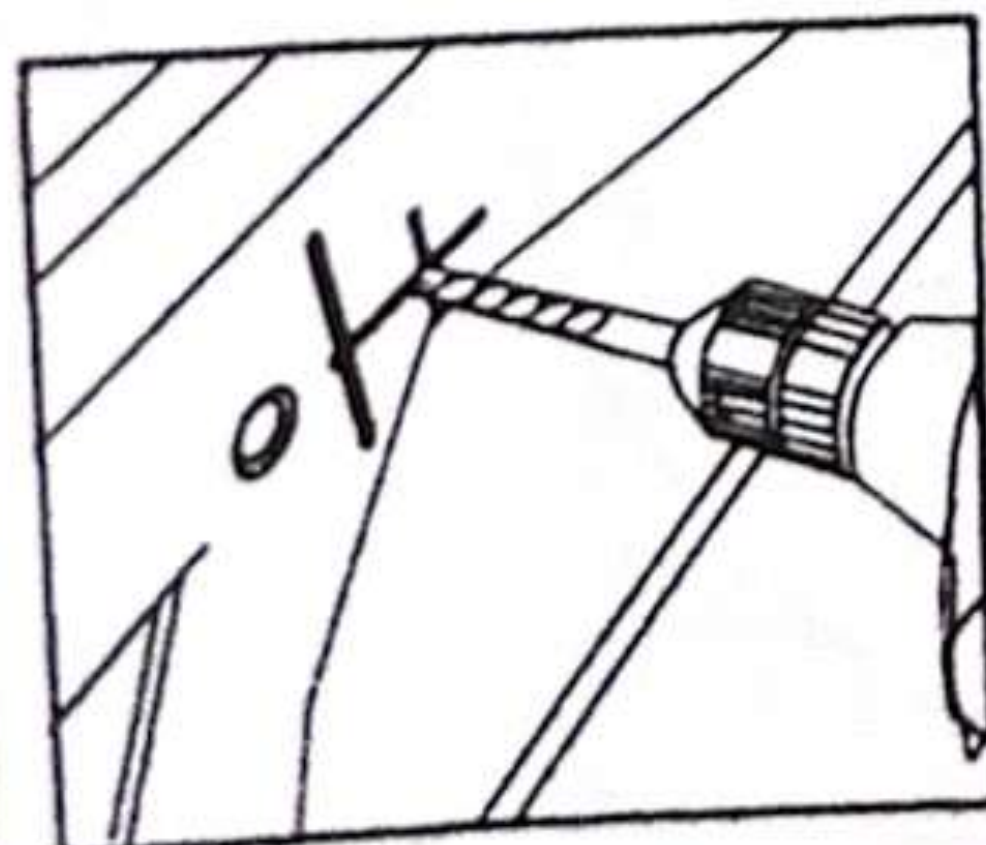


Drill $\varnothing$ 9 mm. at (3)




Installation Instruction


11 Put liner & marking at ①, ②

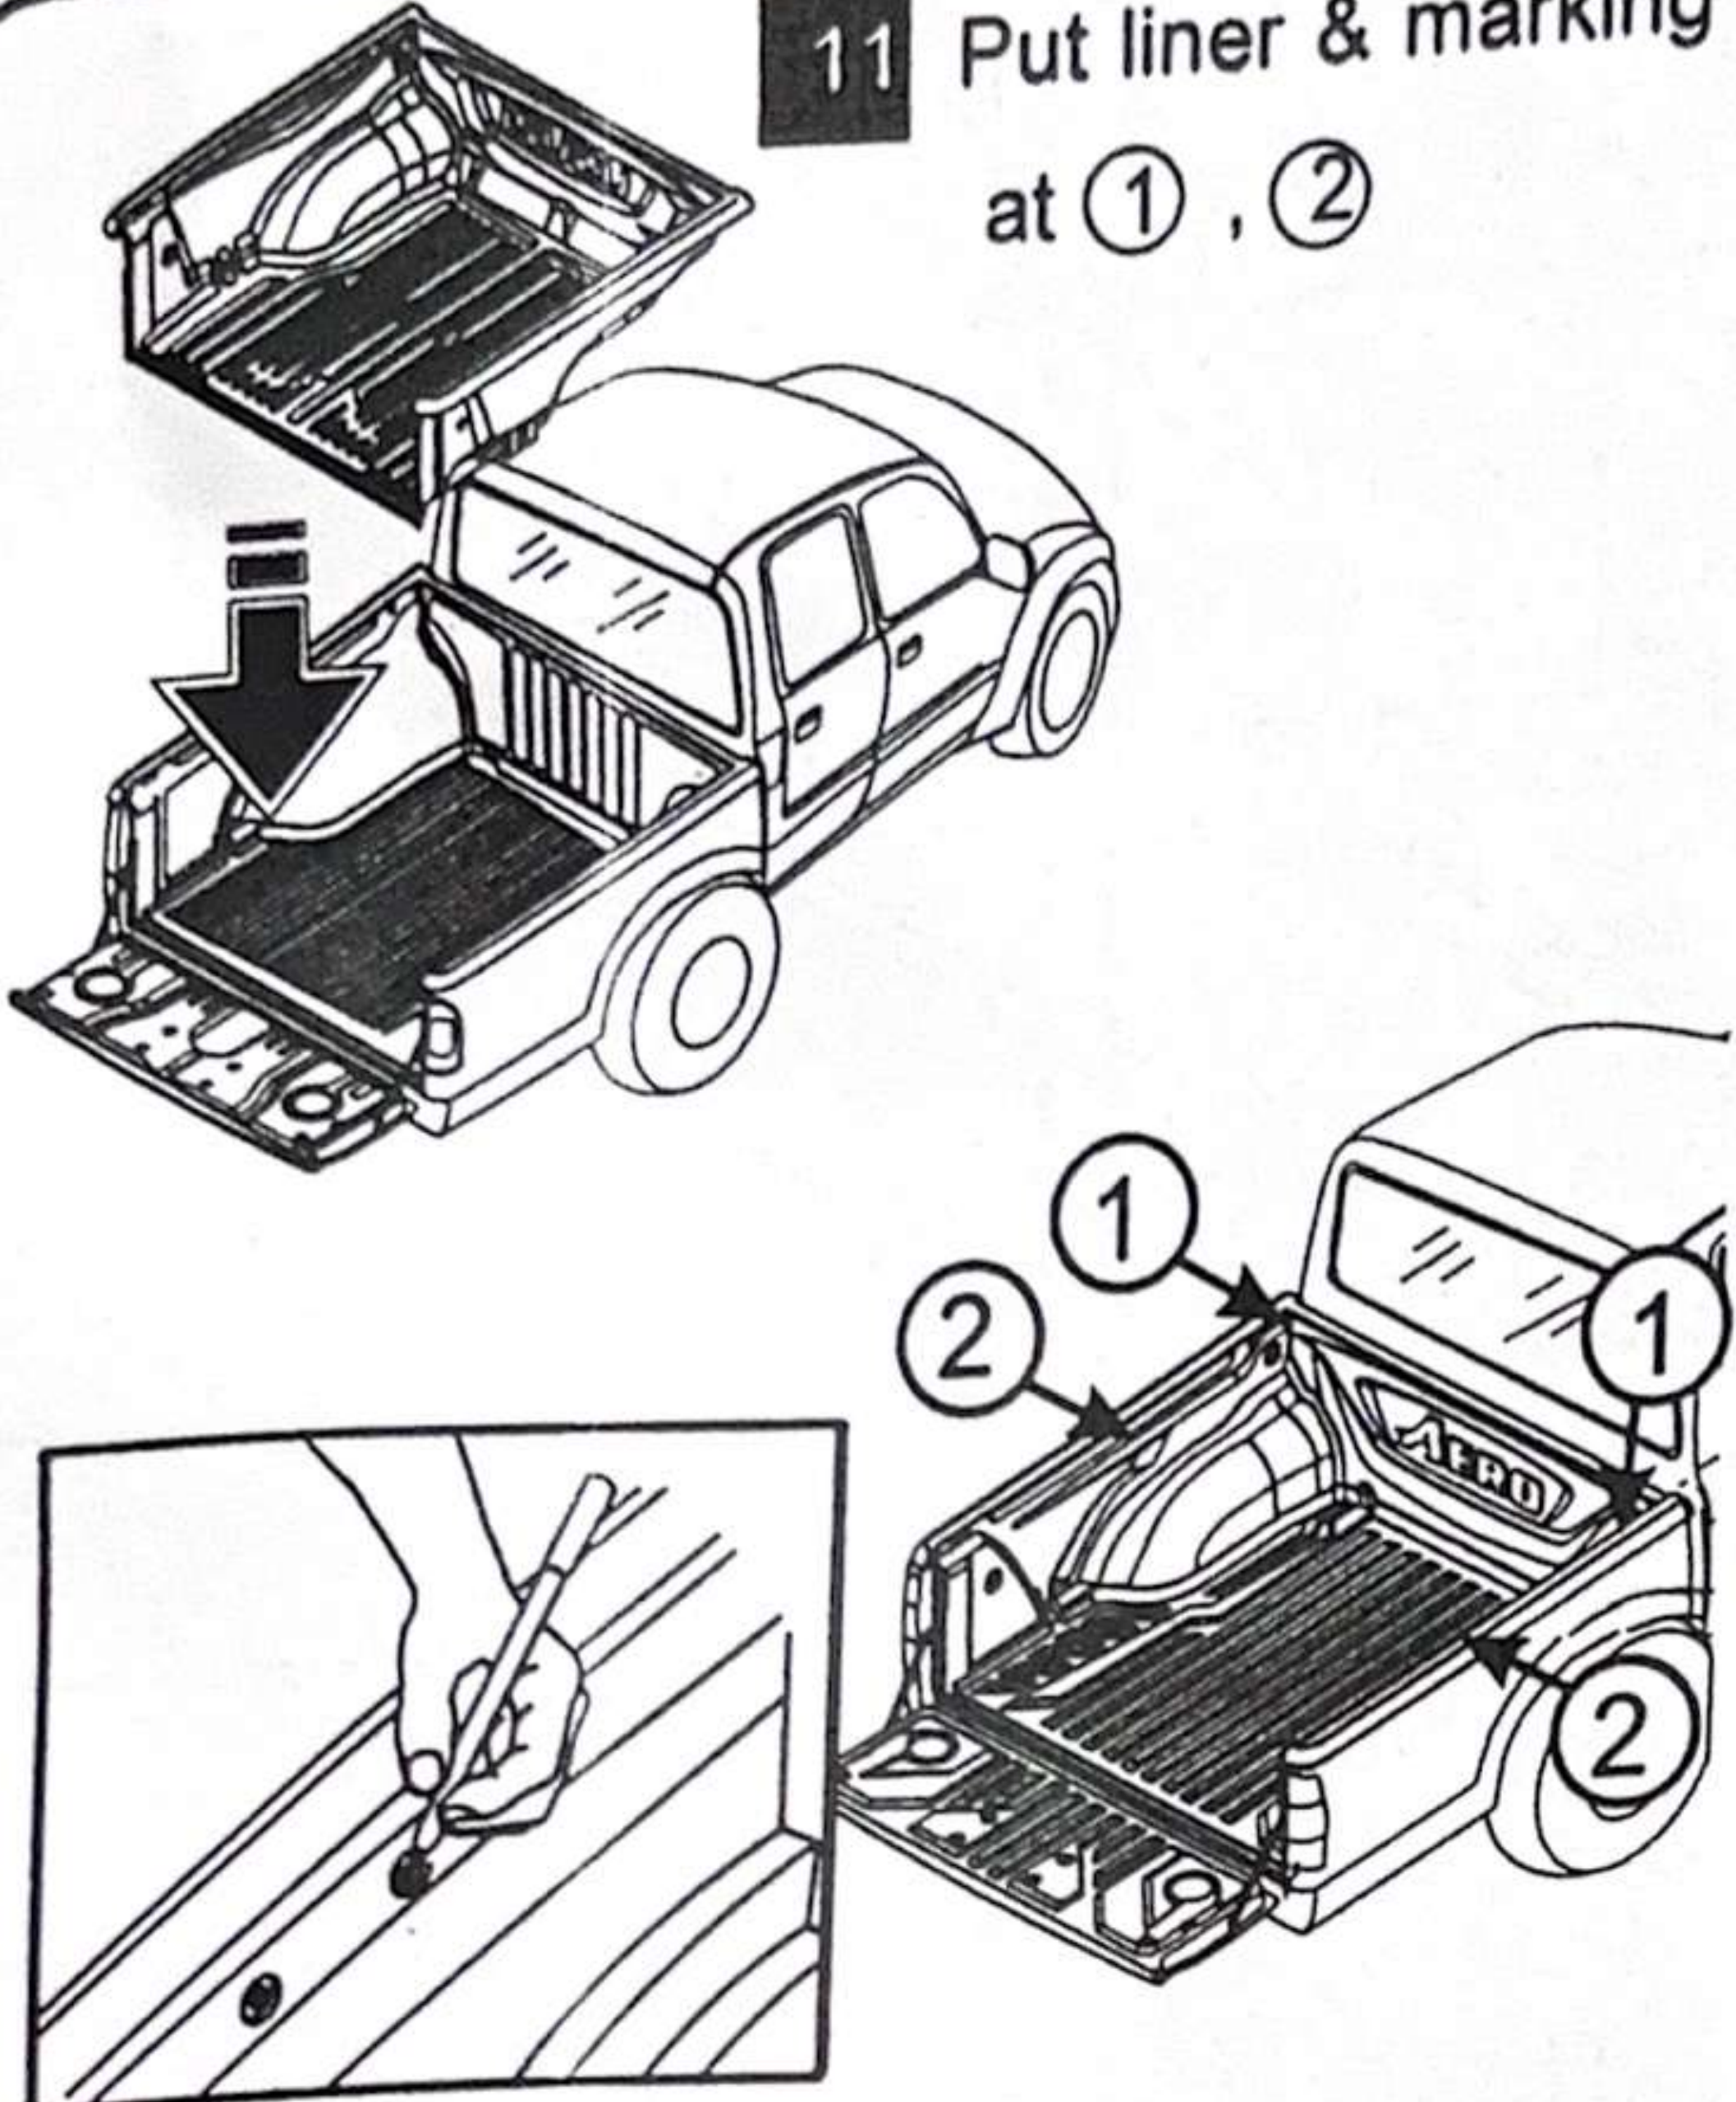


12 Remove liner & marking on truck box at ①, ②

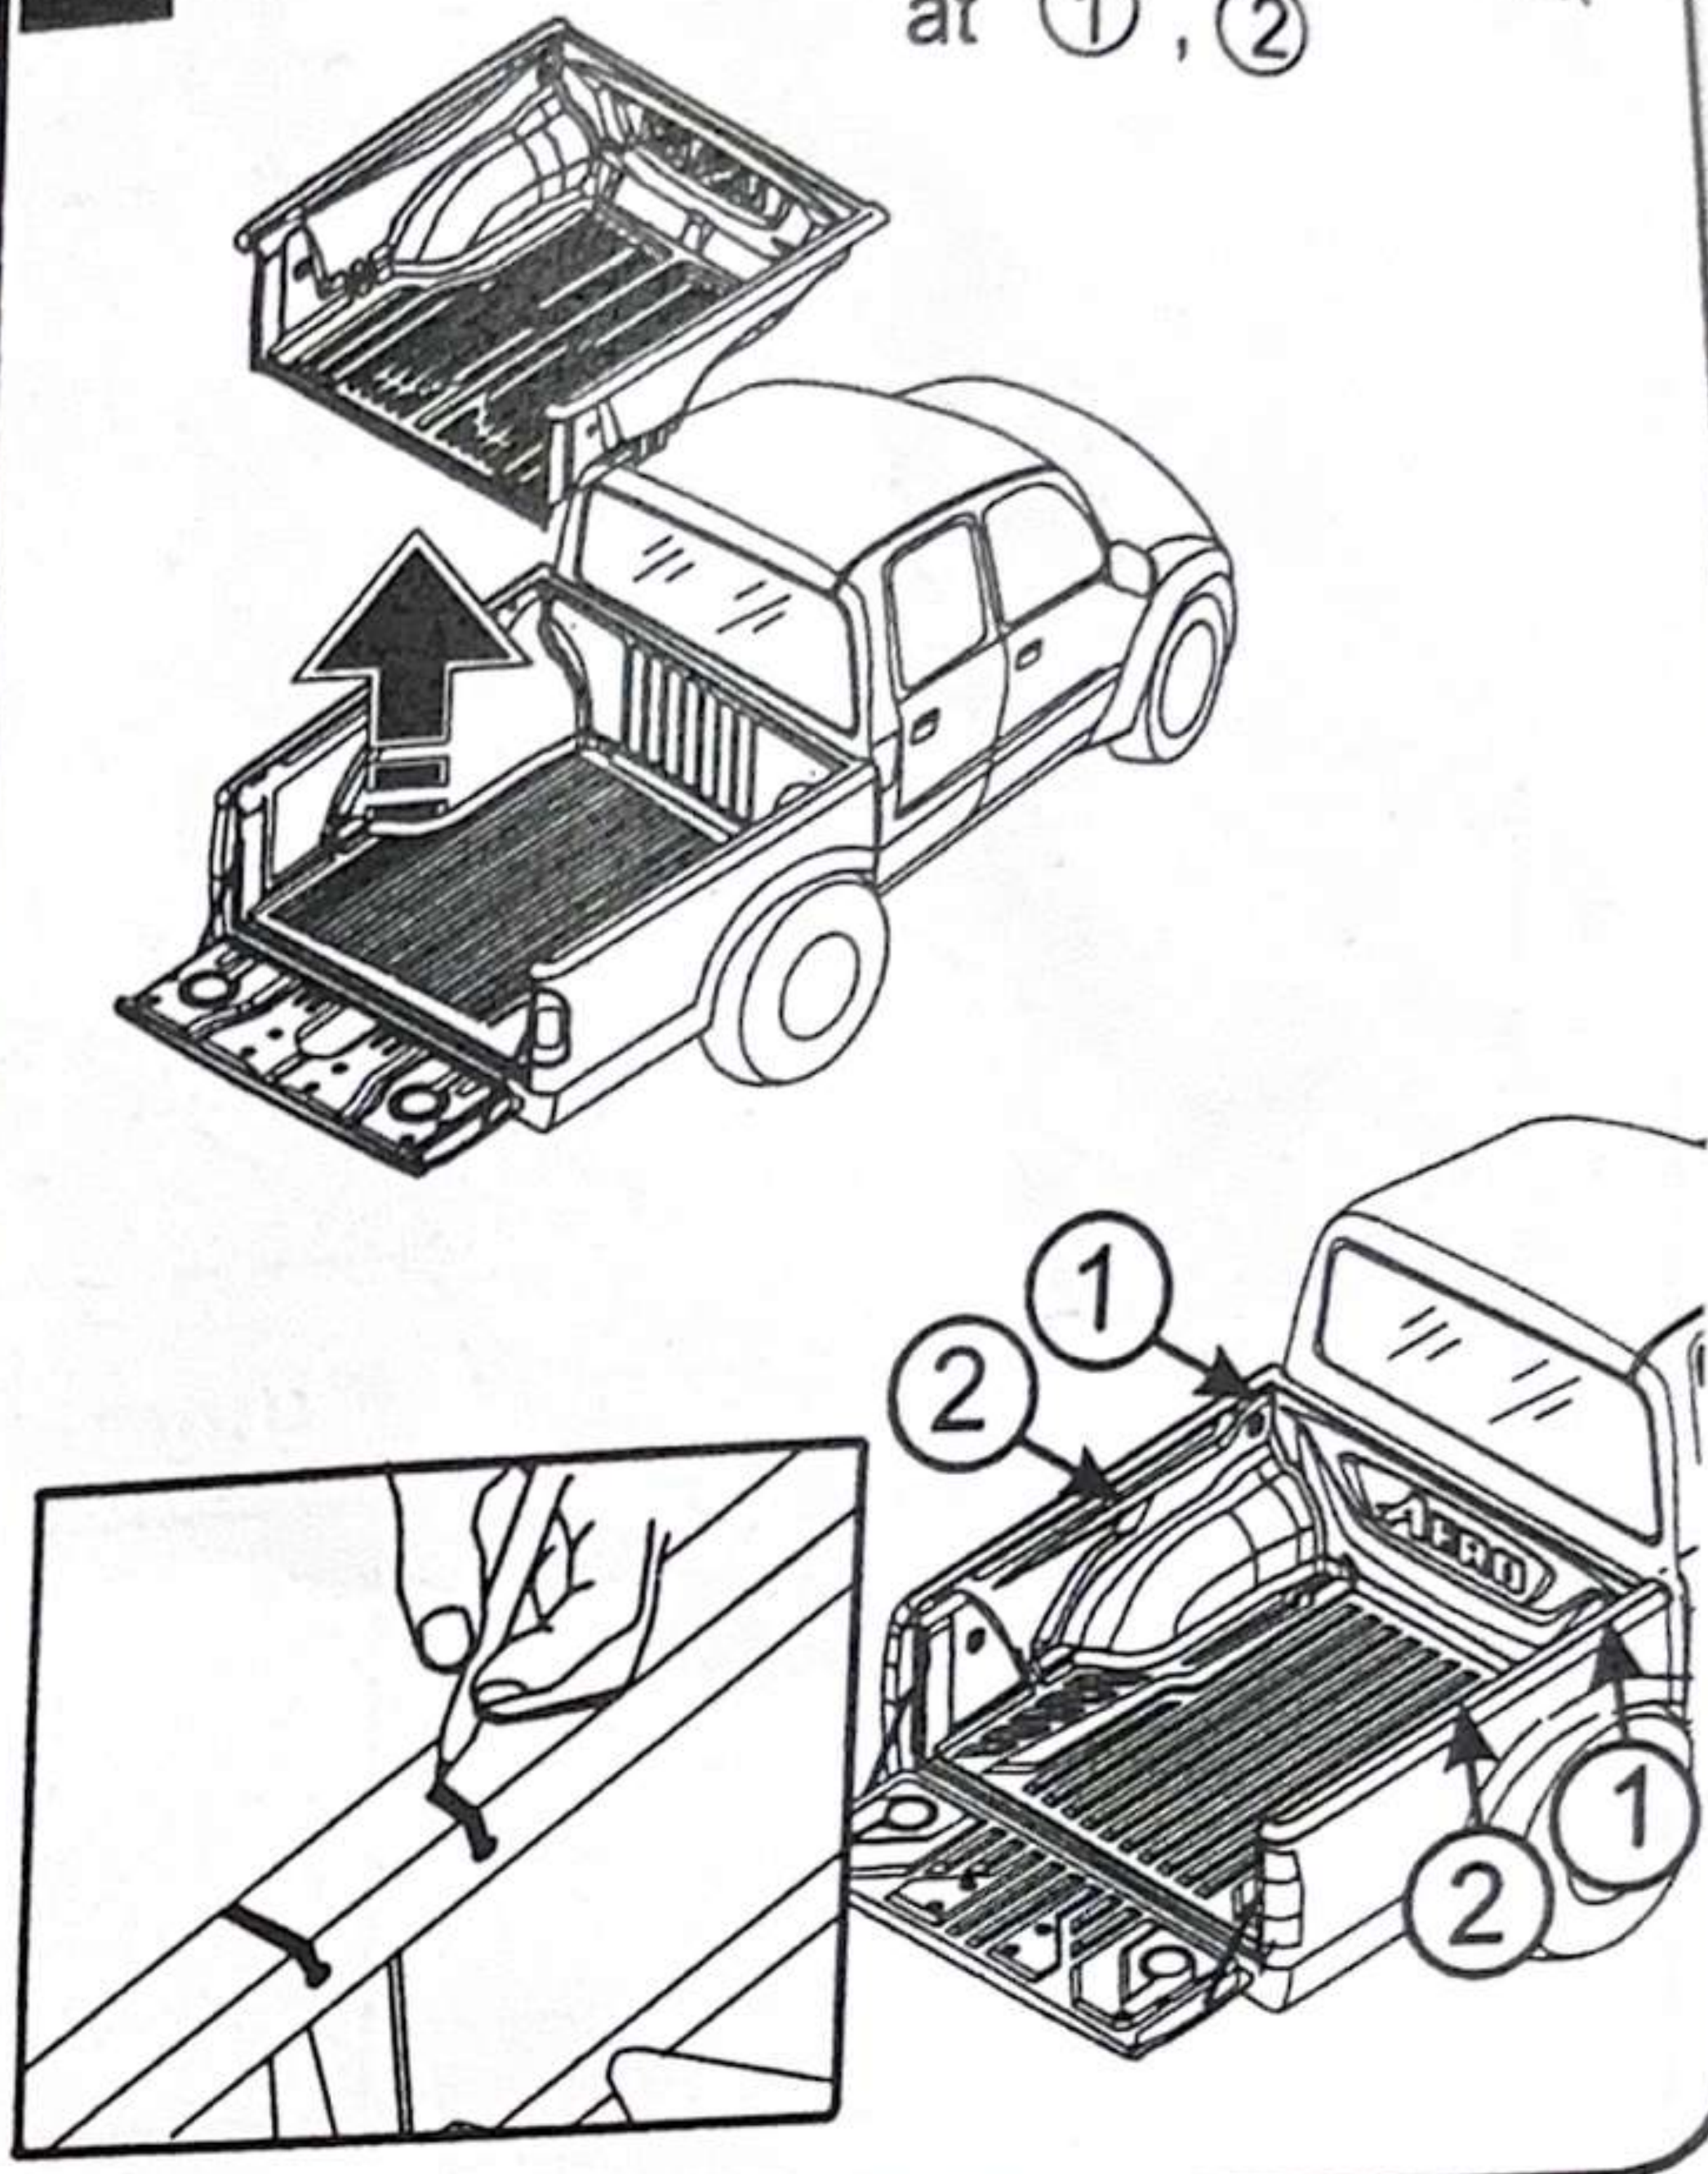

13 Install lower bracket for Gas strut at ② and bracket for Hing system at ①

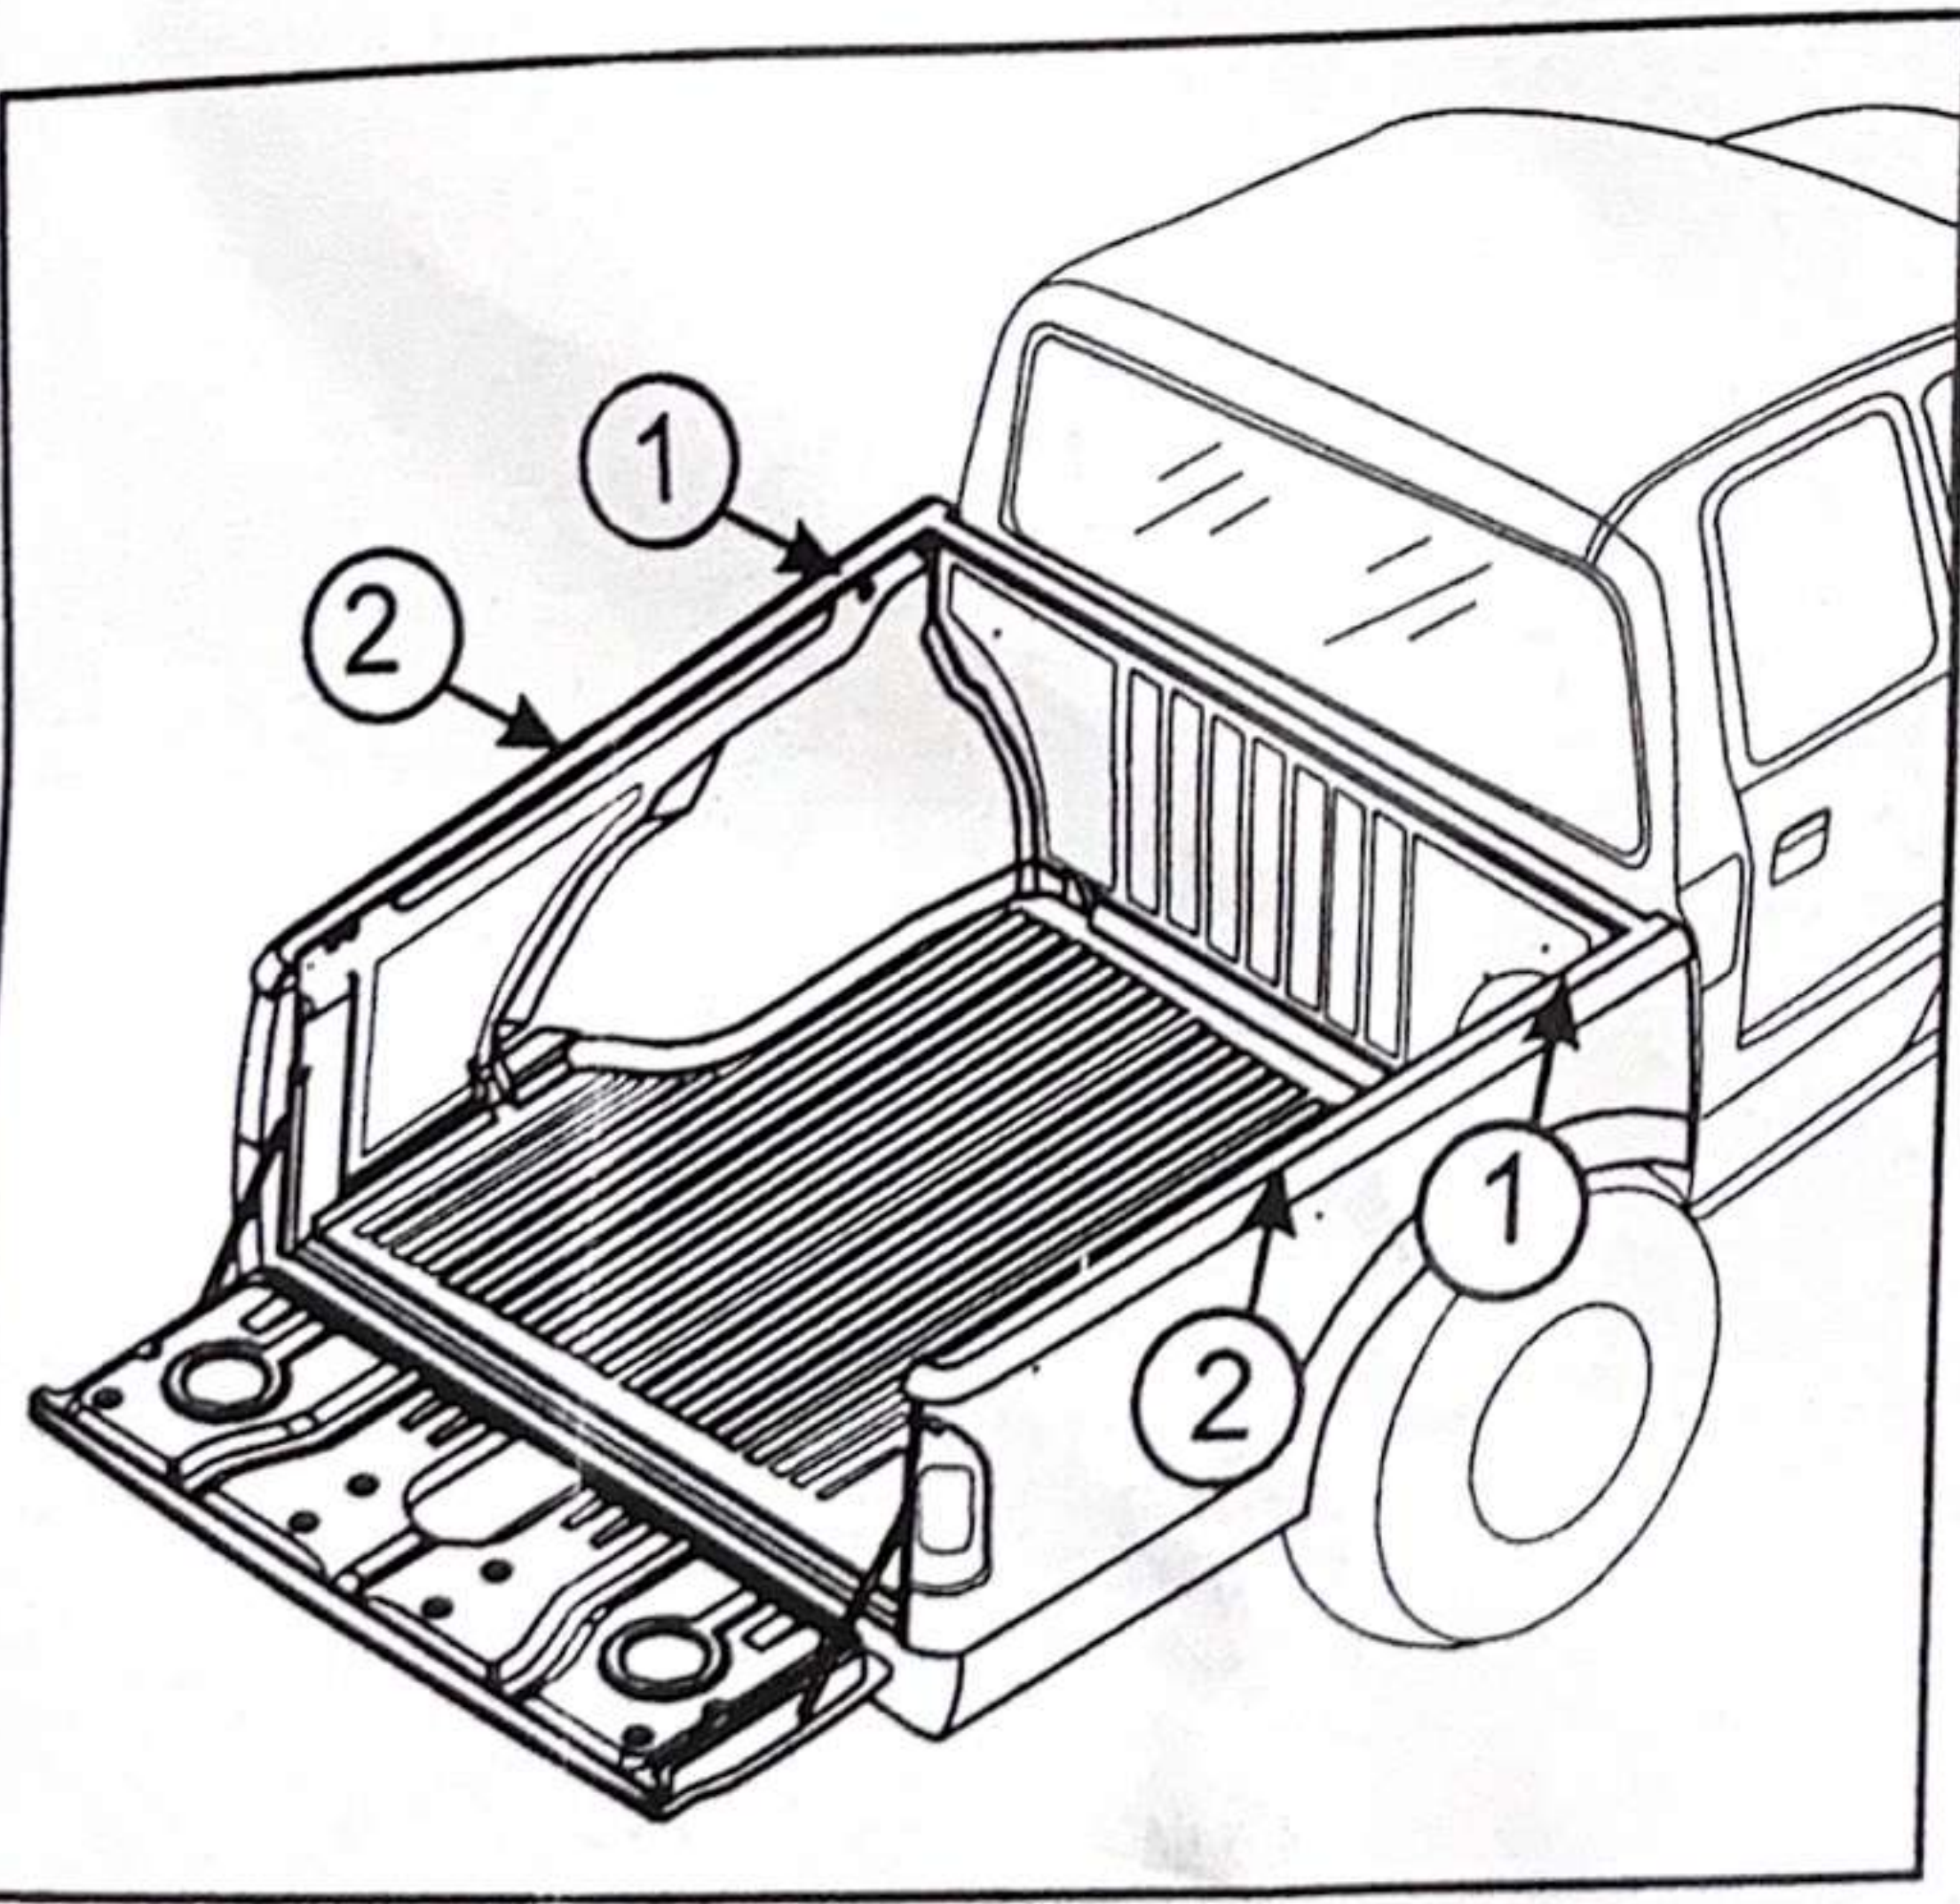


Draw a mark with both position

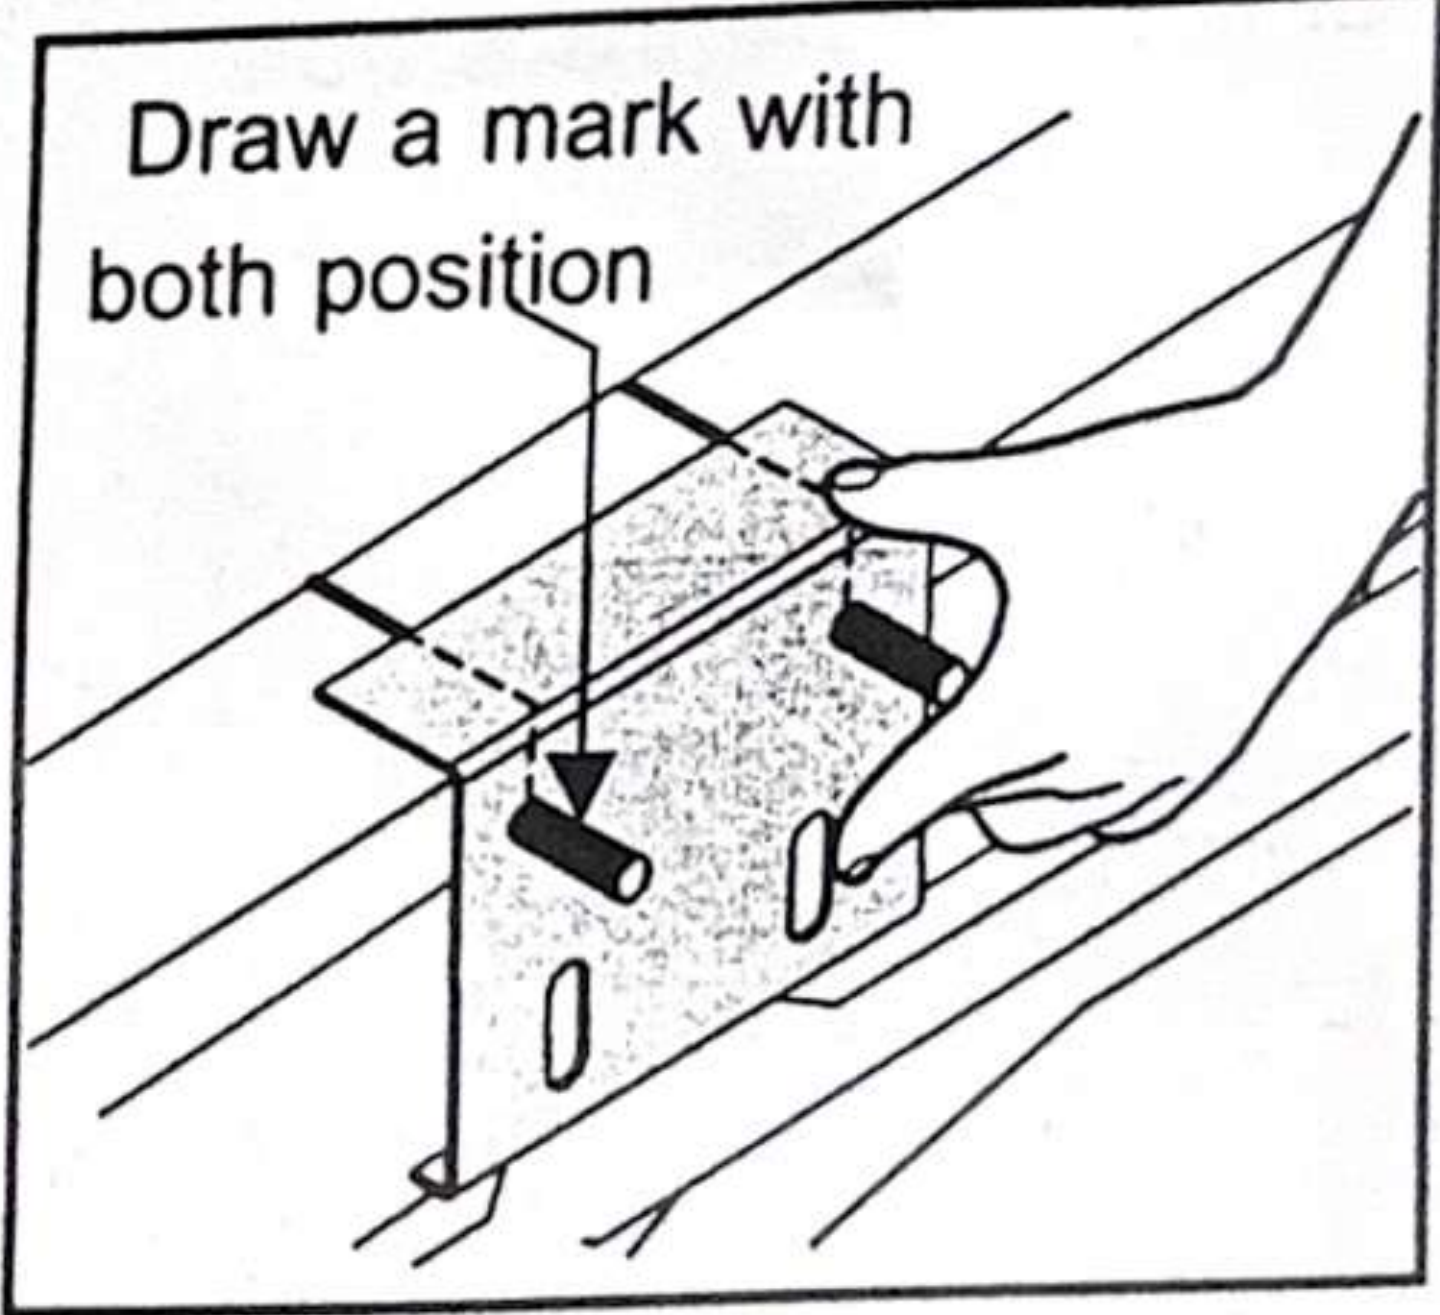

Truck box

Push


Wrench # 12

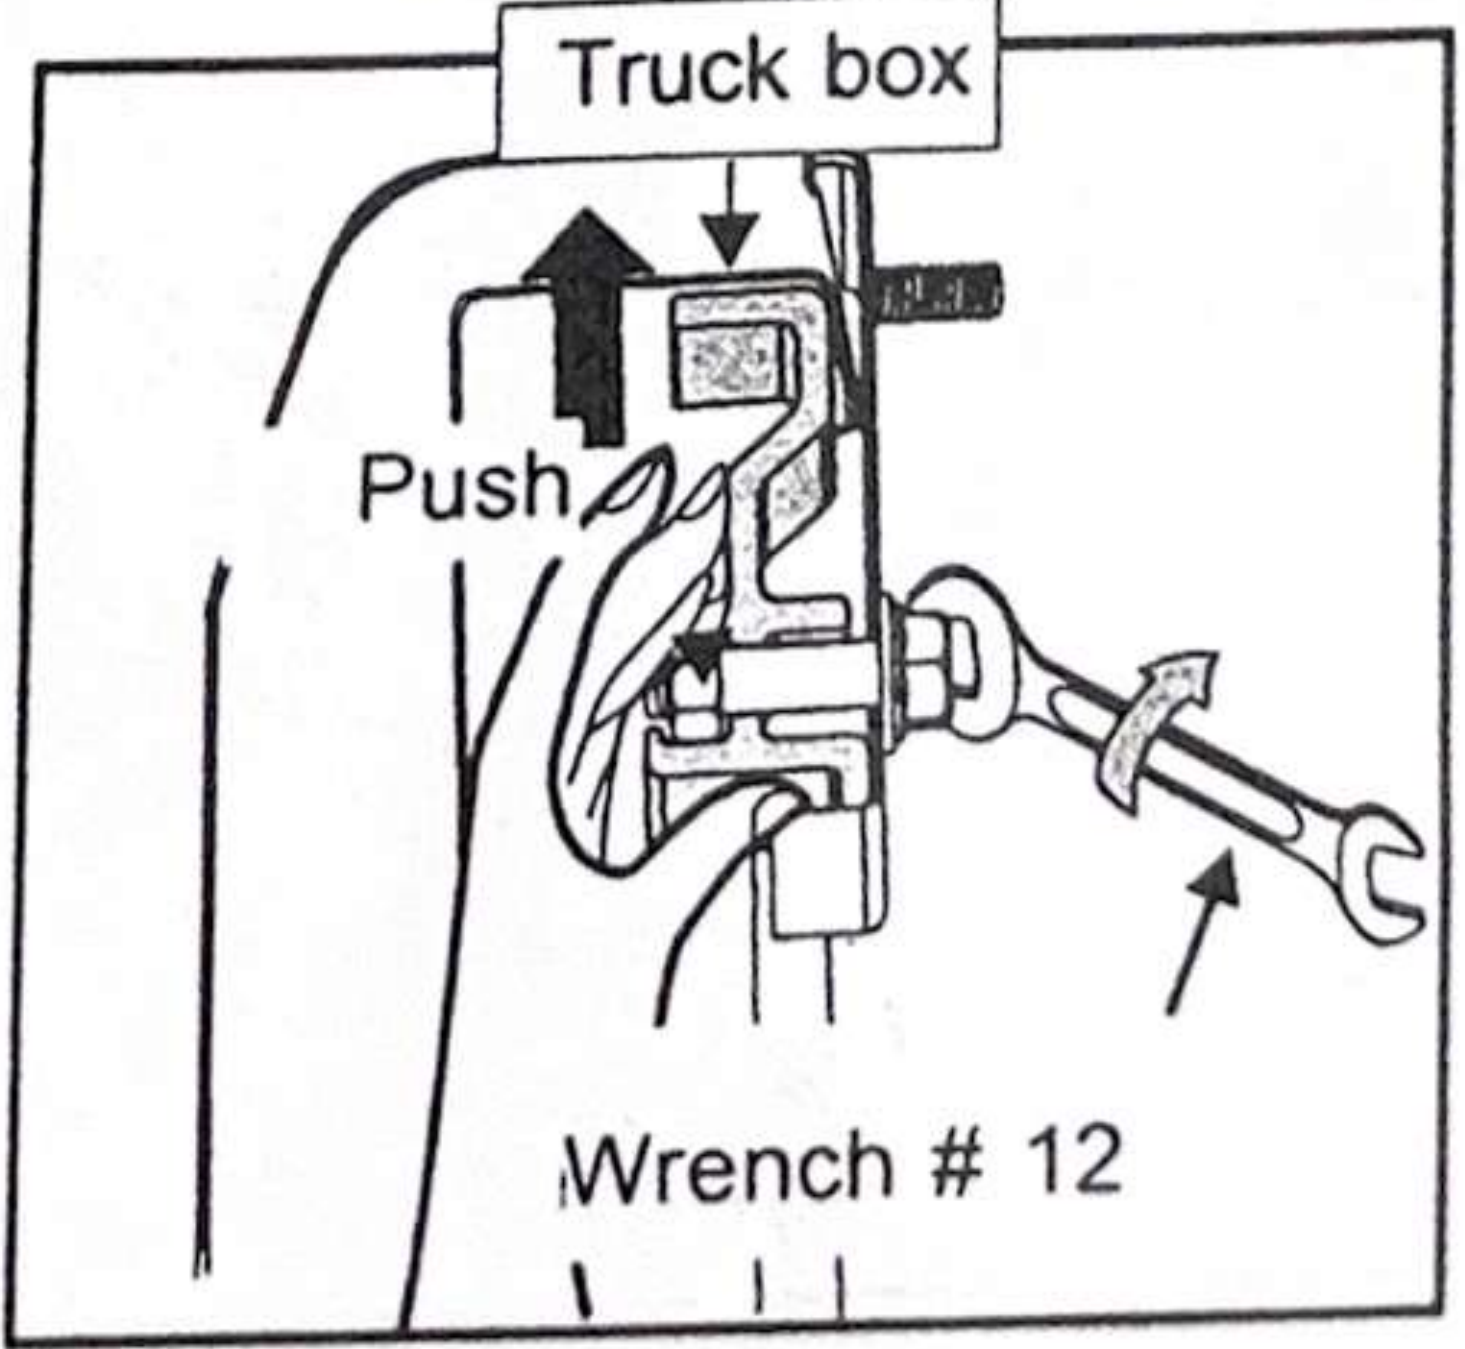


Installation Instruction



14. Fix lock device with liner by wrench # 10

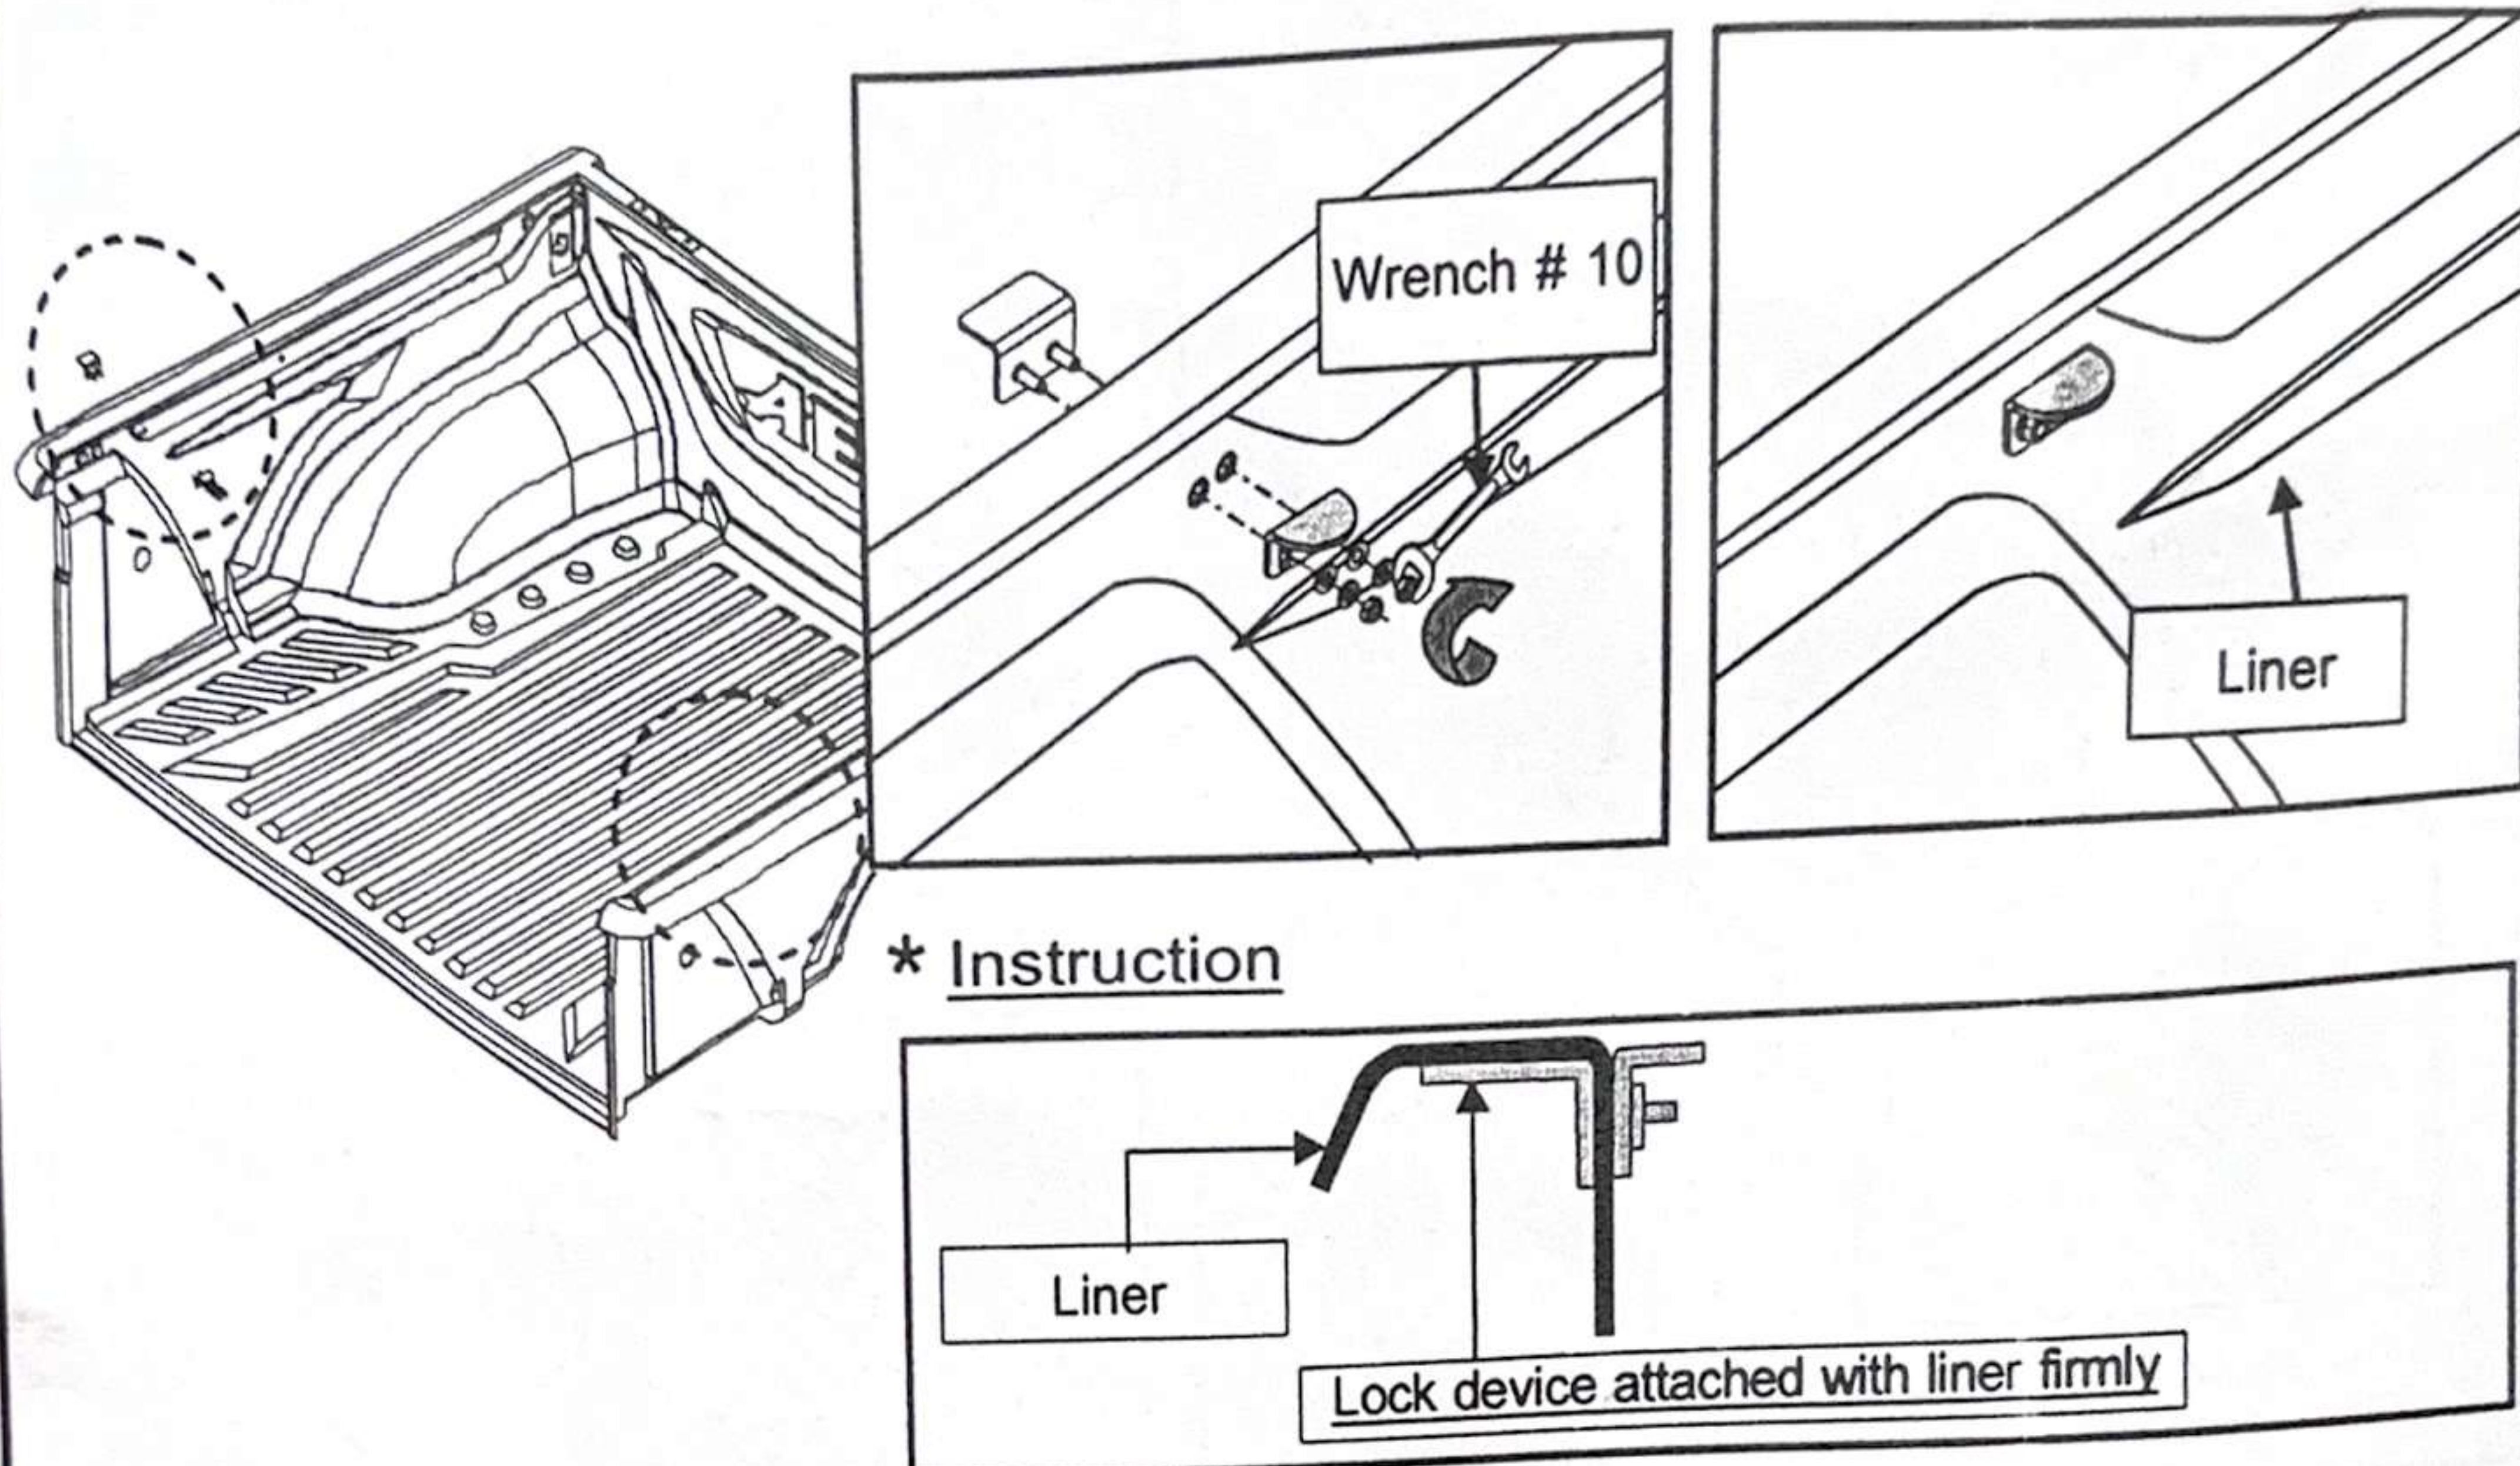


15. Put liner on the truck box


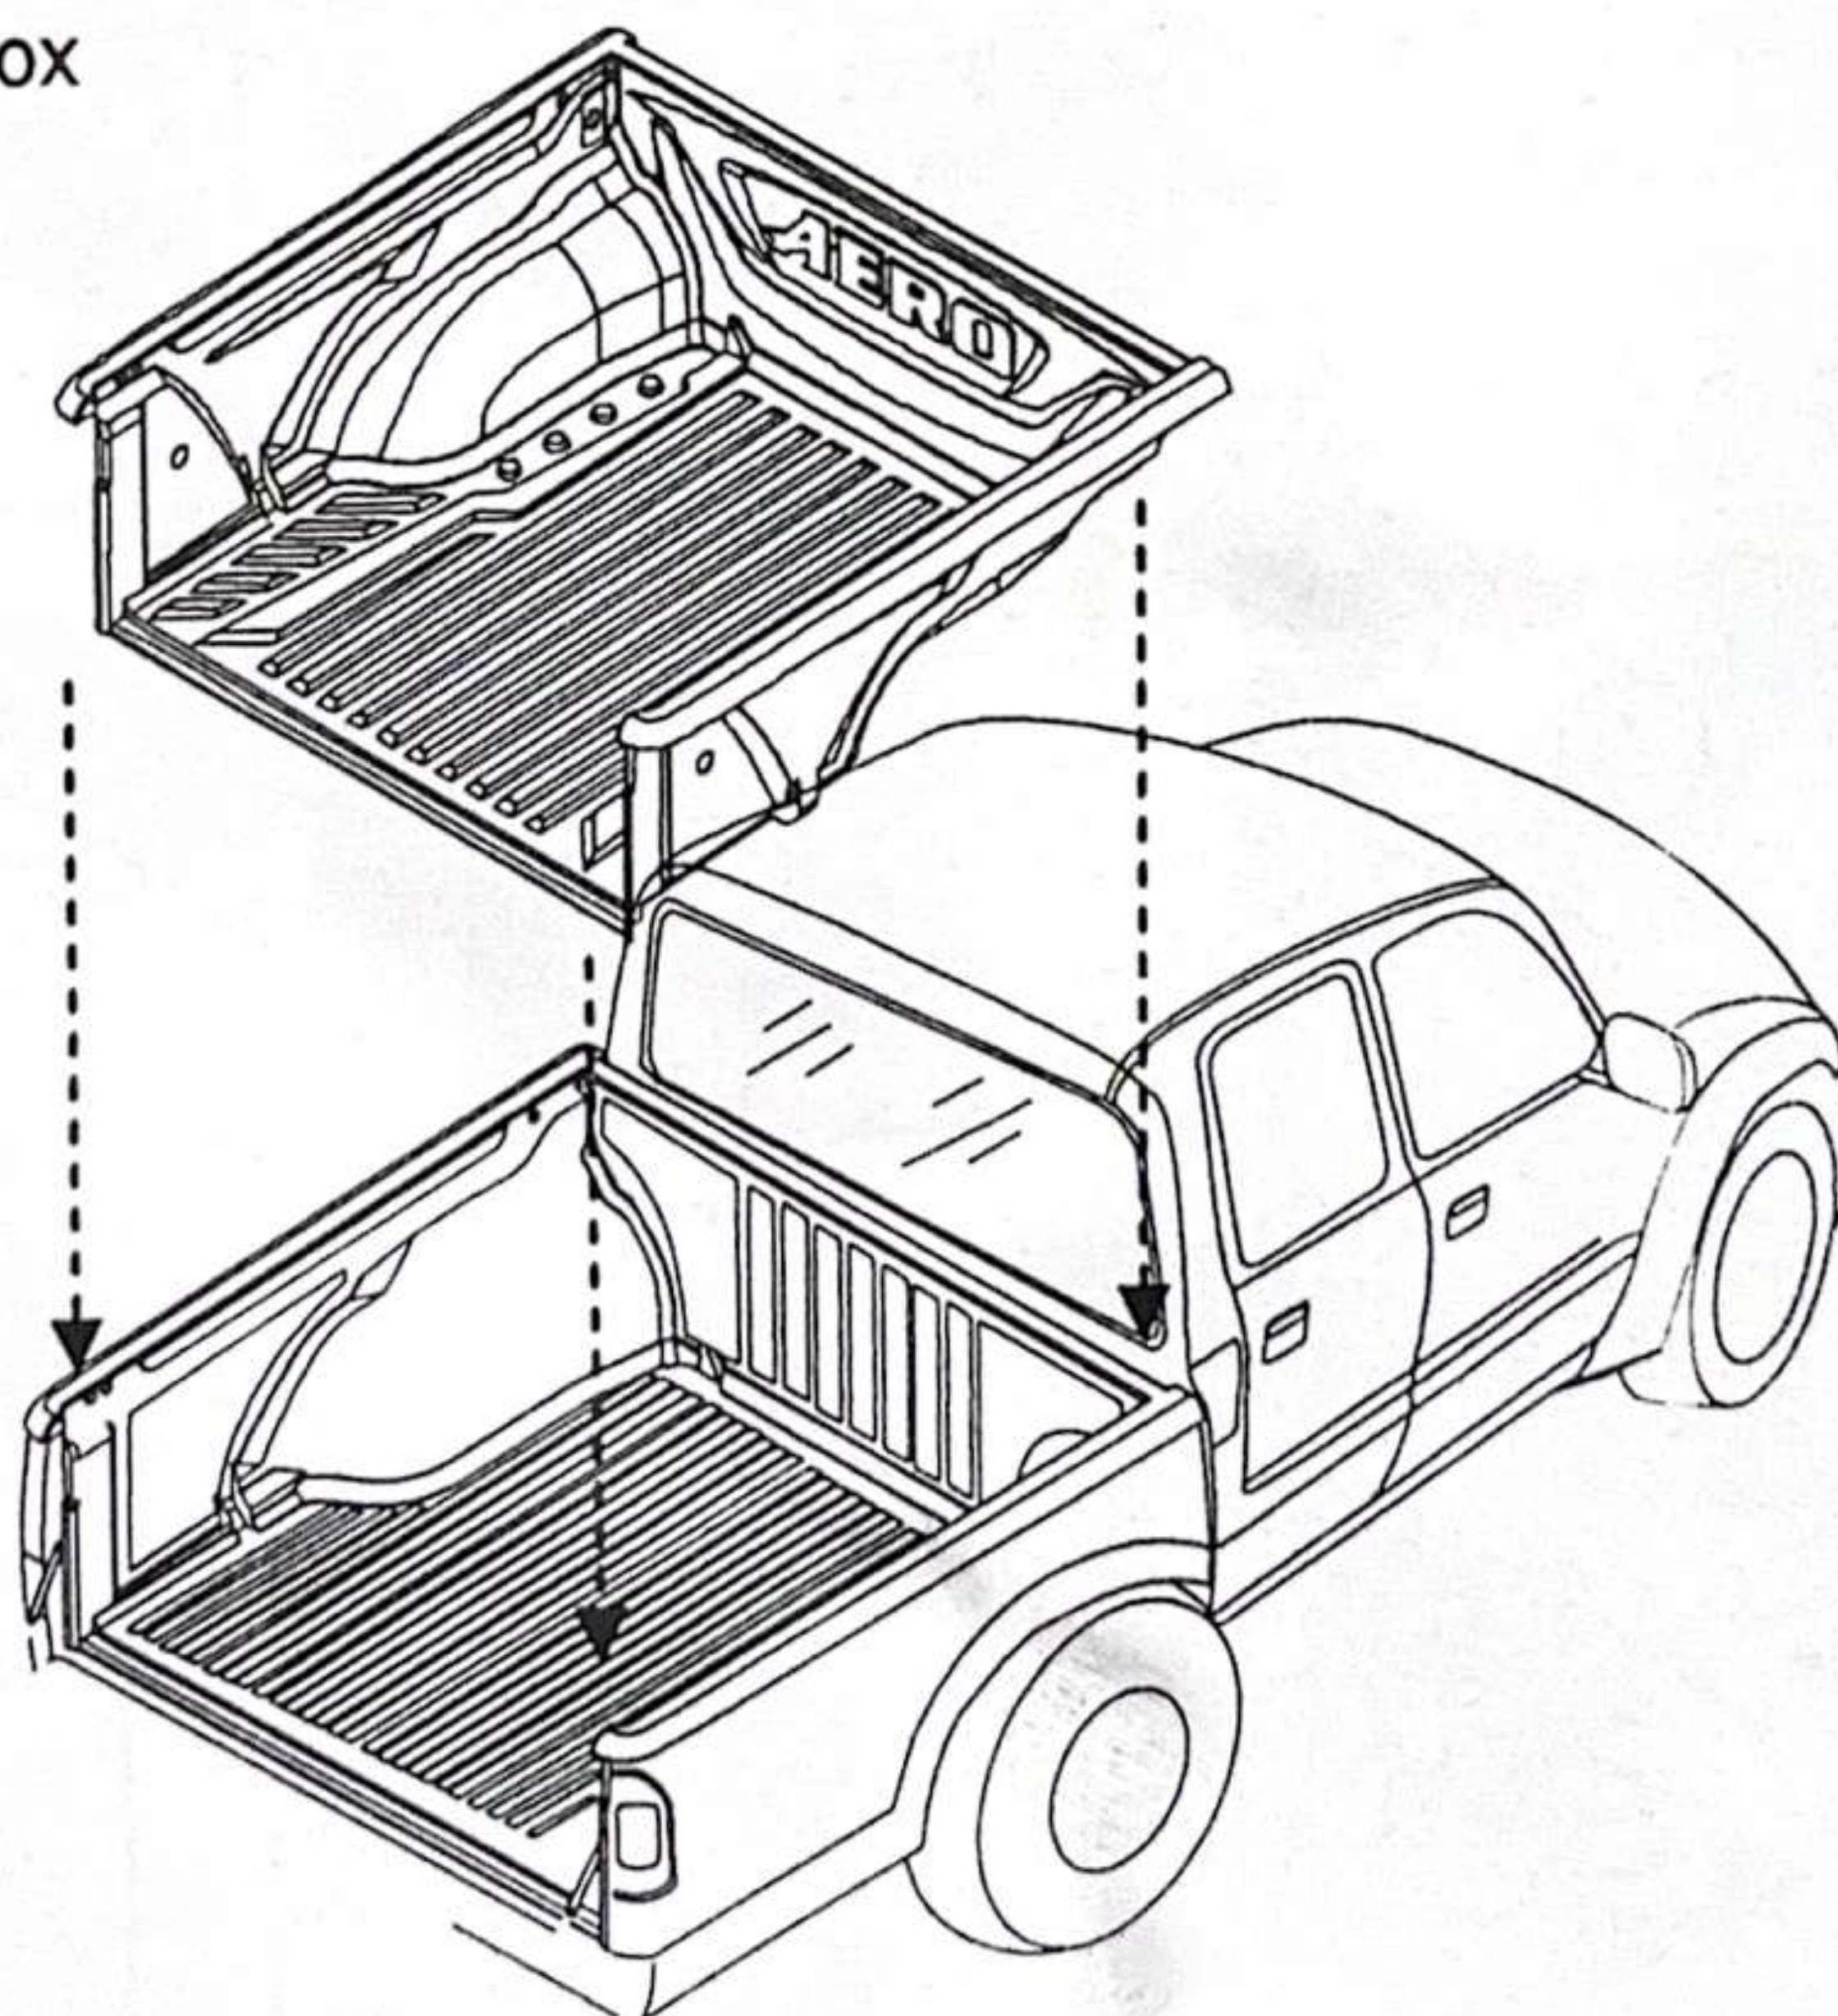


Installation Instruction


16. Install front bar V3 as shown

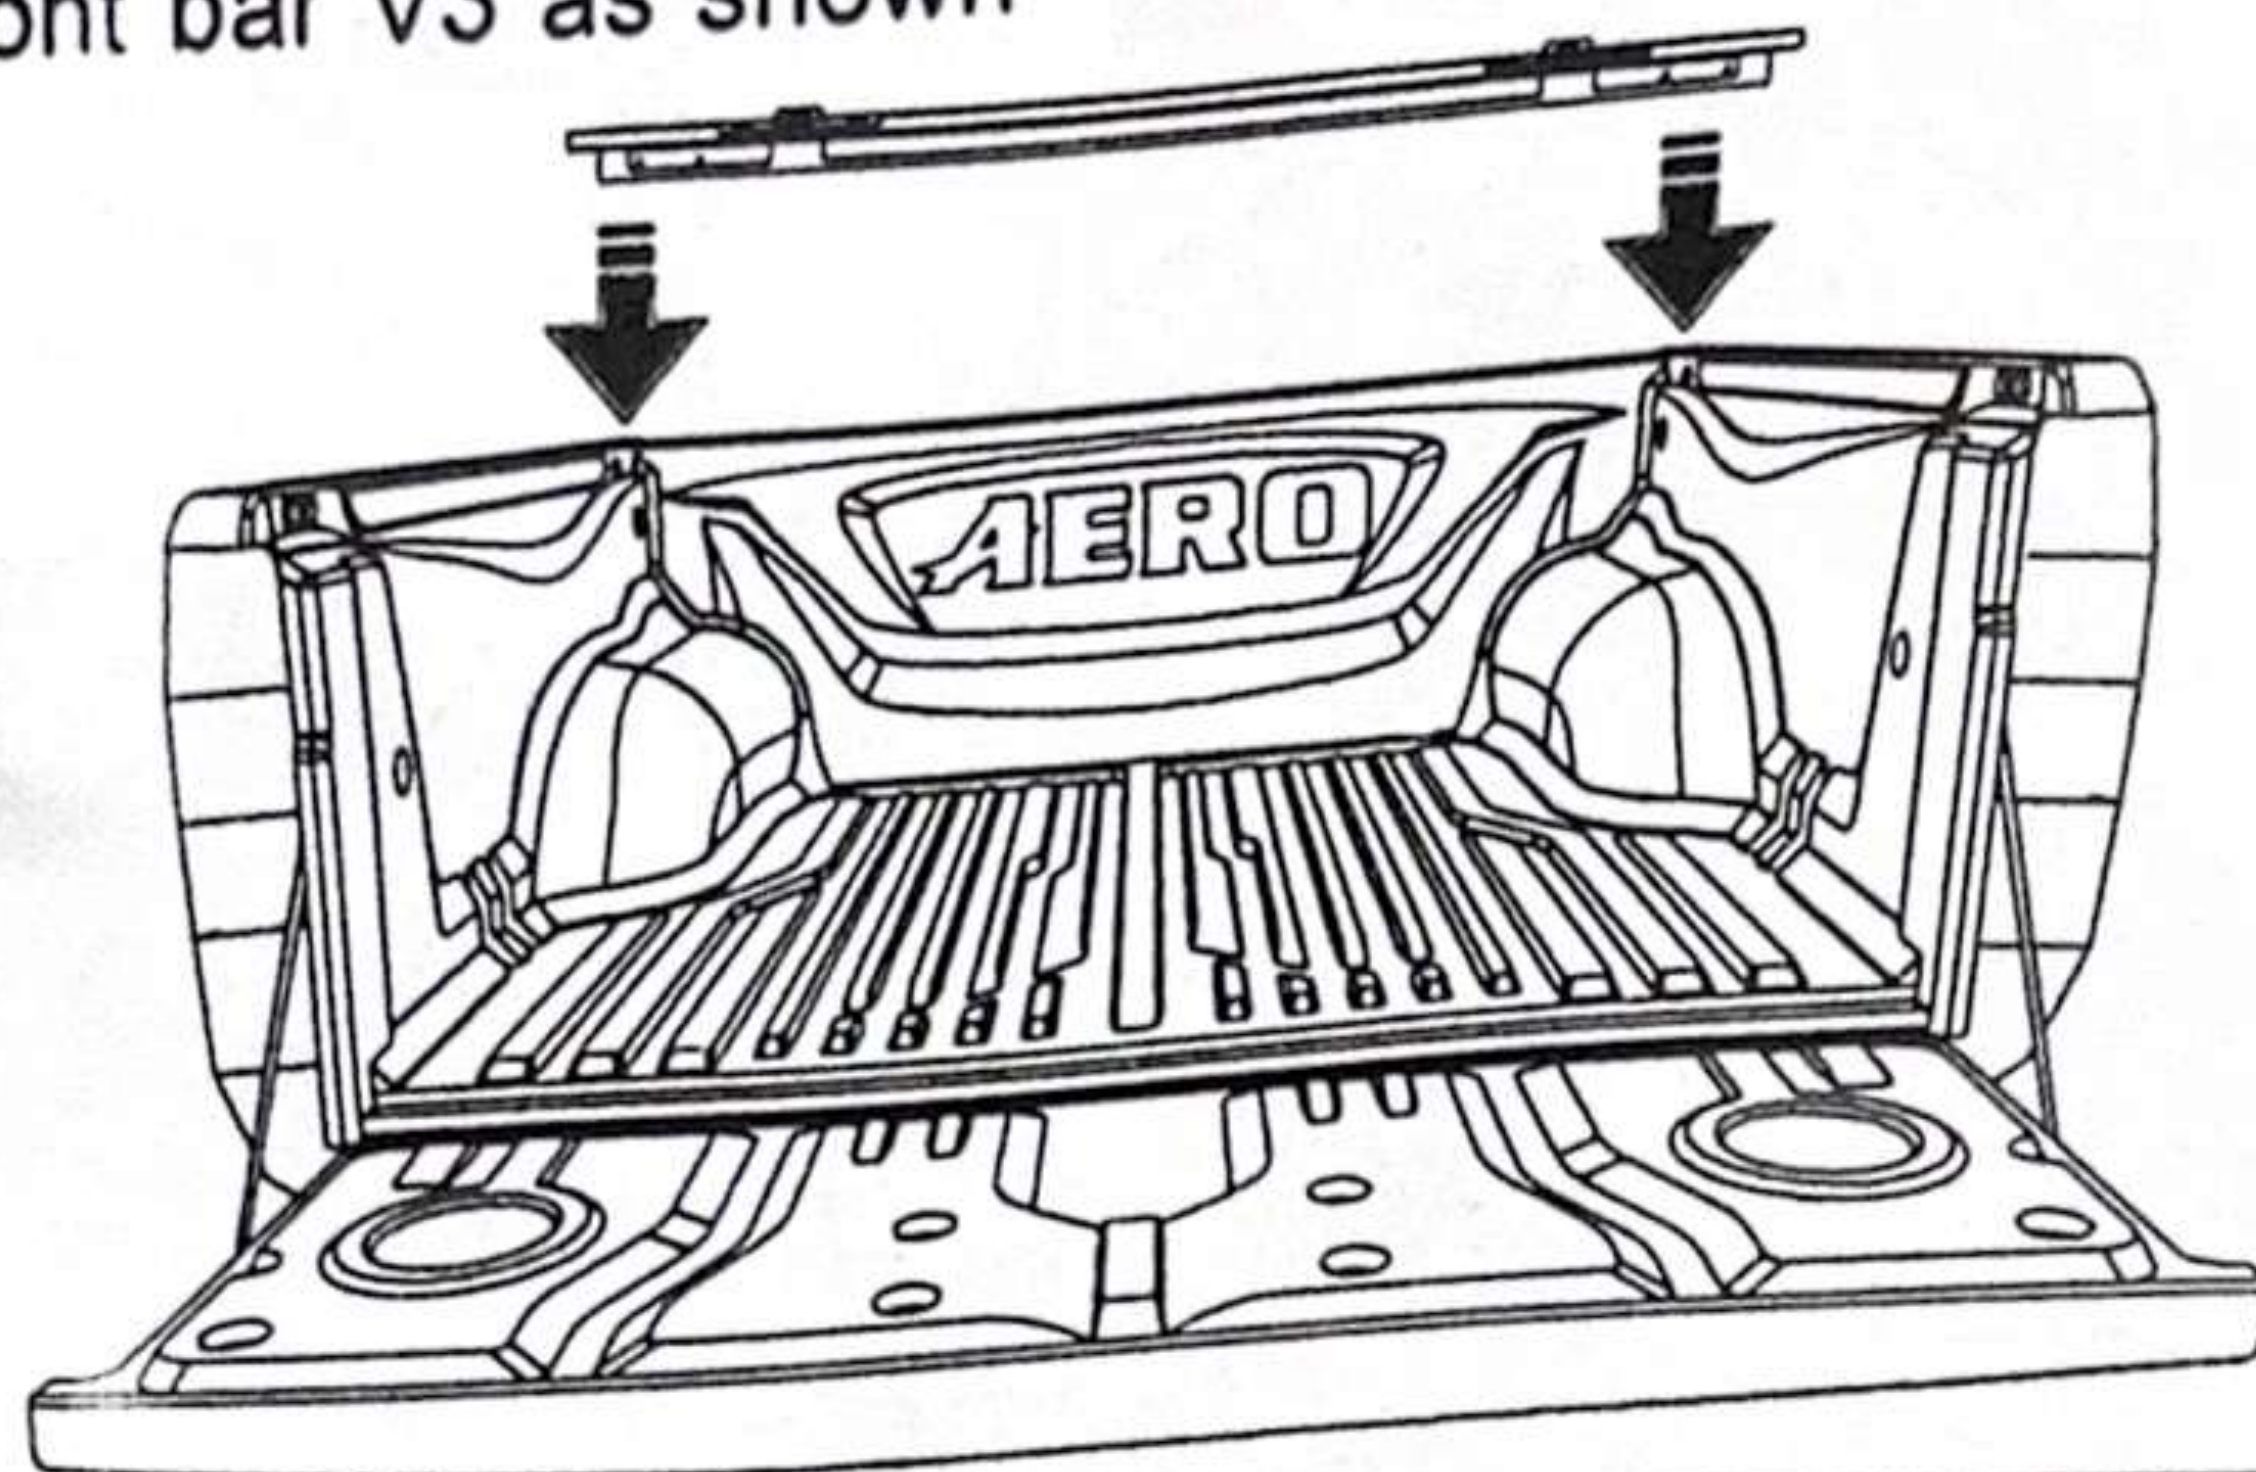


17. Install Adapter plate as shown

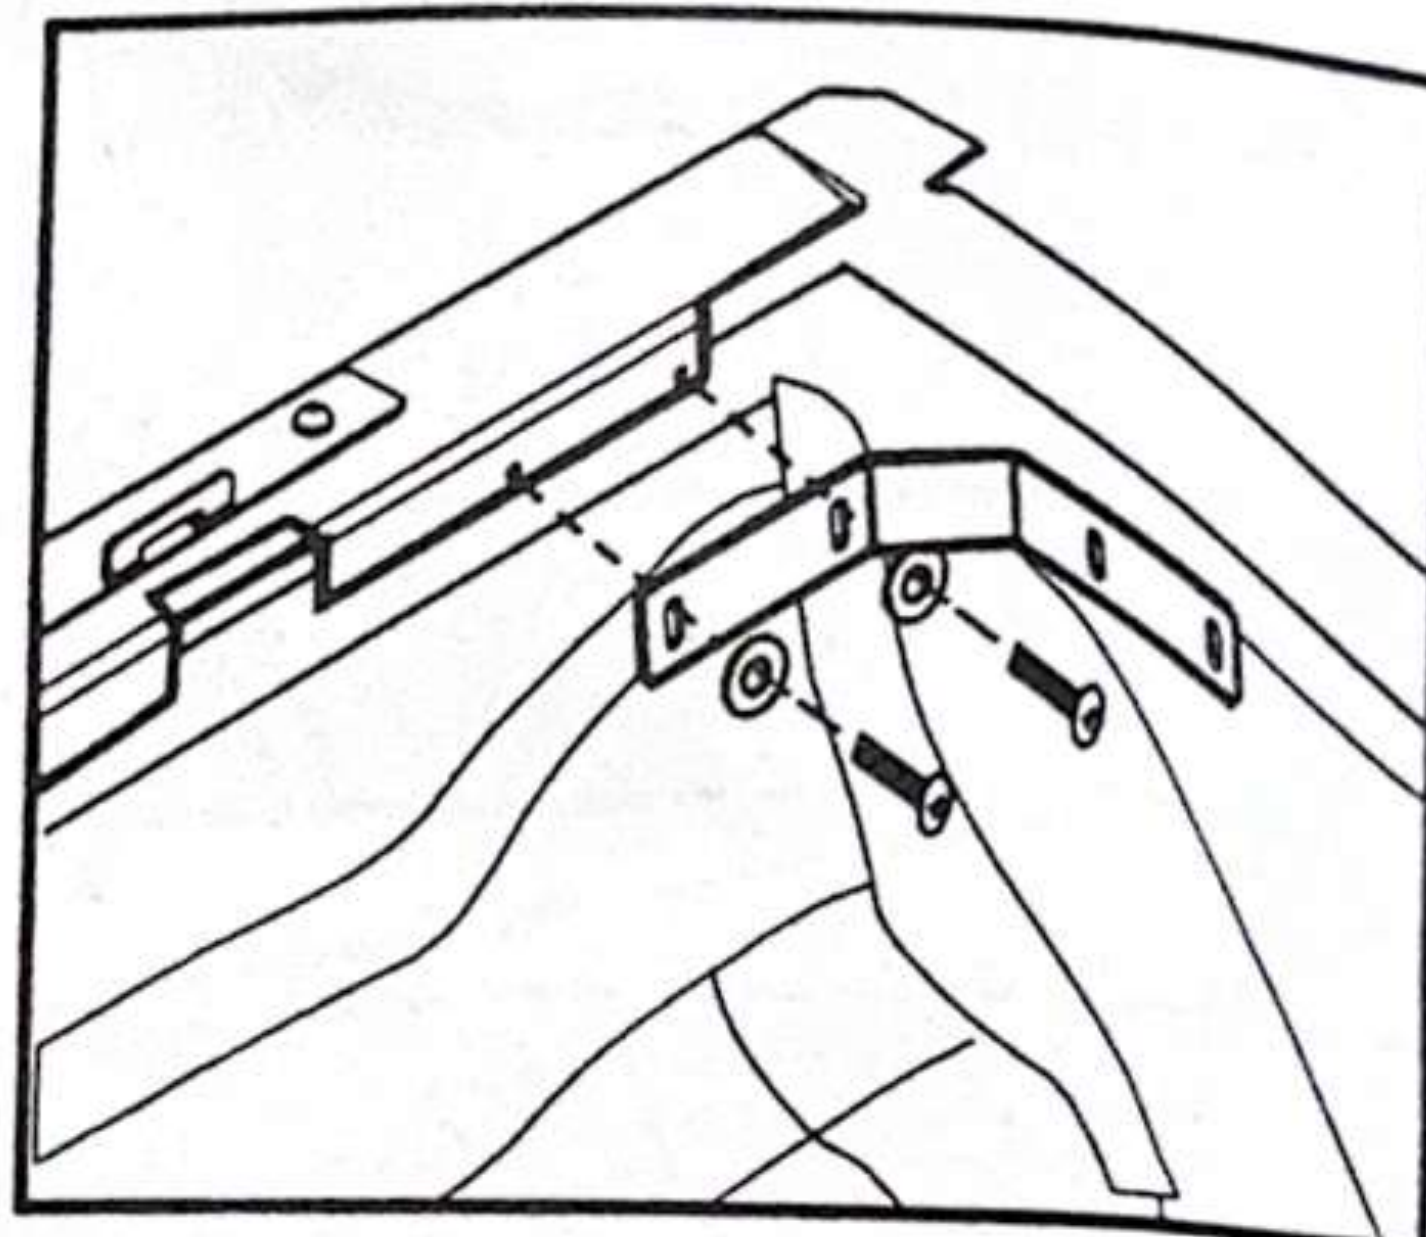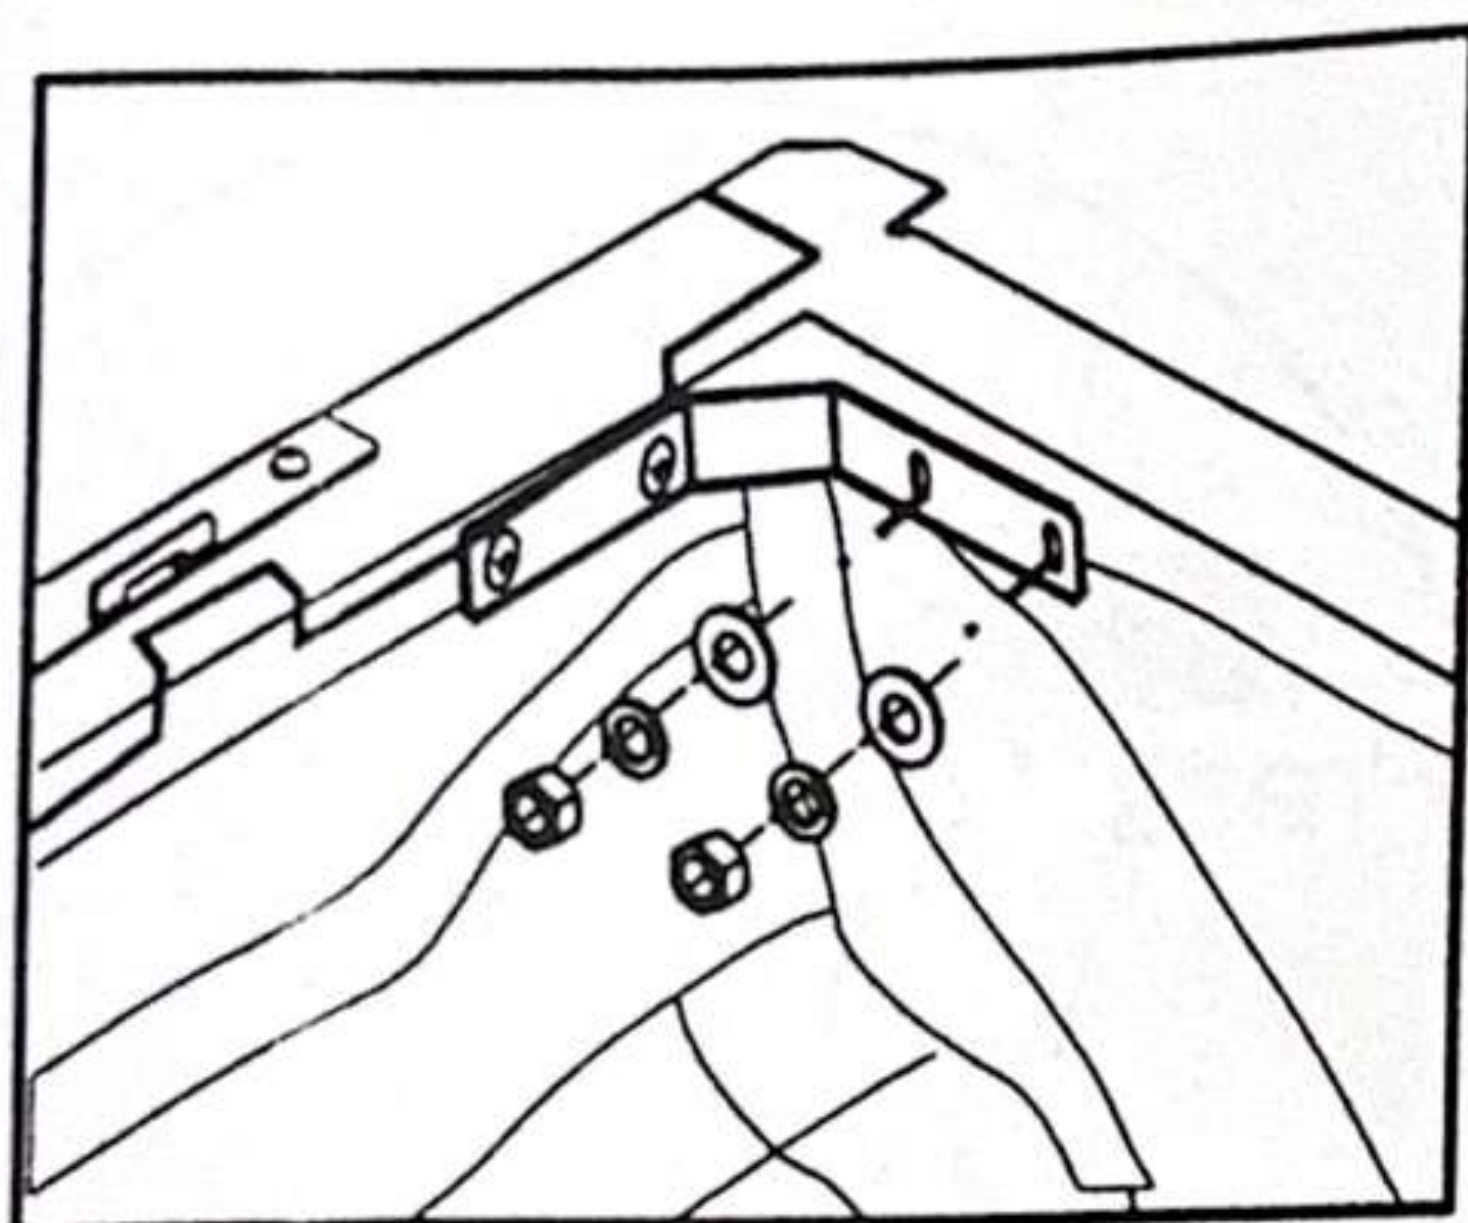

18. Clean surface on cabin, put liner tape at cabin at Hing position

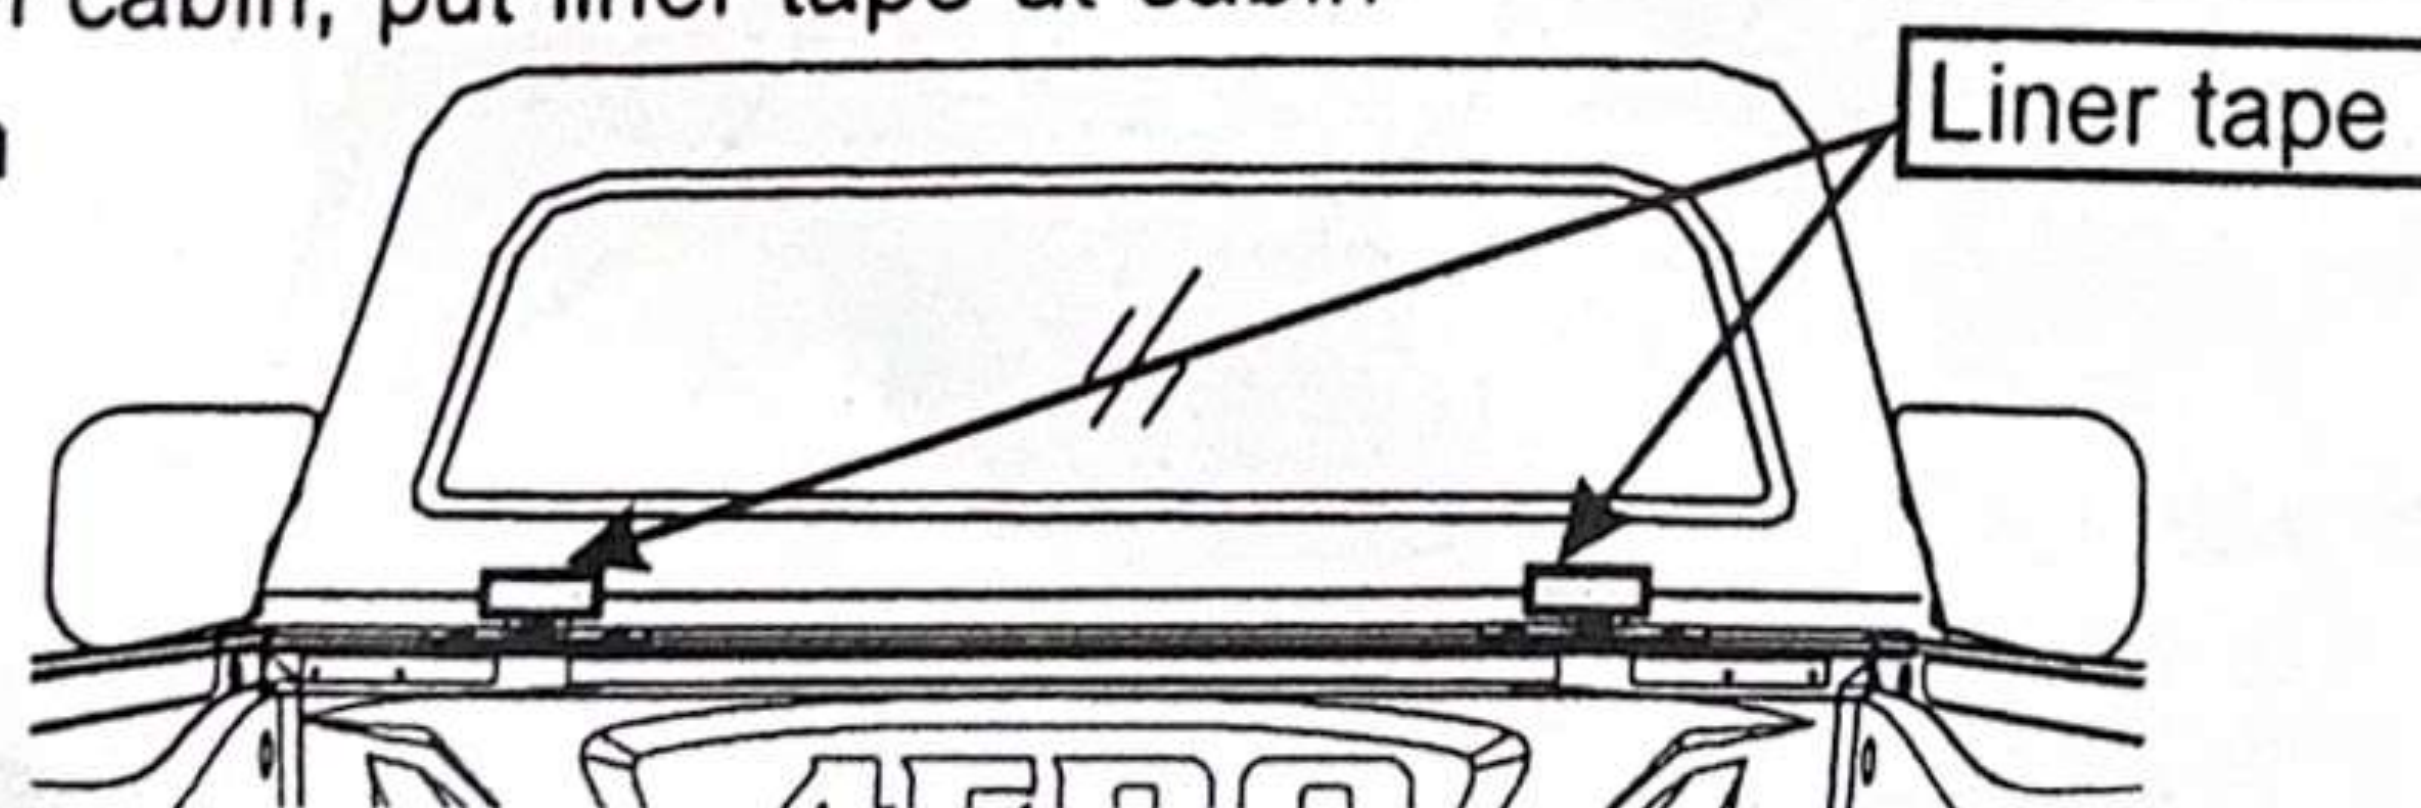

19. Install lower bracket for gas strut

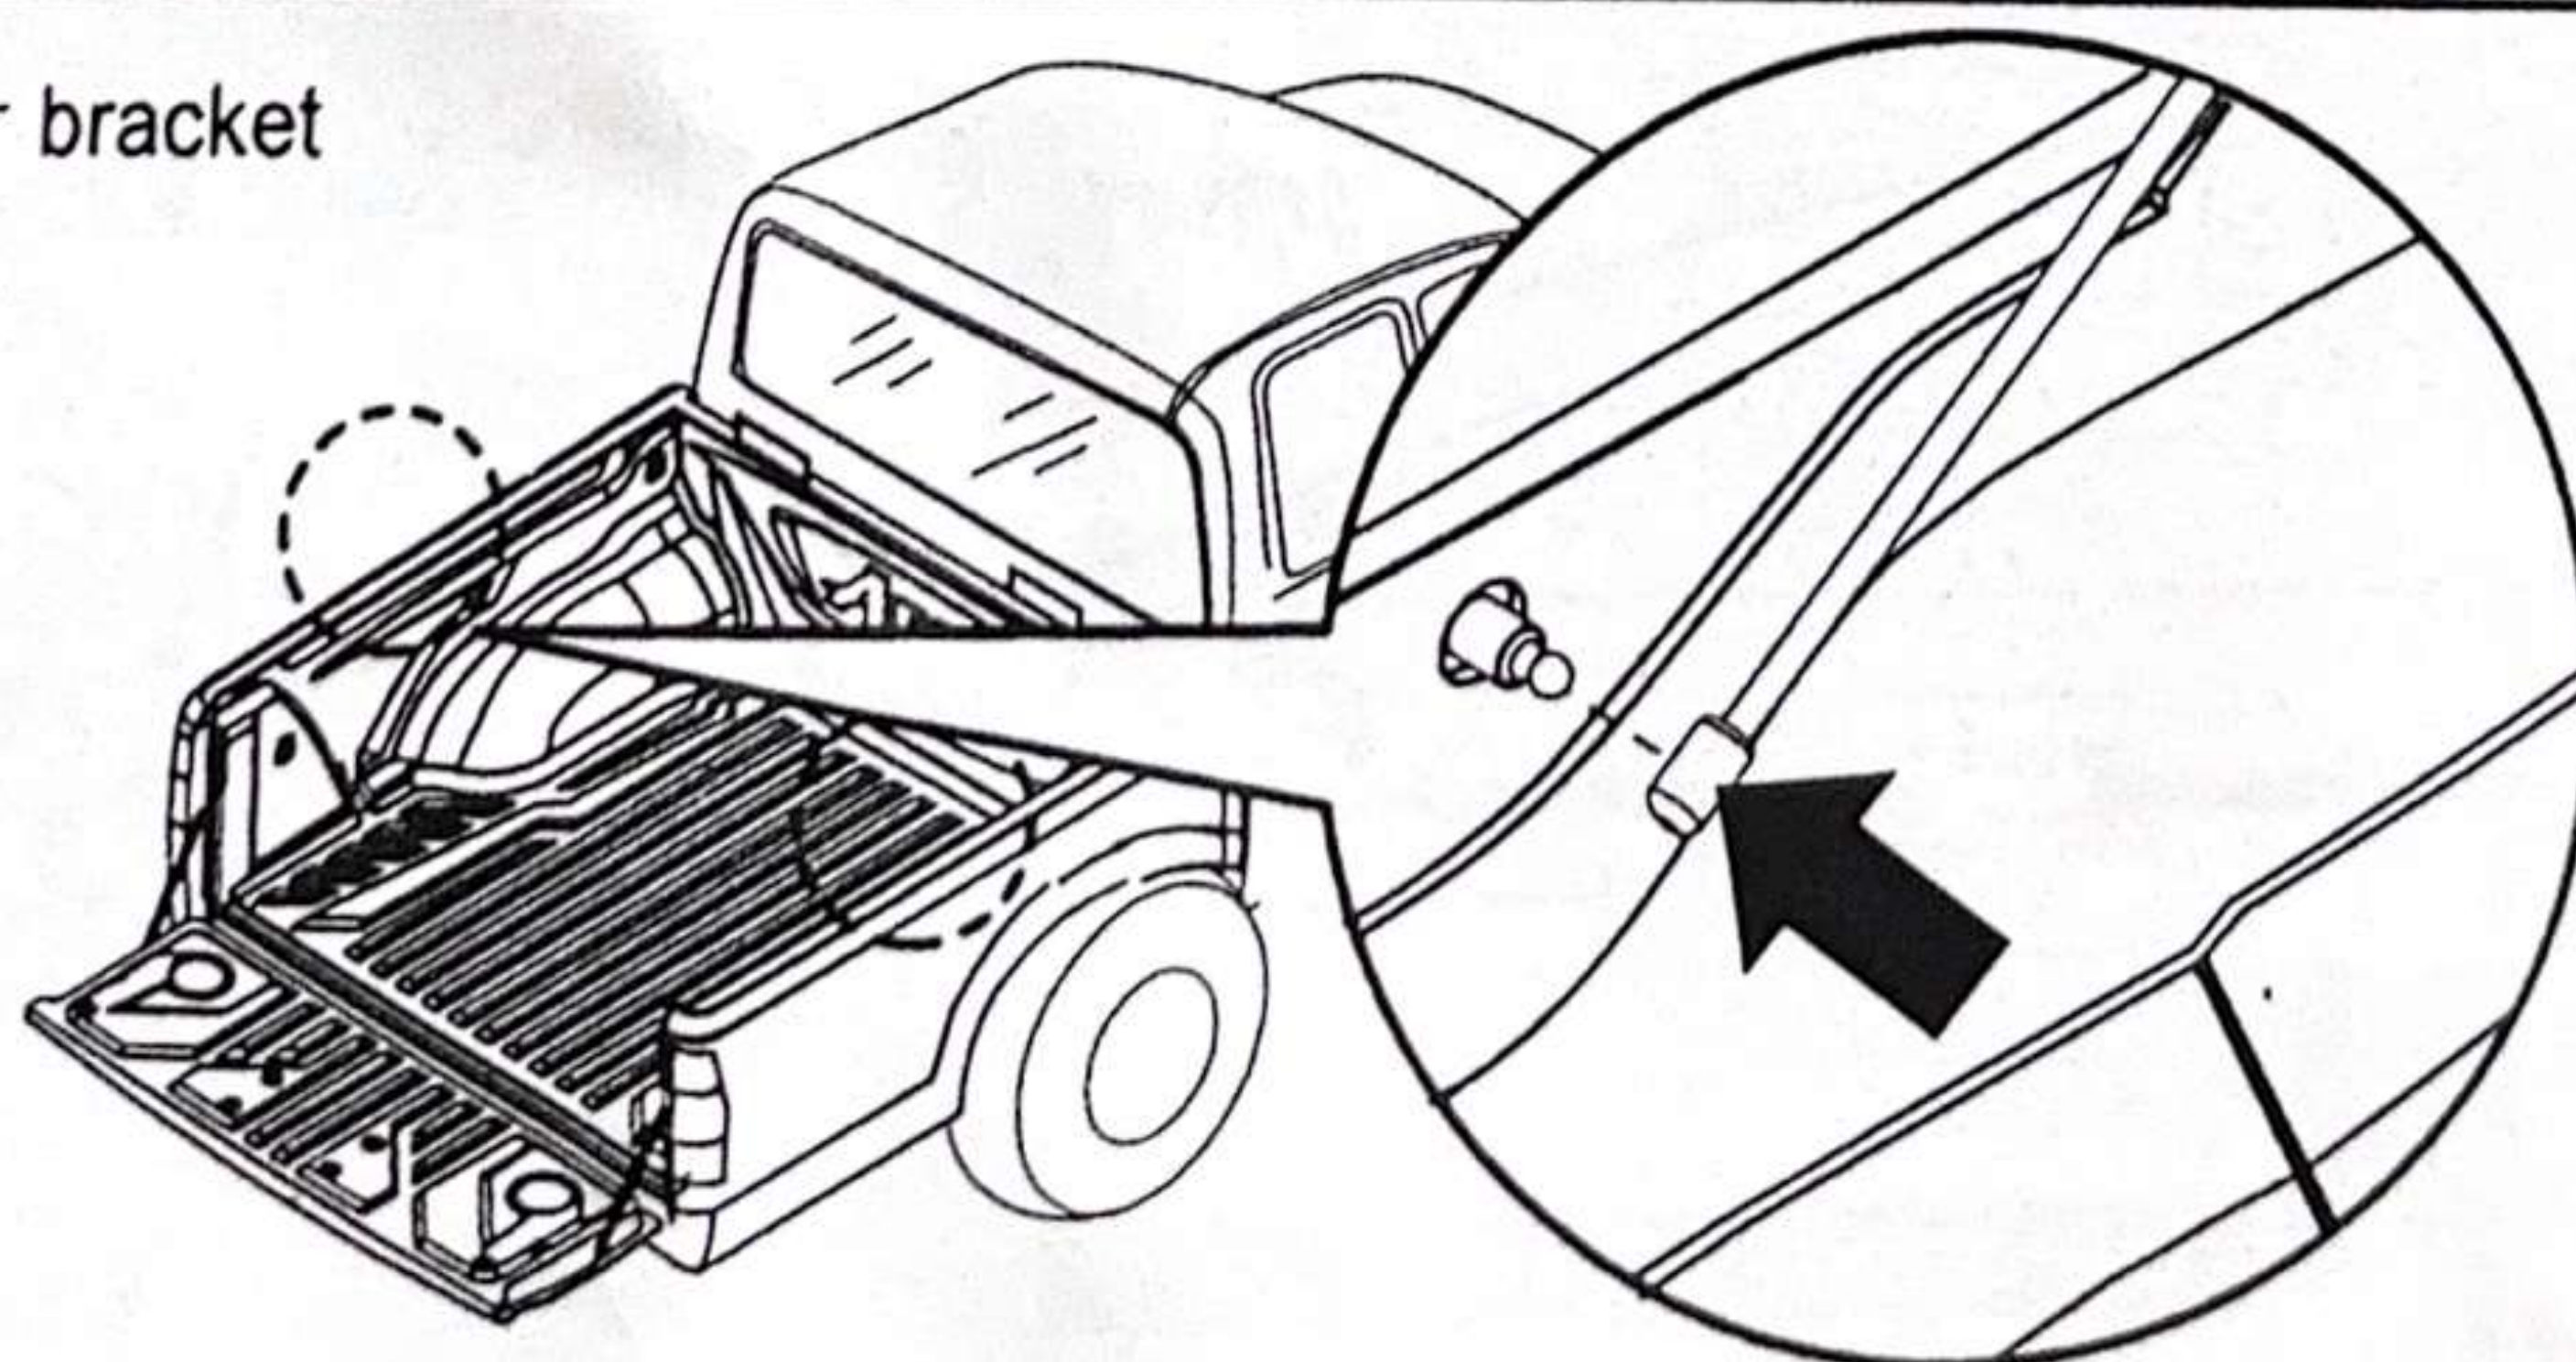





Installation Instruction

20. Install Lid on liner


***be careful hinge damage to cabin*

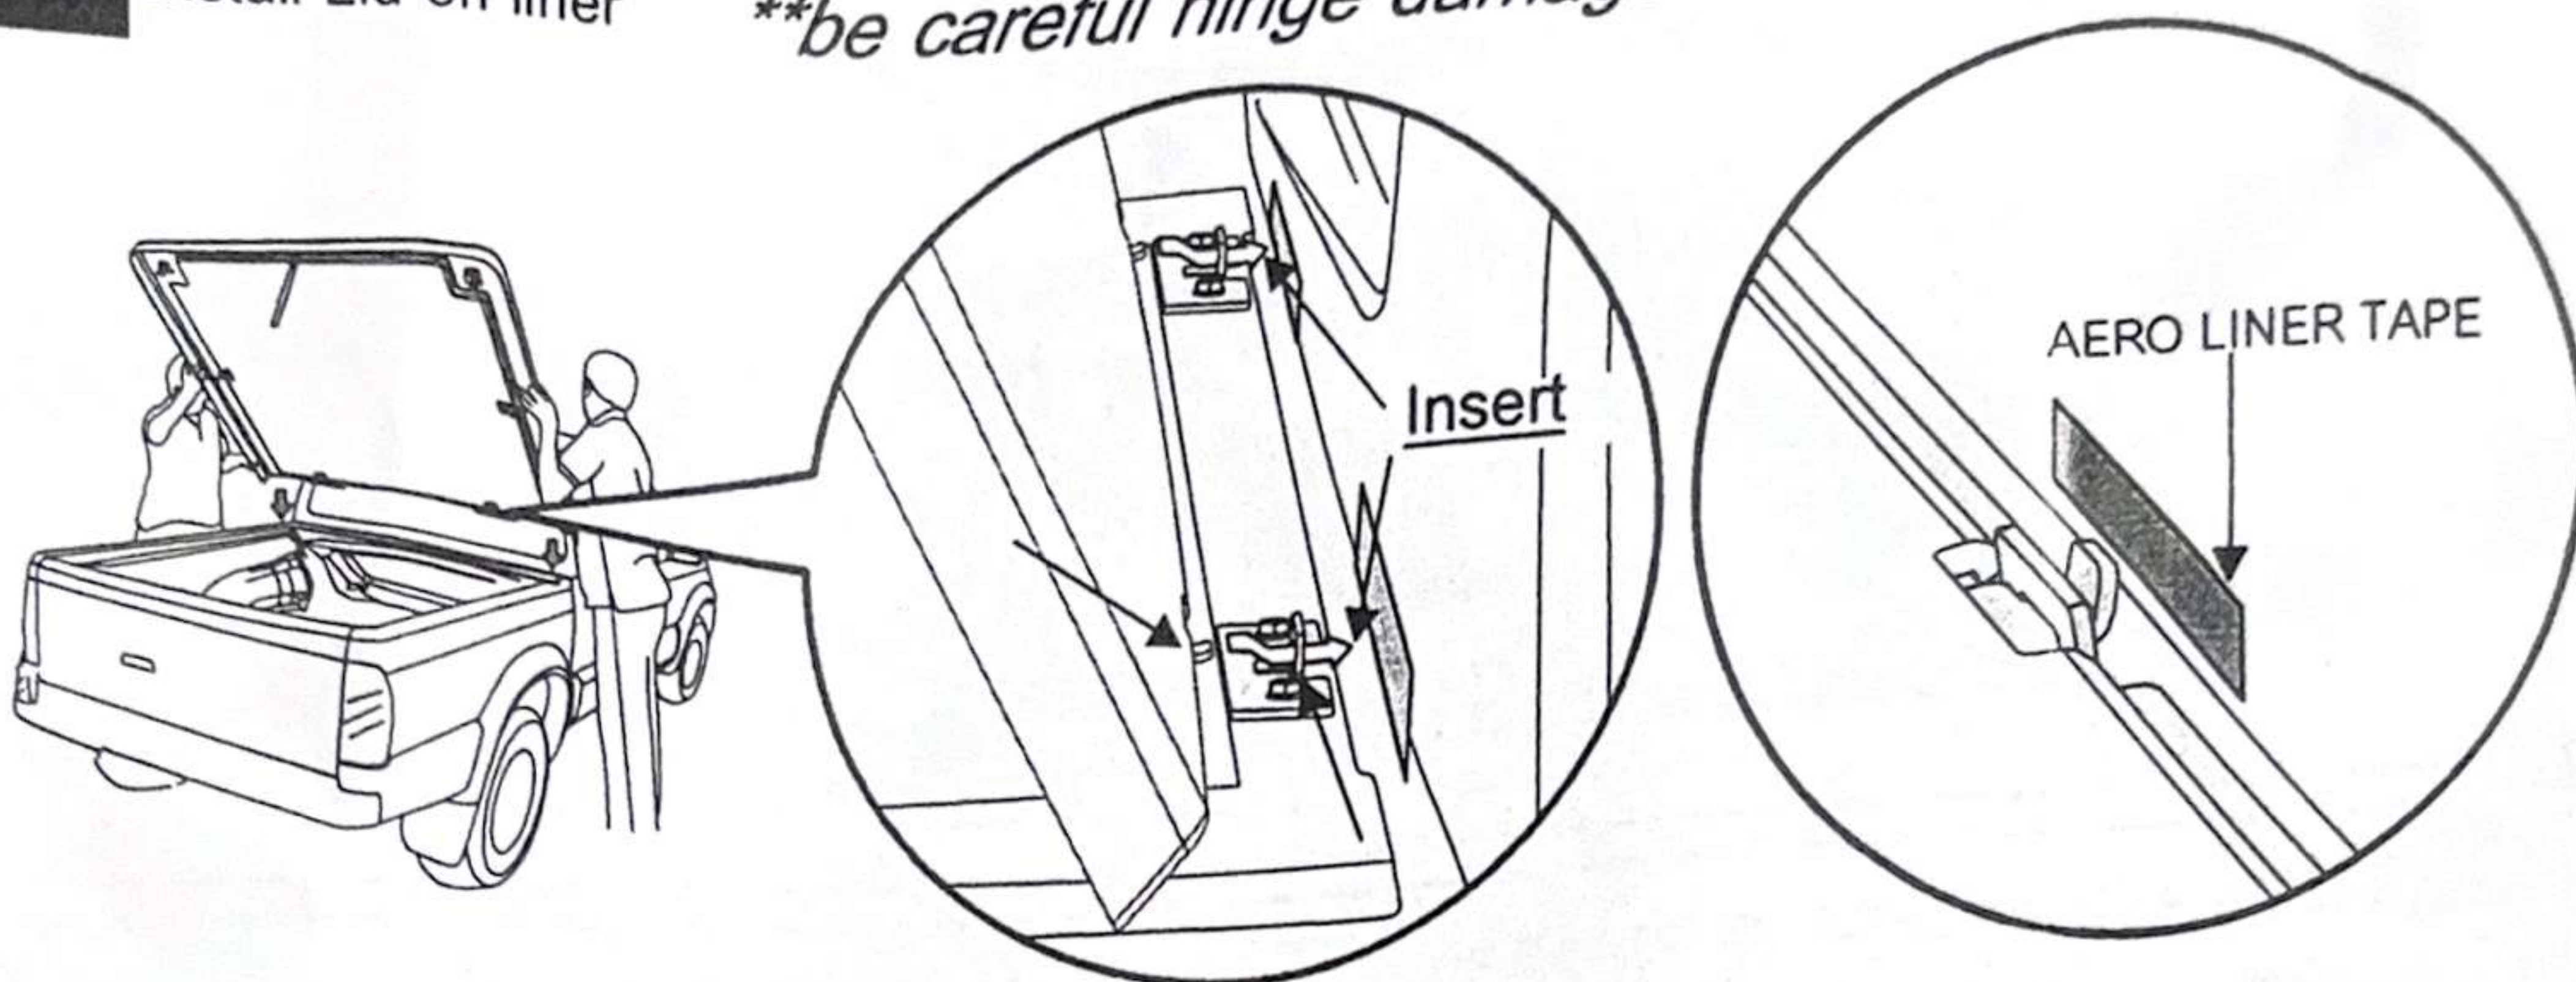

21. Install Gas strut on lid cover

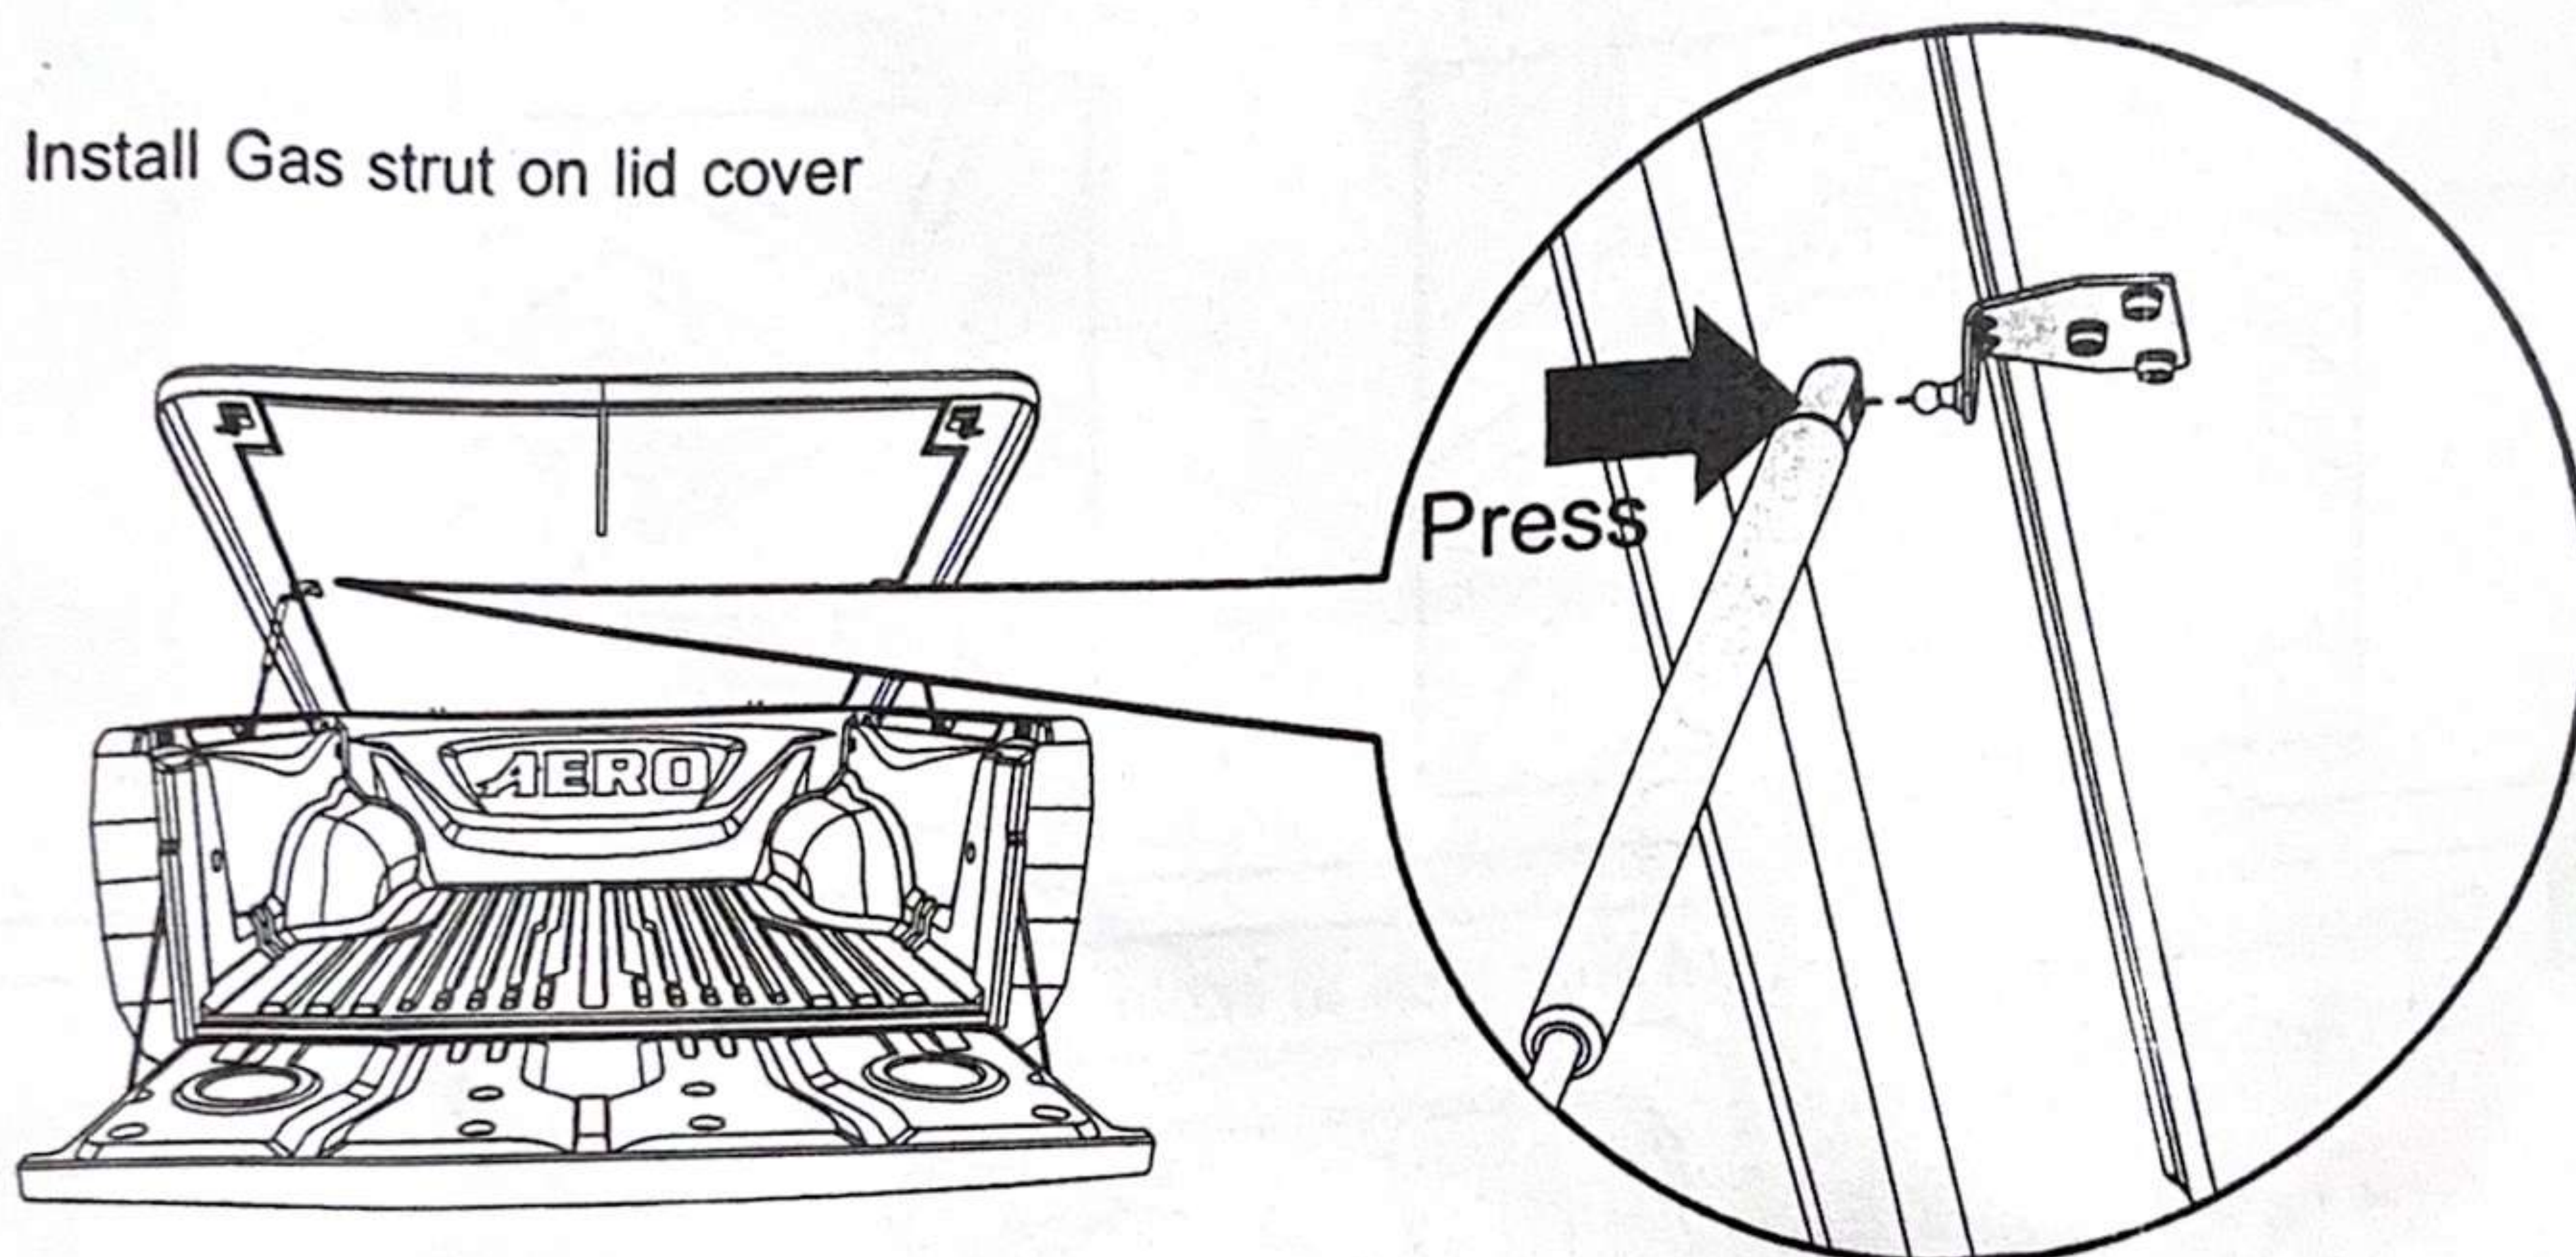

22. Adjust lock plate with lock device

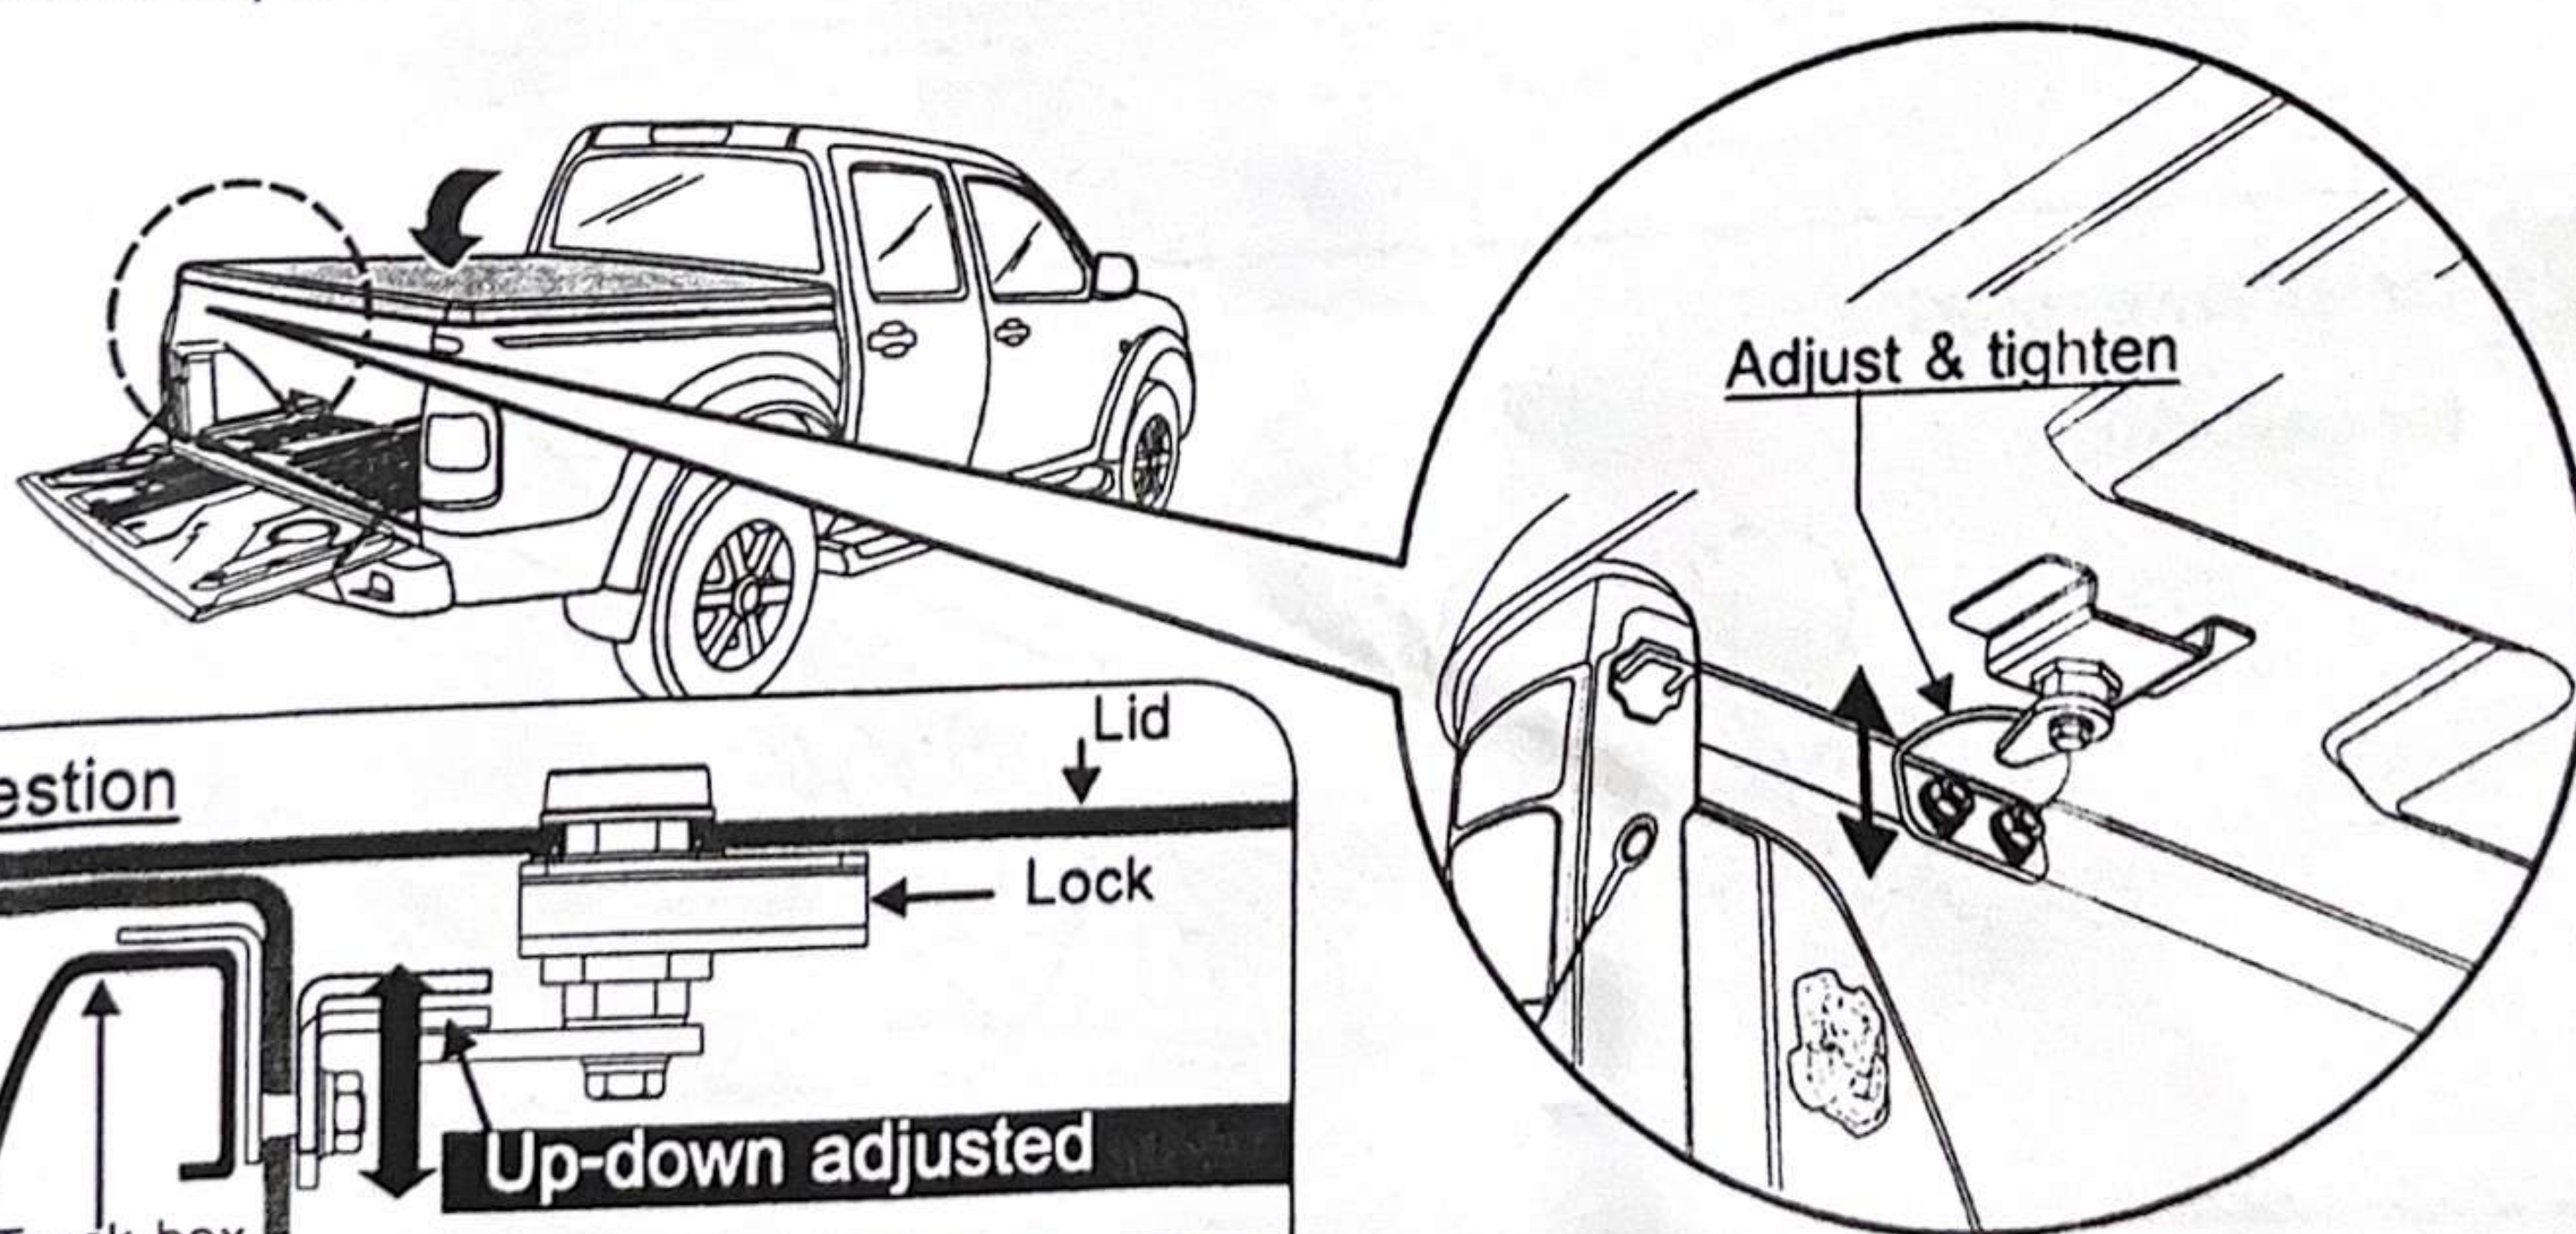



AEROFLEX INTERNATIONAL CO.,LTD.

947/156 Moo 12, Bangna-Trad Rd. Bangkok 10260 THAILAND.

Tel : (662) 7443020

Direct Line : (662) 7443034 - 5

Fax : (662) 7443033

www.aeroklas.com

E-mail : product@aeroliner.com MADE IN THAILAND

31030000036