



# Mountain Top<sup>®</sup> Roll


Installation manual






Parts

**A**

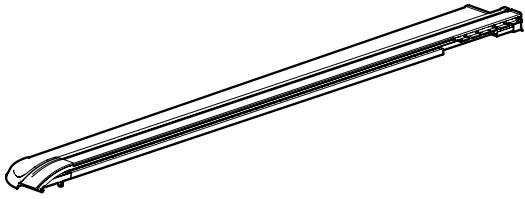


x 1

**B**

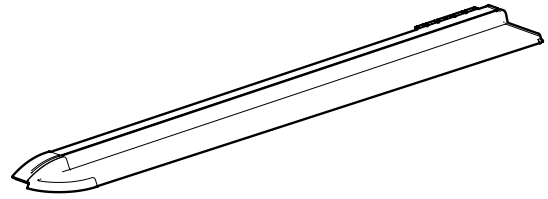


x 1

**C**

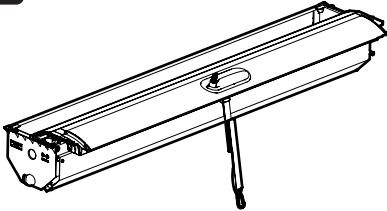

x 1

**D**

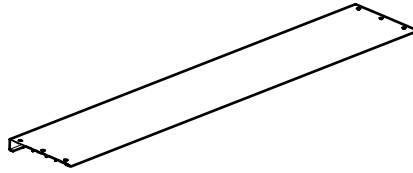

x 1

**E**



x 1




Kit

**F**




x 6

**G**

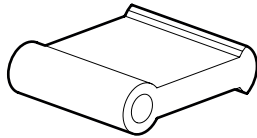


x 6

**H**

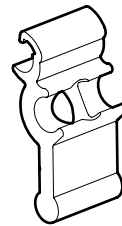


x 6

**I**

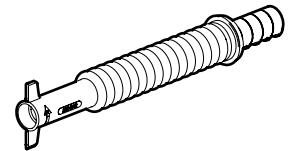

x 2

**J**



x 12

**K**




x 6

**L**




x 6

**M**

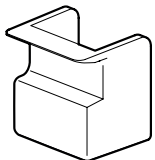


x 2

**N**




x 1

**O**



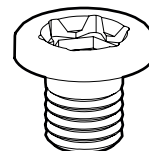




x 6

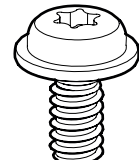

**P**

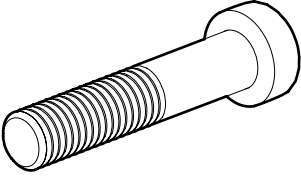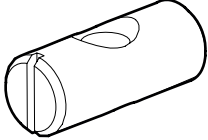

x 4









Kit		
<b>Q</b>  x 6	<b>R</b>  x 6	<b>S</b>  x 6

Kit	
<b>T</b>  x 2	<b>U</b>  x 2

Manual(s)	
 Manual x 1	 TÜV x 1

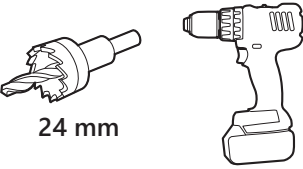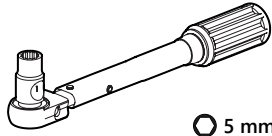


## Tools and materials needed

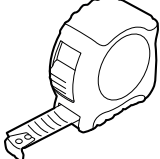
 <p>24 mm</p>	<p>1 - 25 Nm</p>  <p>5 mm T15, T30</p>	 <p>ANTI-RUST</p> <p>Rust protection Rostschutzmittel Anti-rouille Anti roest</p>	 <p>LOCTITE 243</p>
	 <p>H<sub>2</sub>O</p>		

1


## Applying rust protection

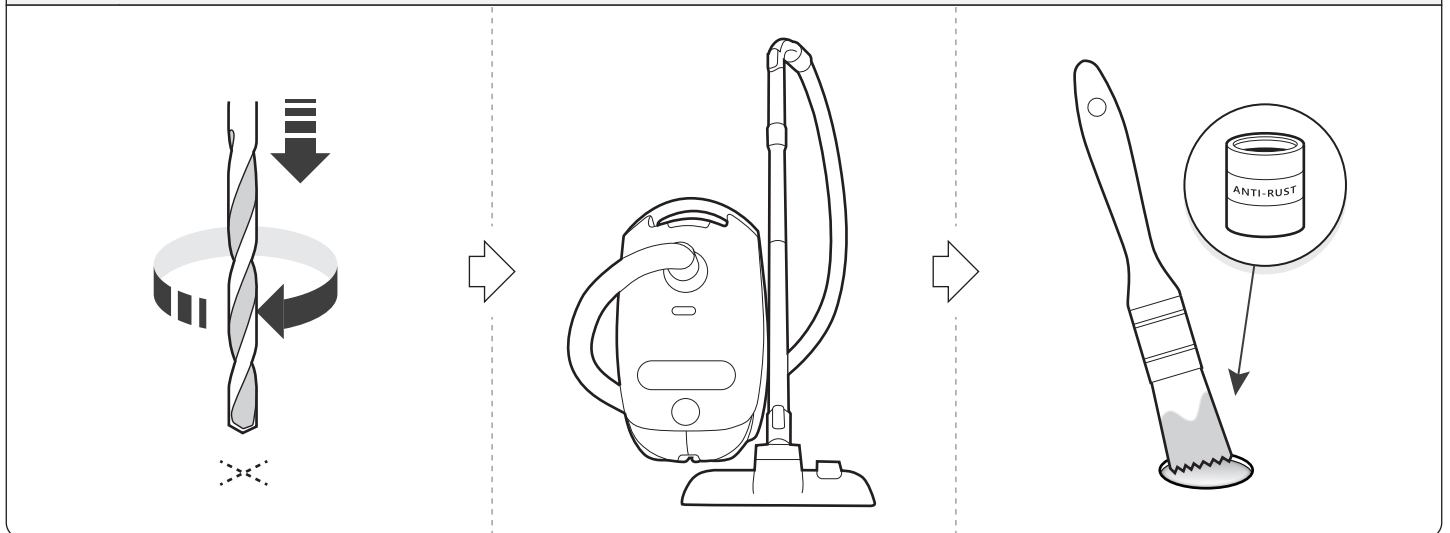


1

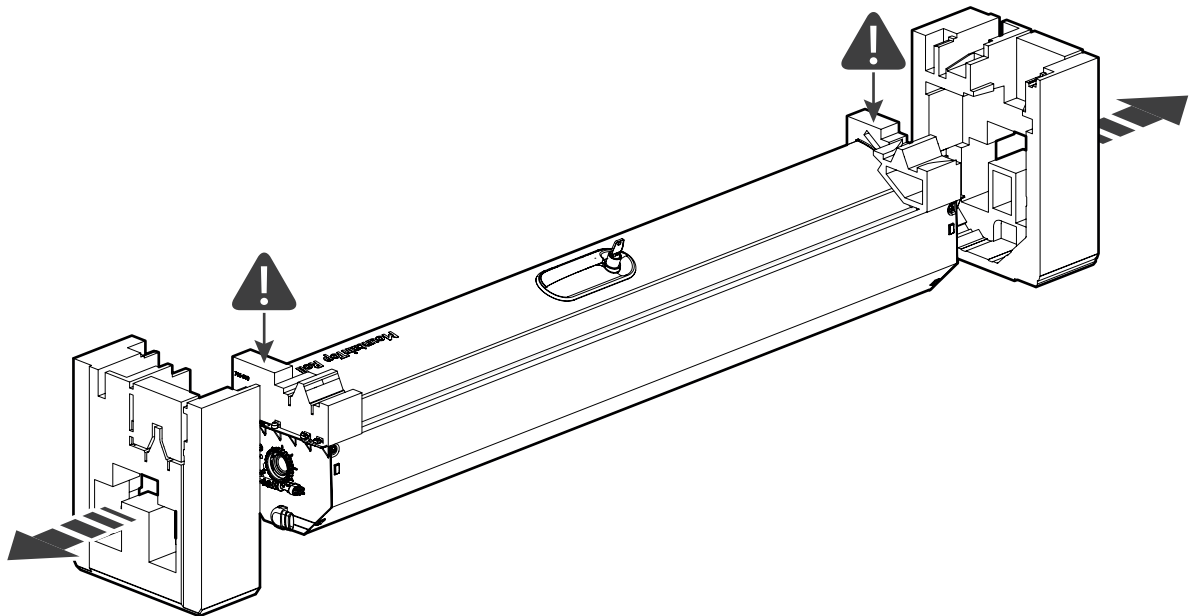




2

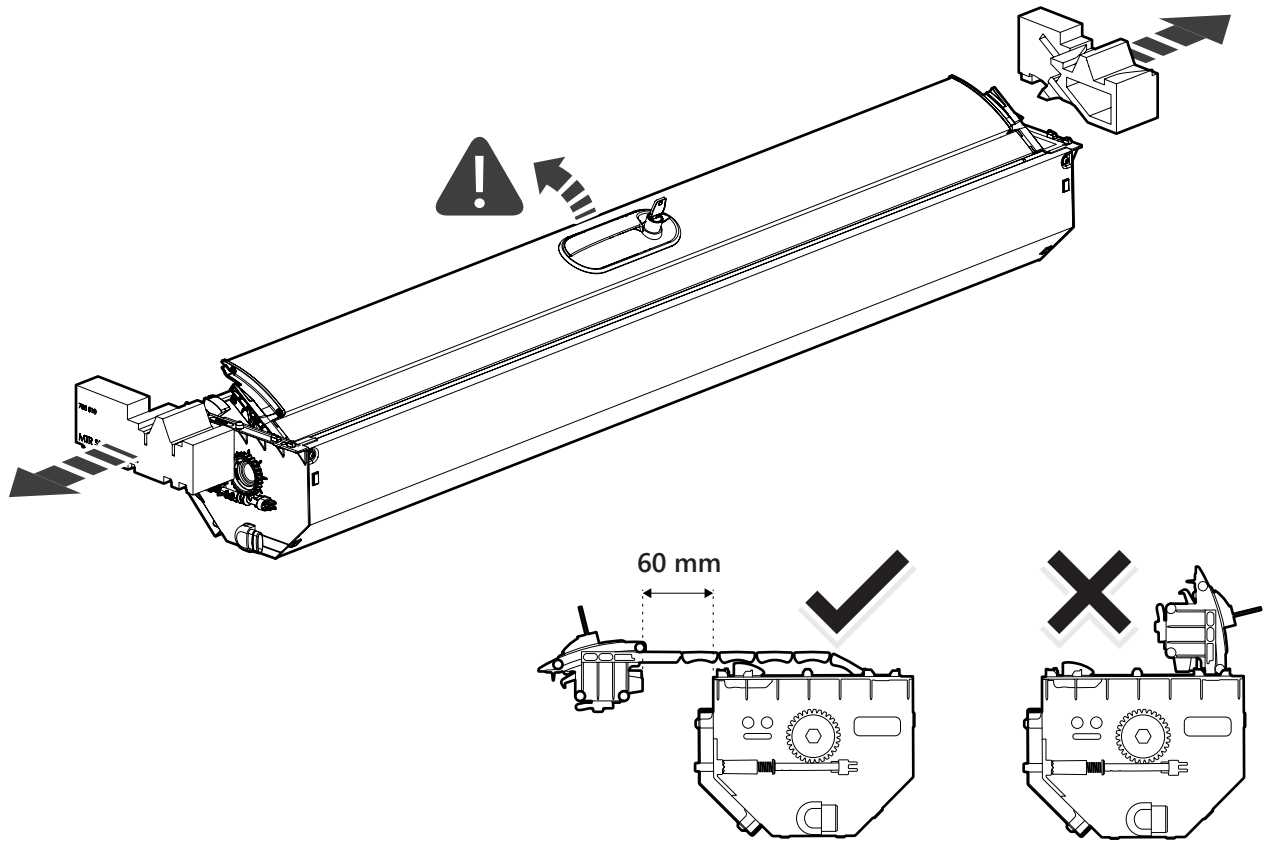

3

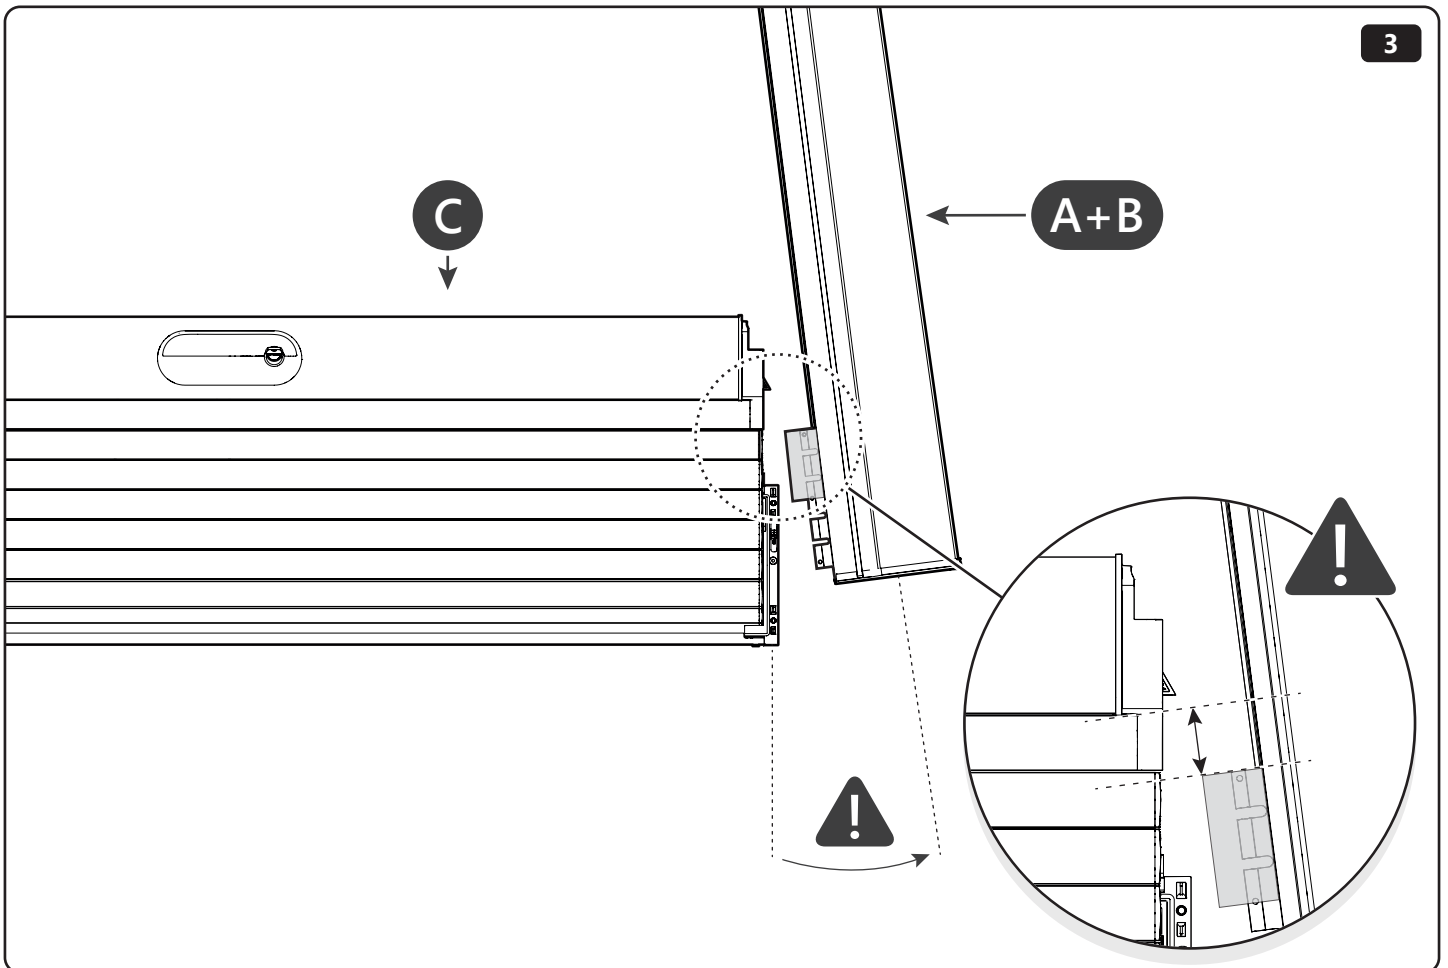


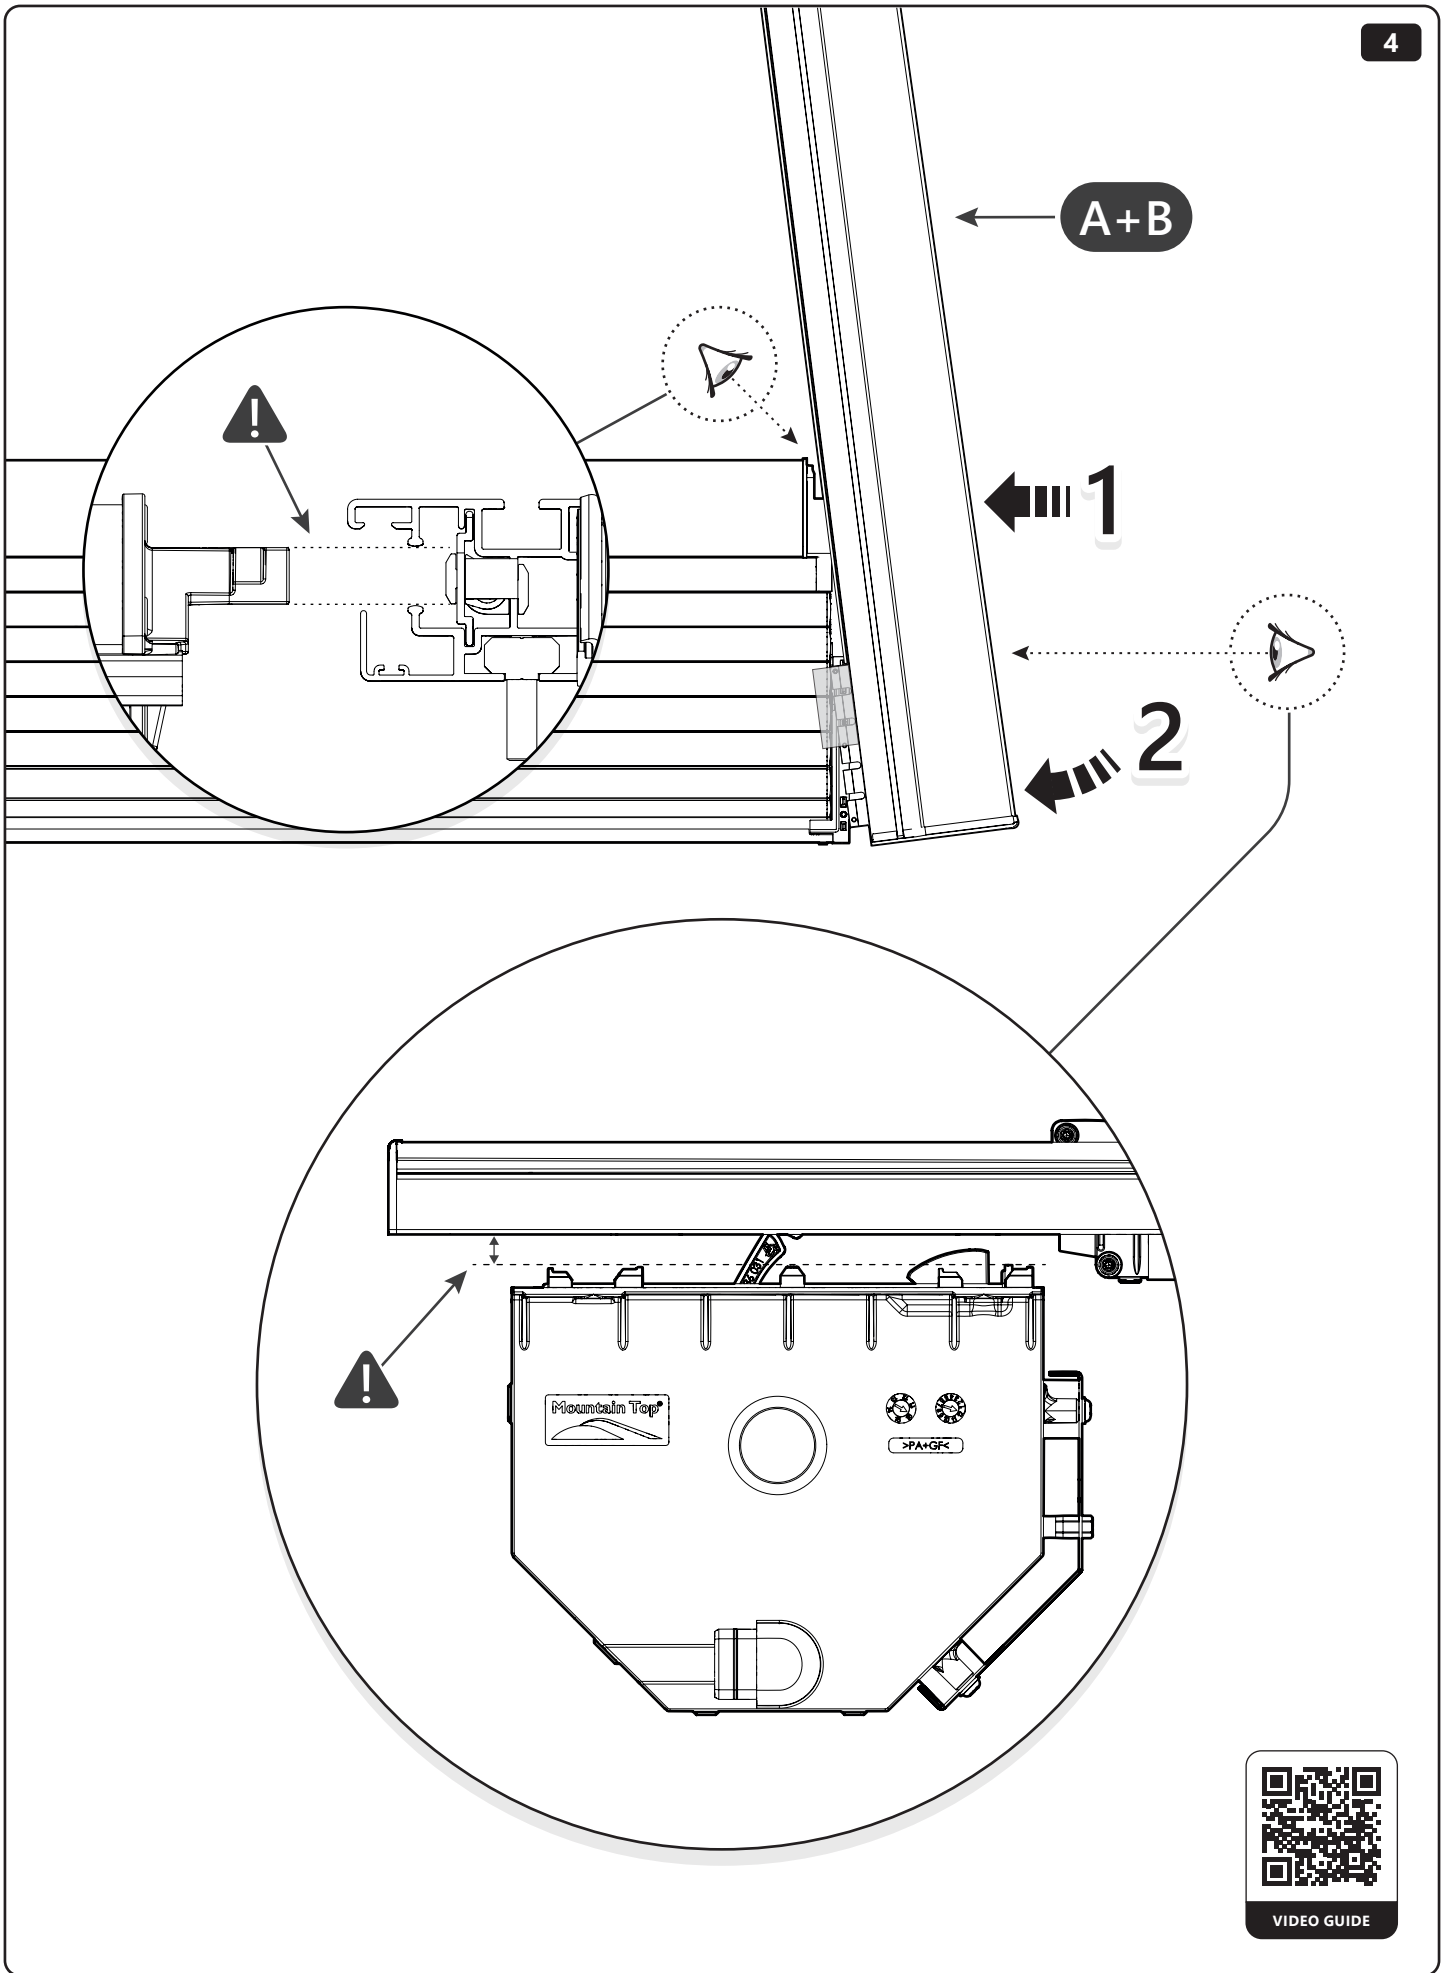

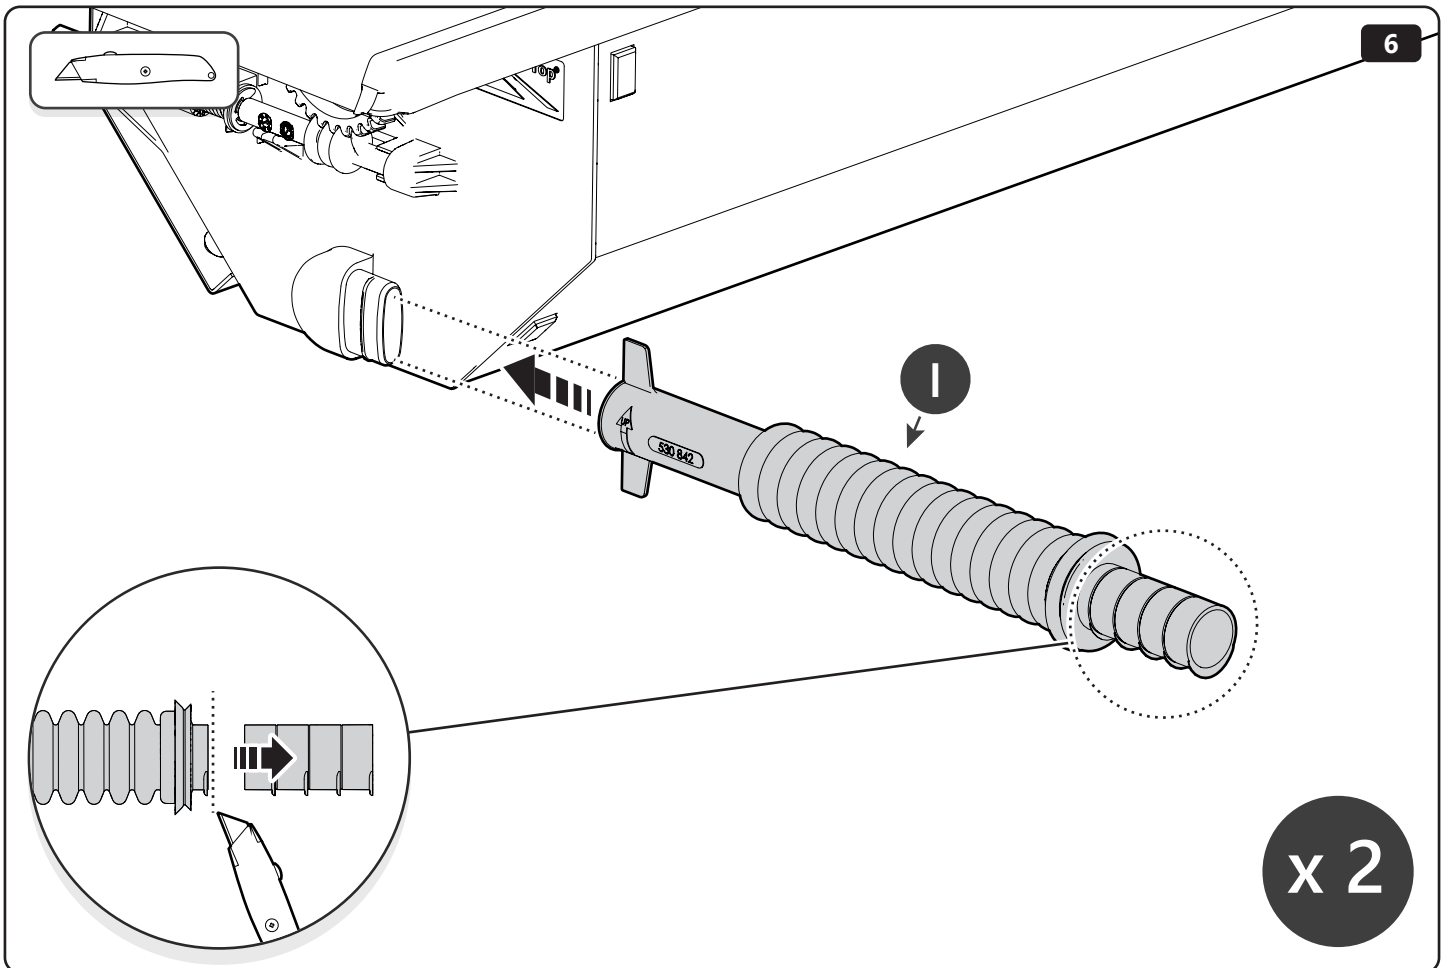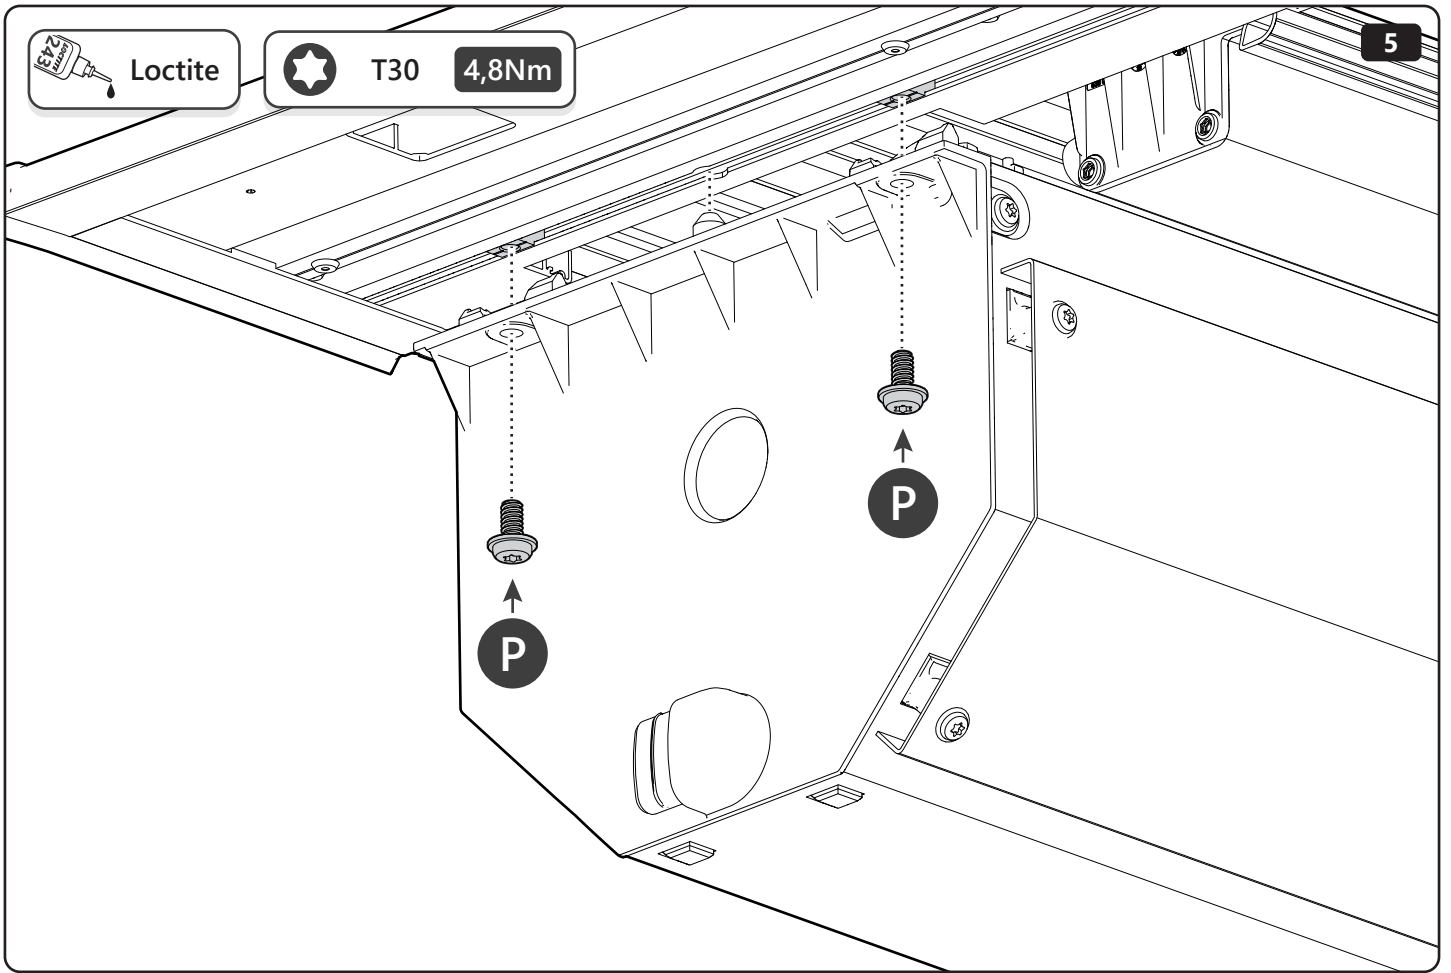





7

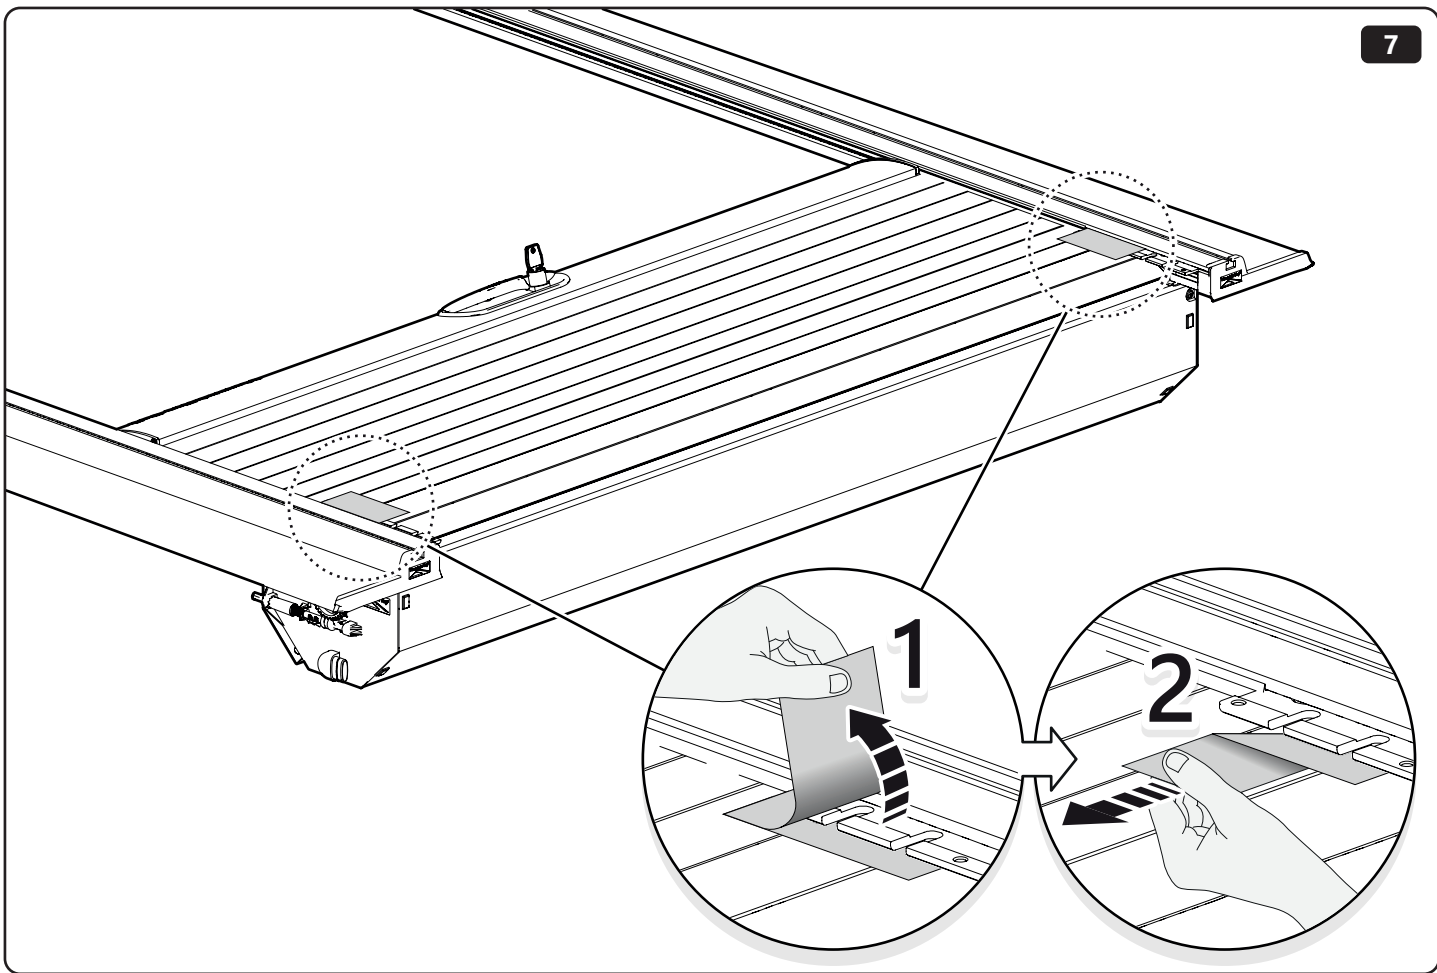

8

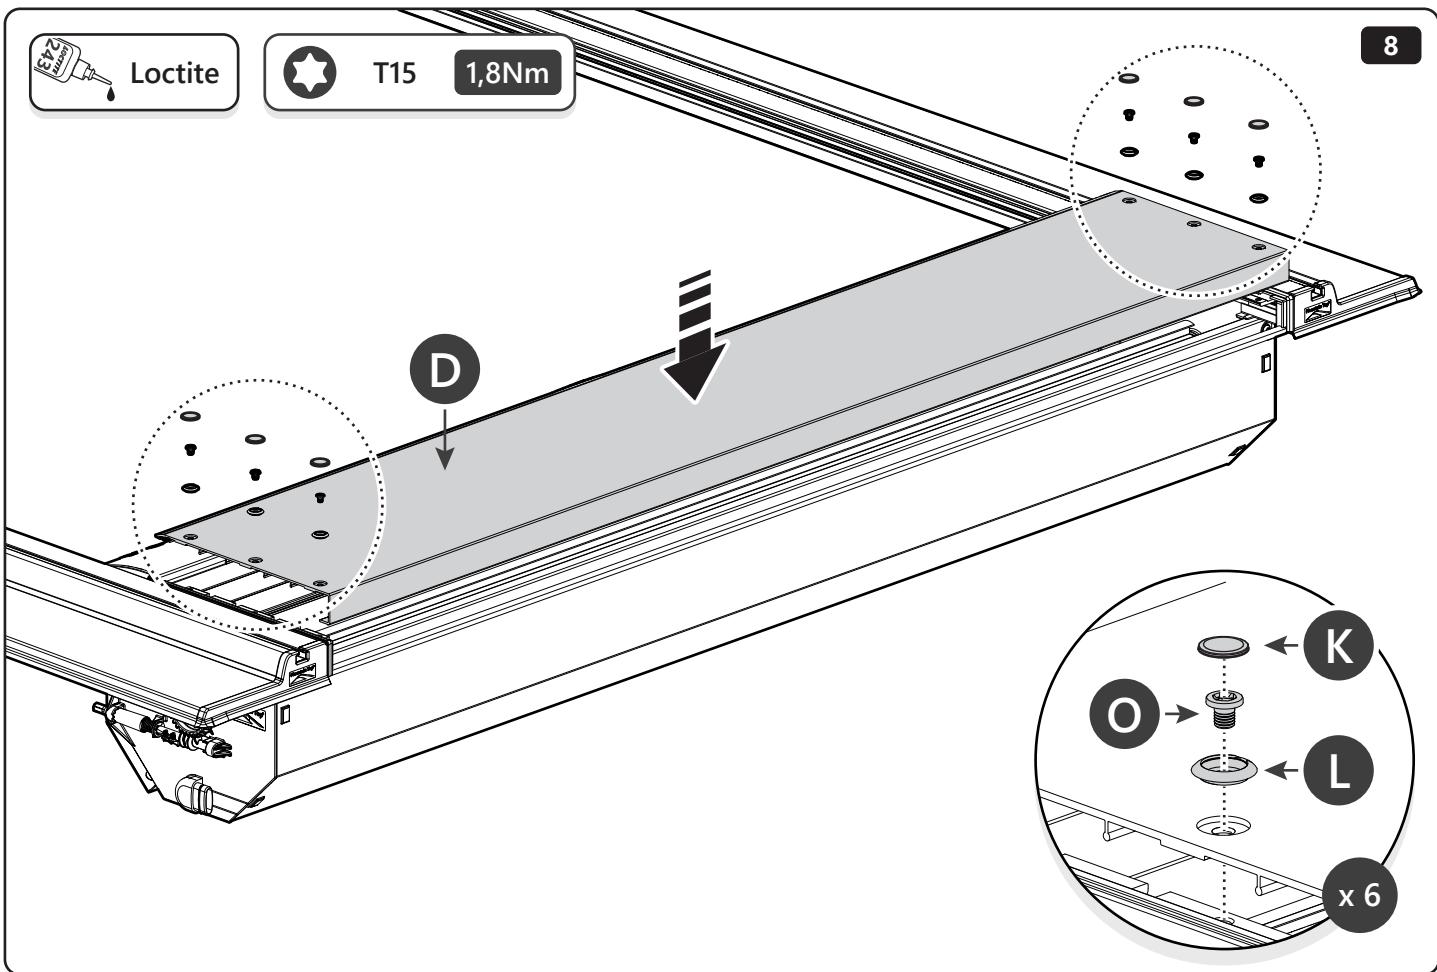


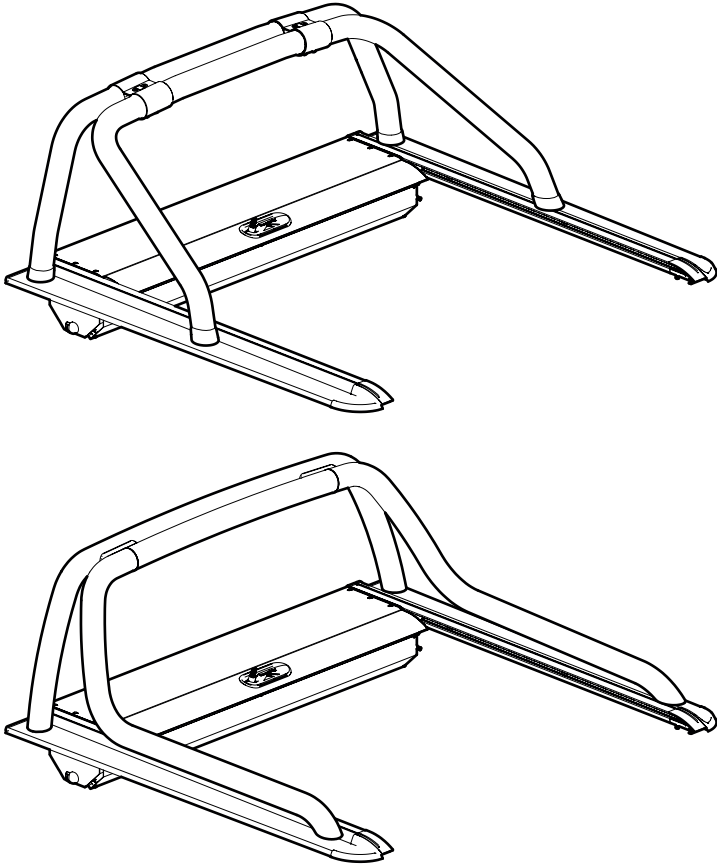


889 140





SB 0060



DOWNLOAD PDF



VIEW WEB PAGE

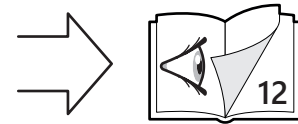
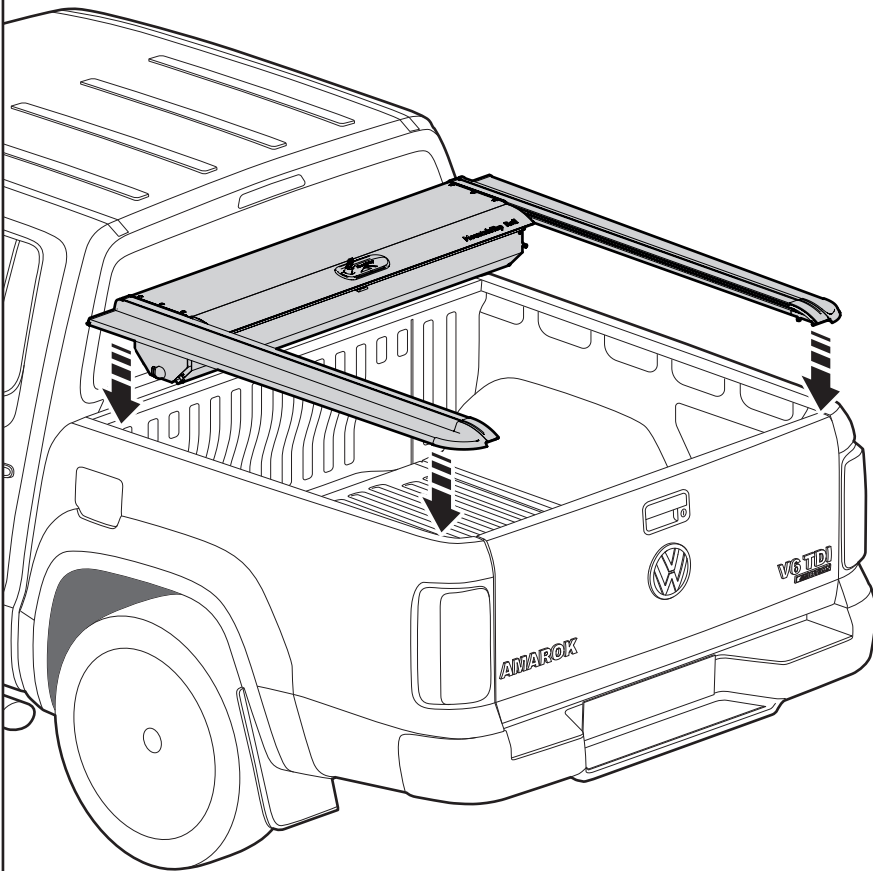






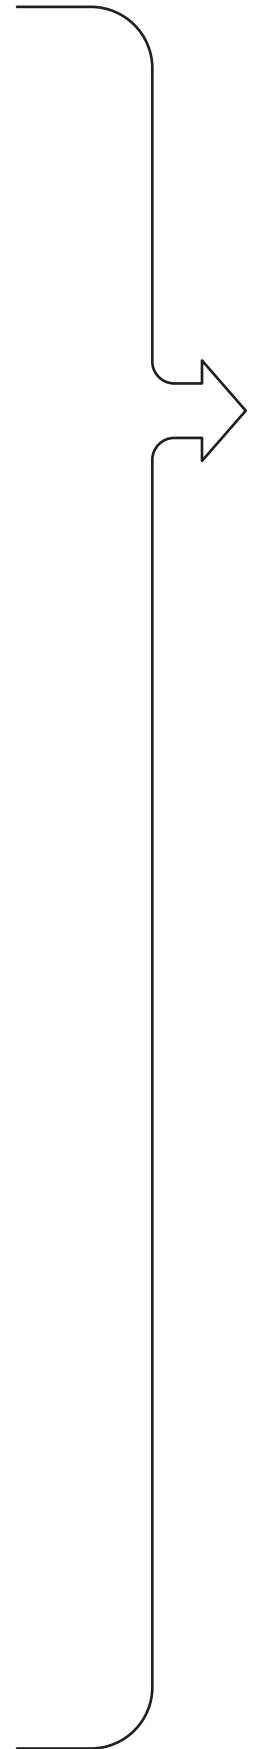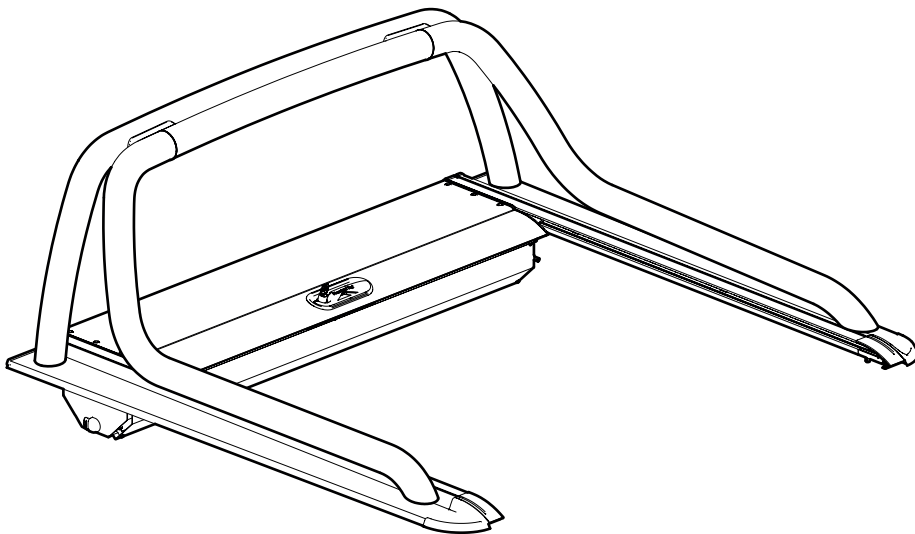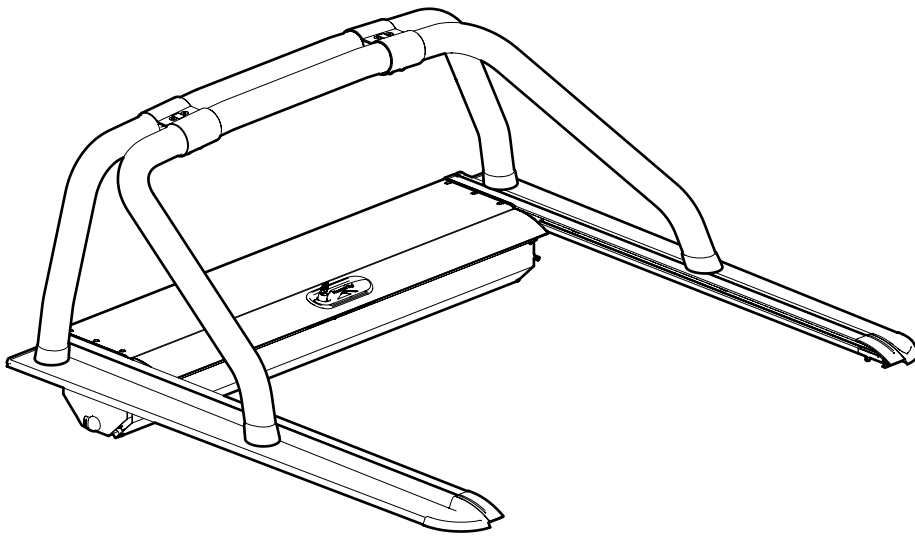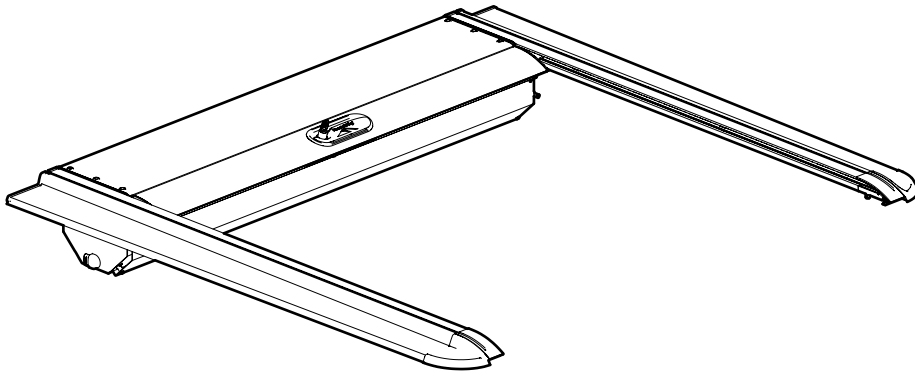

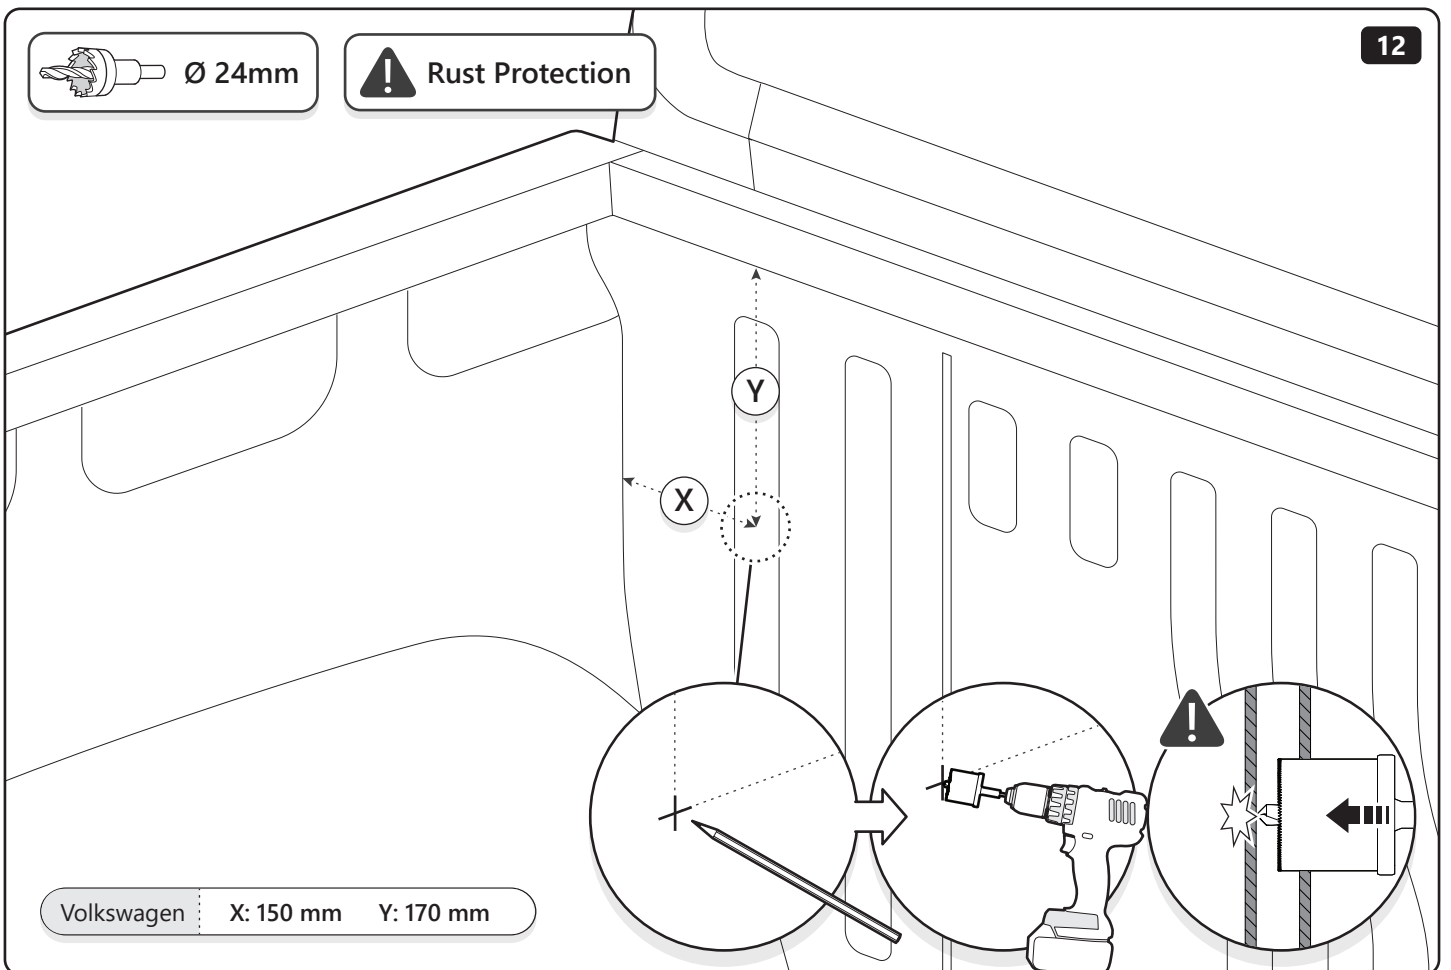
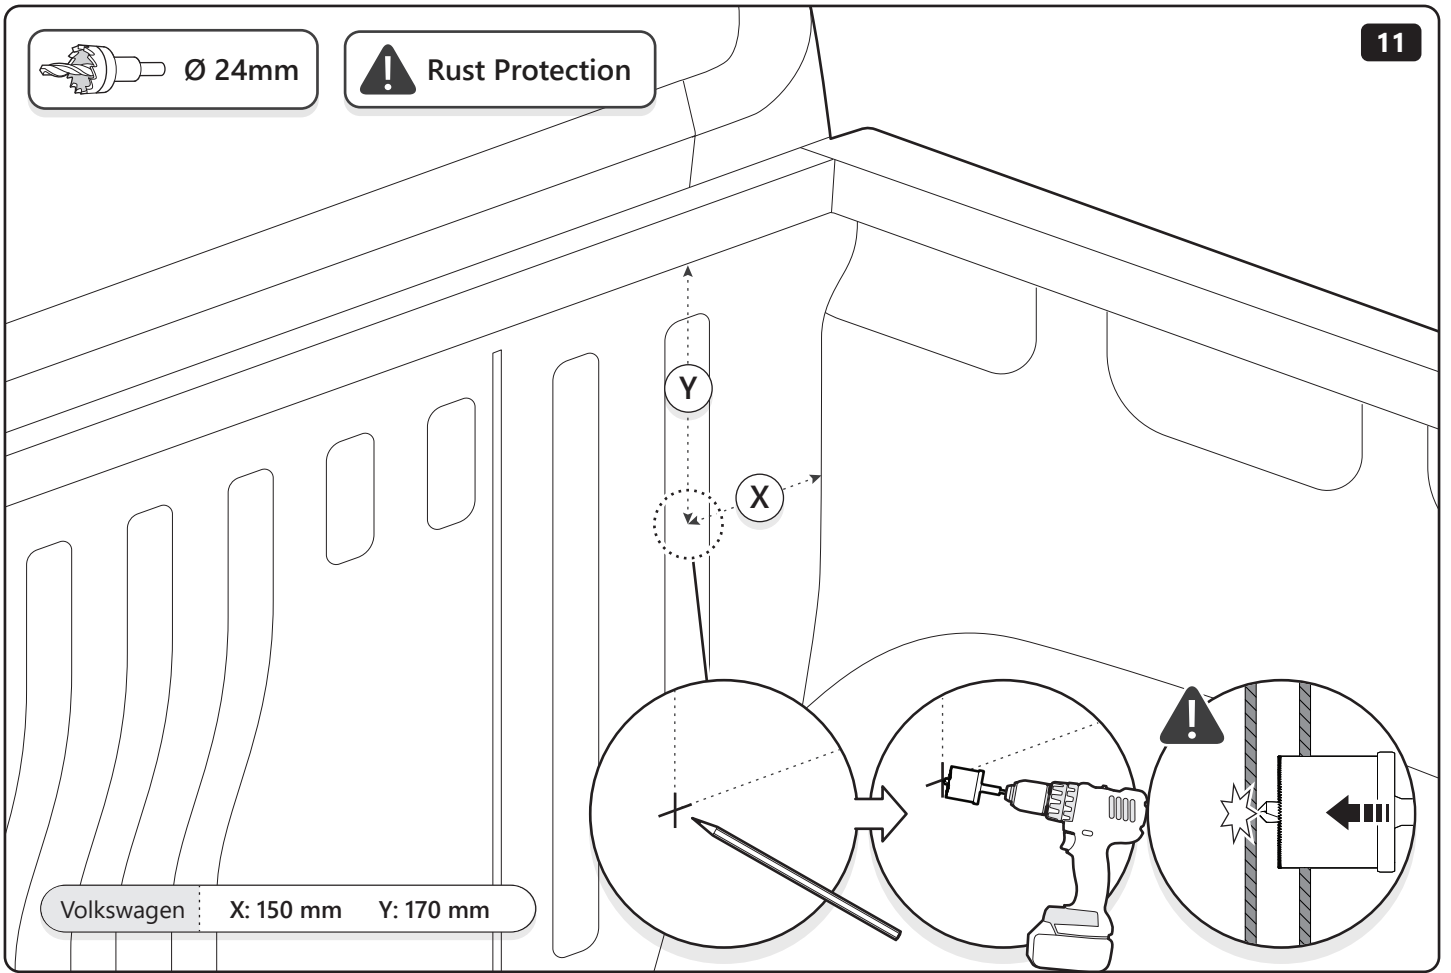


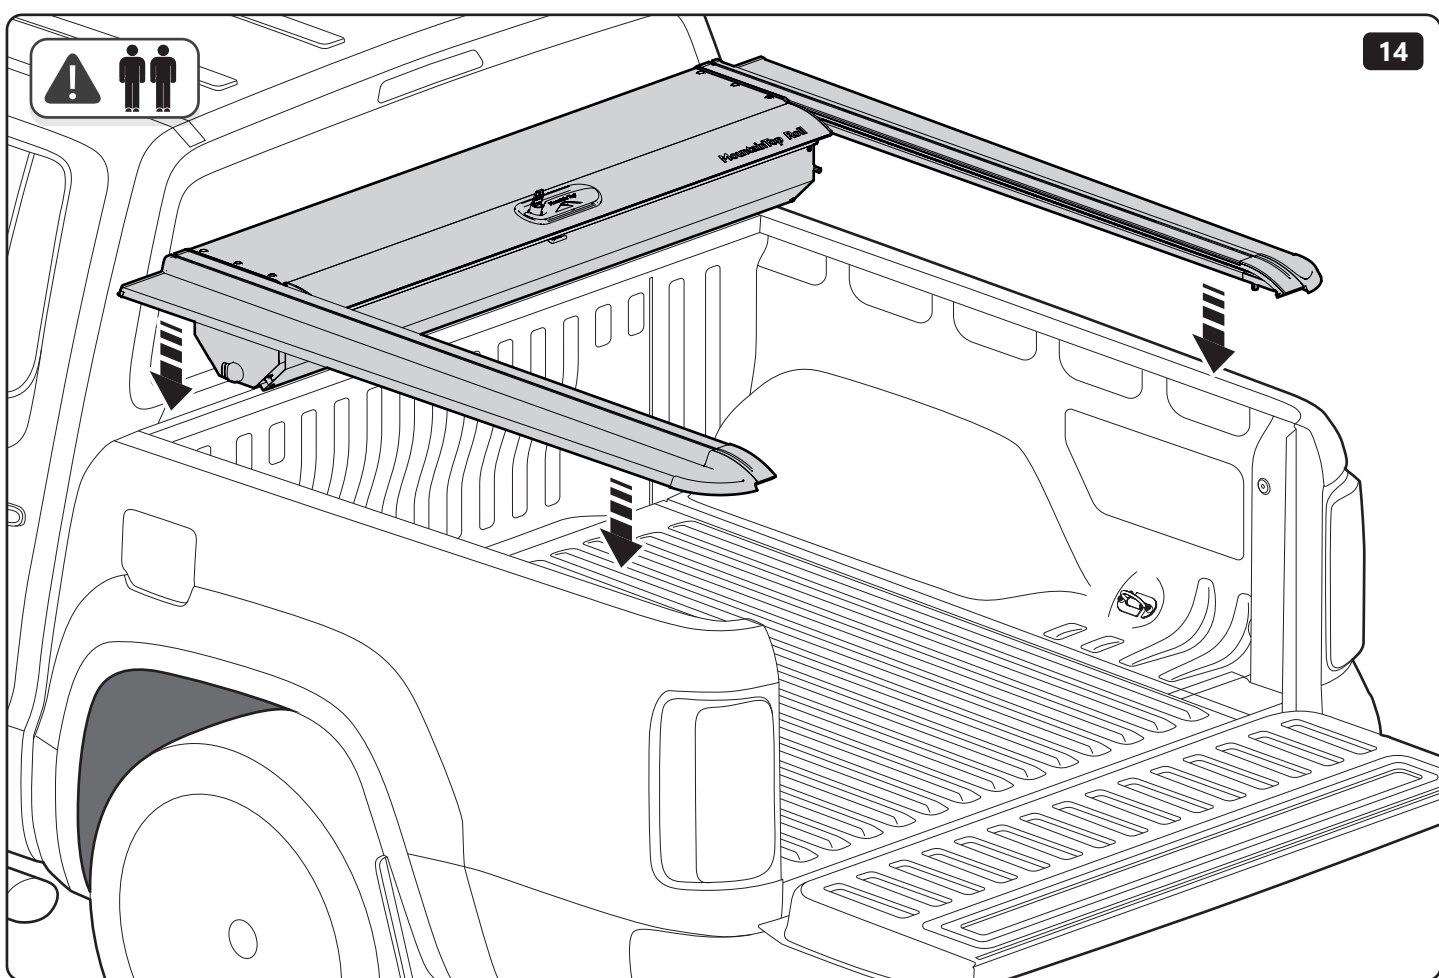
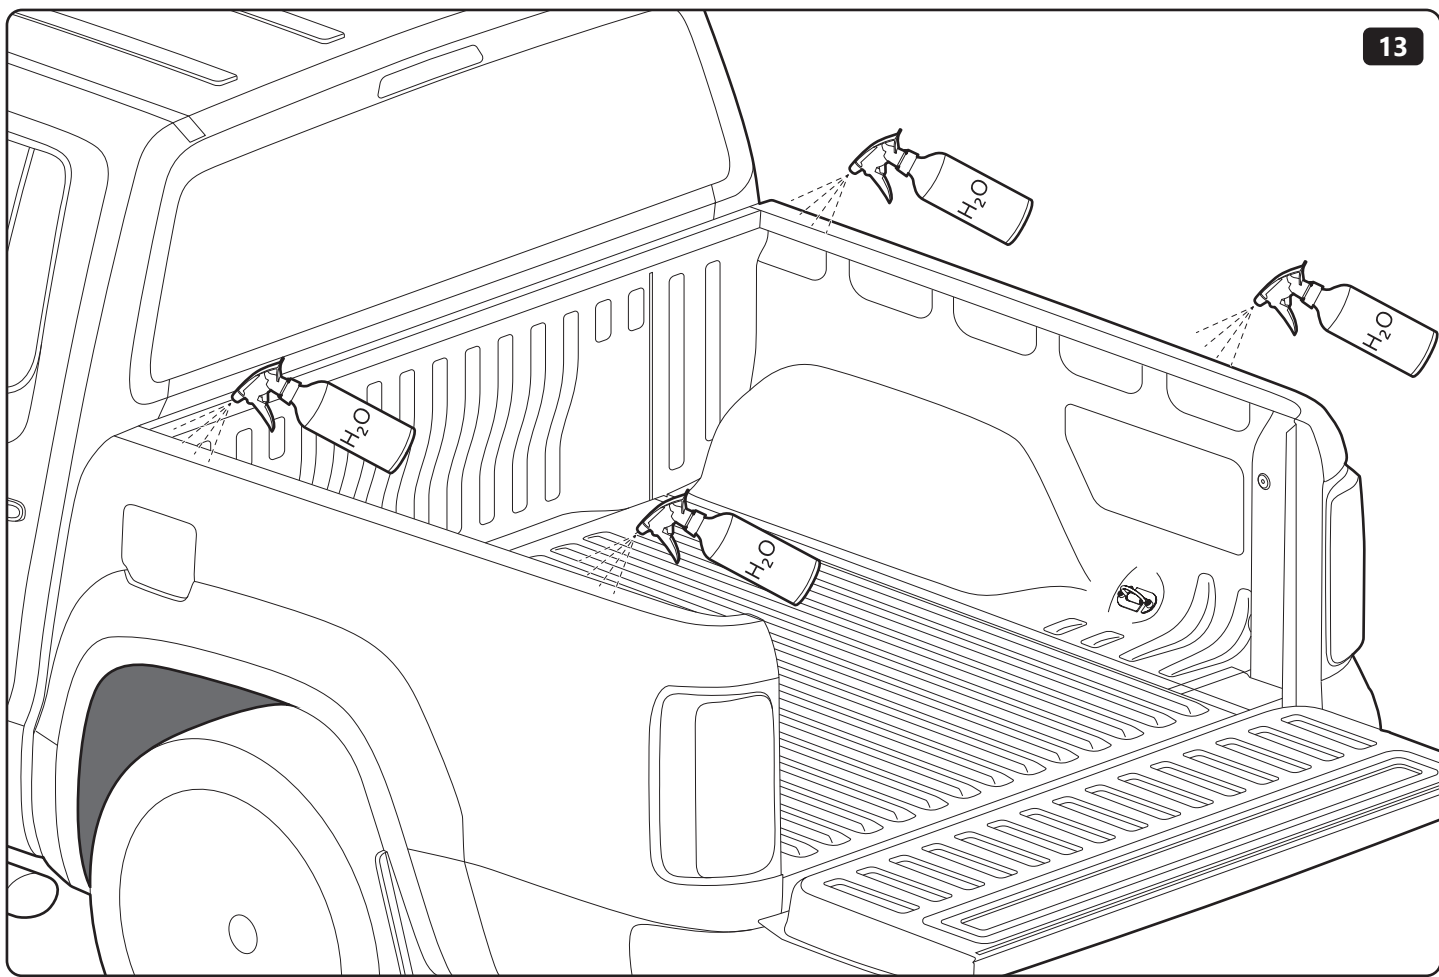


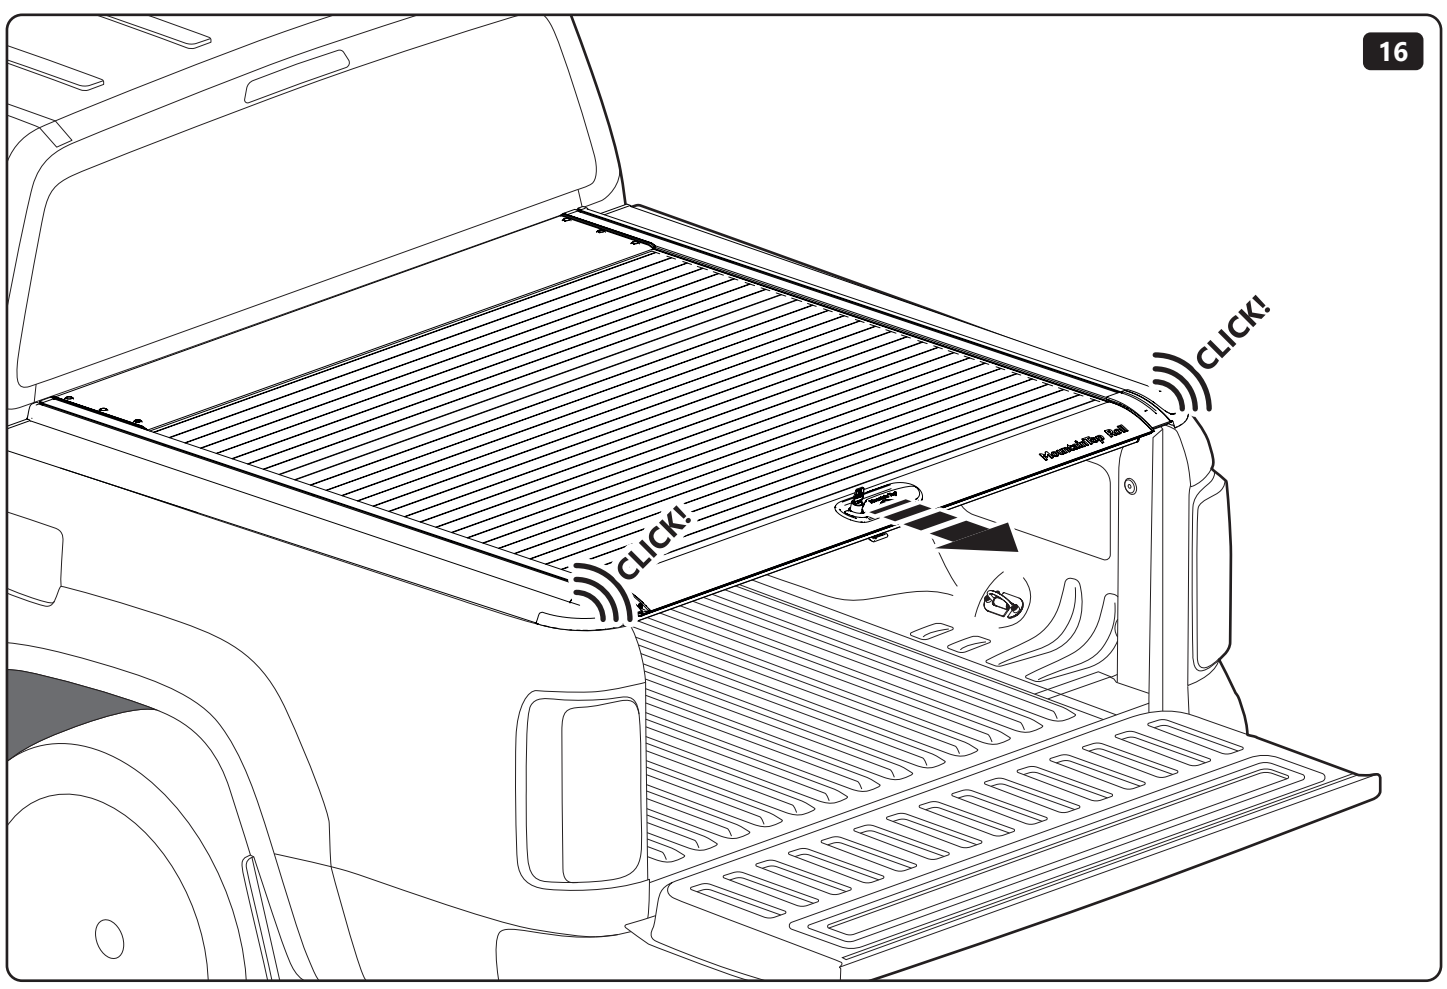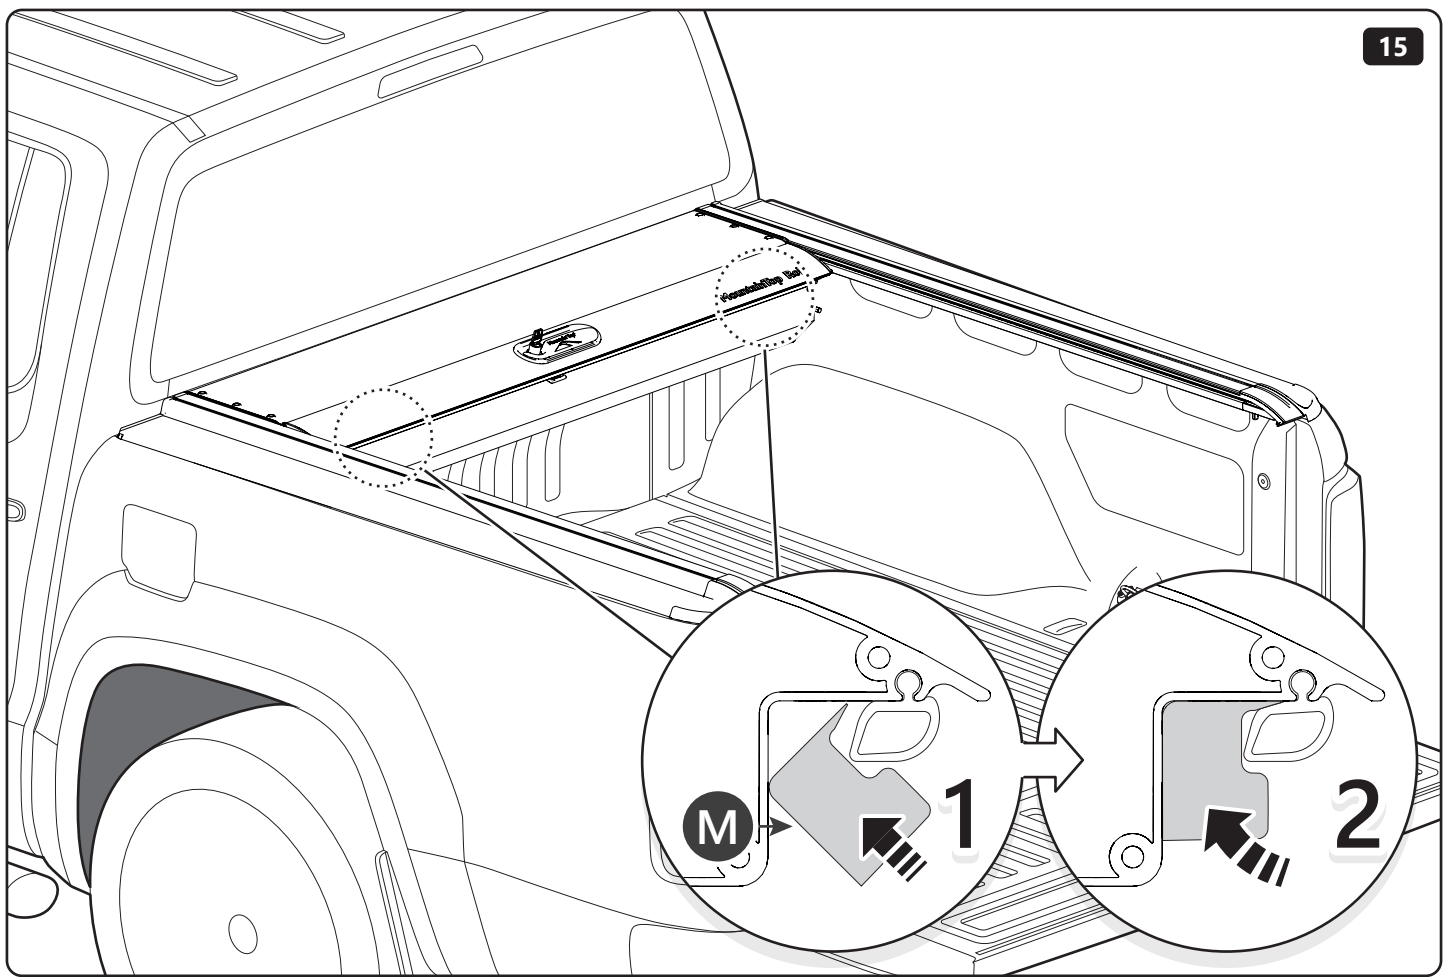


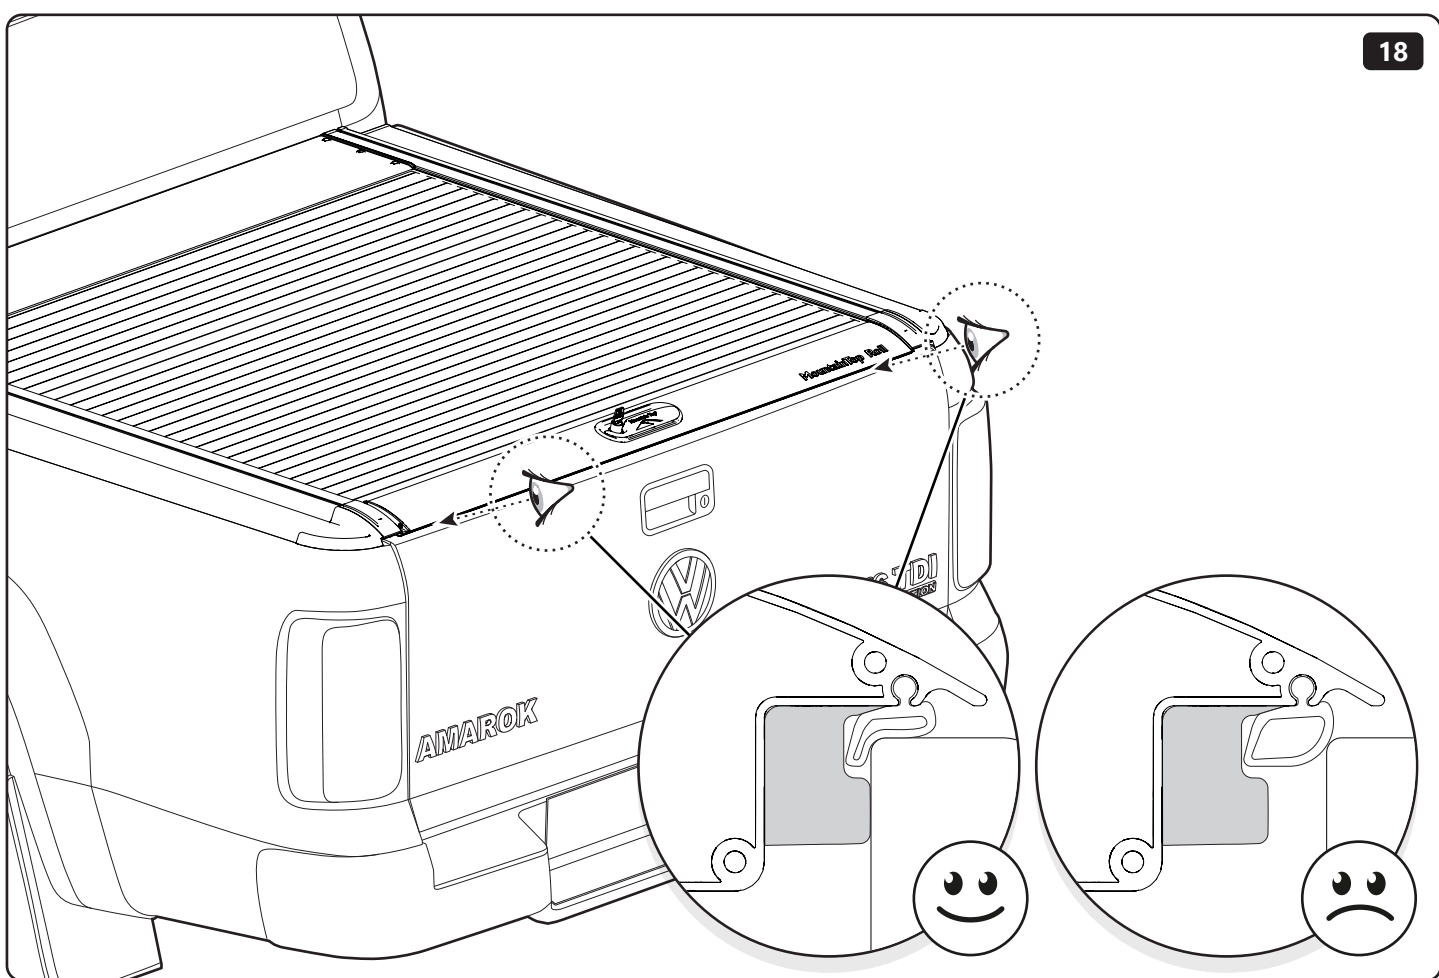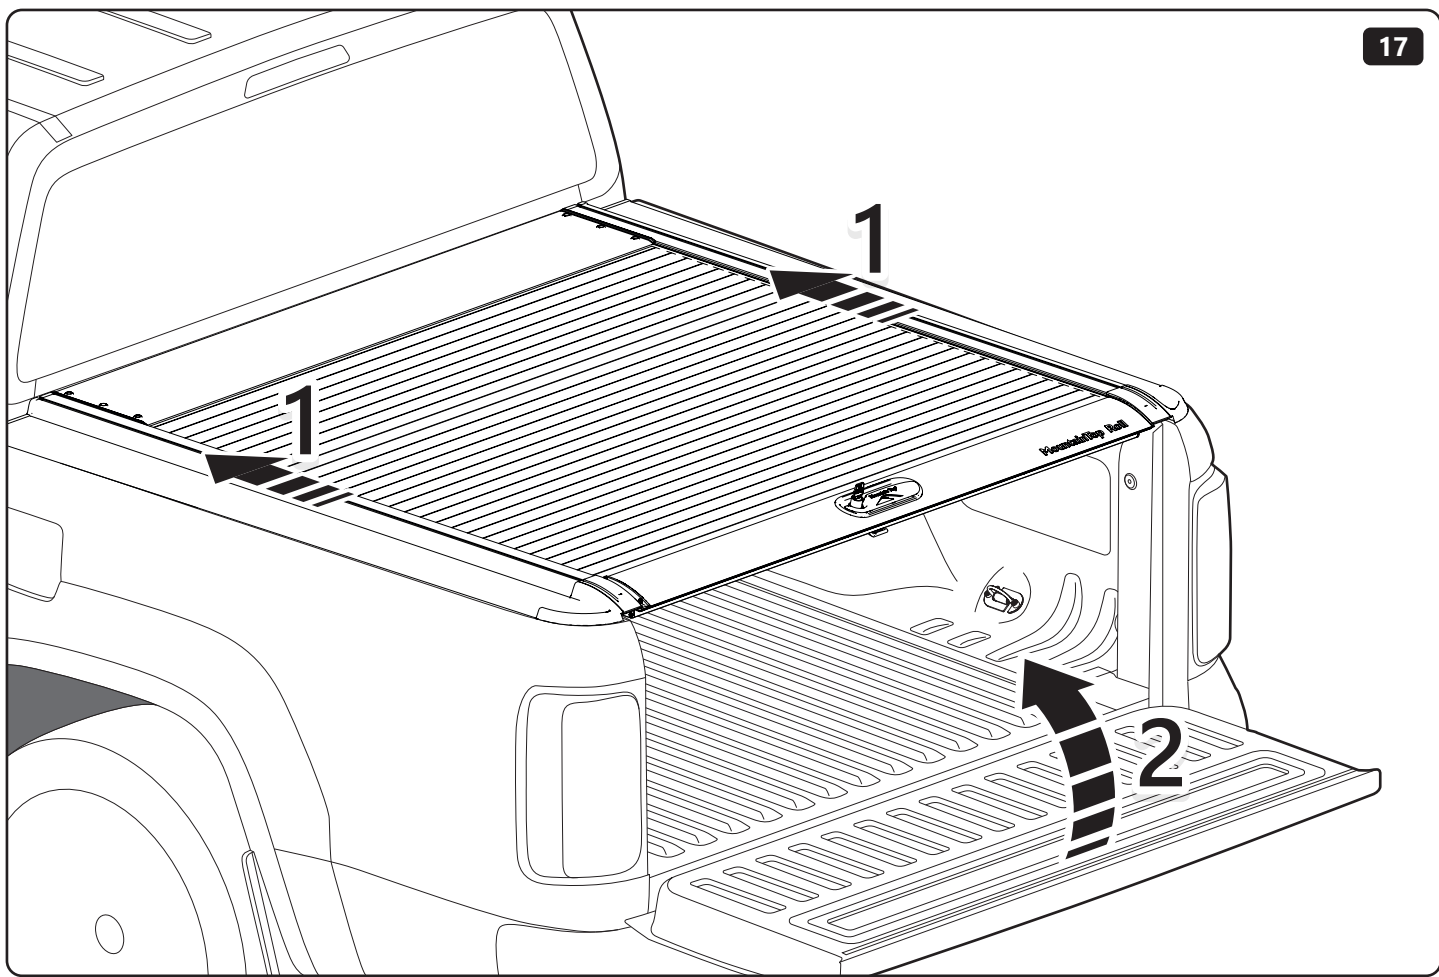






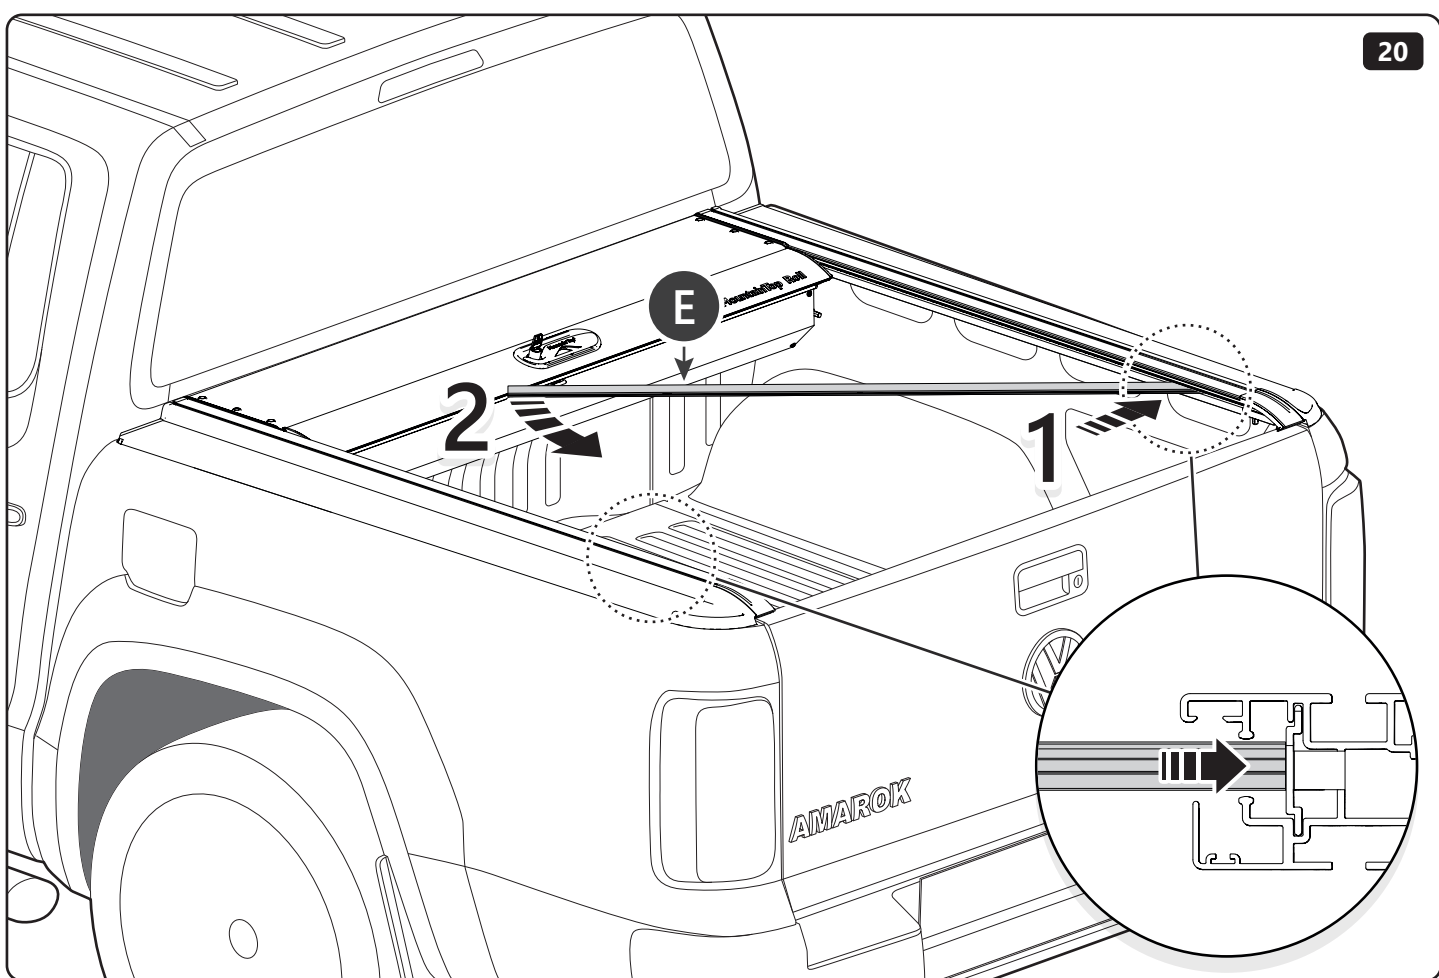
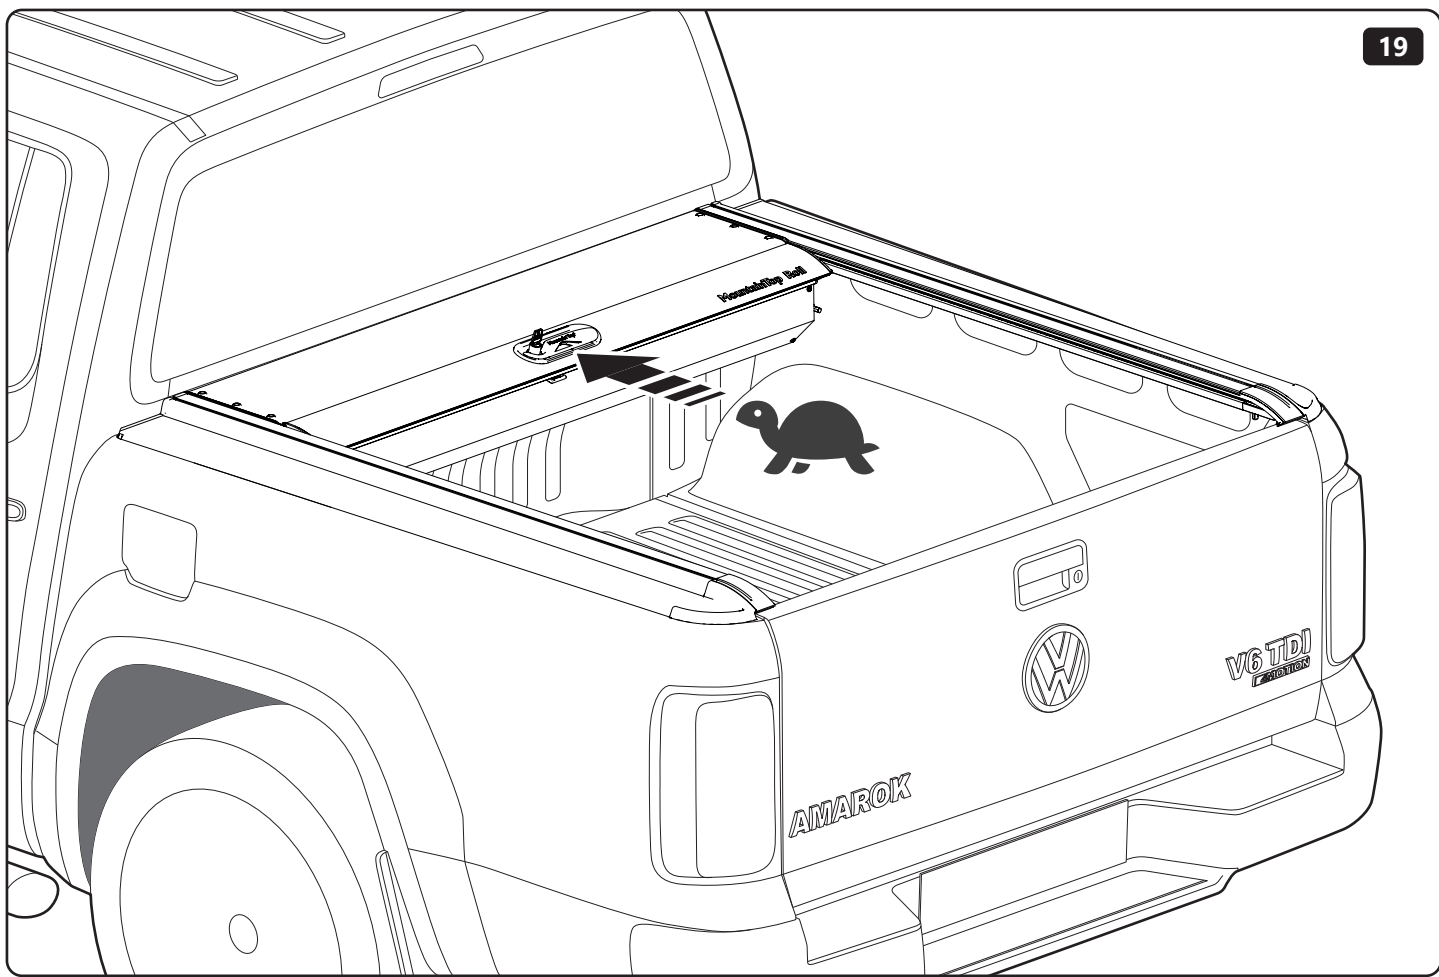


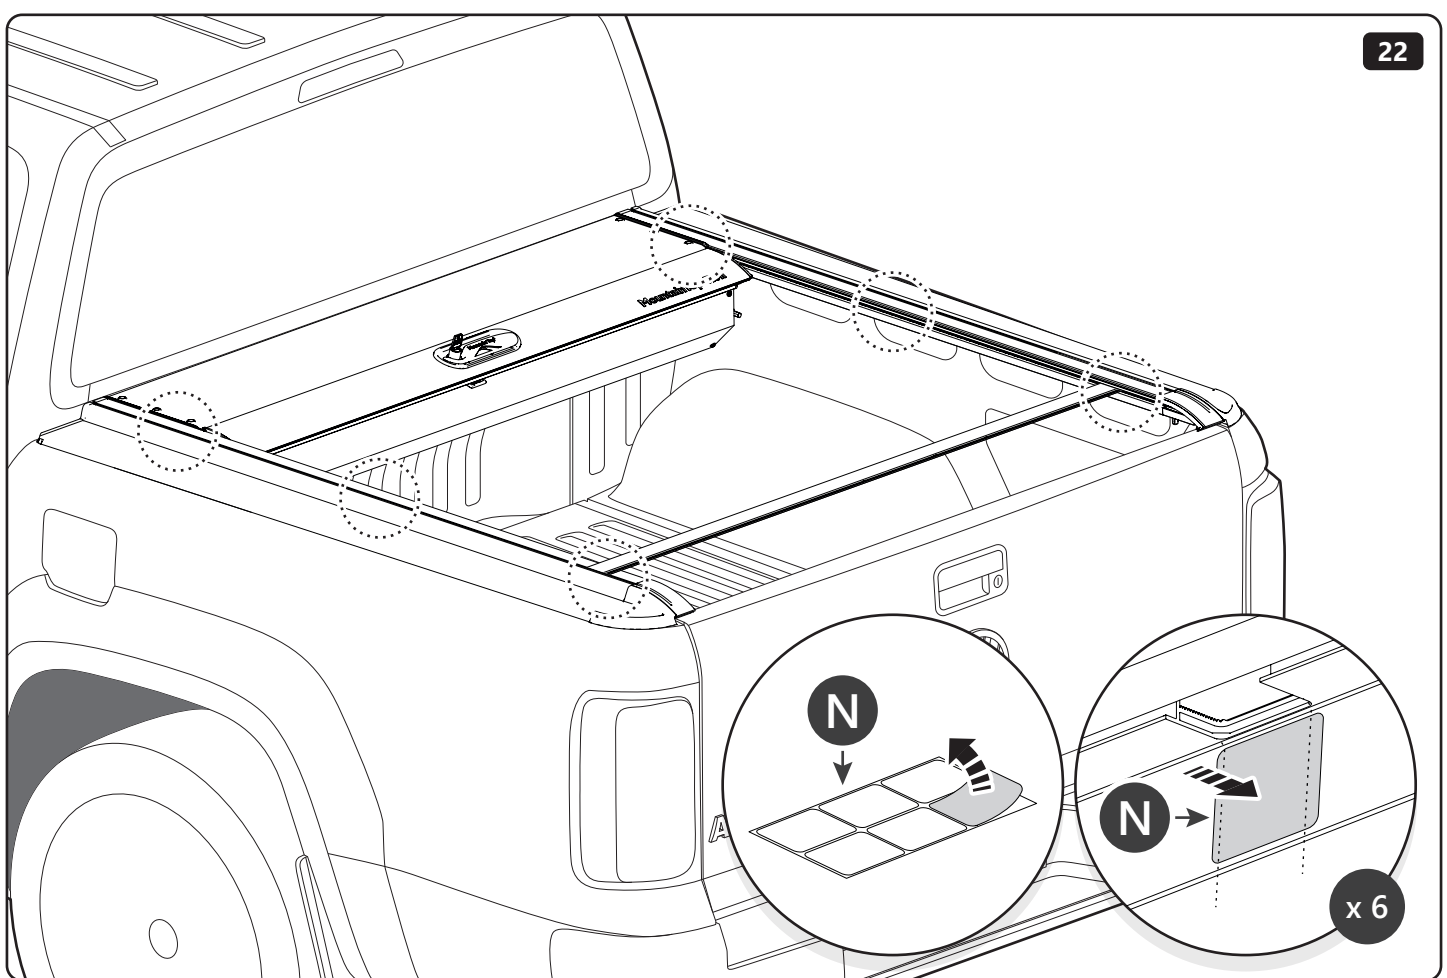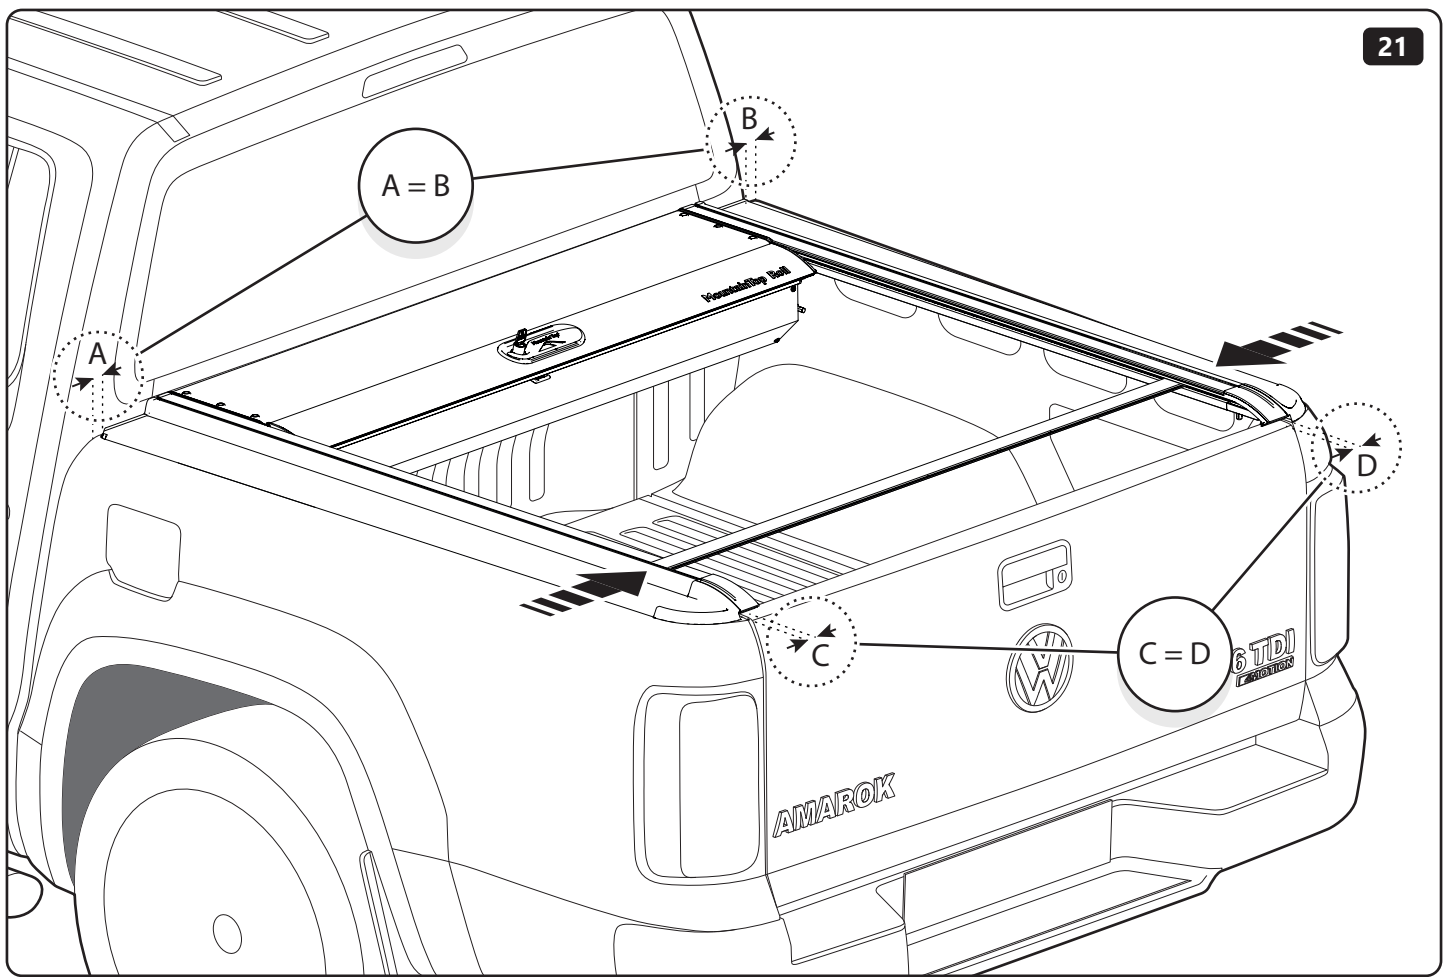

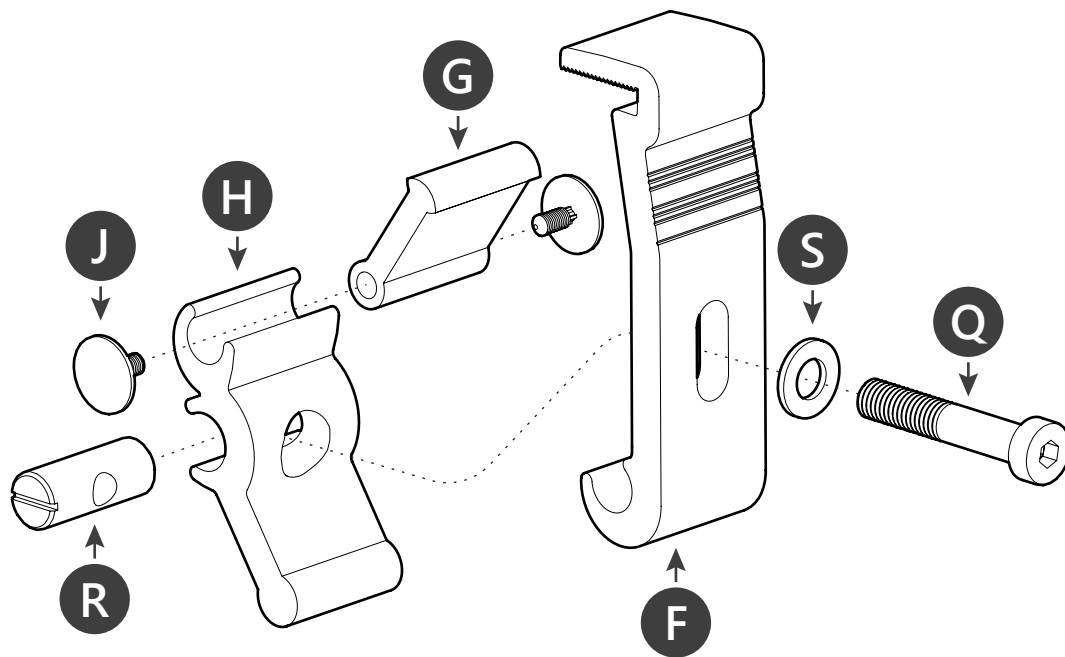


x 6

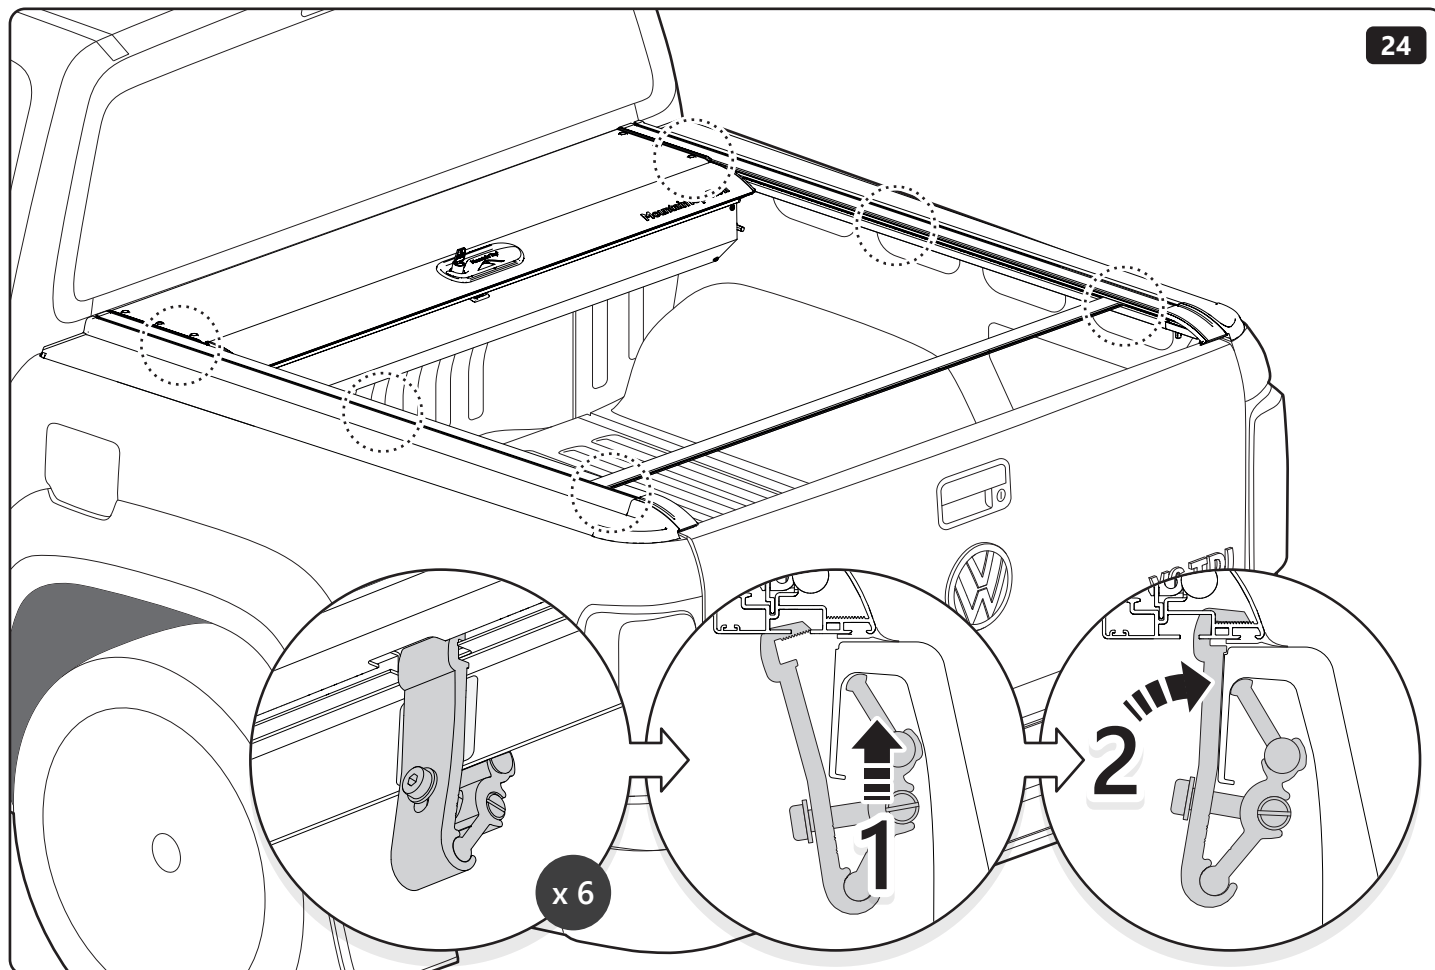


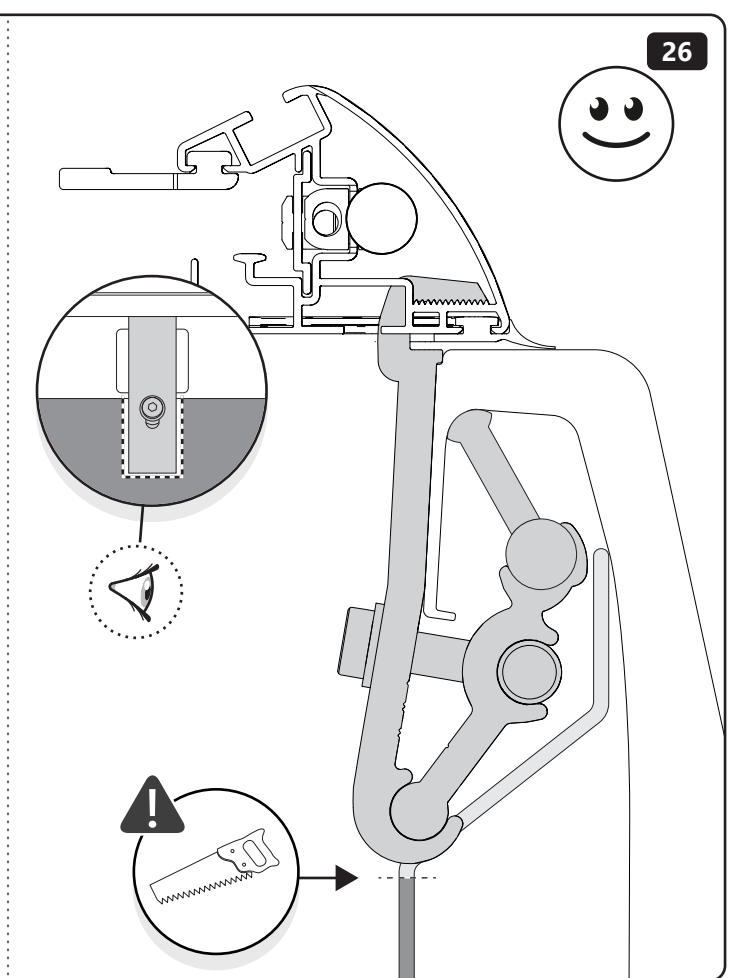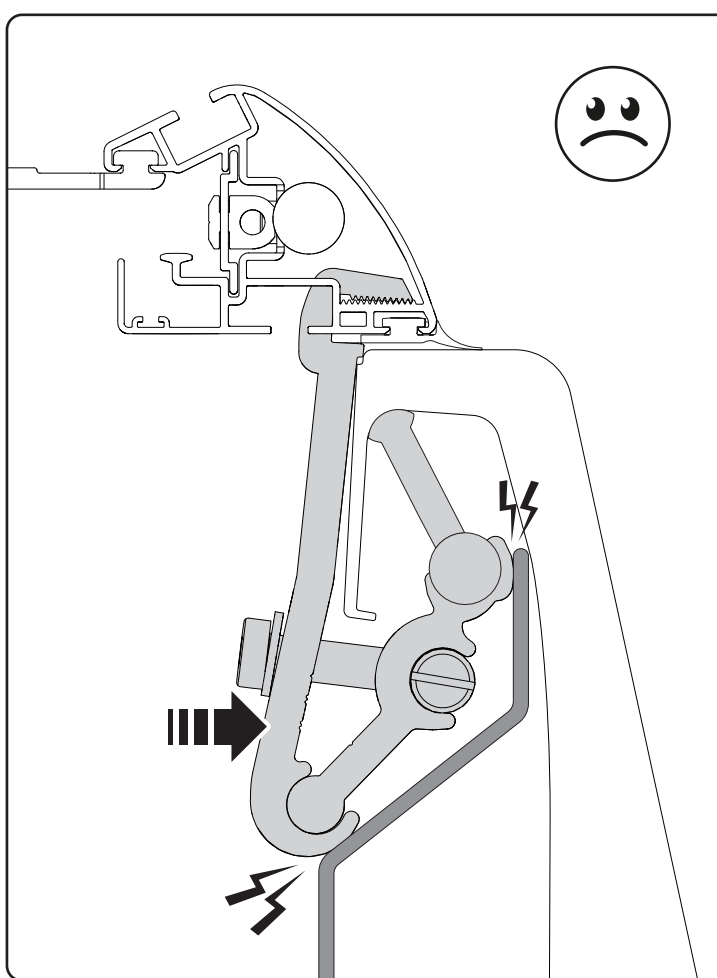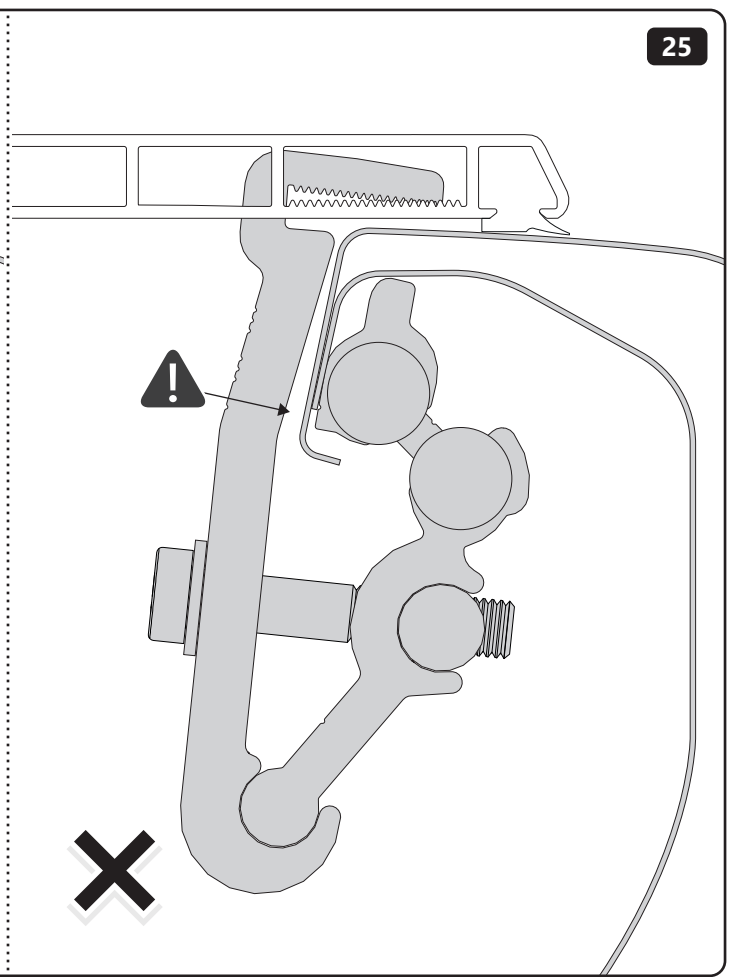
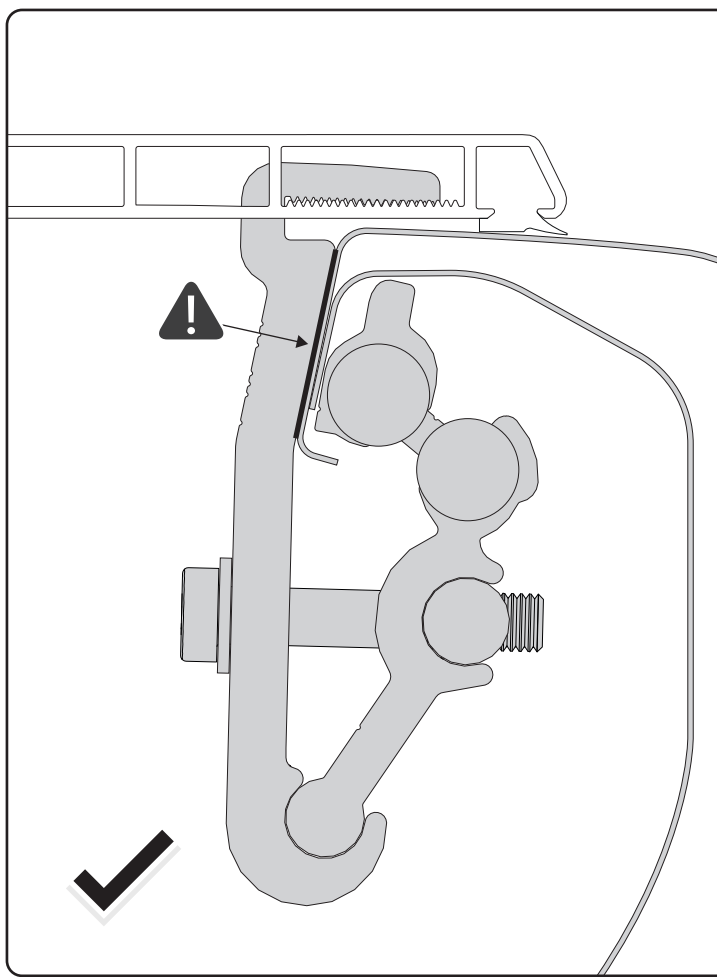




5mm 8Nm


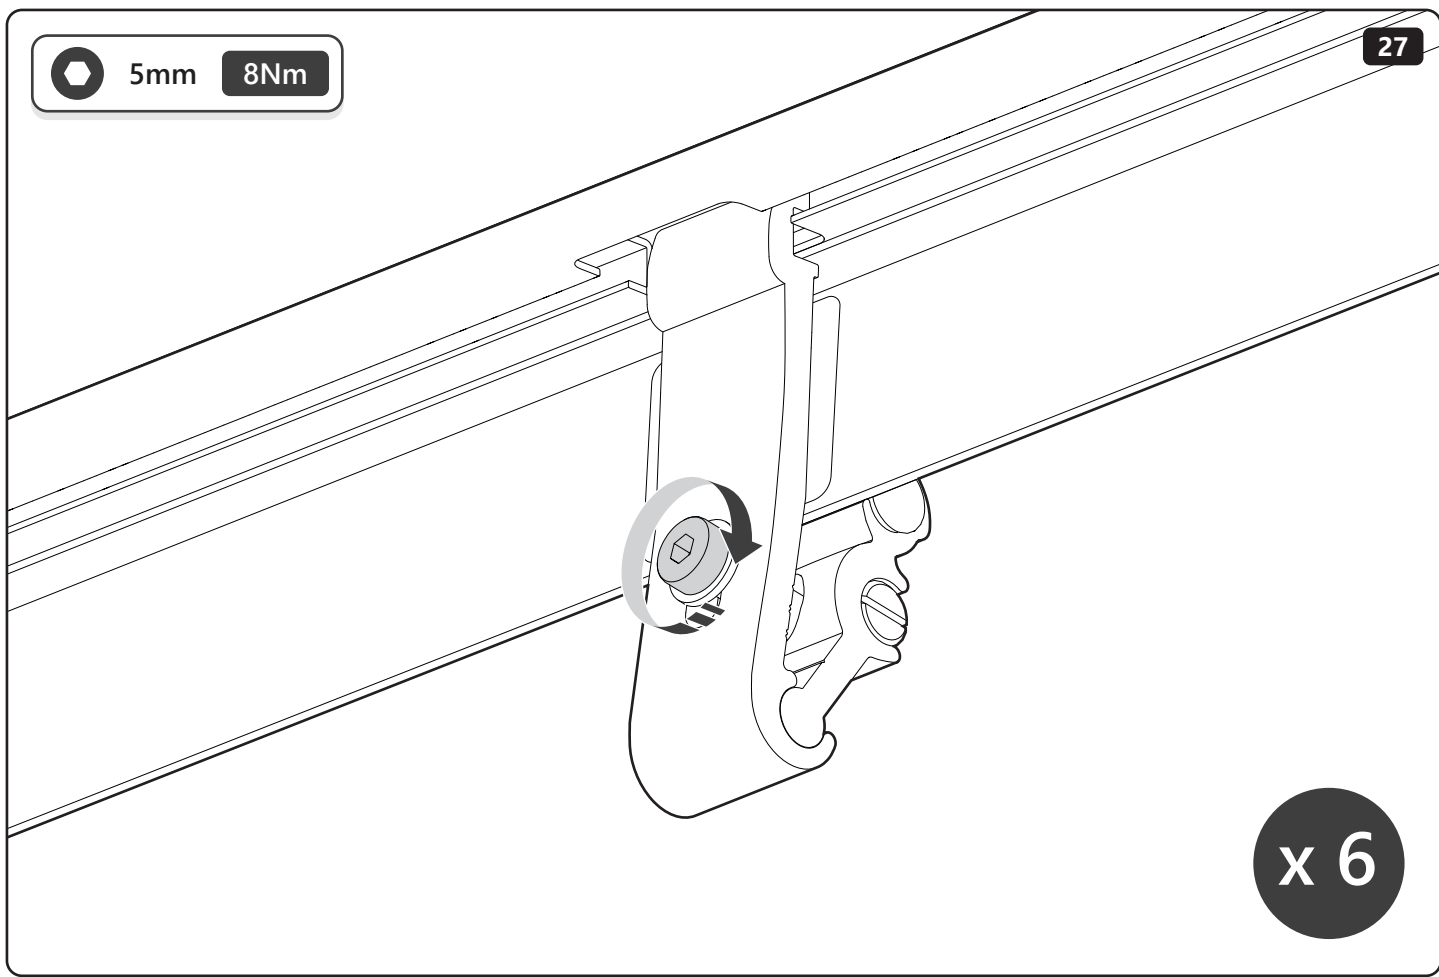


x 6

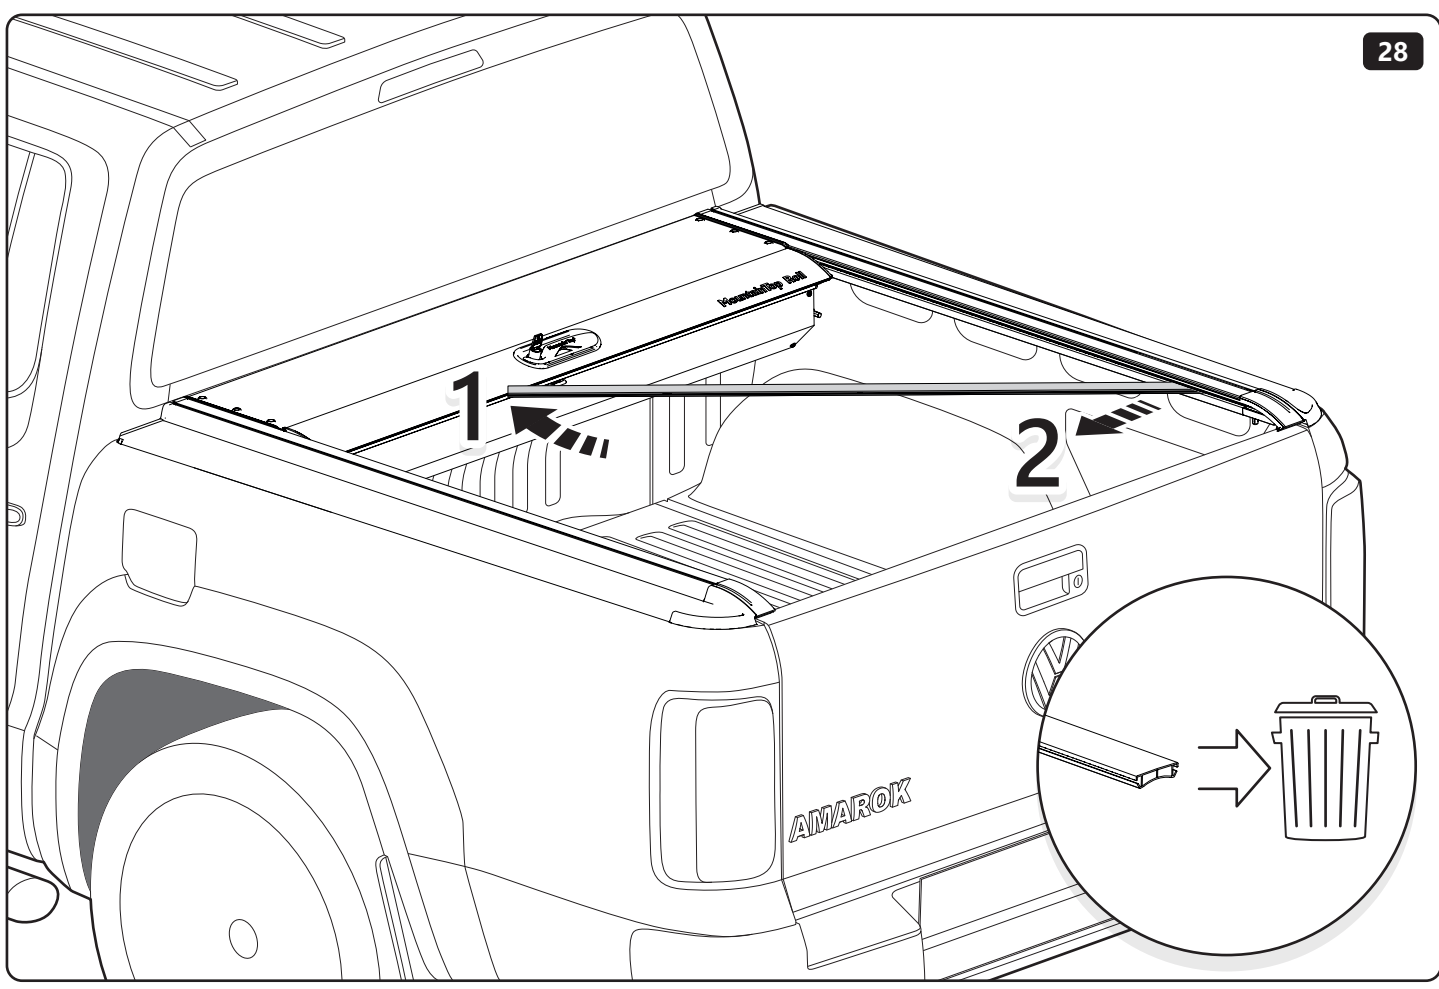

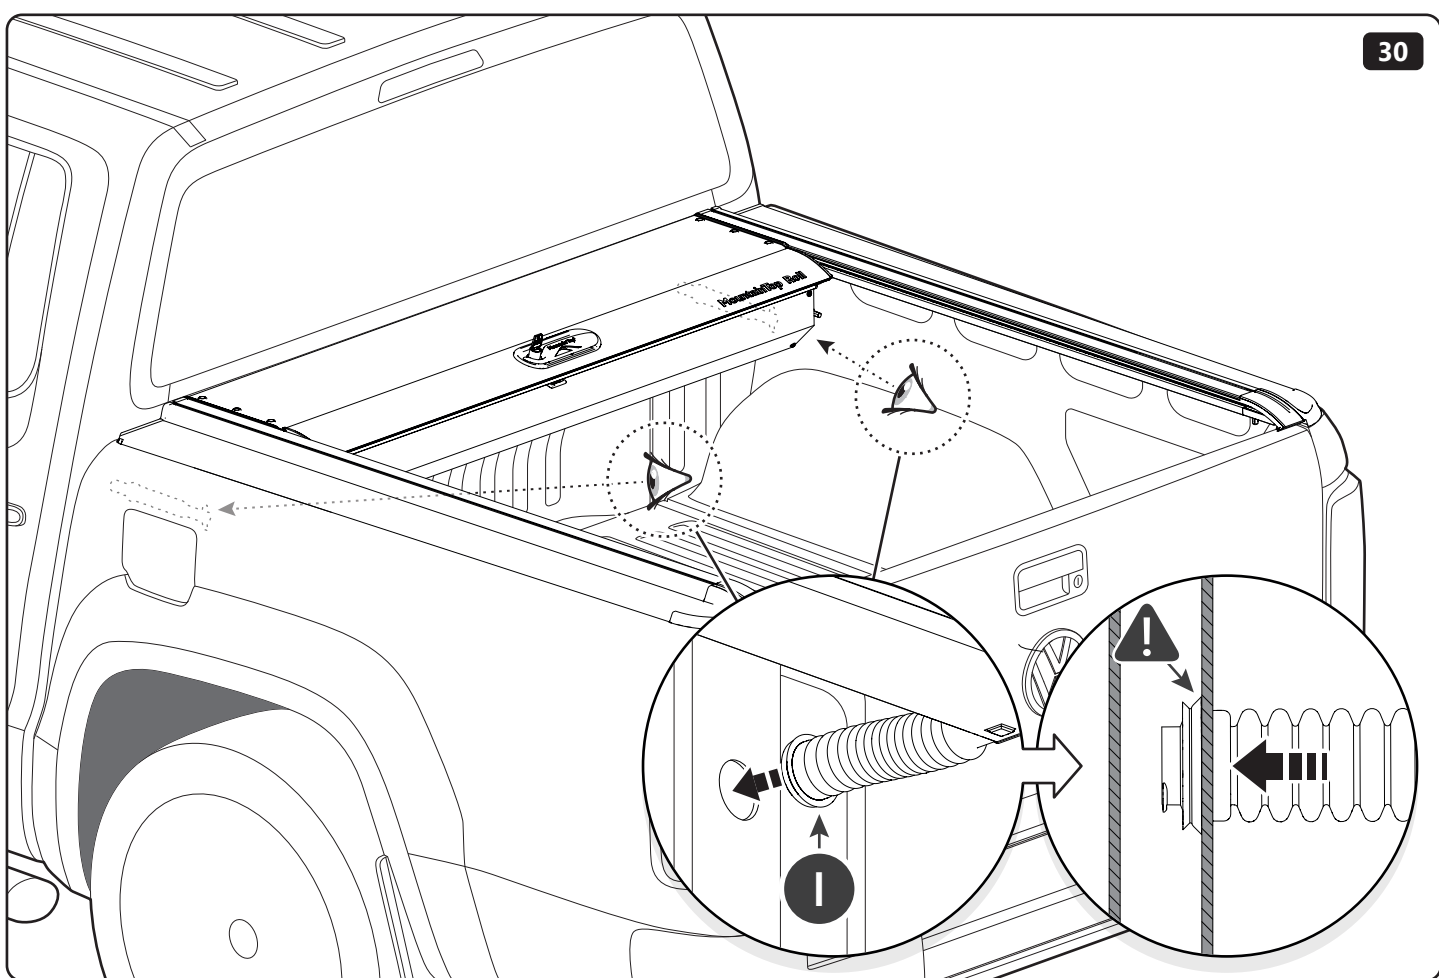
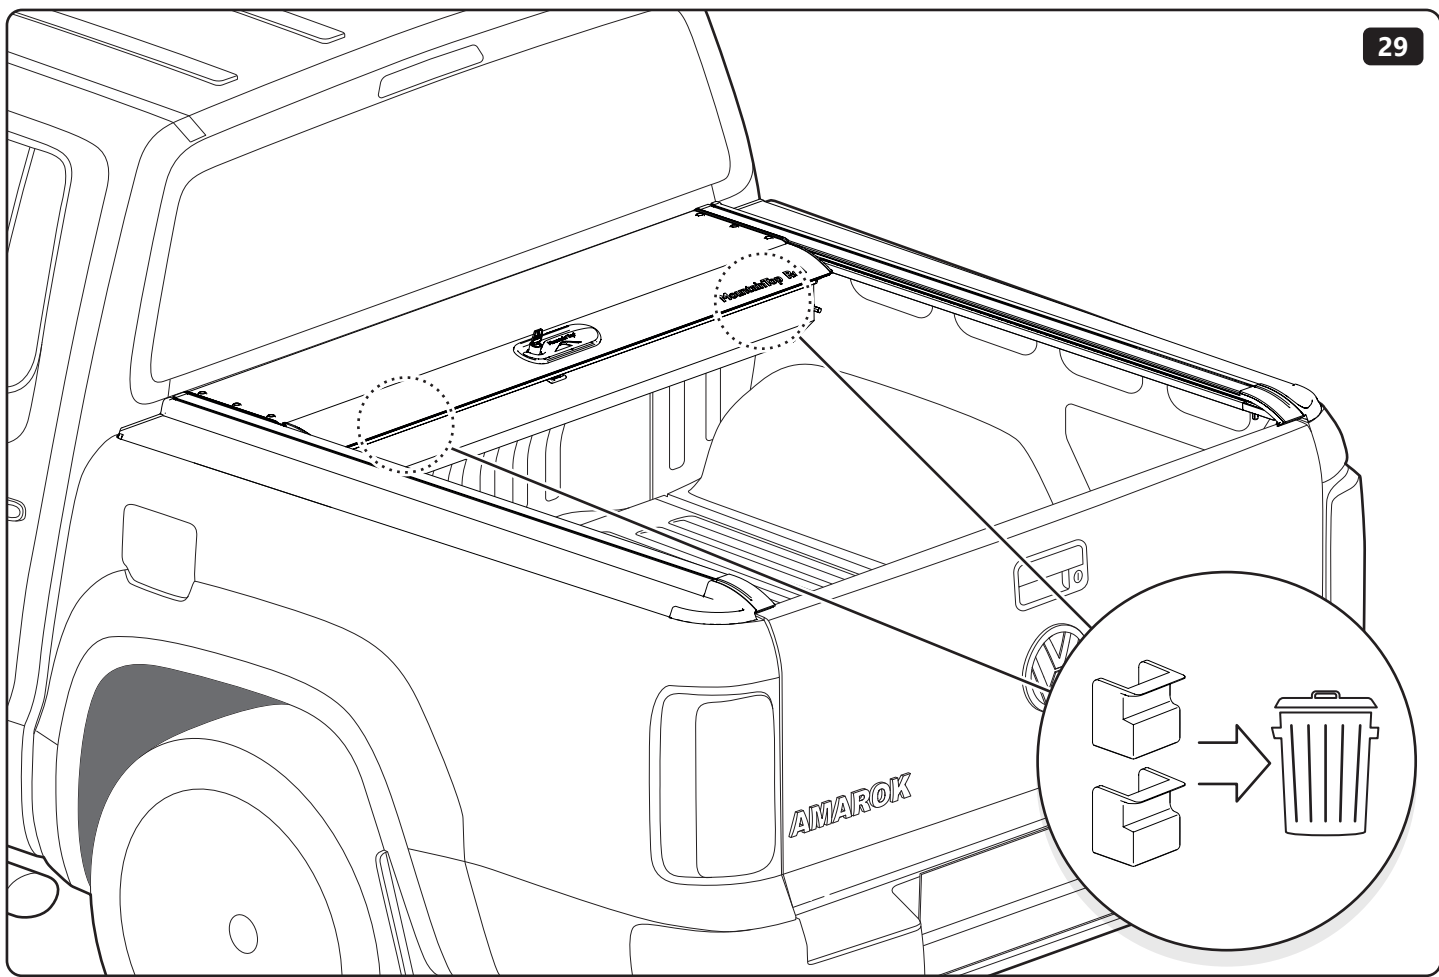


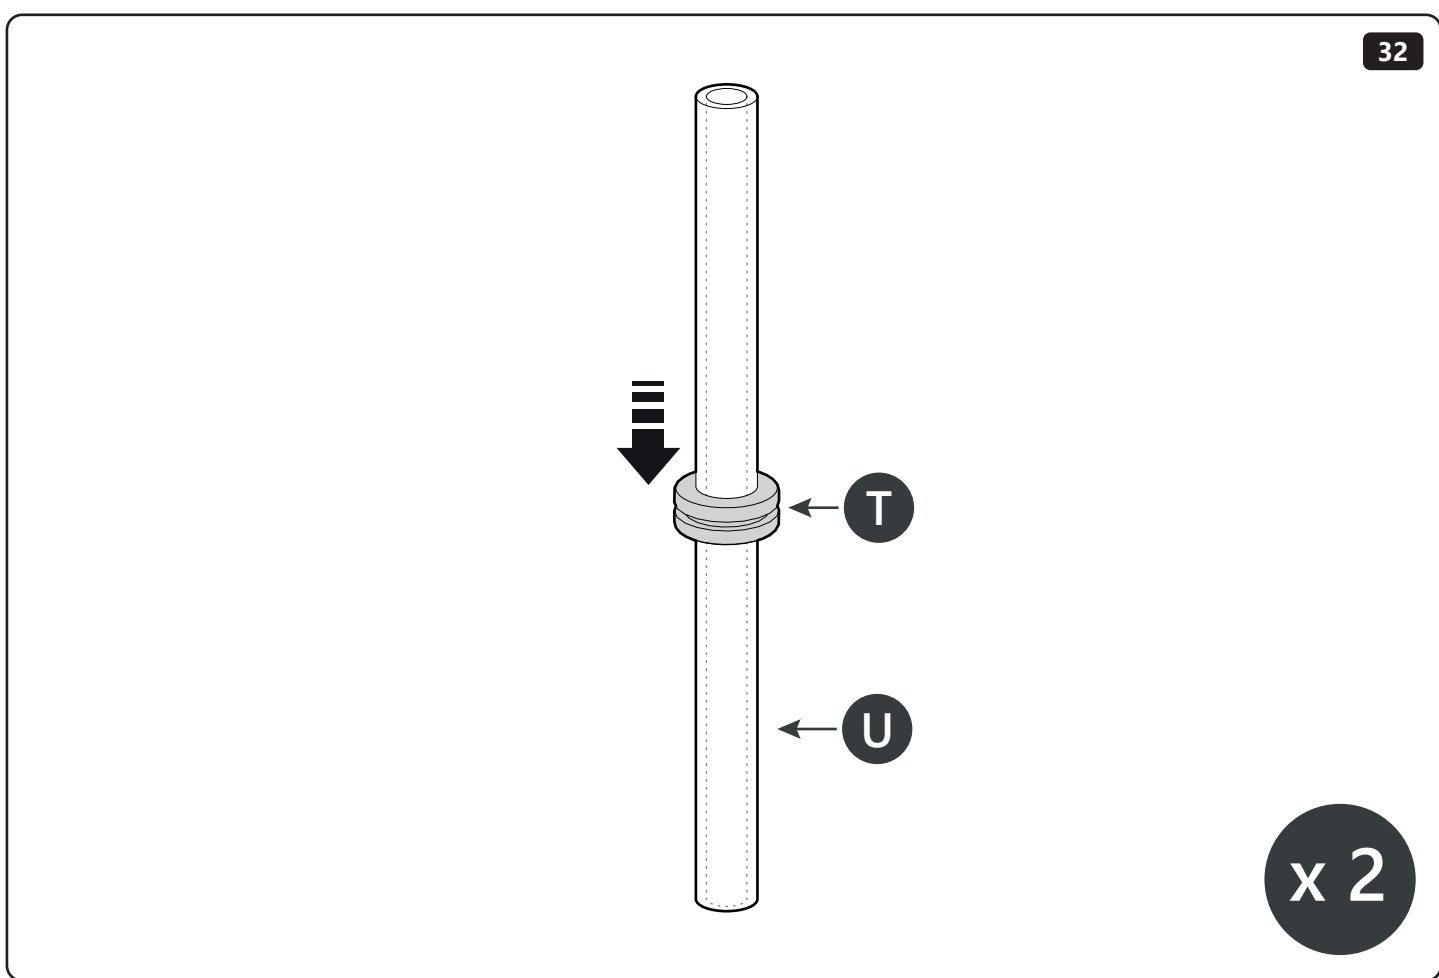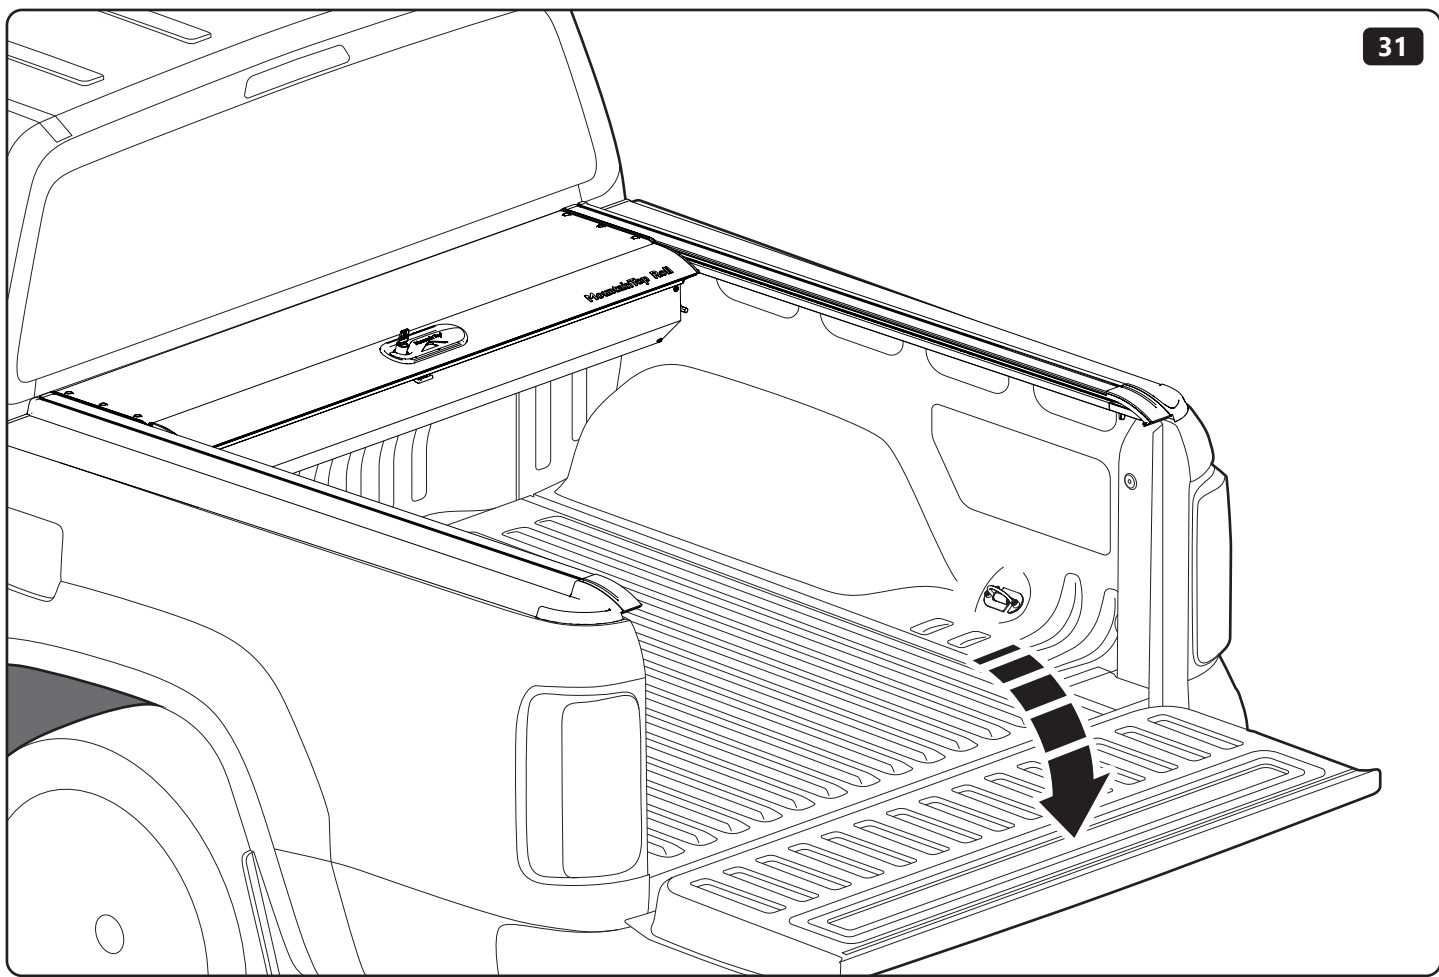

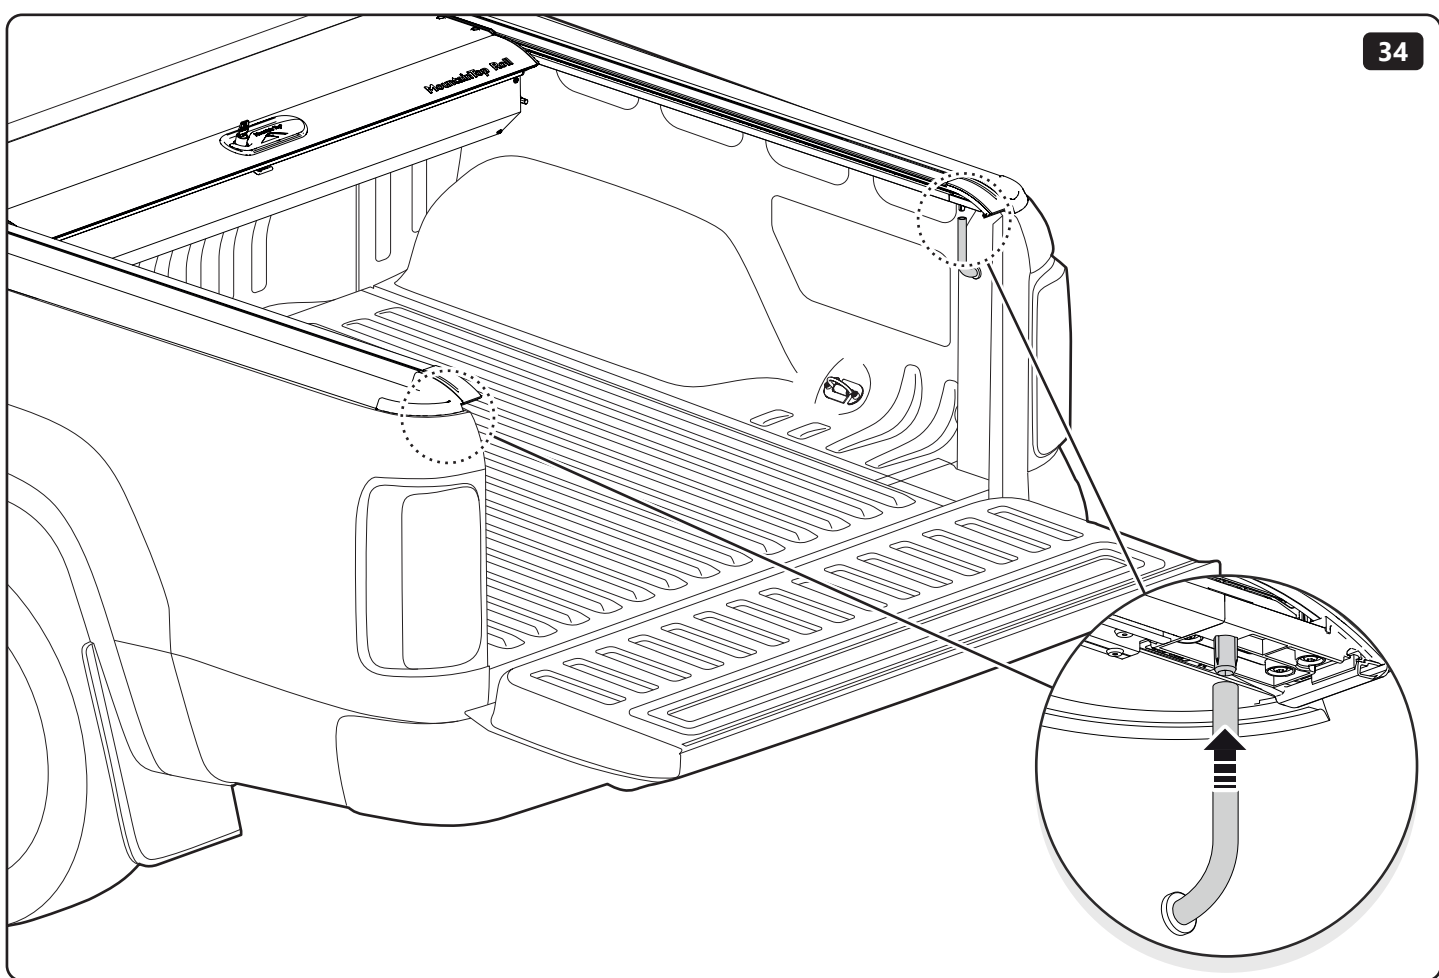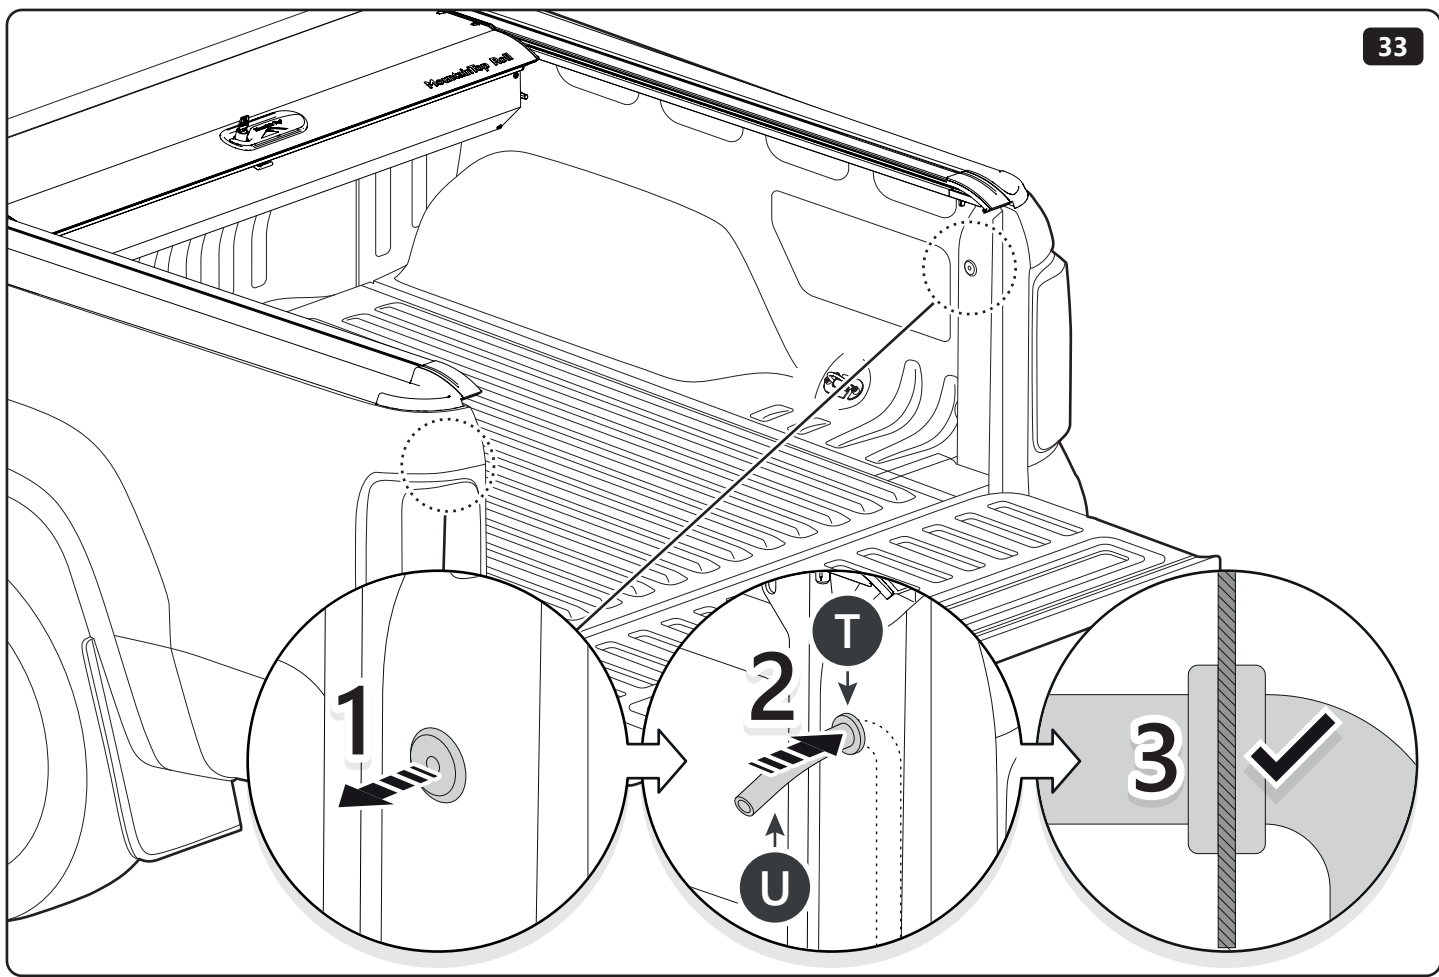





 Silicone oil

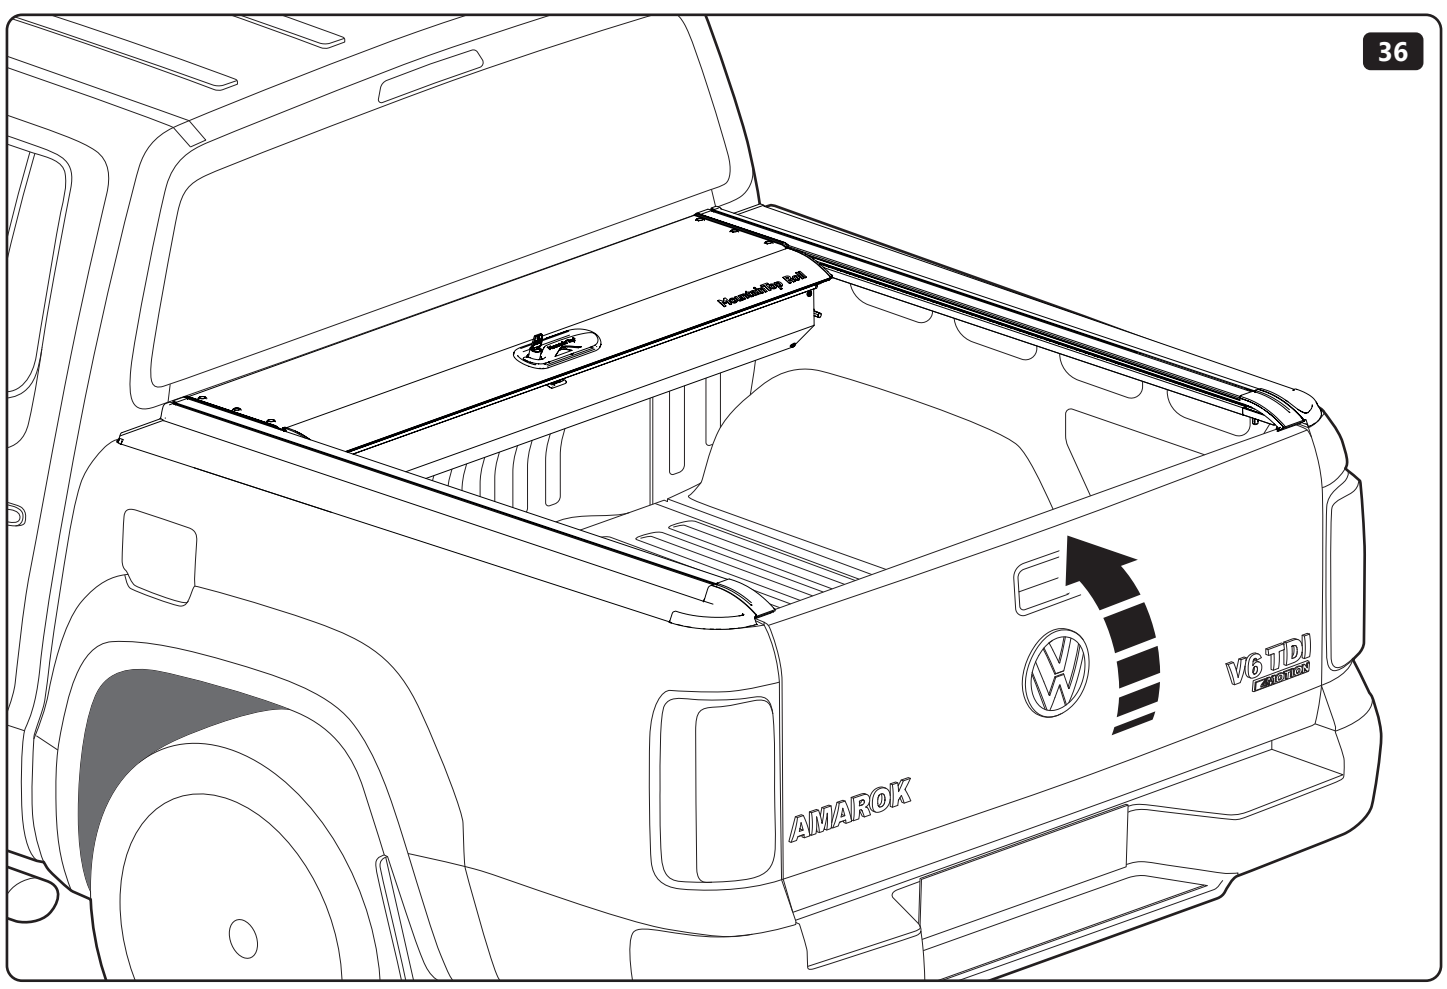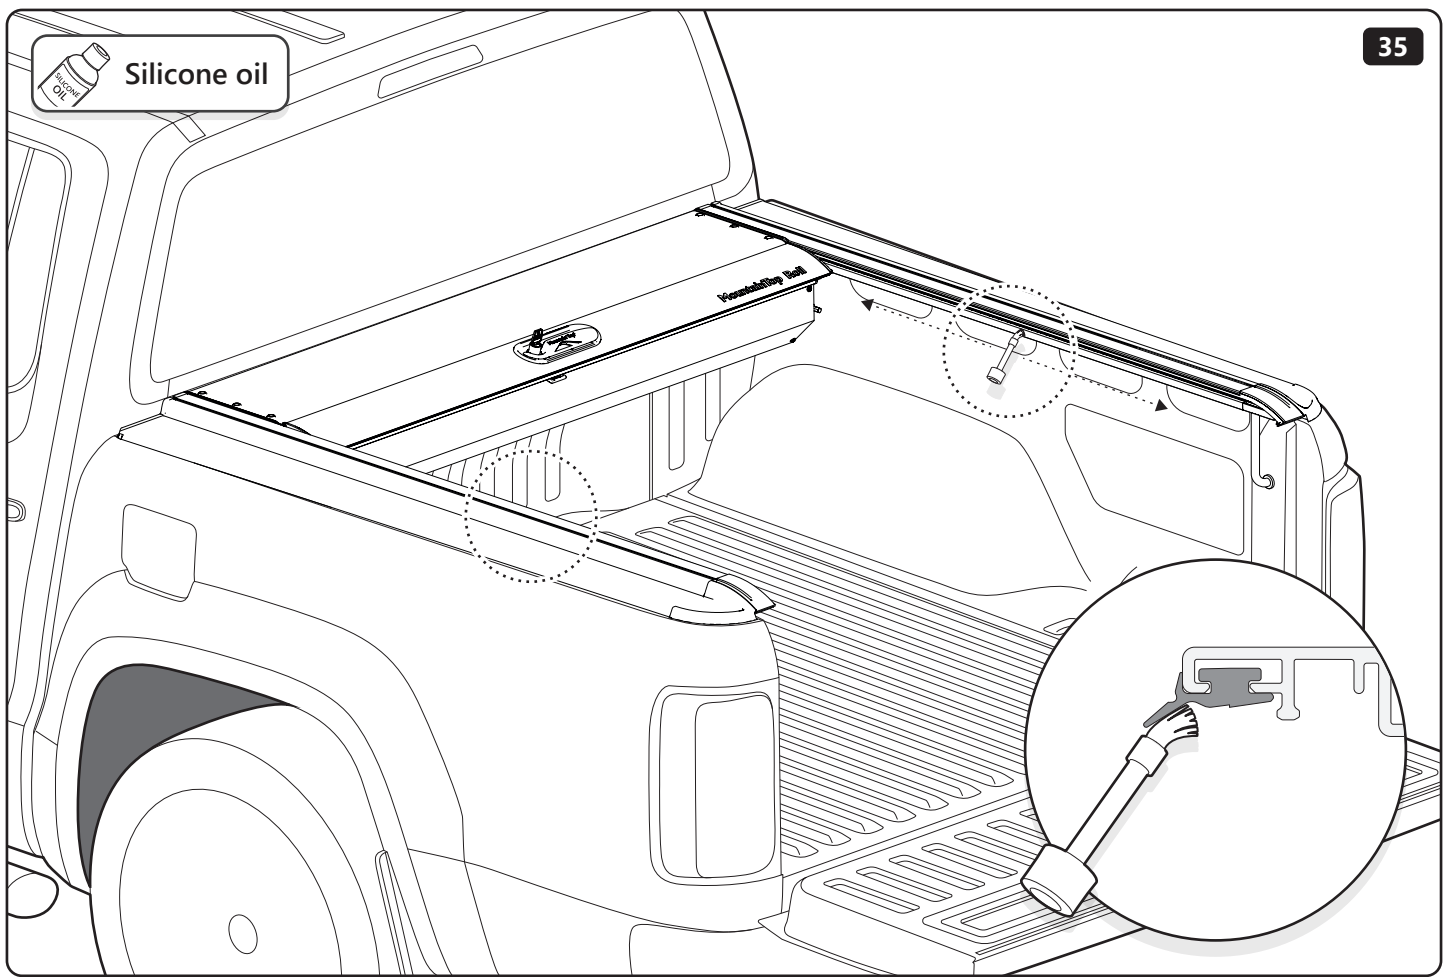


☰ ✓ Check function

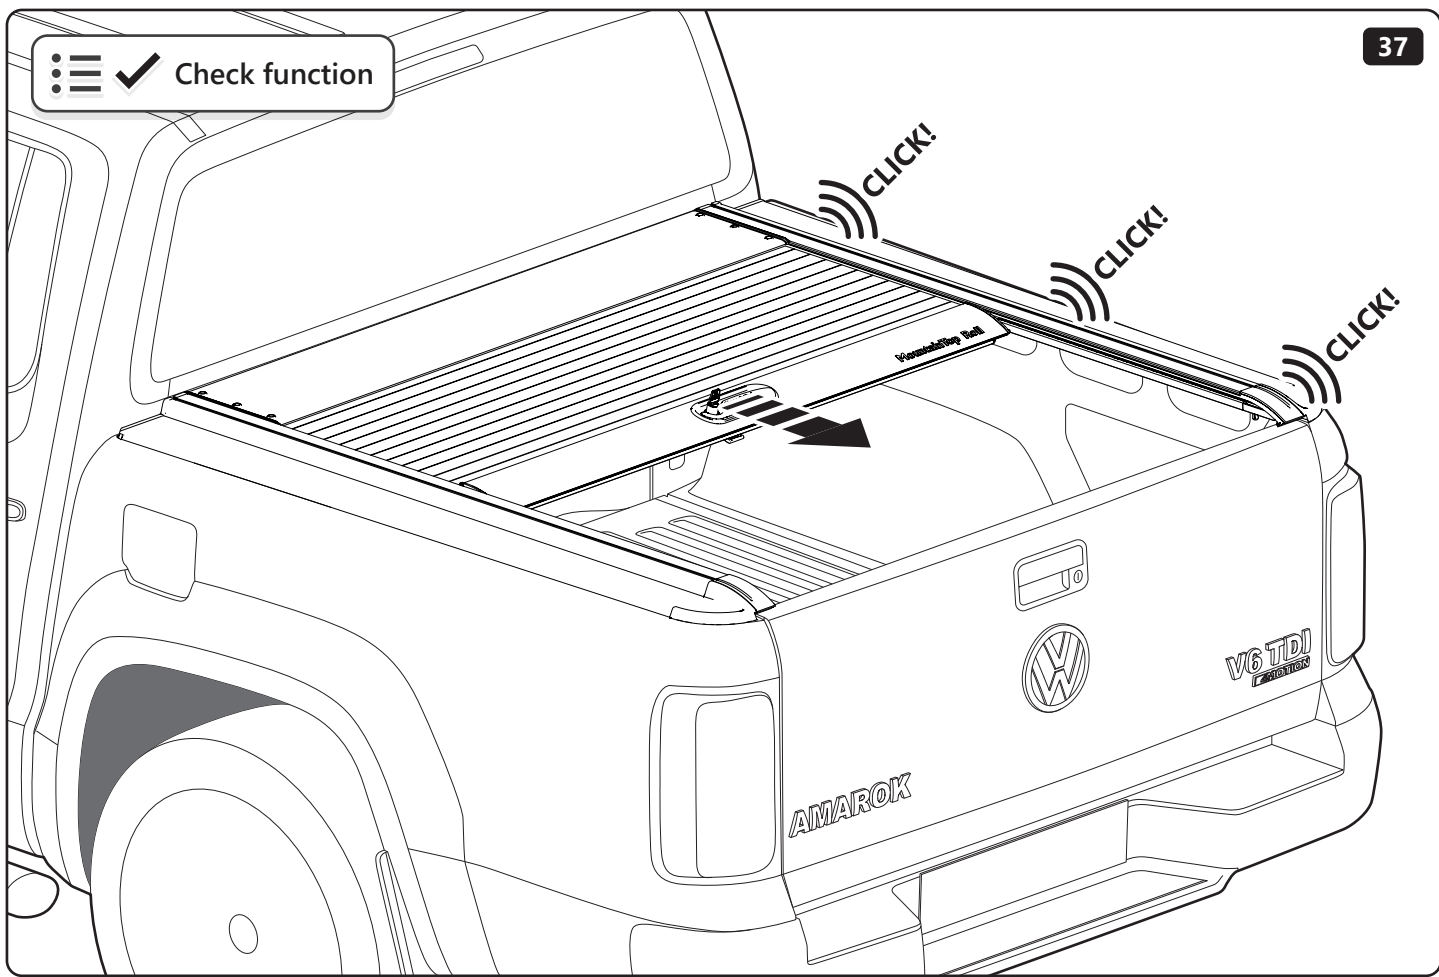


☰ ✓ Check function

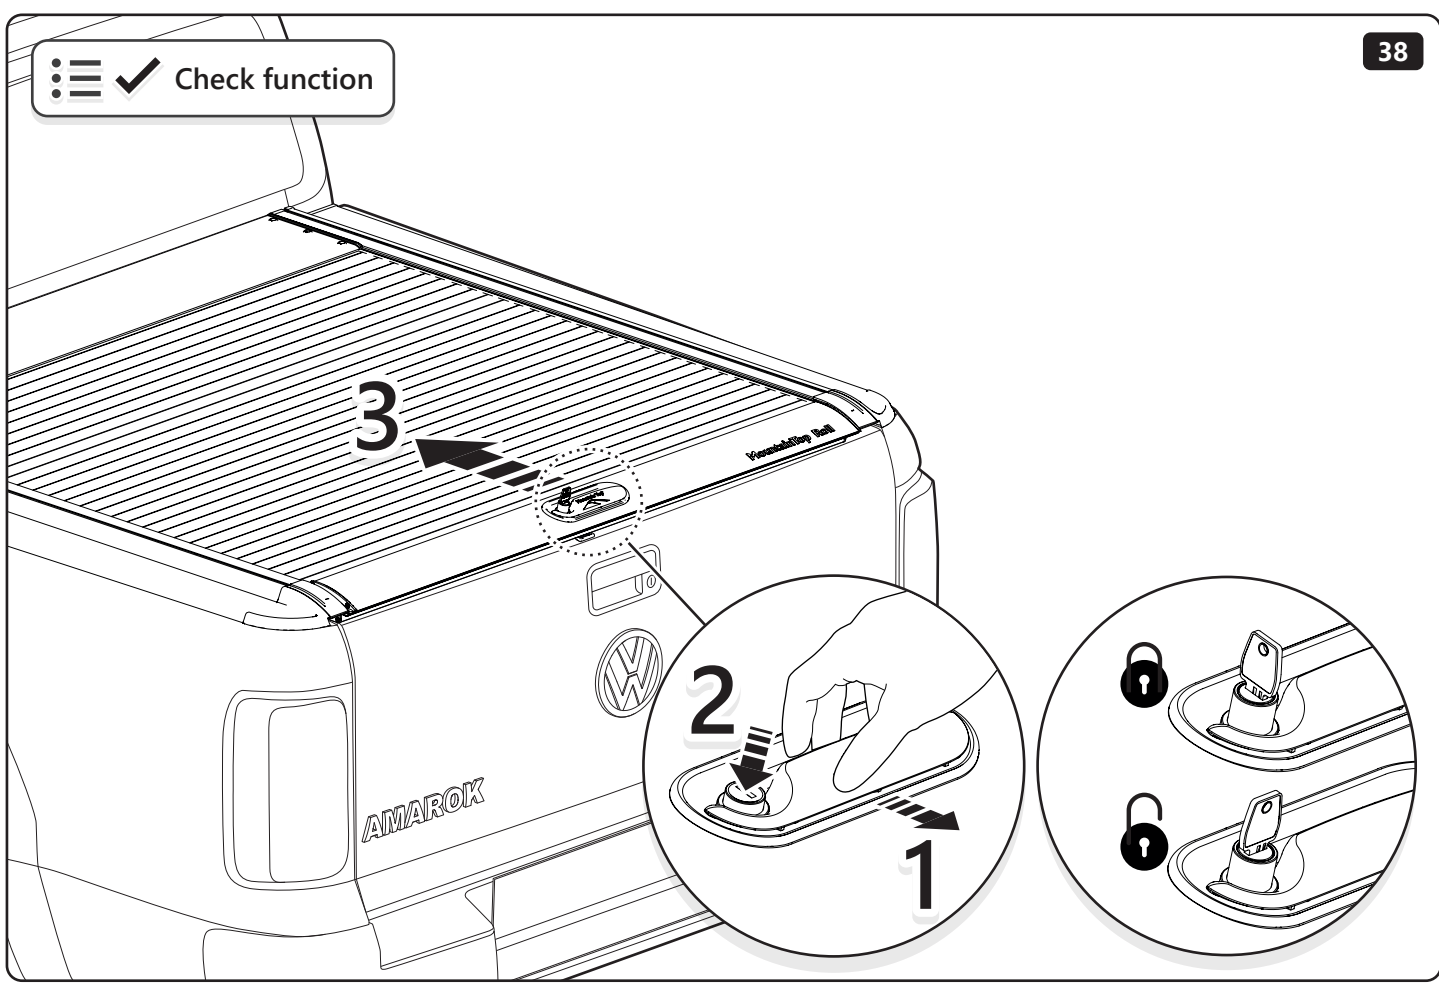

☰ ✓ Check function

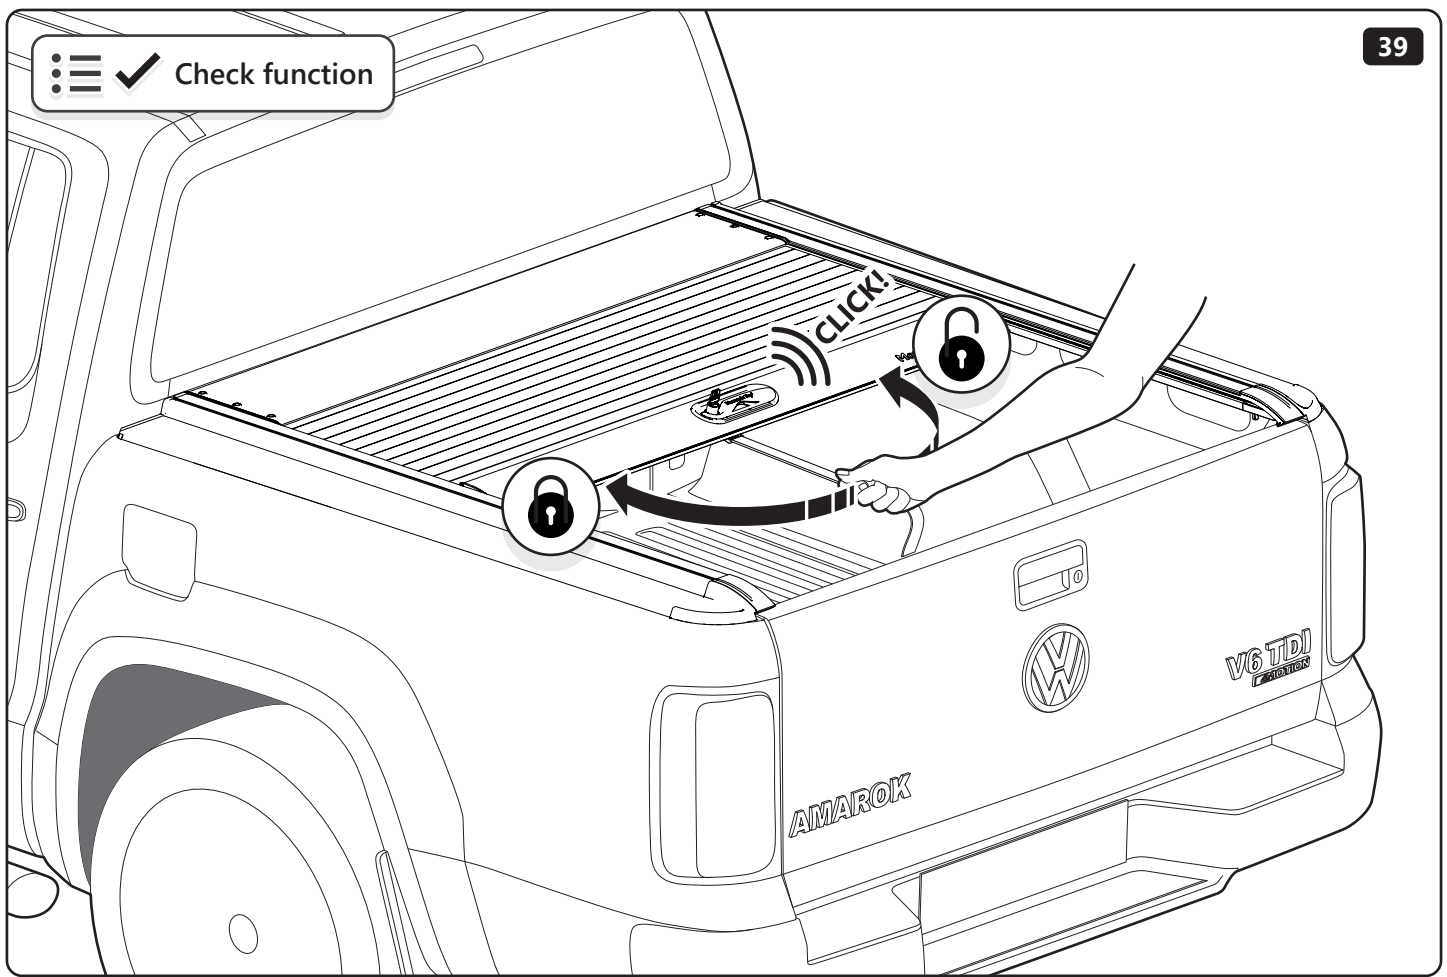

☰ ✓ Check function

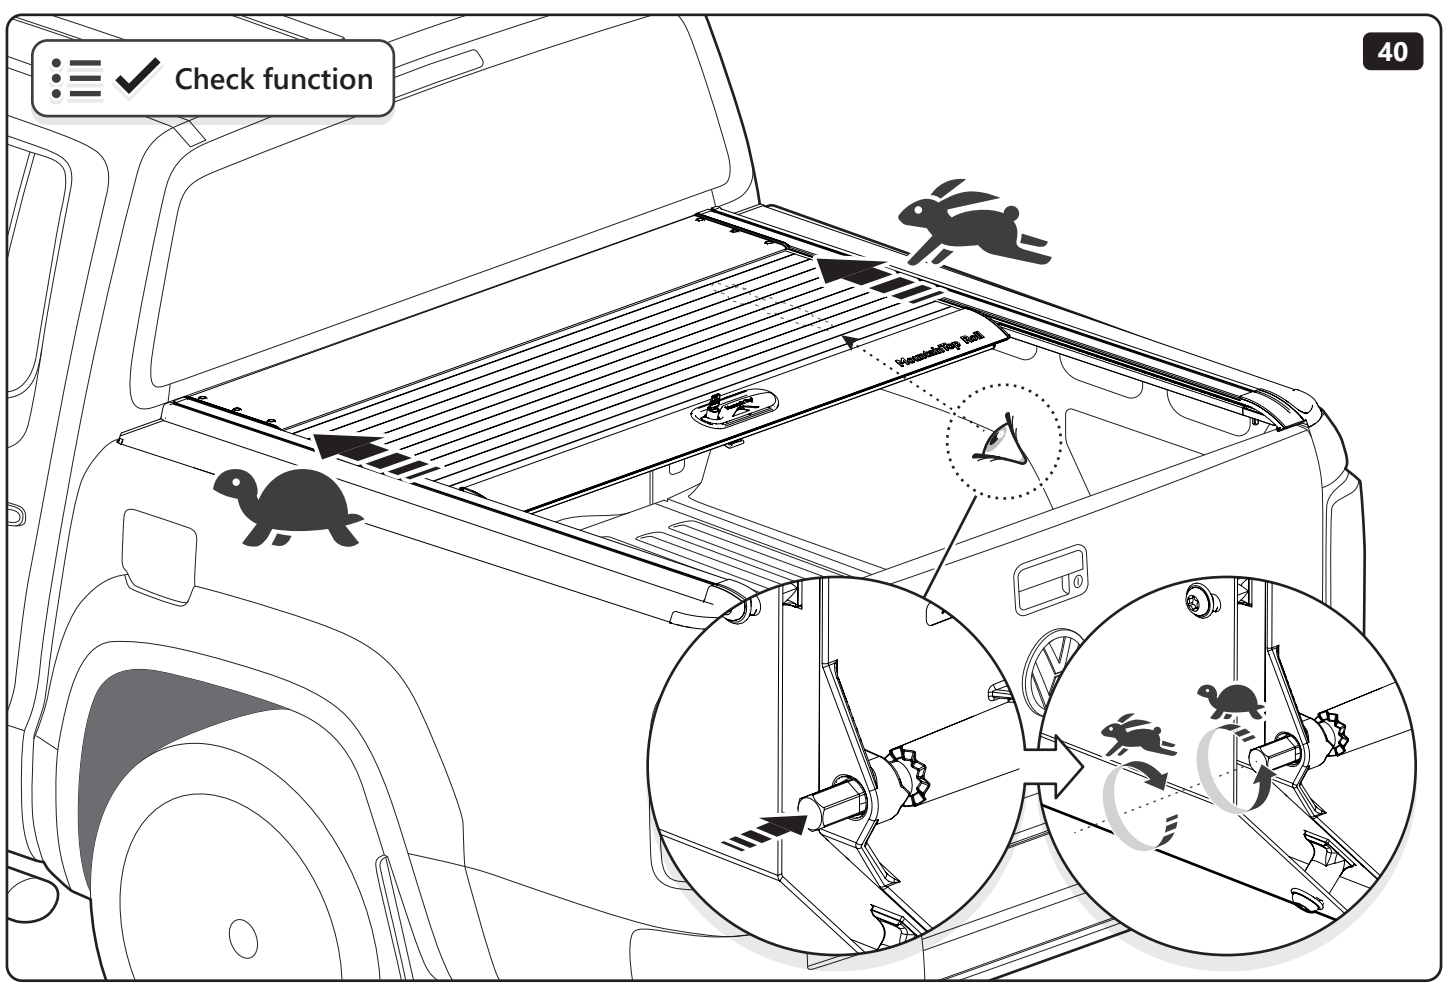



Customer Service +45 4810 2950 (08:00 - 16:00 CET)  
Fax +45 4810 2960  
Support info@mountaintop.dk  
Website www.mountaintop.dk  
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

PART NUMBER(S)	MODEL / YEAR	CAB TYPE(S)	INSTALLATION TIME	WEIGHT
MTR VW80 P01	Volkswagen / 2016 →	Double Cab	2 hour(s)	31-37 Kg
MTR VW80 P51	Volkswagen / 2016 →	Double Cab	2 hour(s)	31-37 Kg
MTR VW80 P57	Volkswagen / 2016 →	Double Cab	2 hour(s)	31-37 Kg

<b>GB</b> Installation manual	<b>S</b> Monteringsanvisning	<b>D</b> Einbauanleitung
<b>SF</b> Asennusohje	<b>E</b> Instrucciones de montaje	<b>CZ</b> Návod k instalaci
<b>F</b> Notice de montage	<b>H</b> Szerelési utasítás	<b>I</b> Istruzioni de montaggio
<b>PL</b> Instrukcja montażu	<b>P</b> Instruções de instalação	<b>GR</b> Οδηγίες Εγκατάστασης
<b>NL</b> Installatie-instructies	<b>RUS</b> Инструкция по установке	<b>DK</b> Monteringsvejledning
<b>TR</b> Montaj Talimatı	<b>N</b> Monteringsveiledning	<b>RO</b> Instructiuni de instalare