


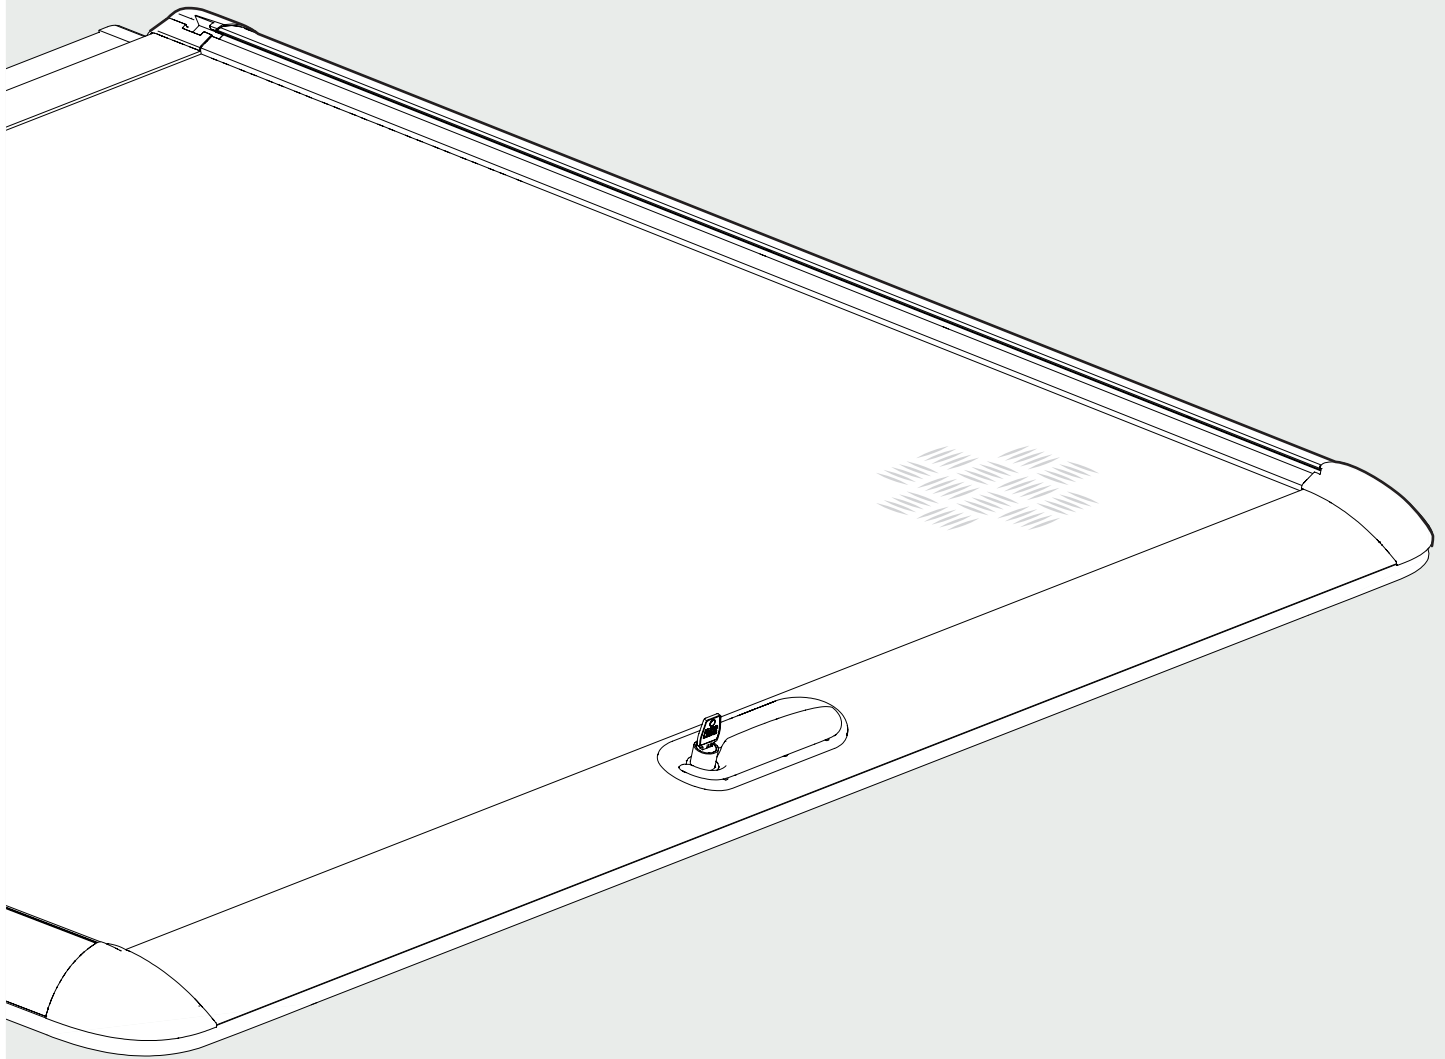

Mountain Top® Style


Installation manual




DOWNLOAD PDF




Parts

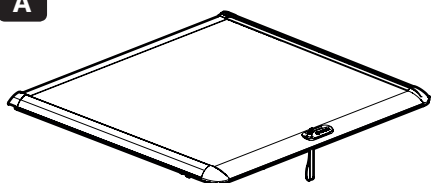A


x 1

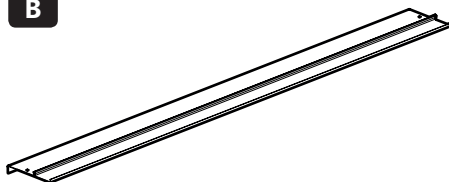B


x 1

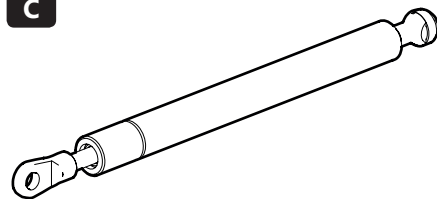C


x 2

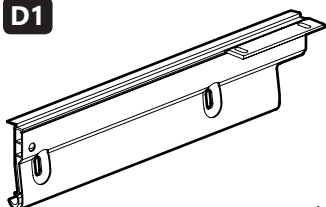D1


x 1

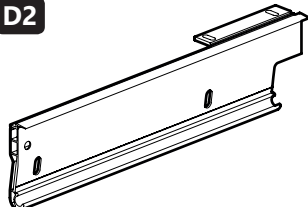D2

x 1

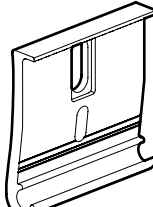E


x 2

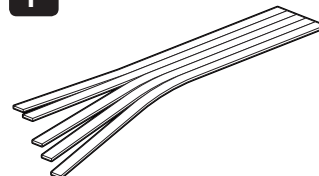F


5 x 1m



Kit

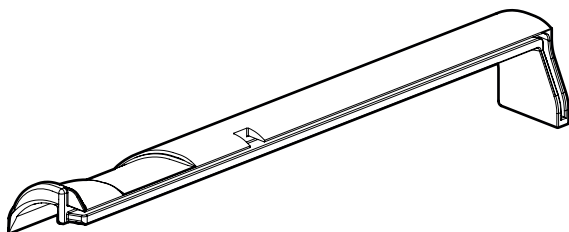G1


x 1

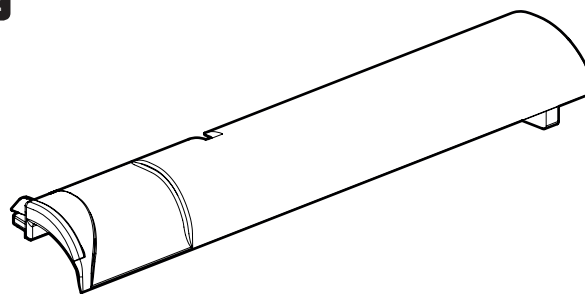G2


x 1




Kit

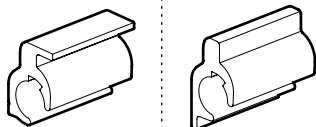H


x 6

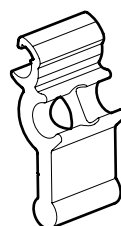I


x 6

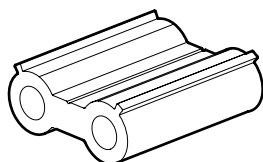J





x 6




K








x 24




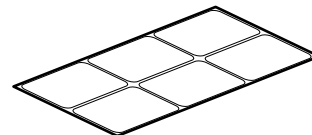
K2






x 1


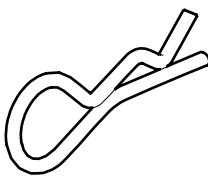
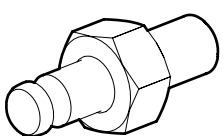
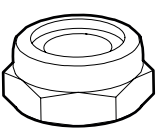

Kit			
L		M	
x 2		x 2	
N		O	
x 2		x 2	

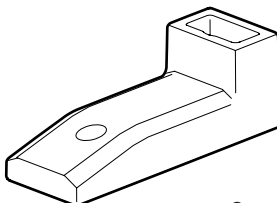
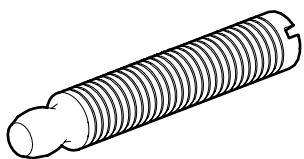
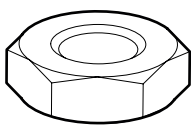
	Kit				
P		Q		R	
	x 2		x 4		x 4

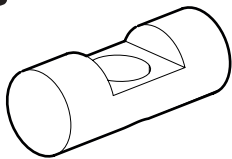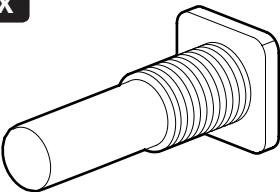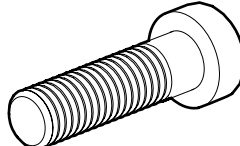
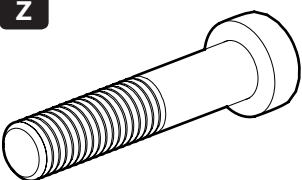
Kit			
S		T	
x 2		x 6	
U		V	
x 6		x 6	
W		X	
x 2		x 2	
Y		Z	
x 6 TOYOTA x 4		TOYOTA x 2	

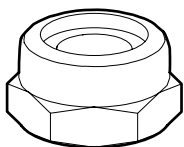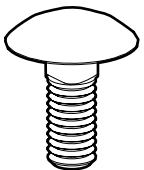Kit			
A2		B2	
x 4		x 4	
C2		D2	
x 4		x 4	

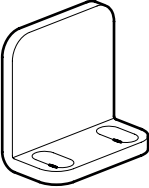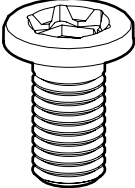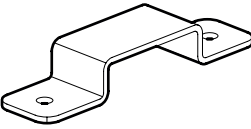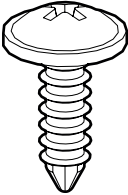
 Kit				
E2  x 2	F2  x 4	G2  x 4	H2  x 2	I2  x 4

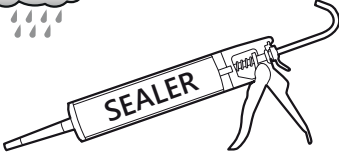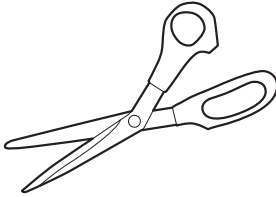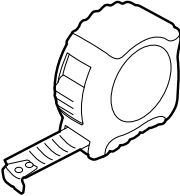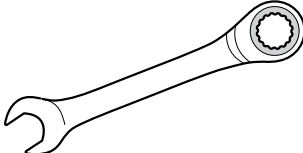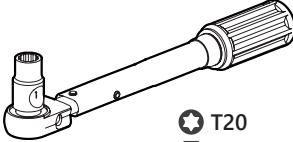 Tools and materials needed		
 		
	  10, 13, 19mm	1-25 Nm   T20  10, 13, 19mm  5mm

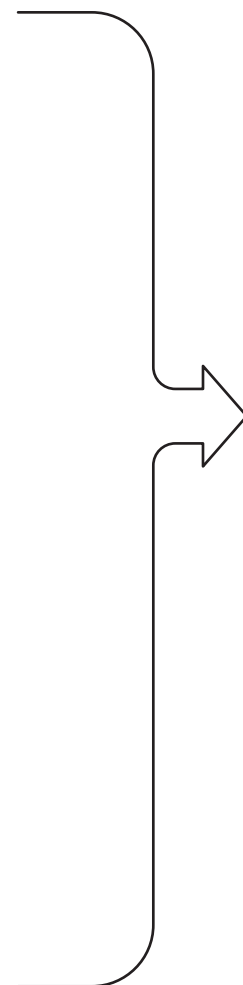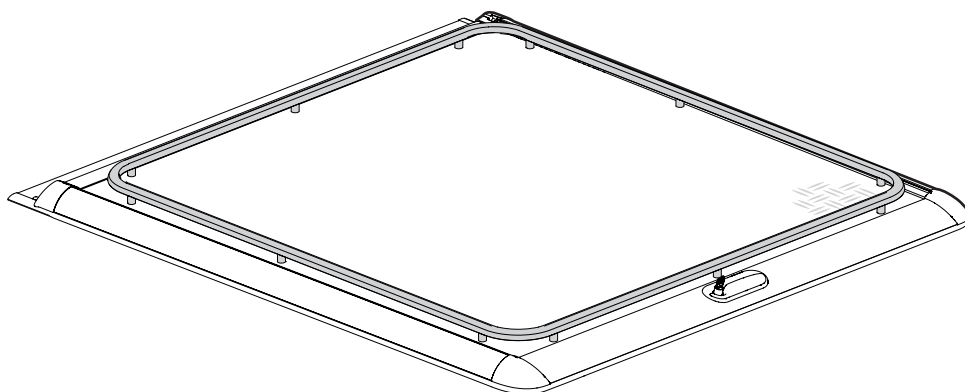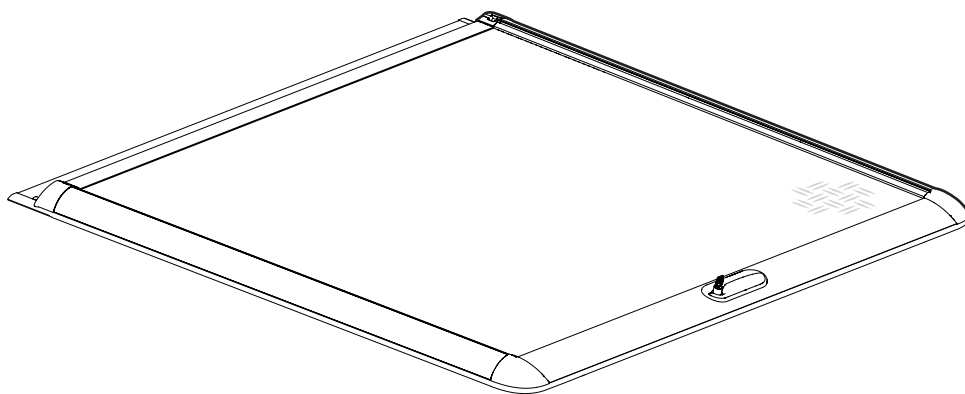


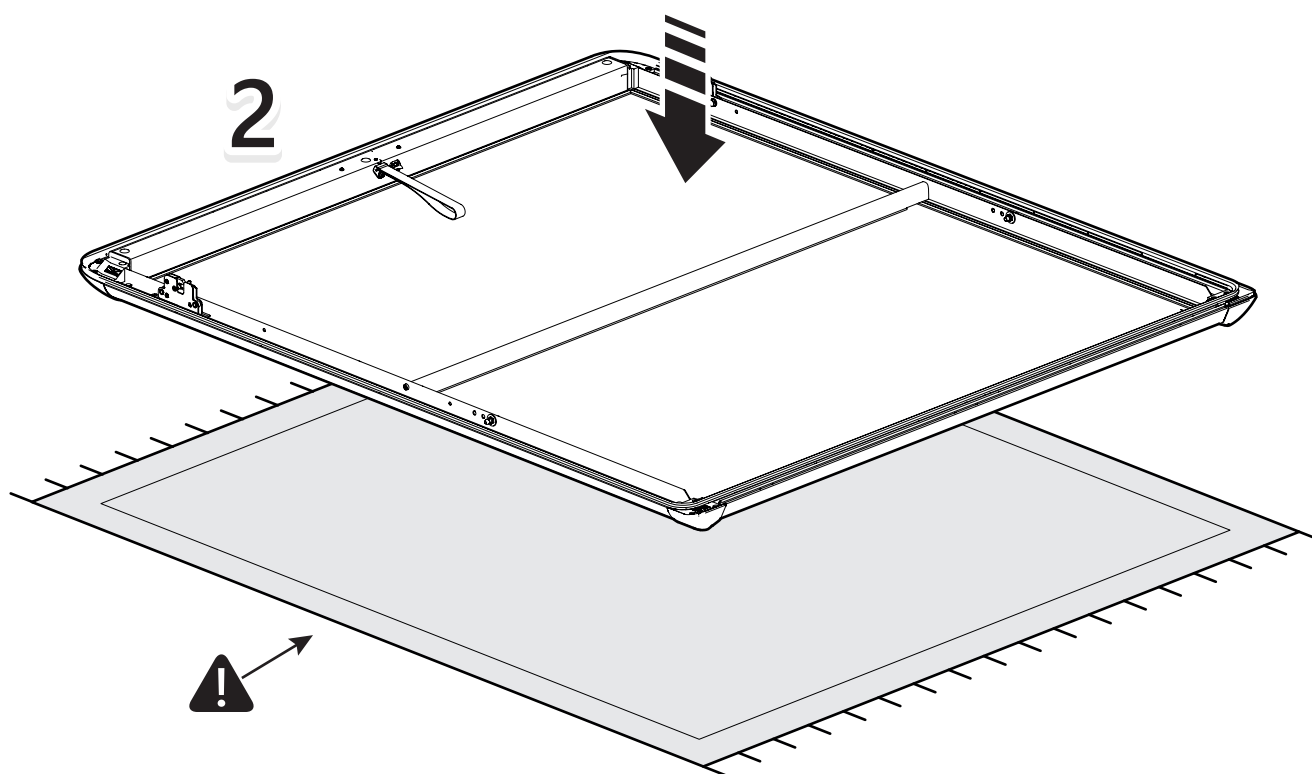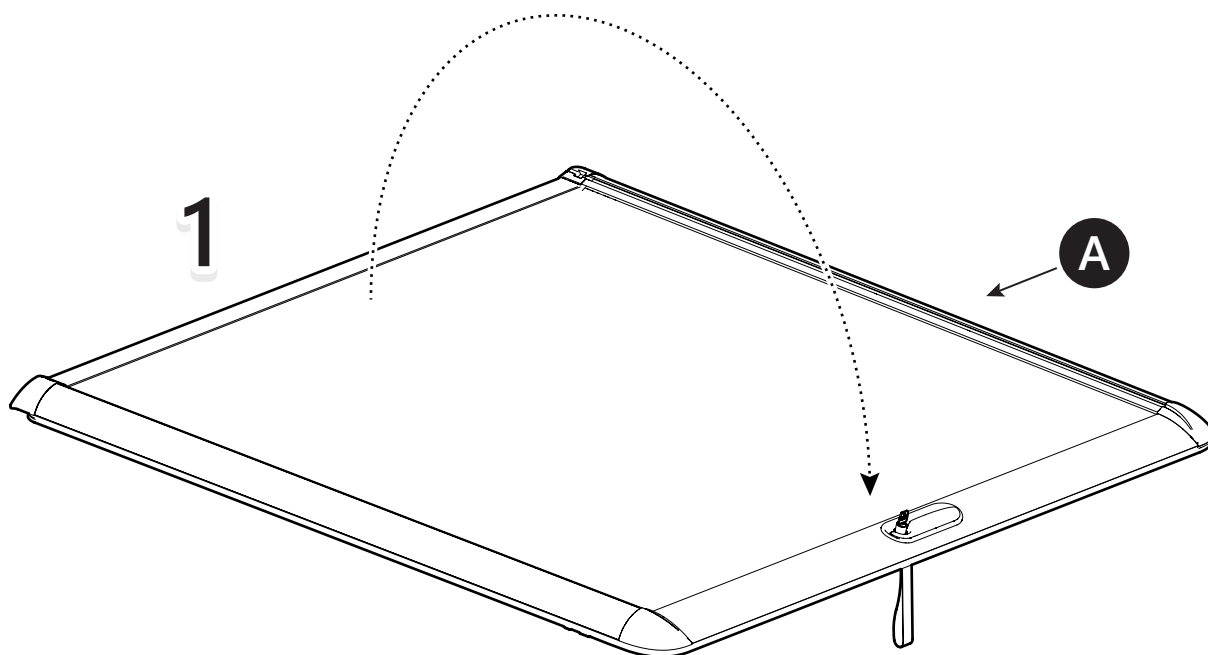


2

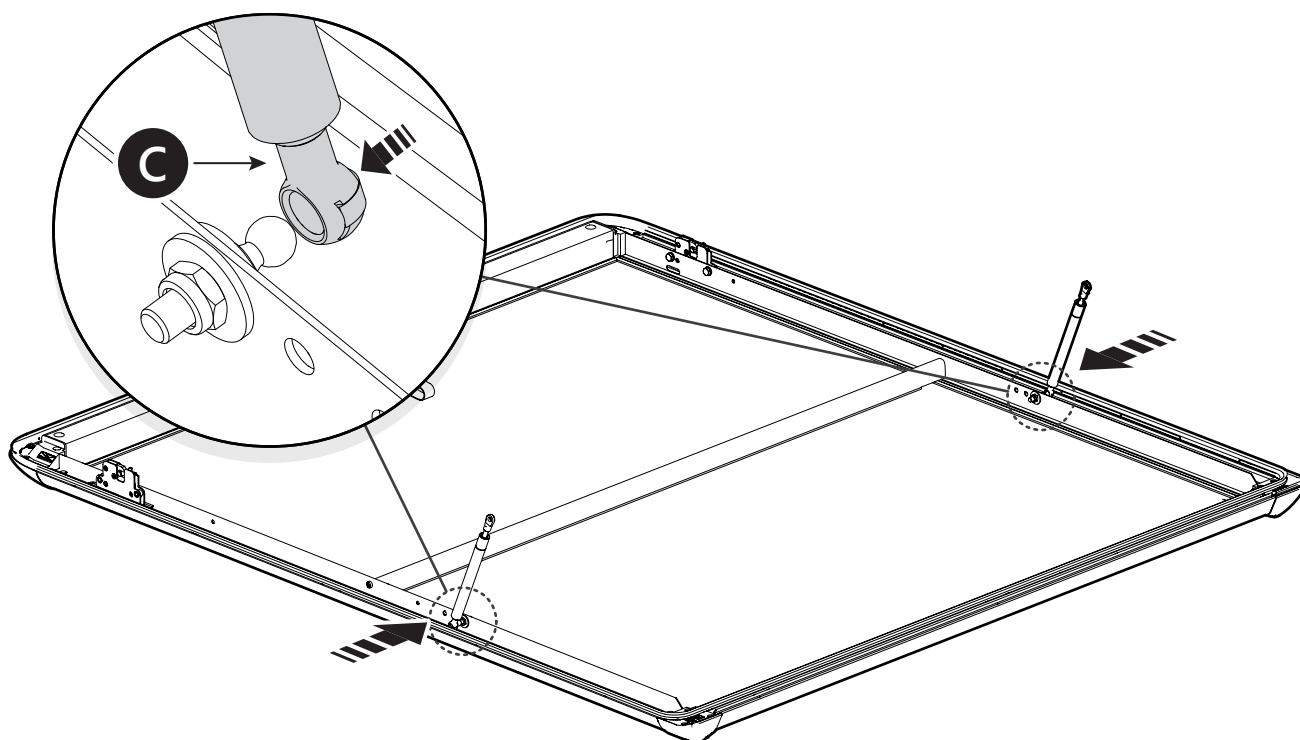


3


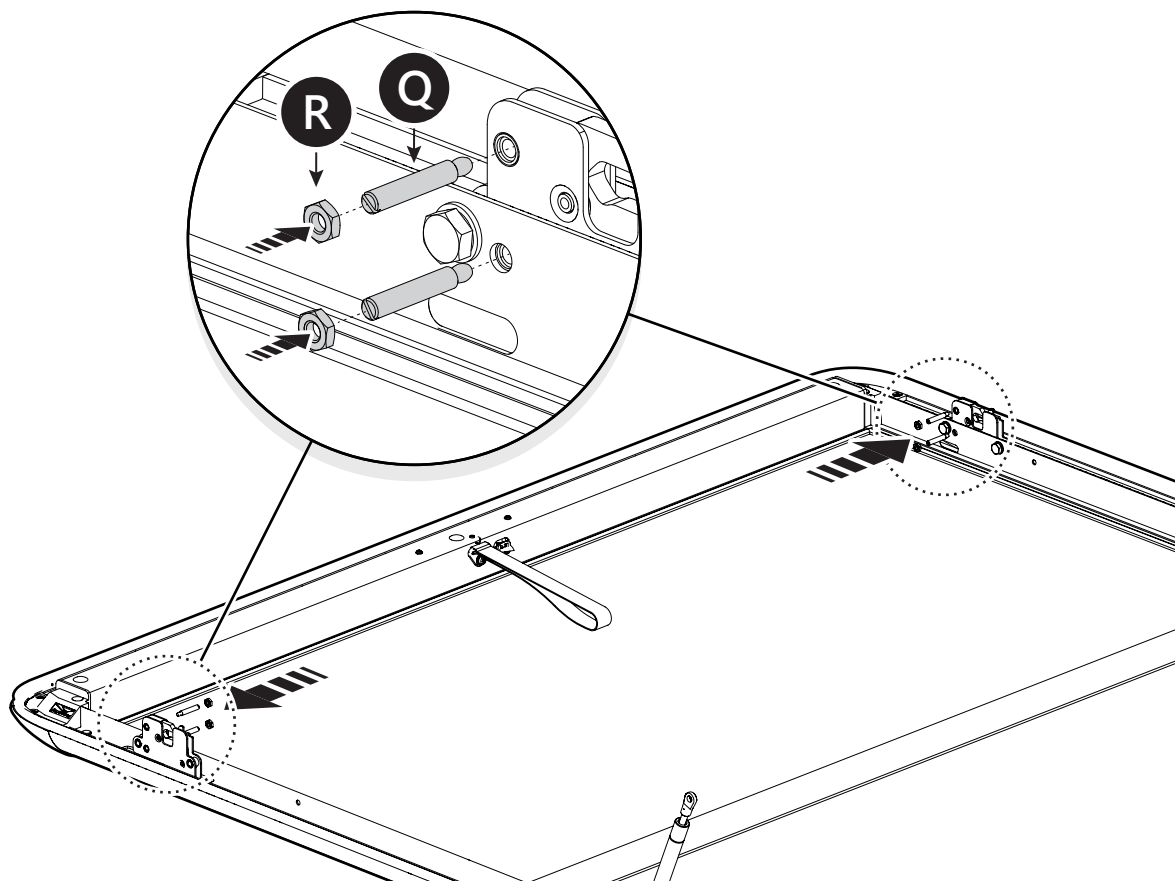
 10mm


4

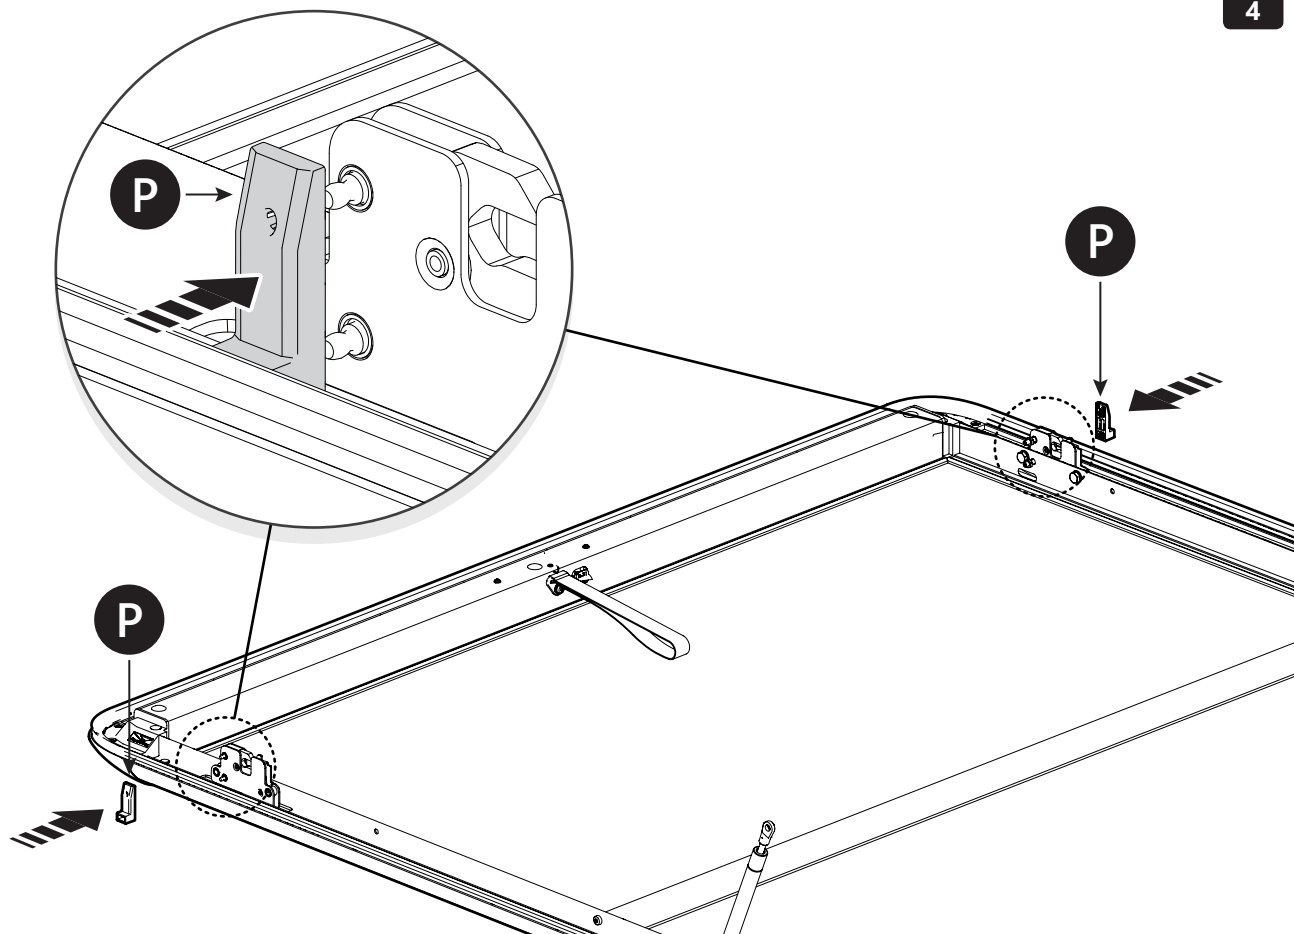


5

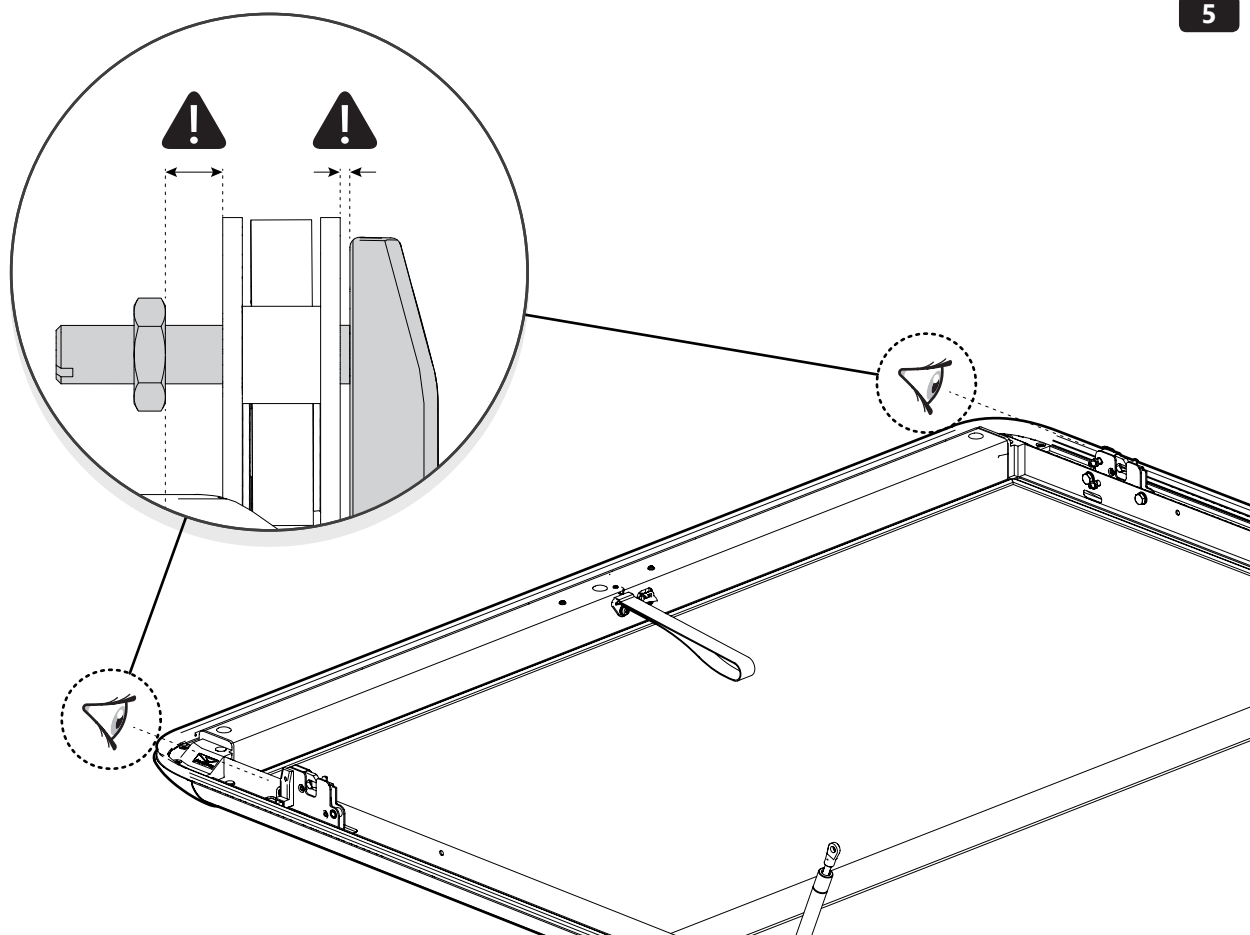

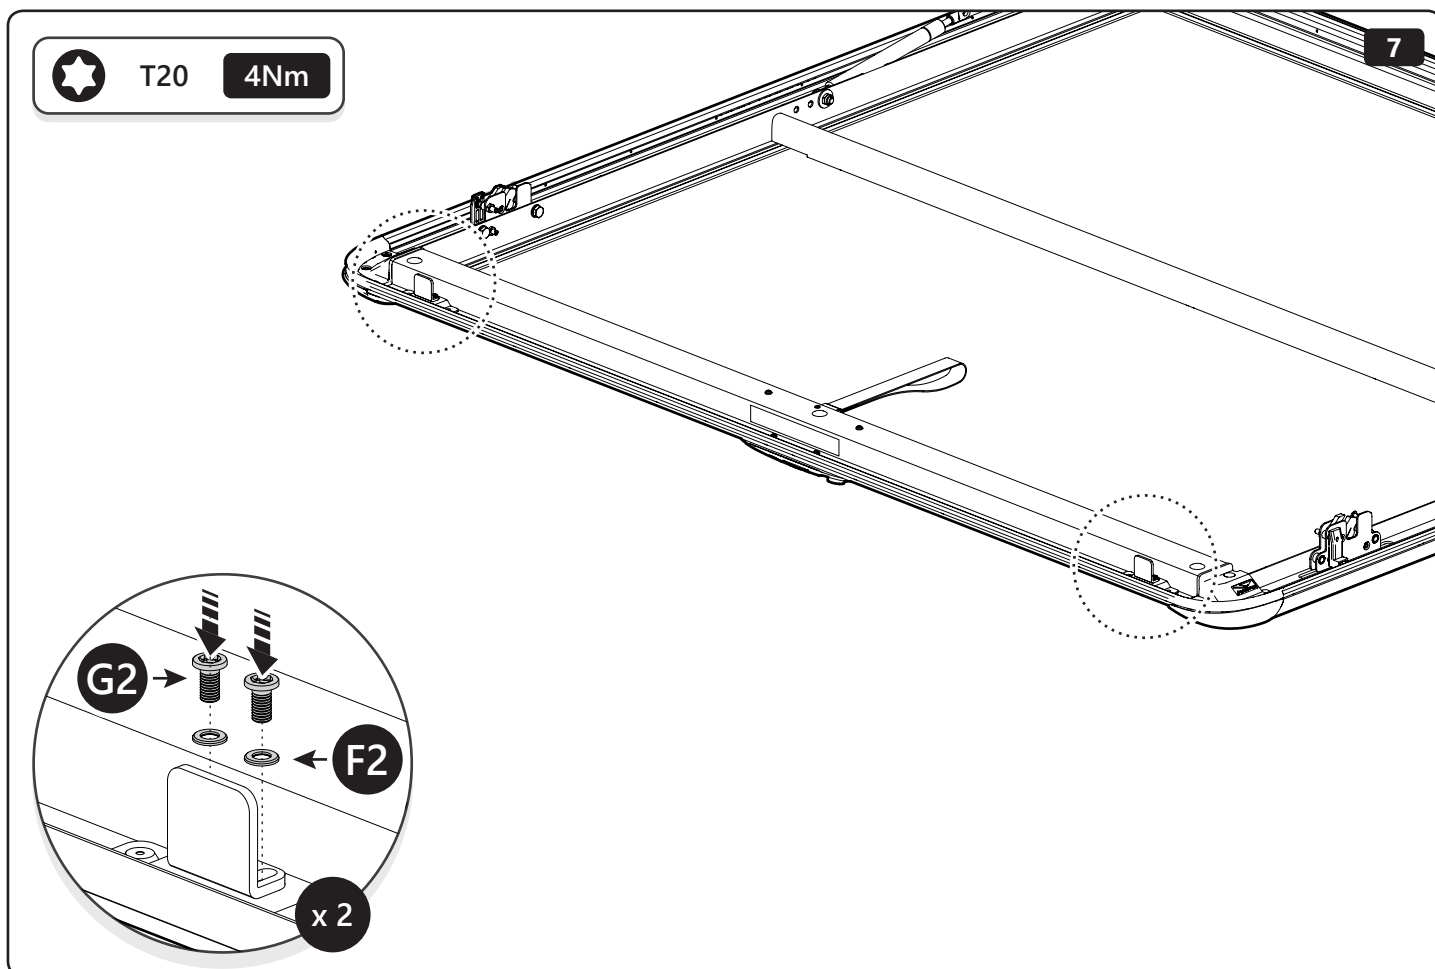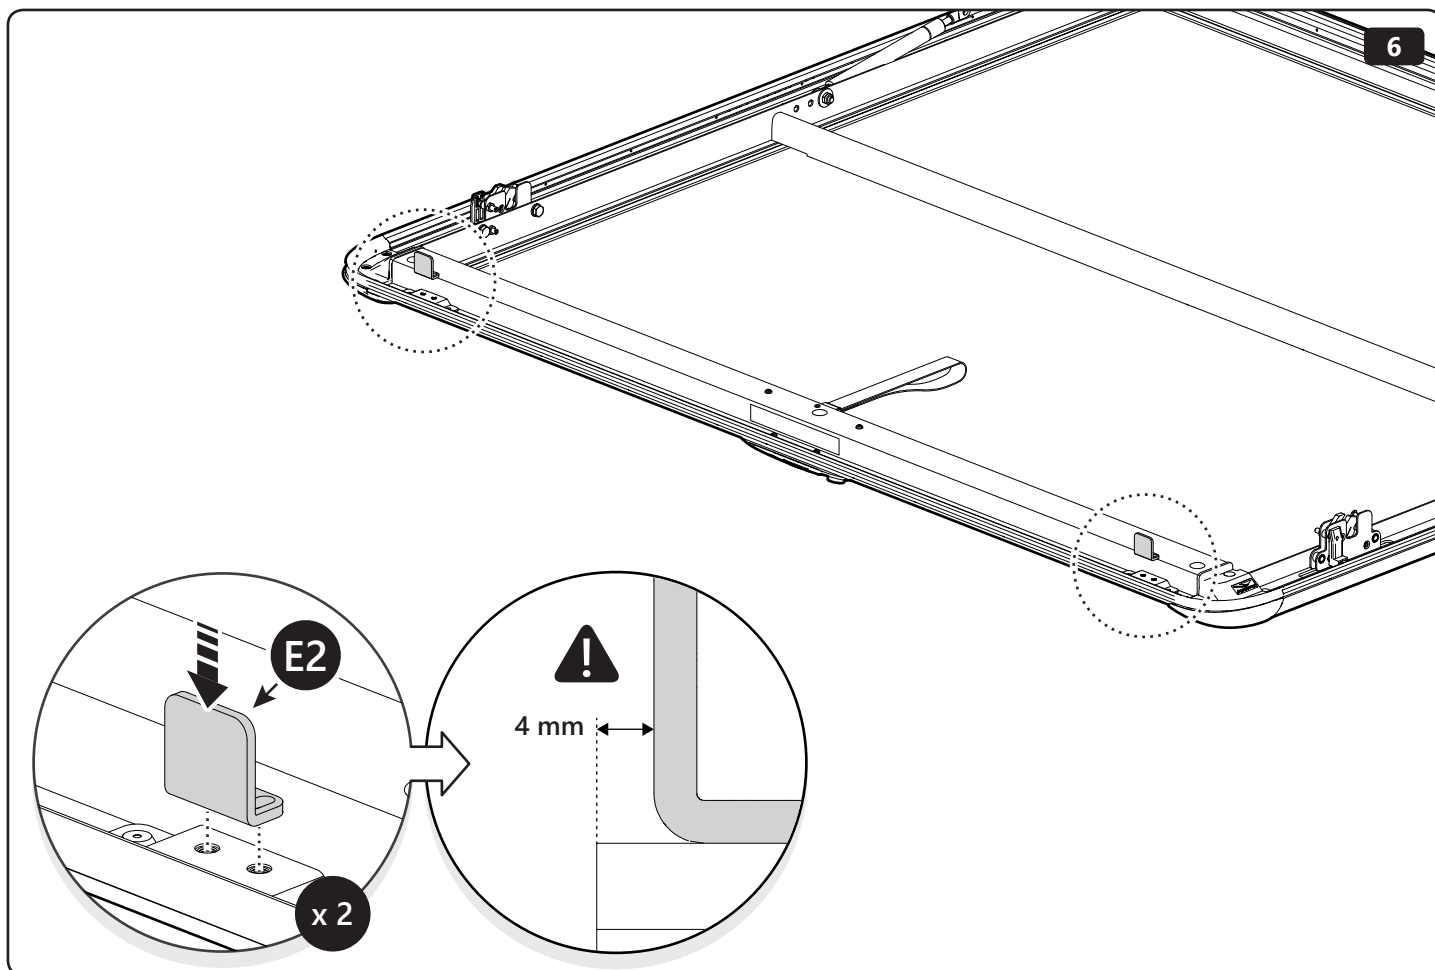


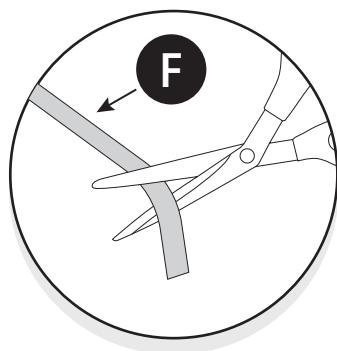

E

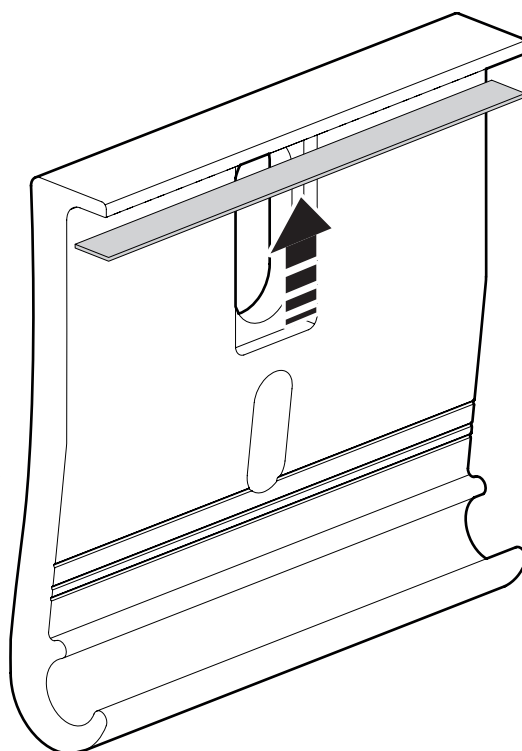


F


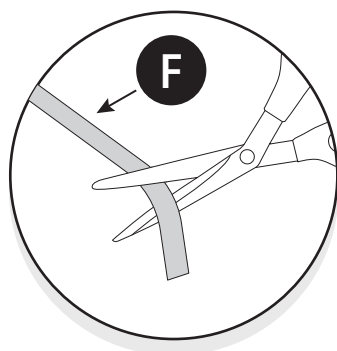


F

E

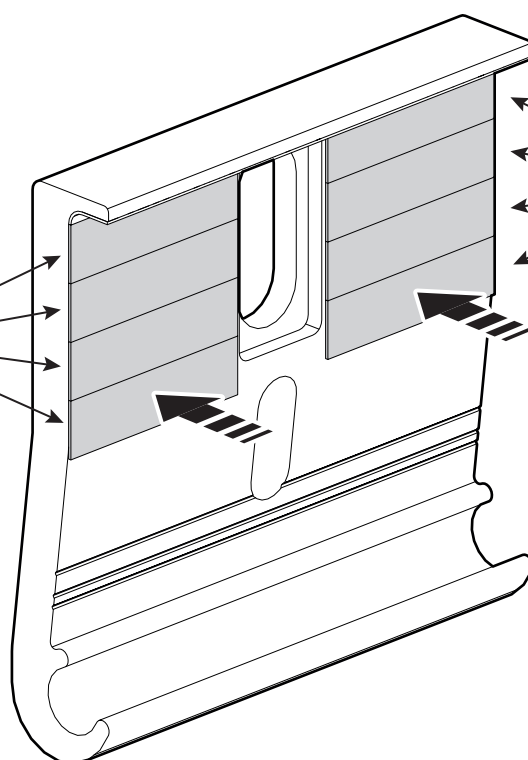


F

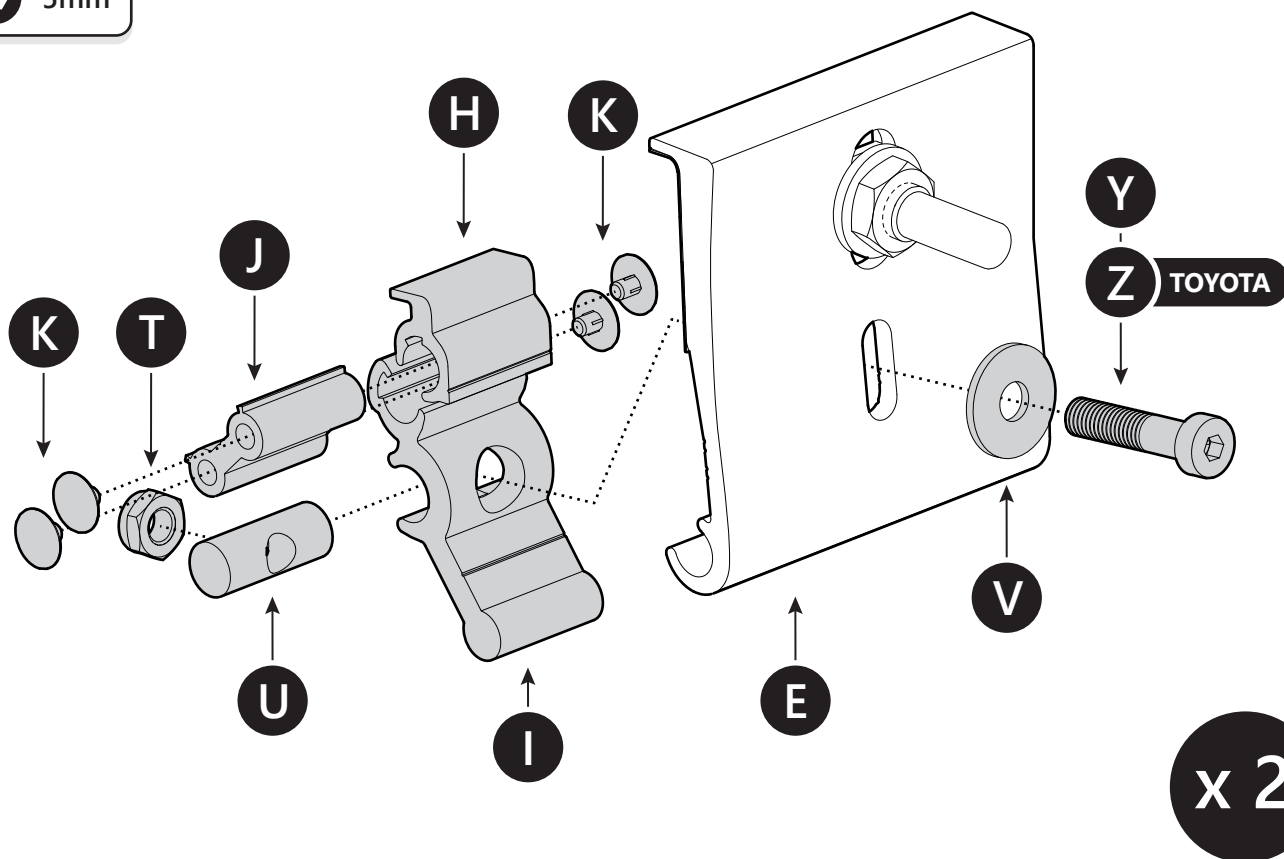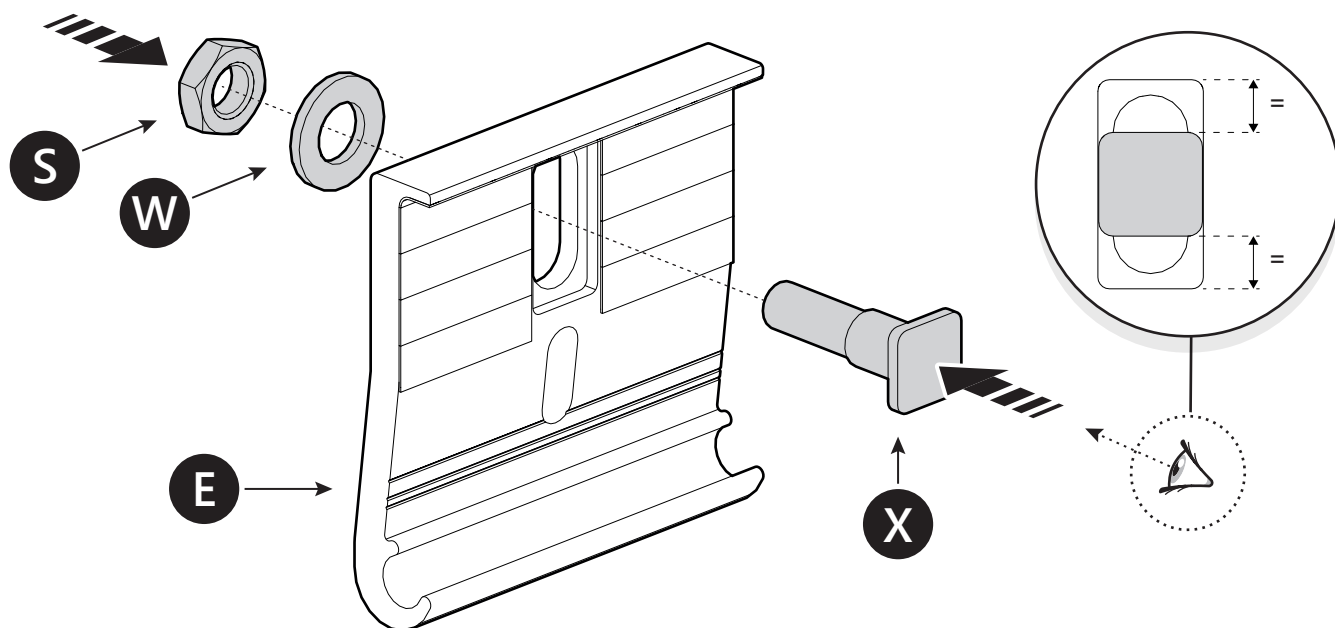




13mm 23Nm

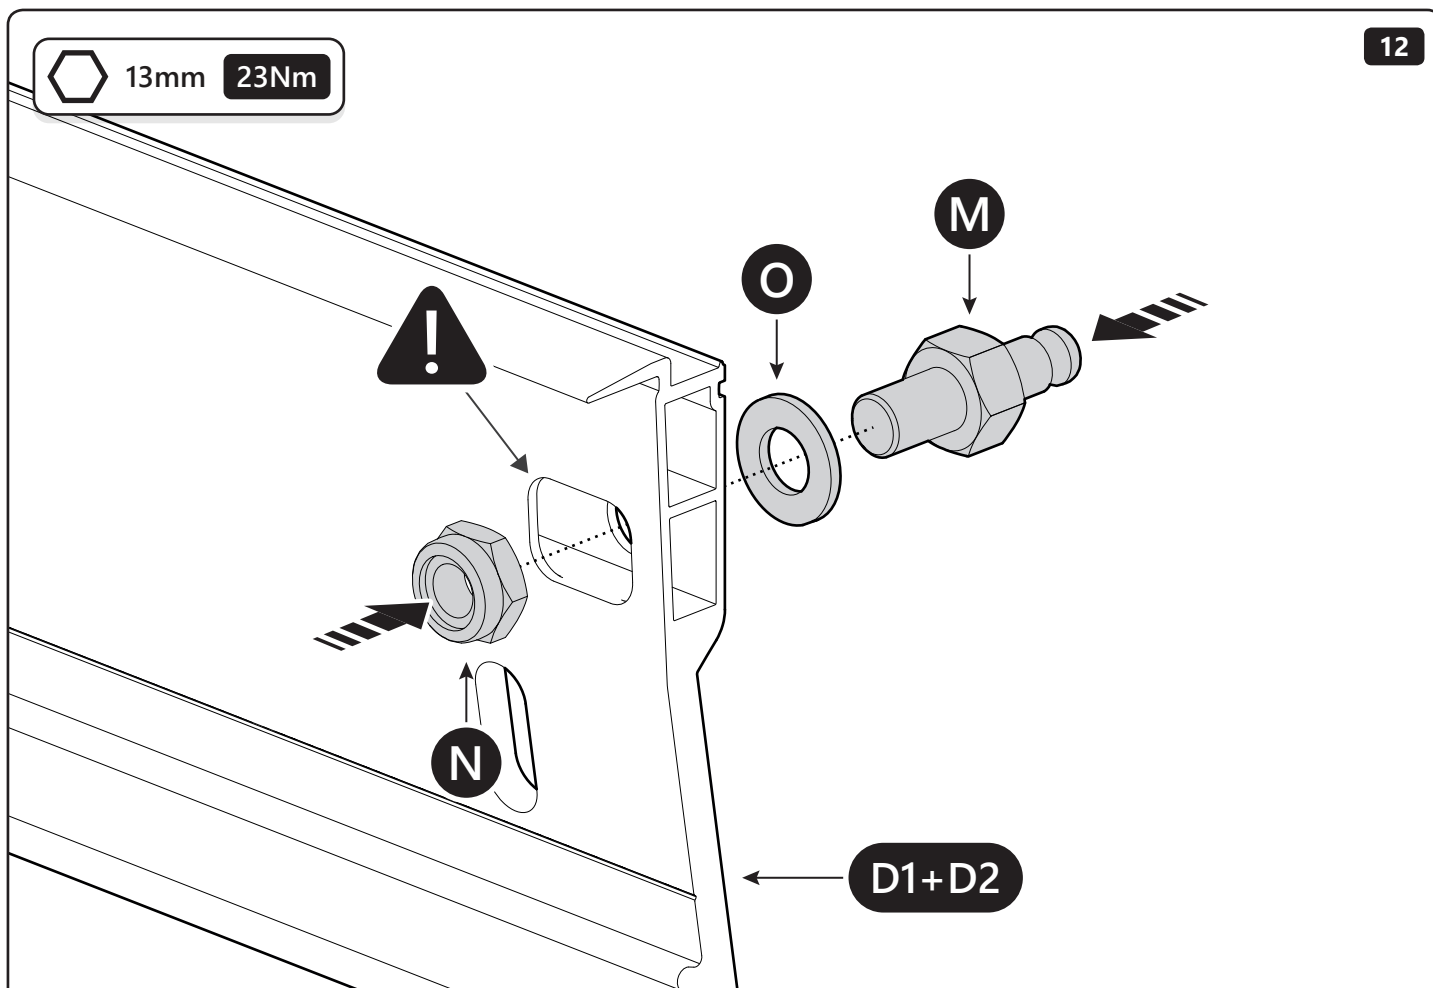



TOYOTA





13mm 23Nm

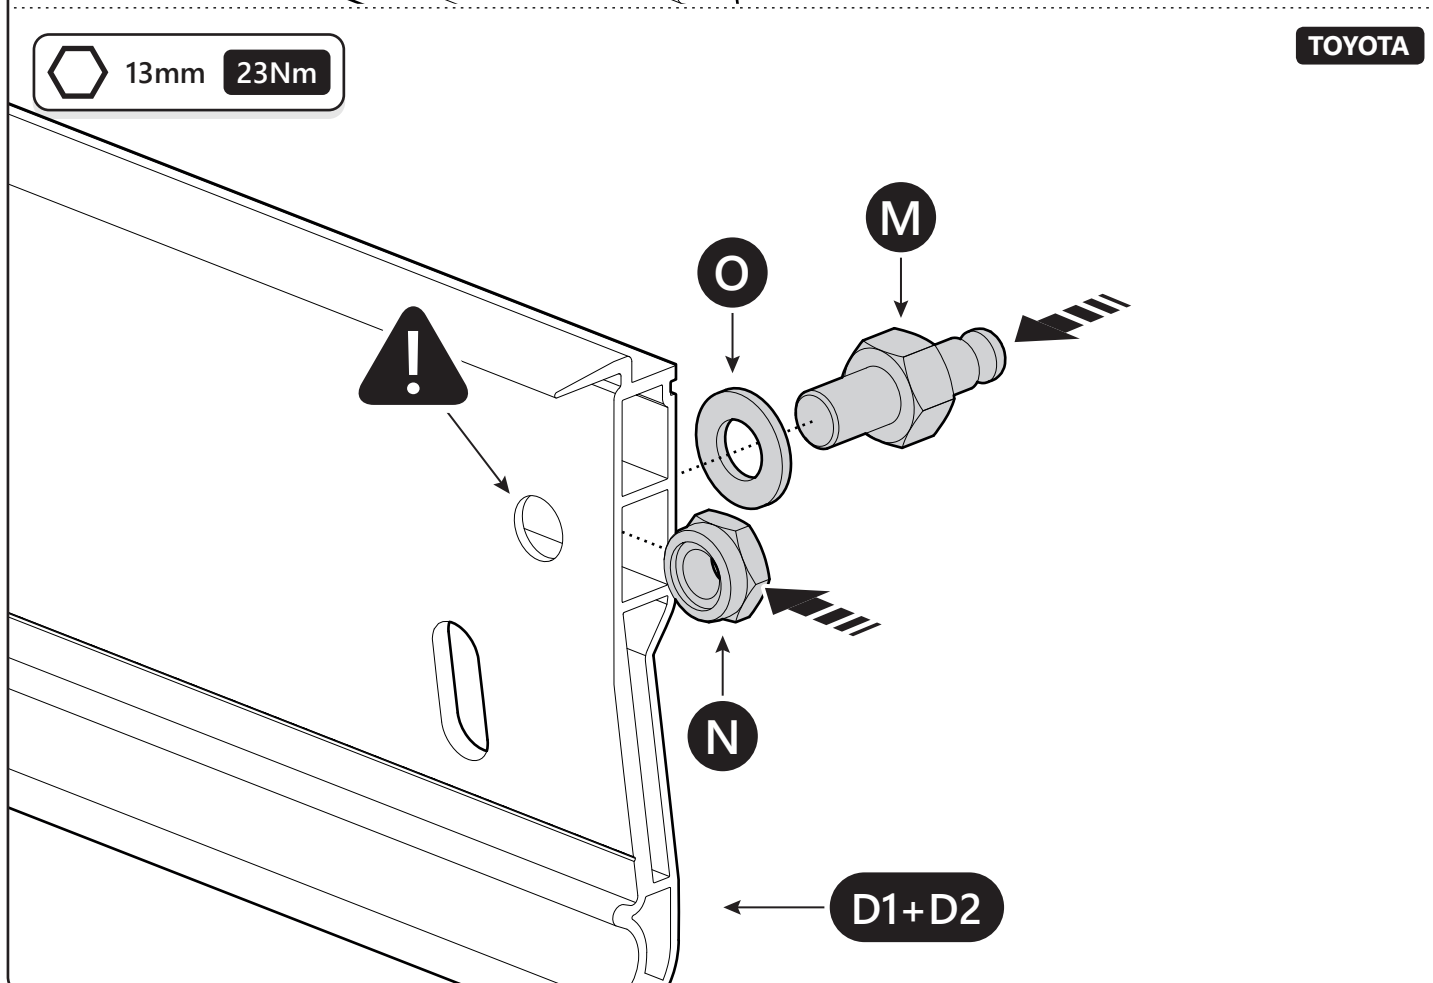

13

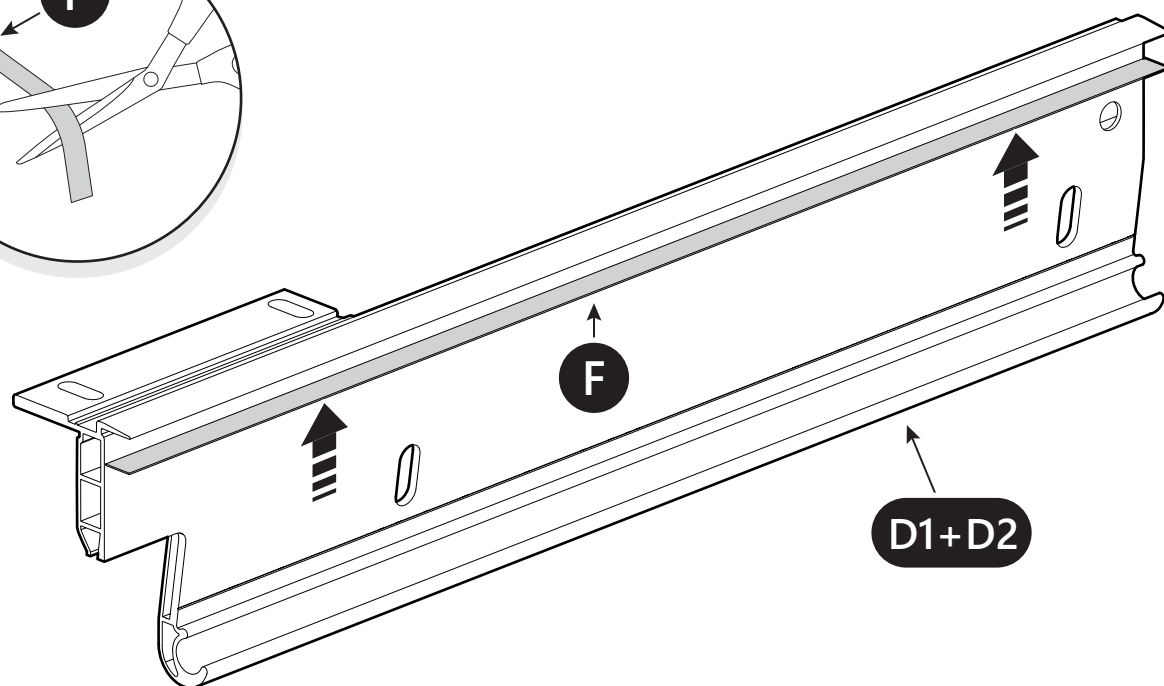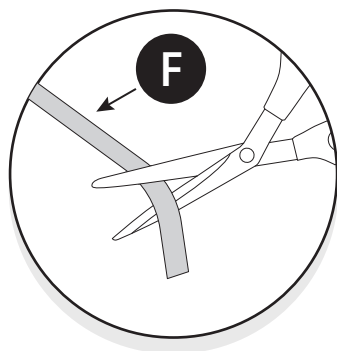


14

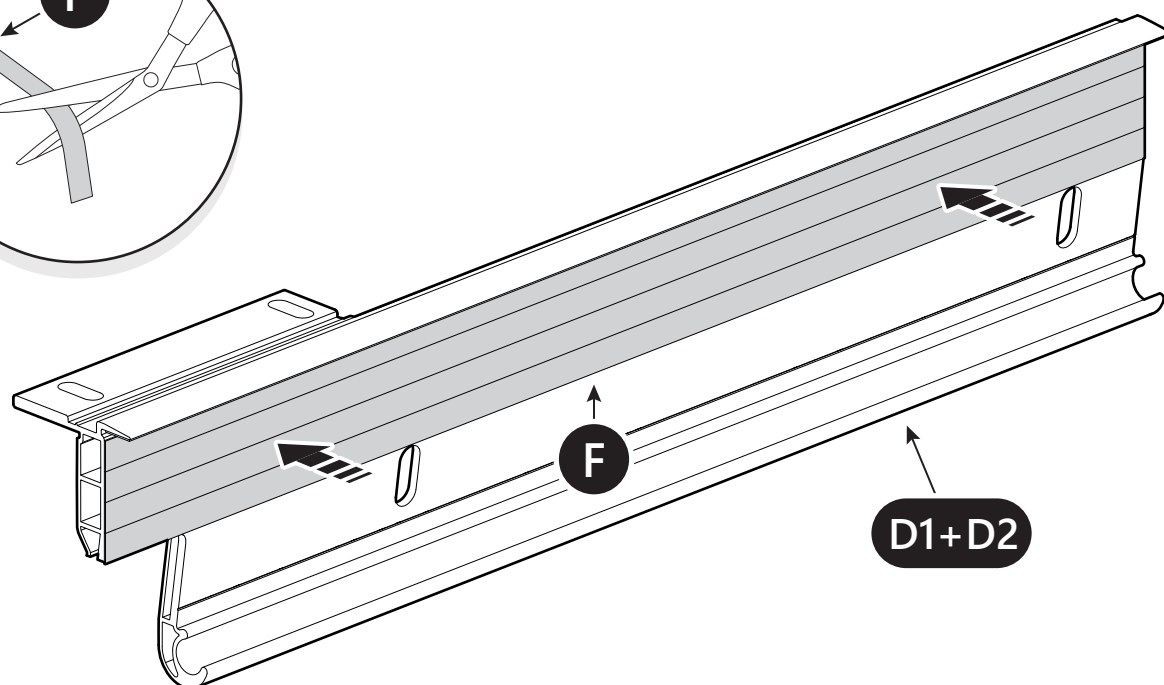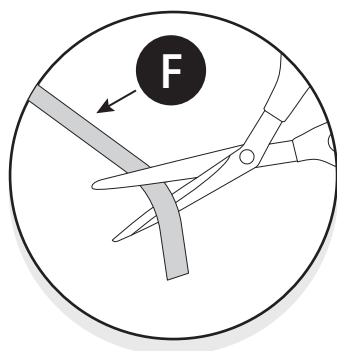







5mm



15

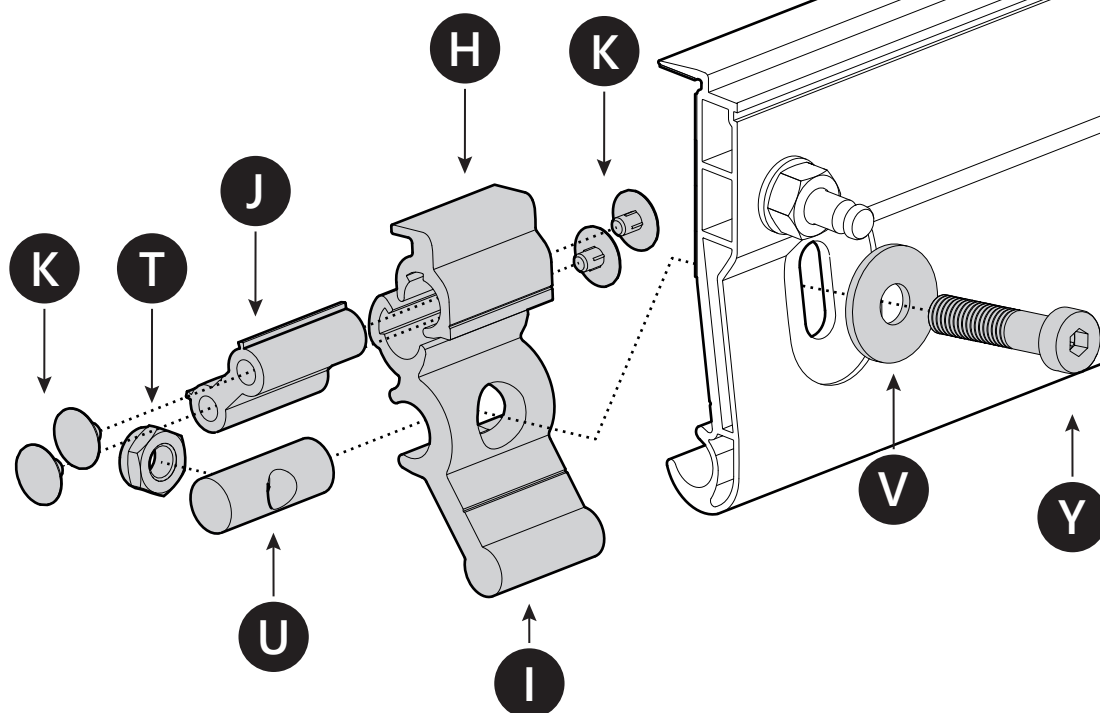


x 2

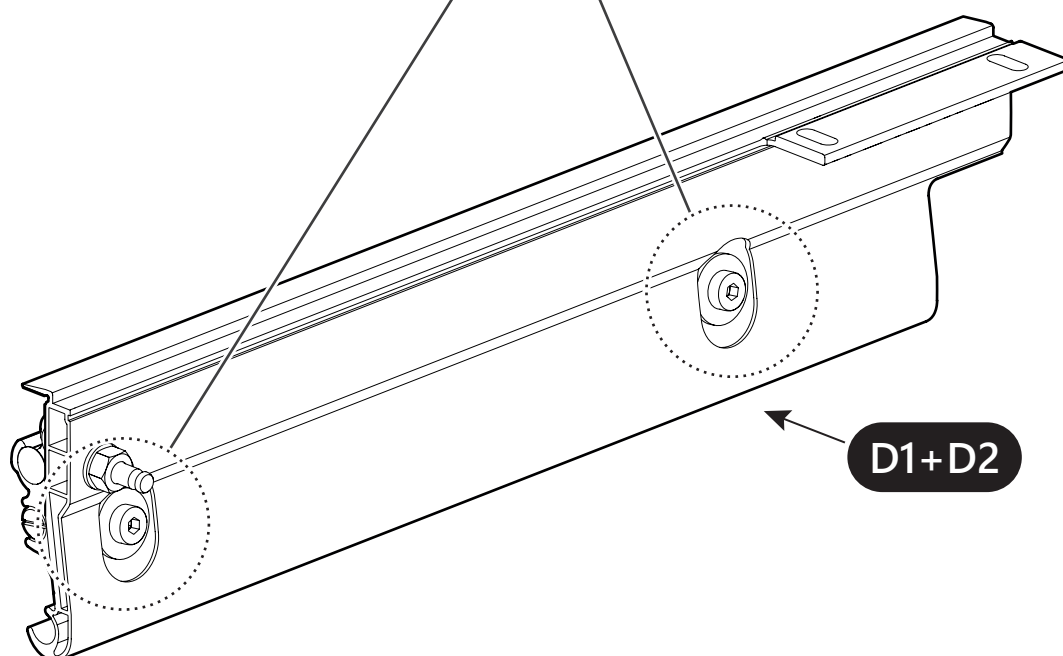

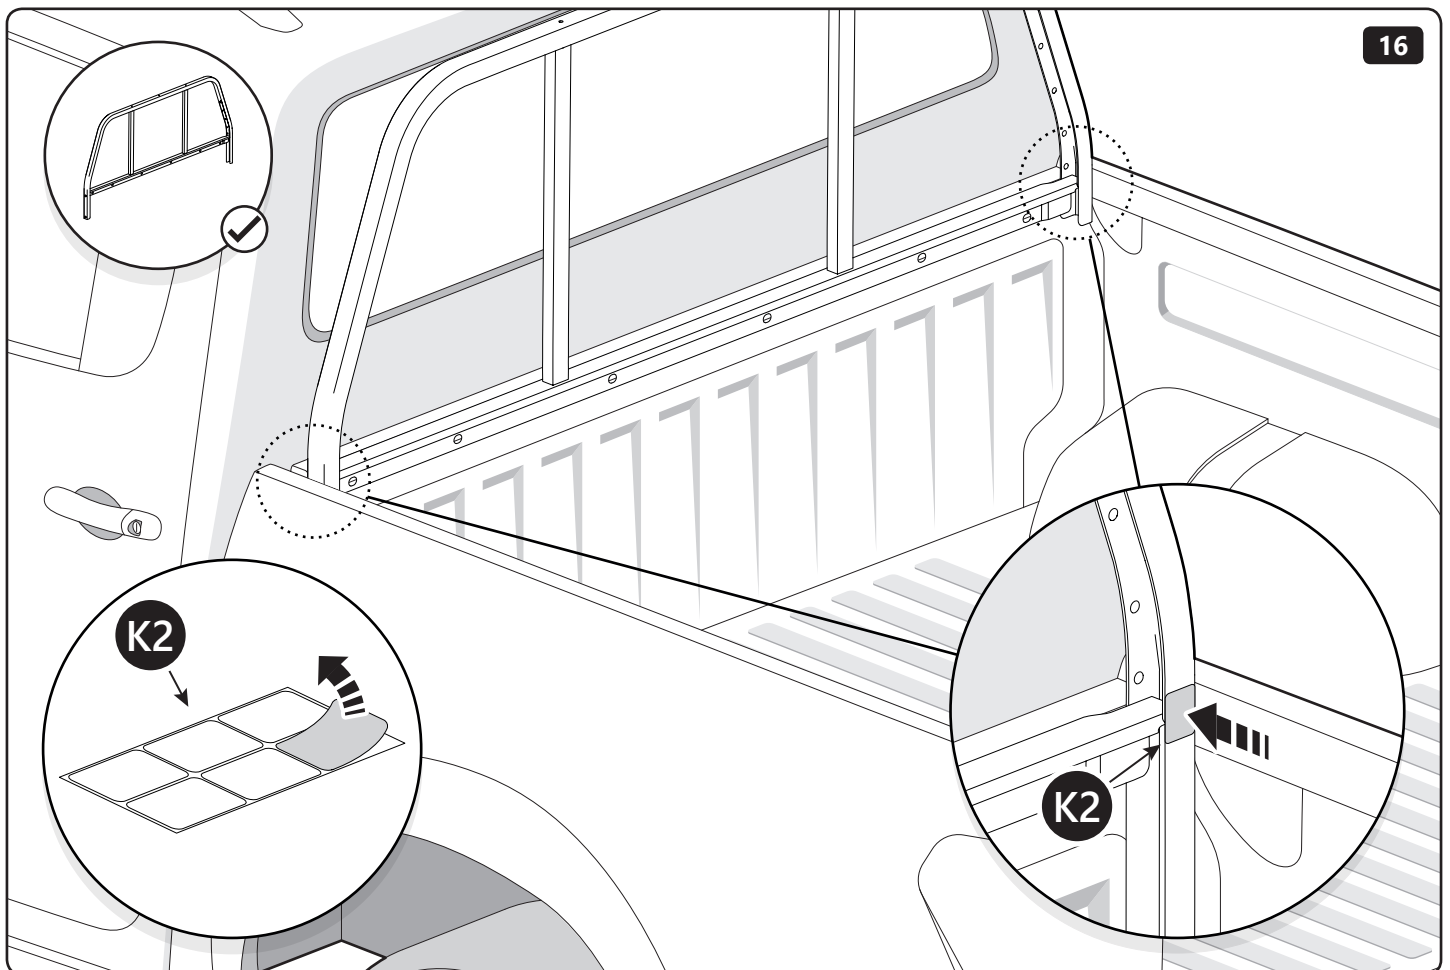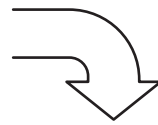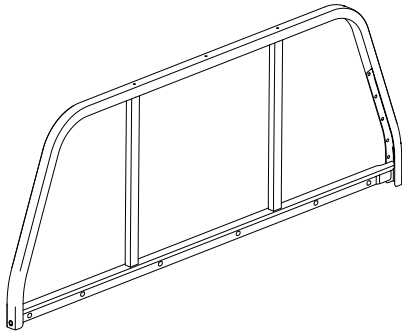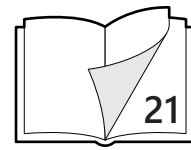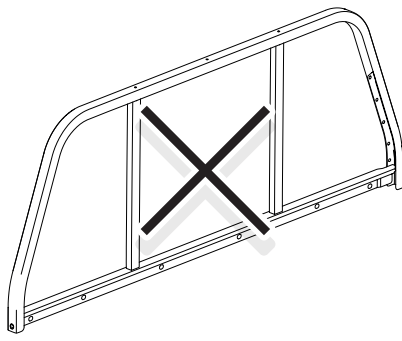


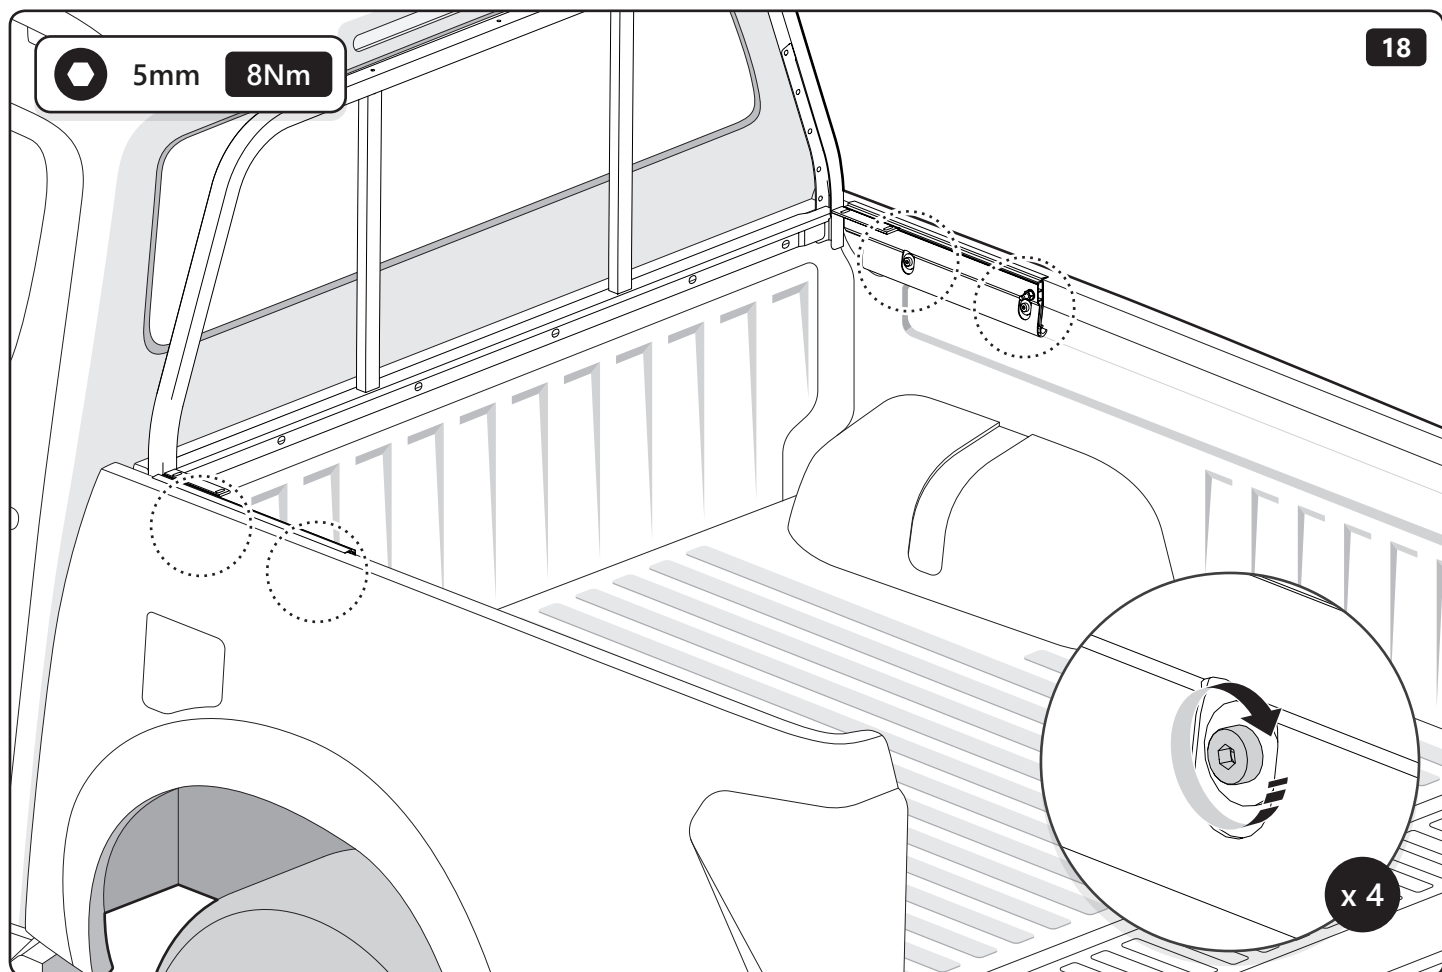
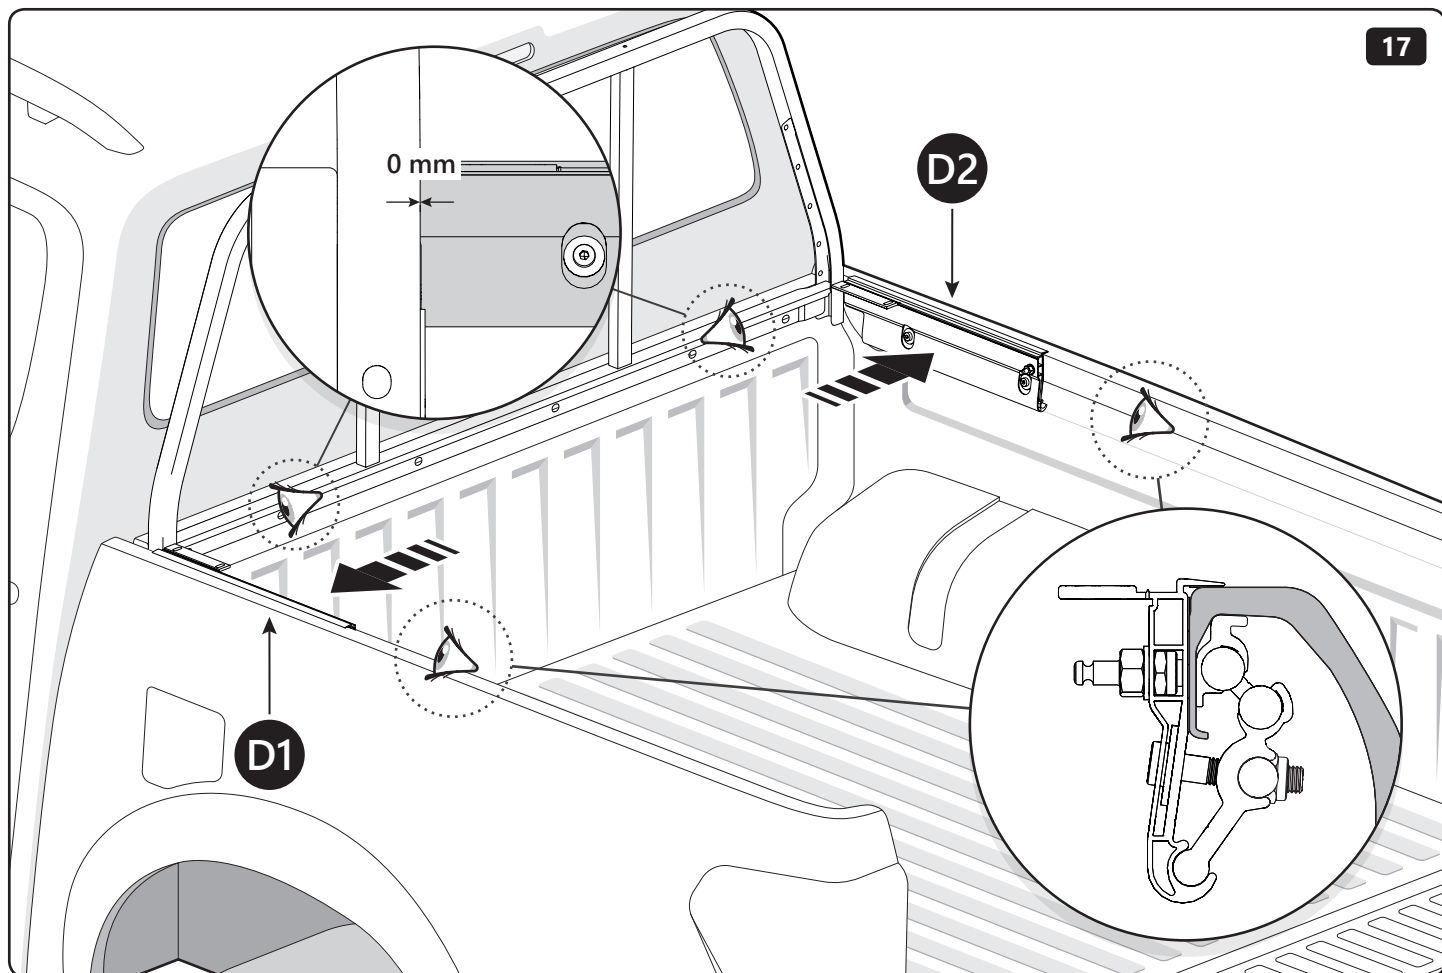



19





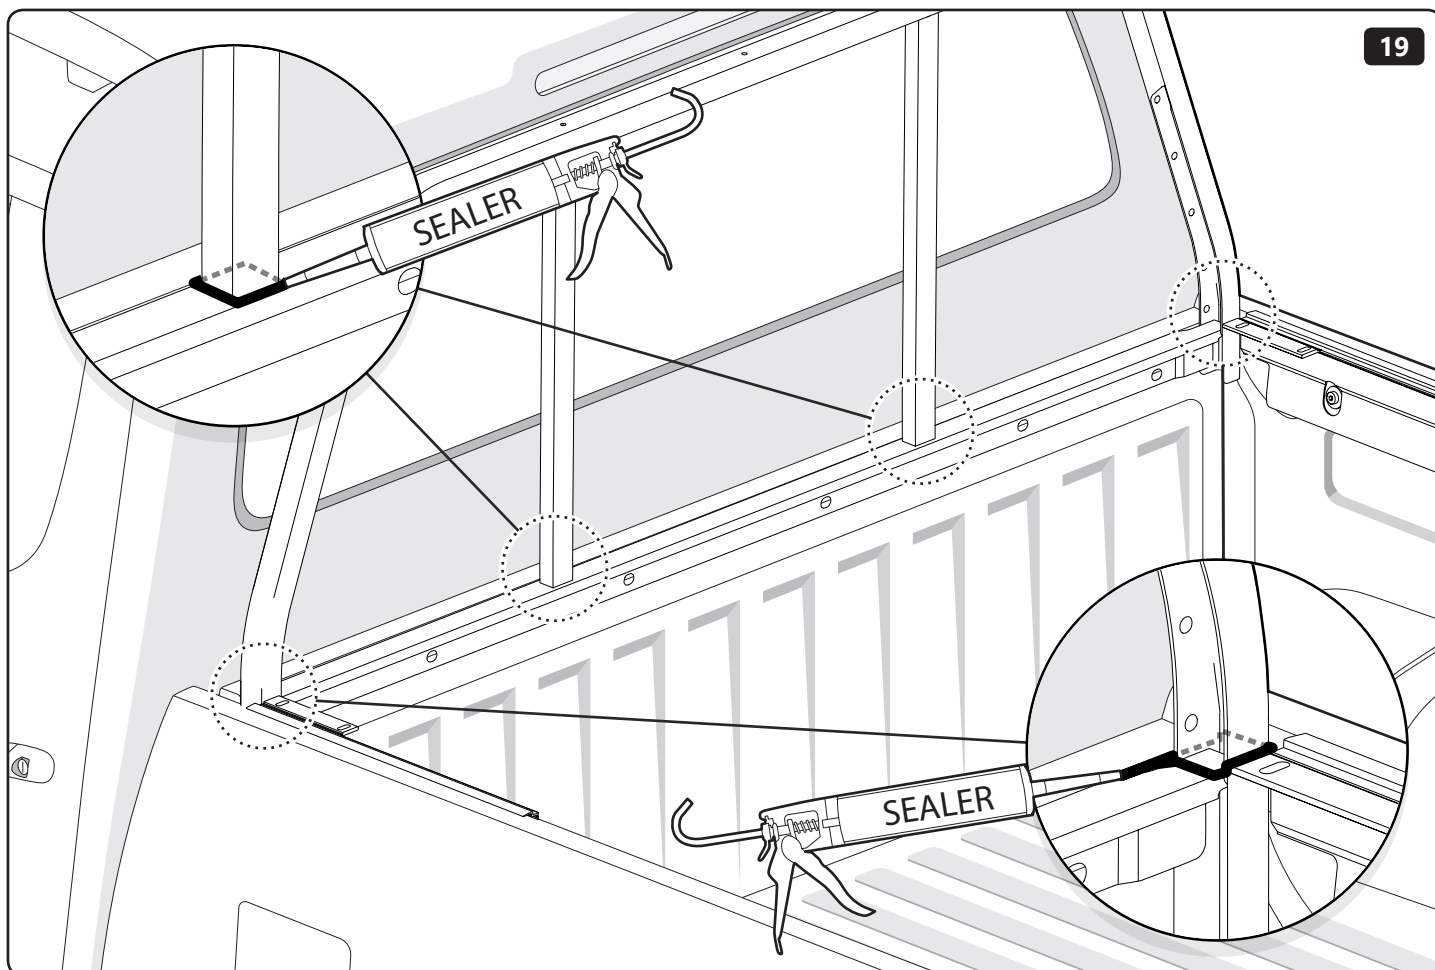




20


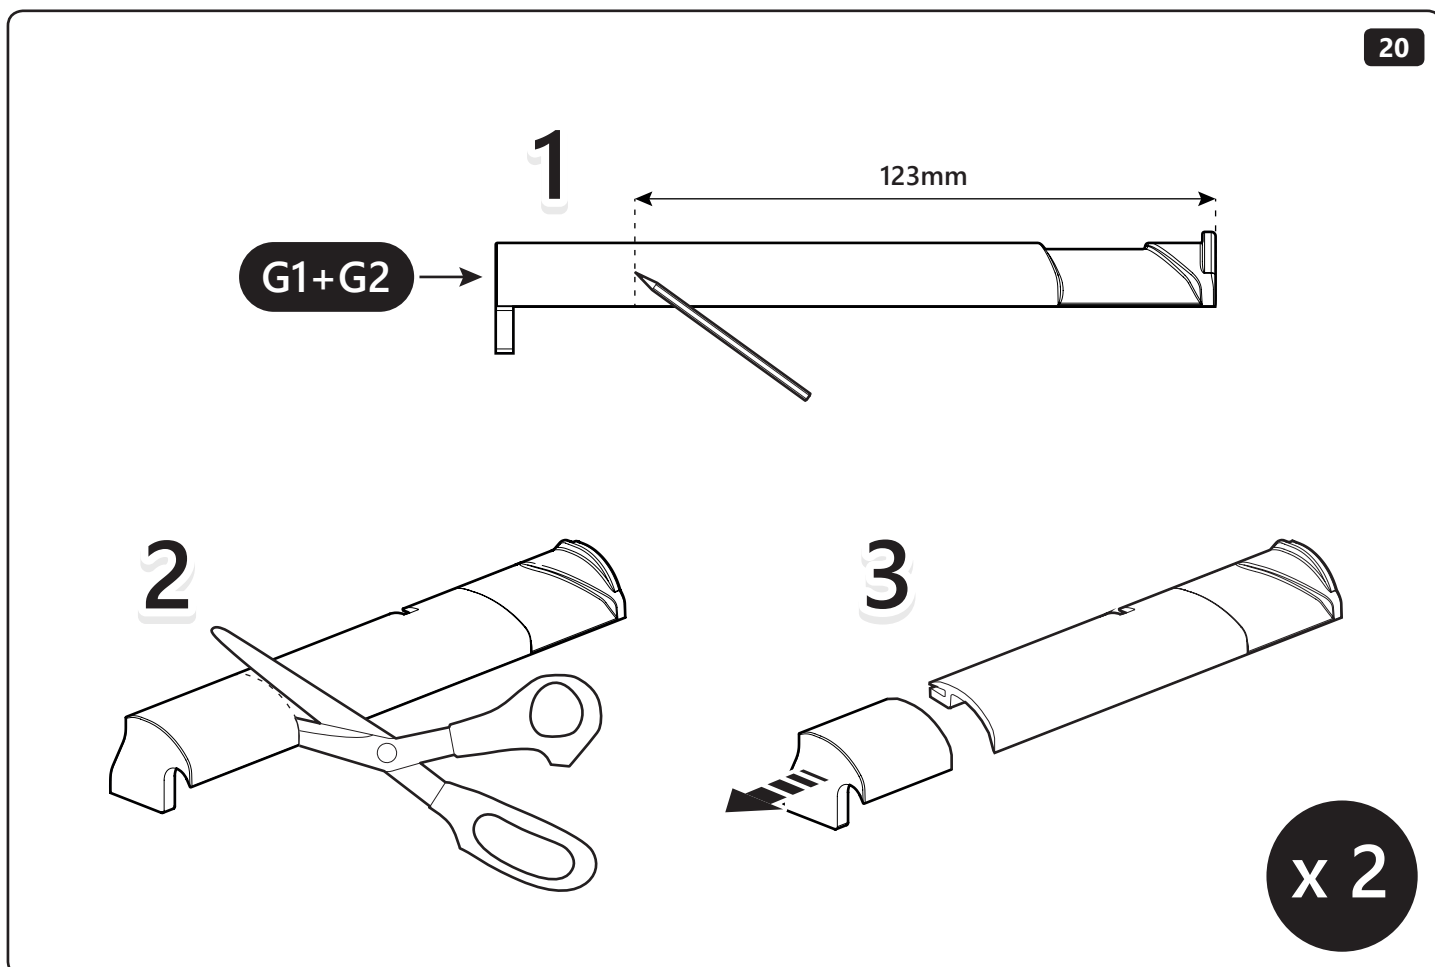


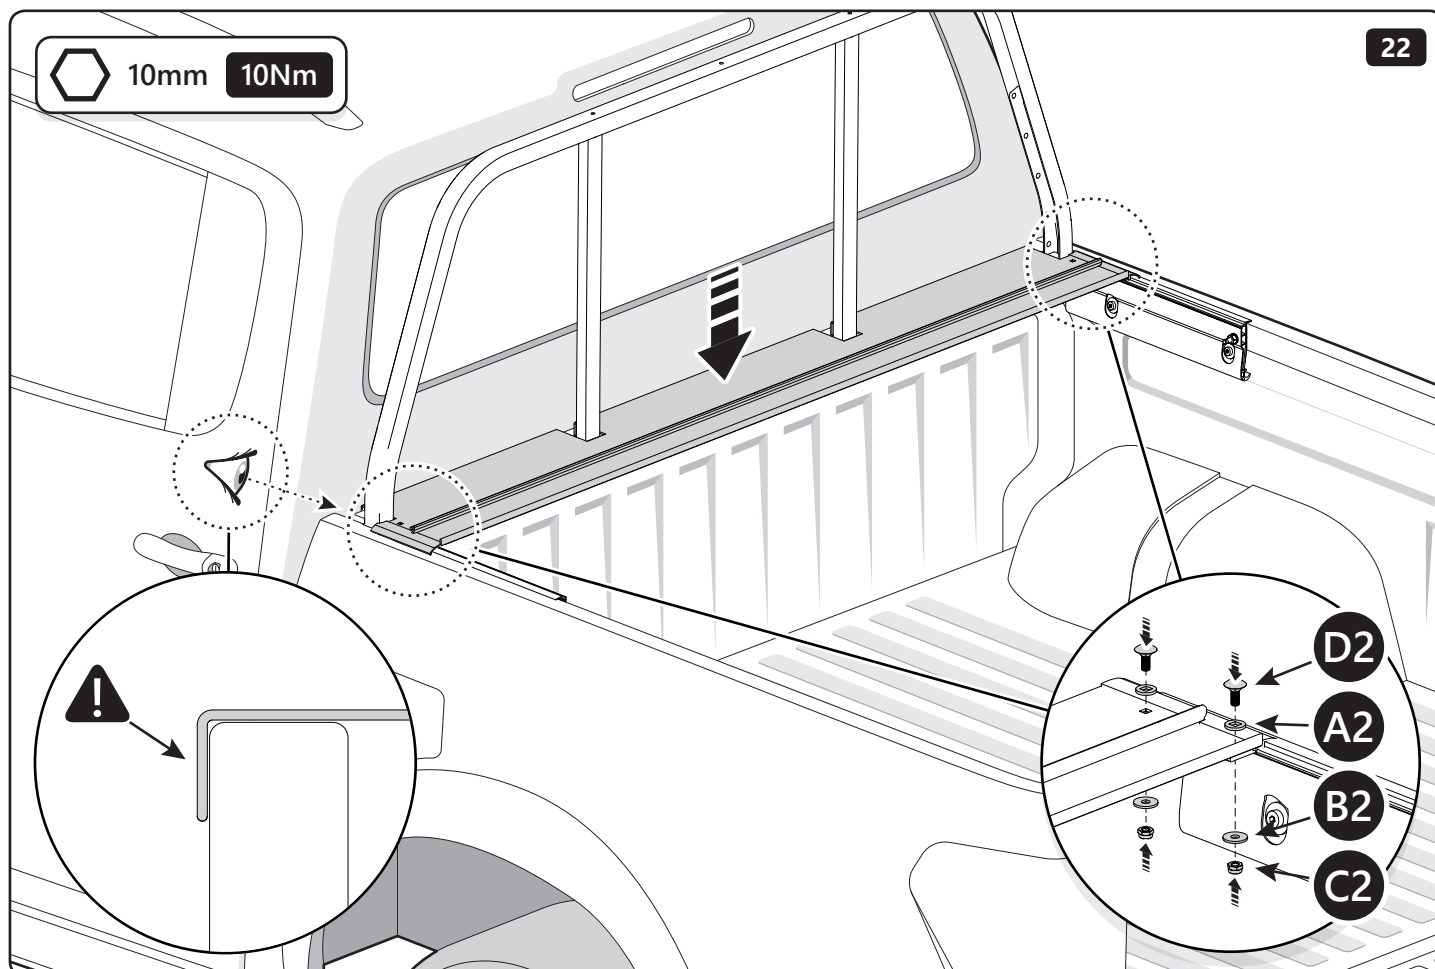
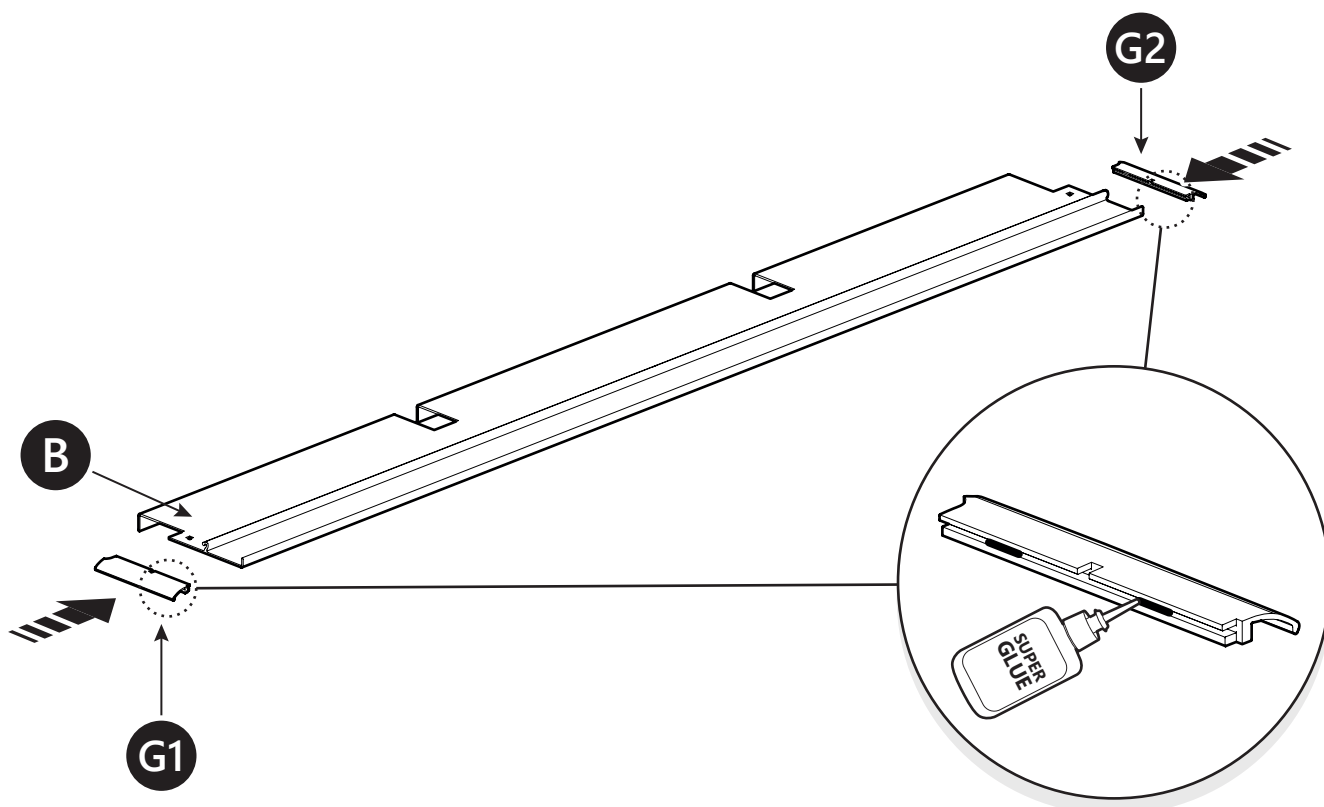



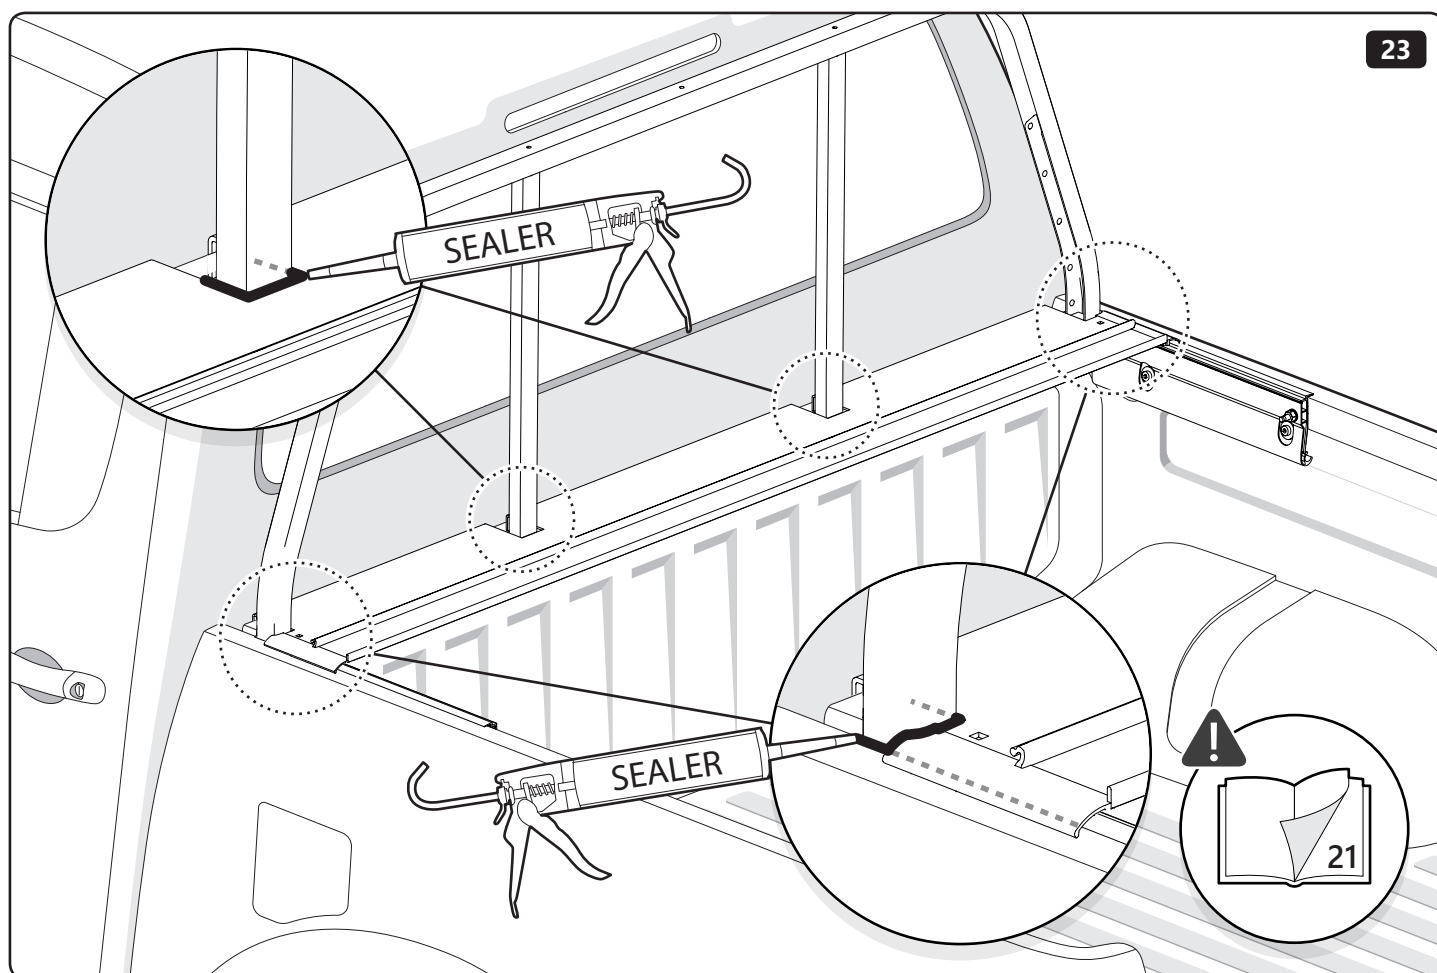


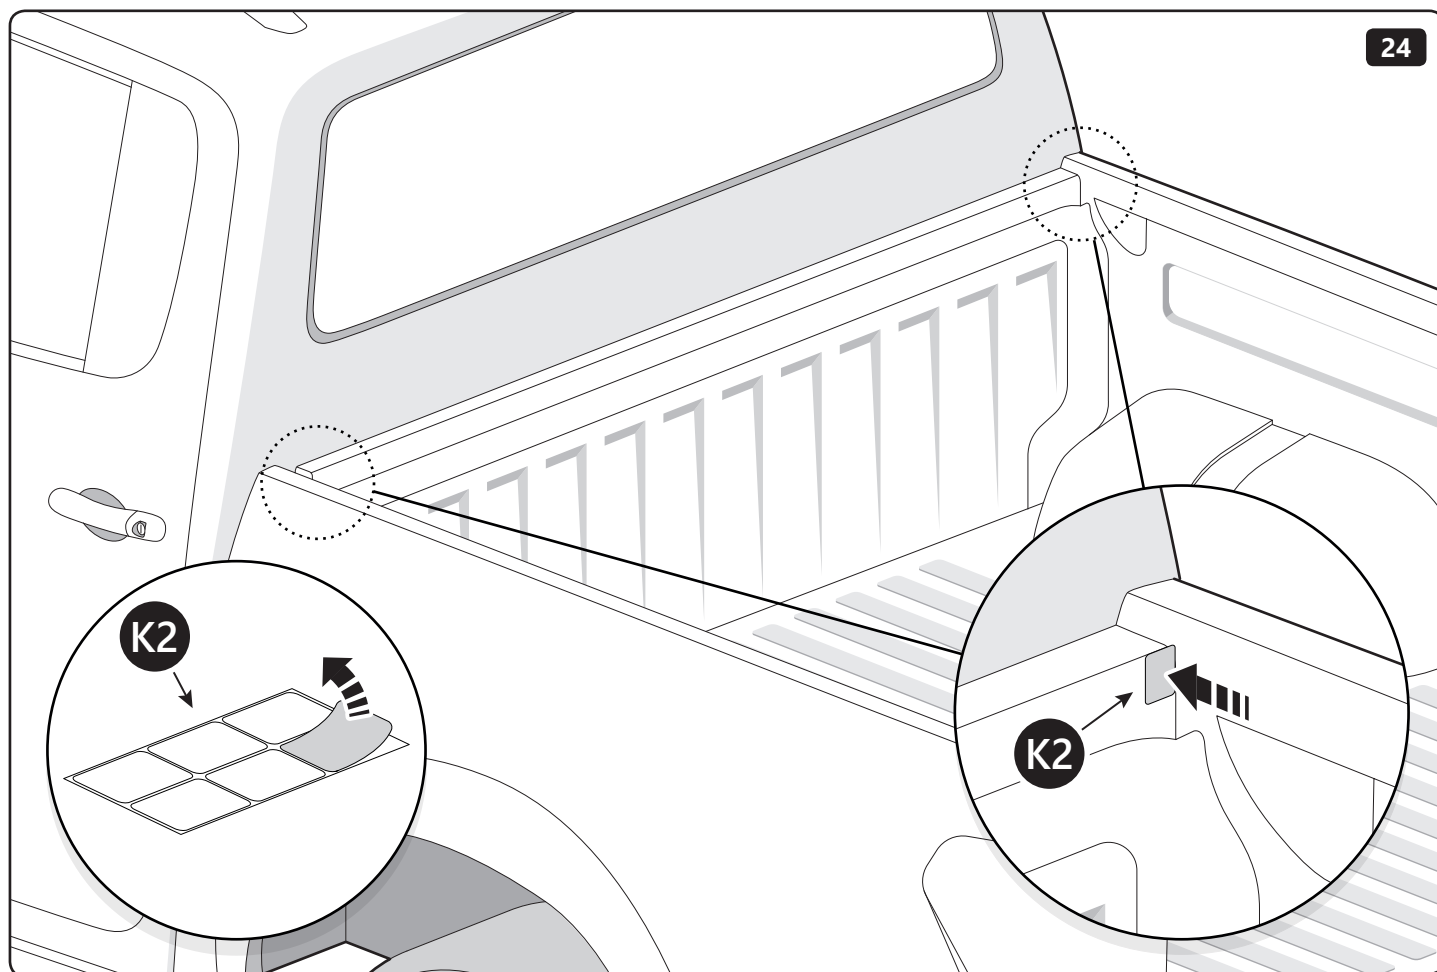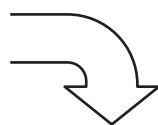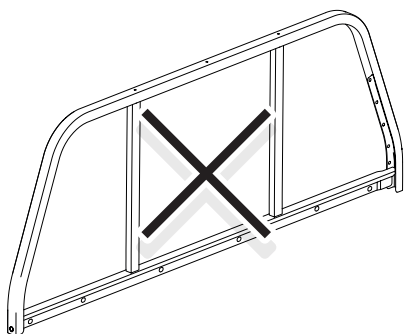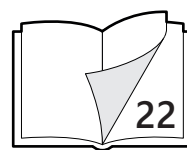
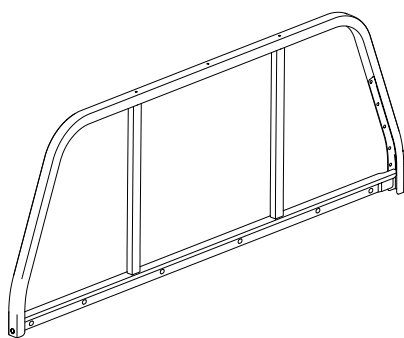


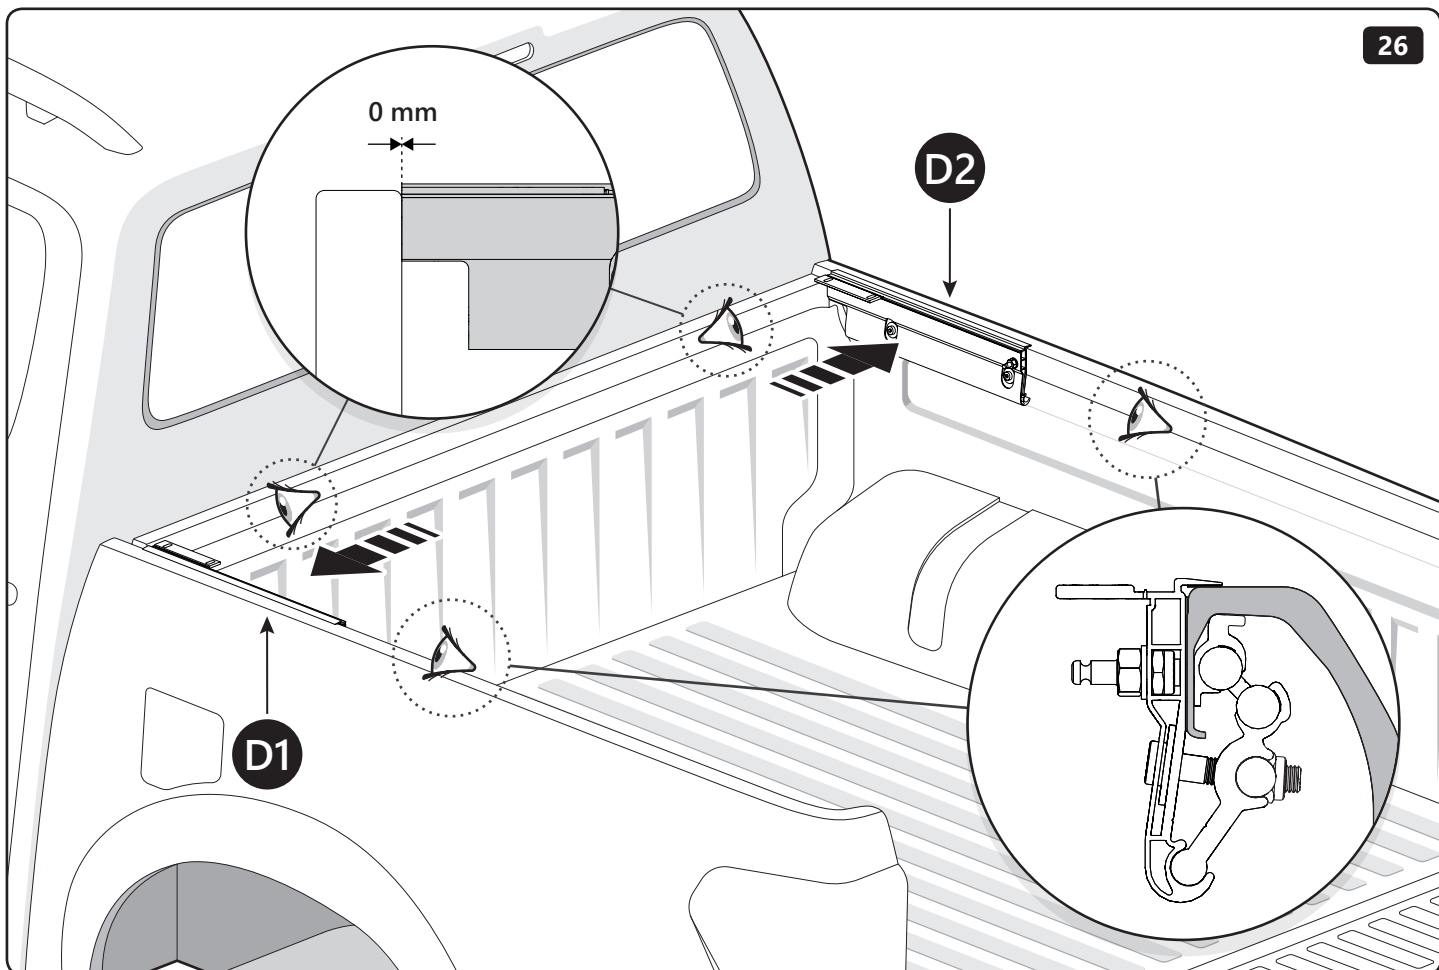
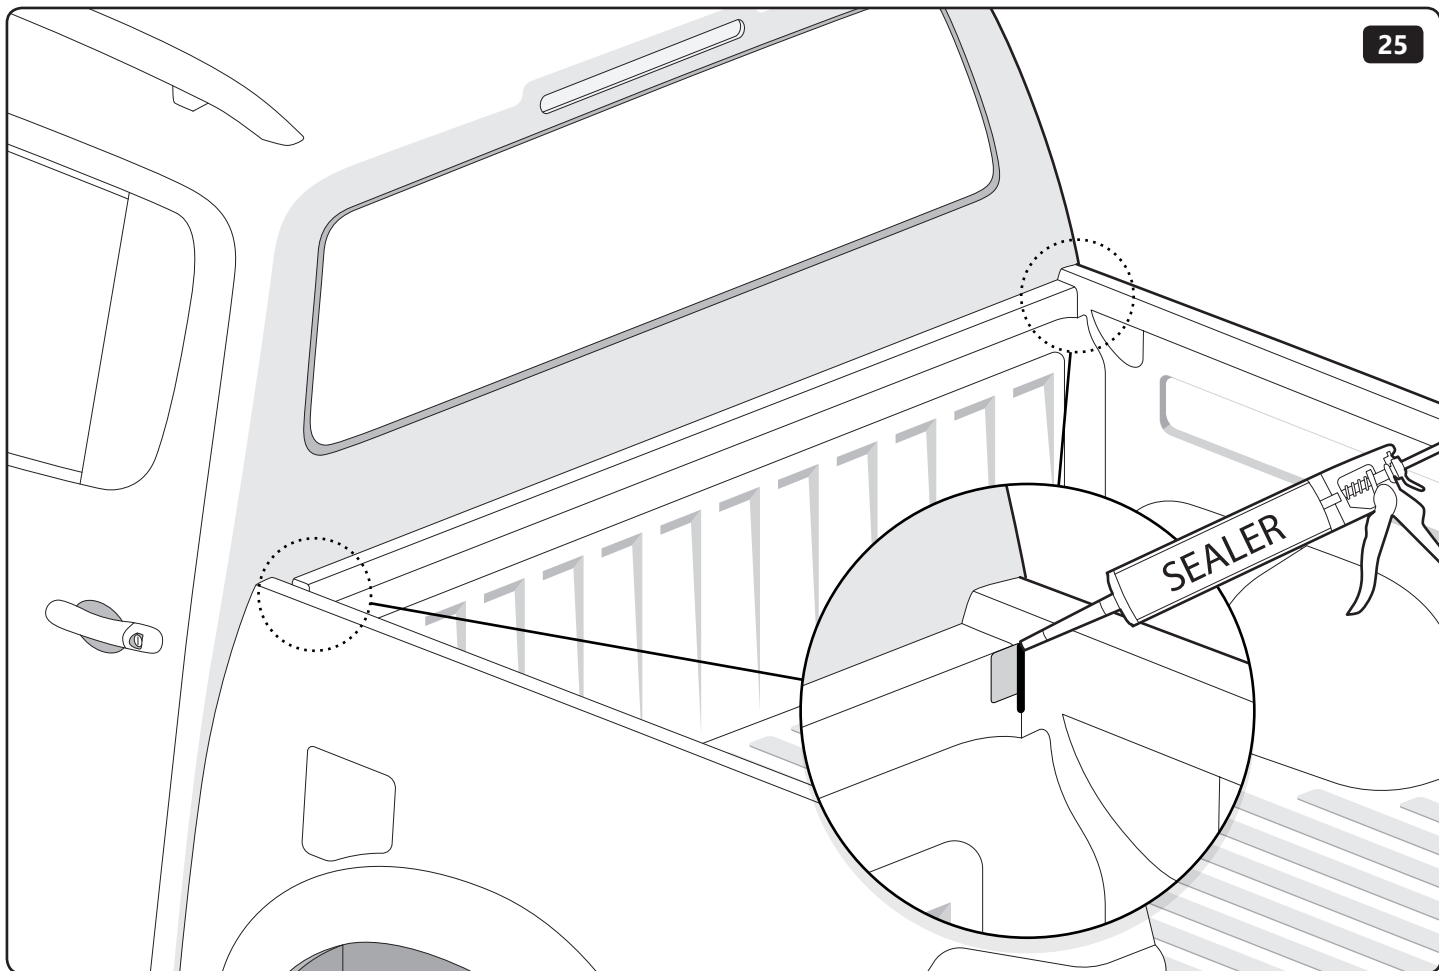


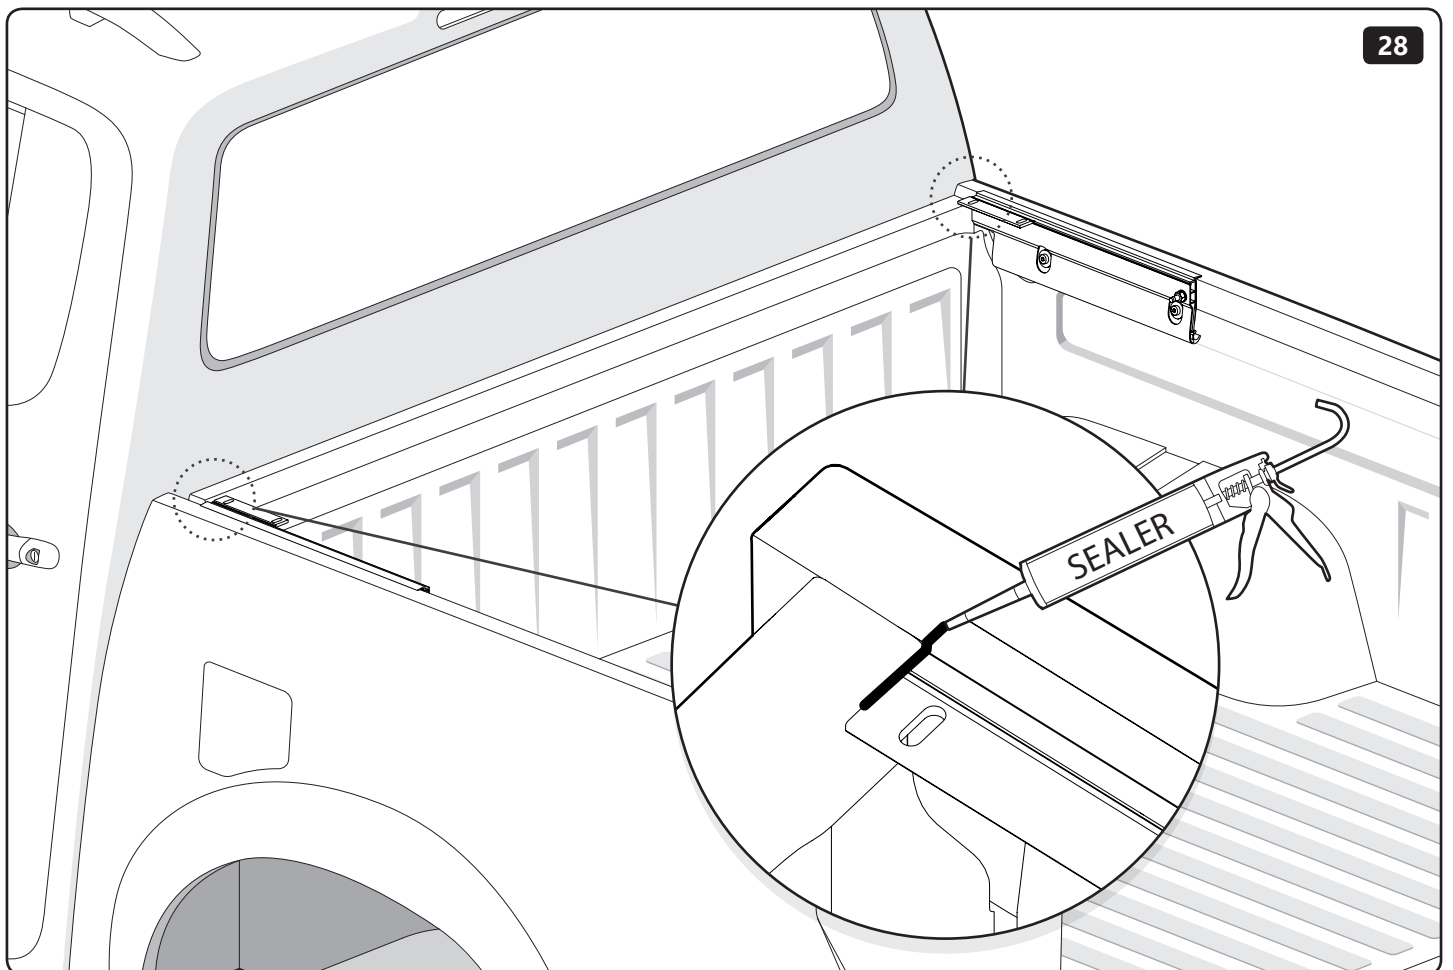
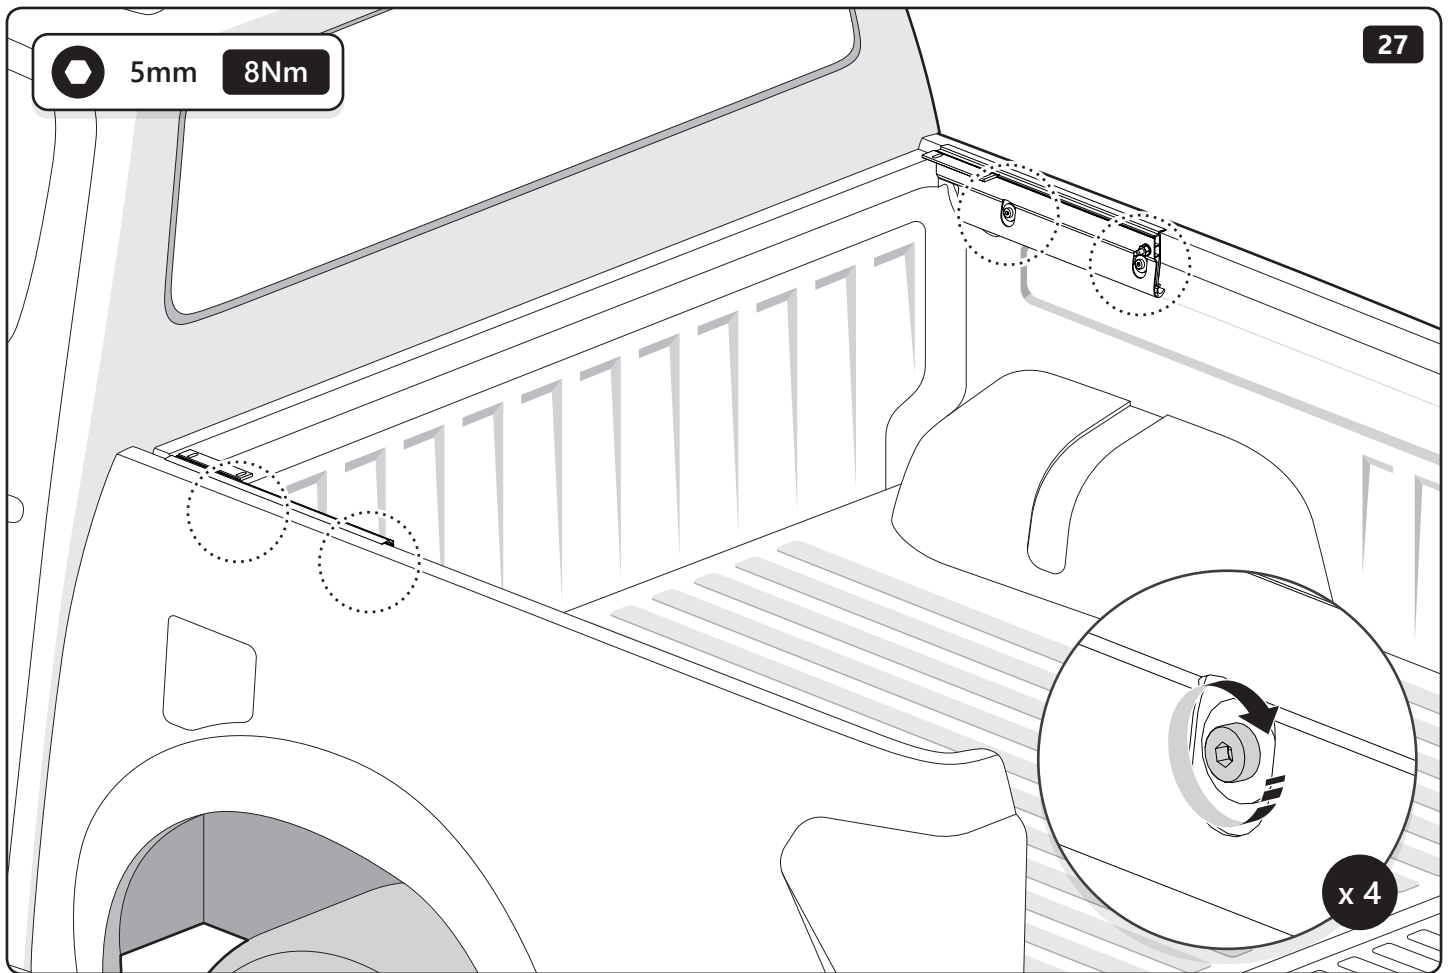


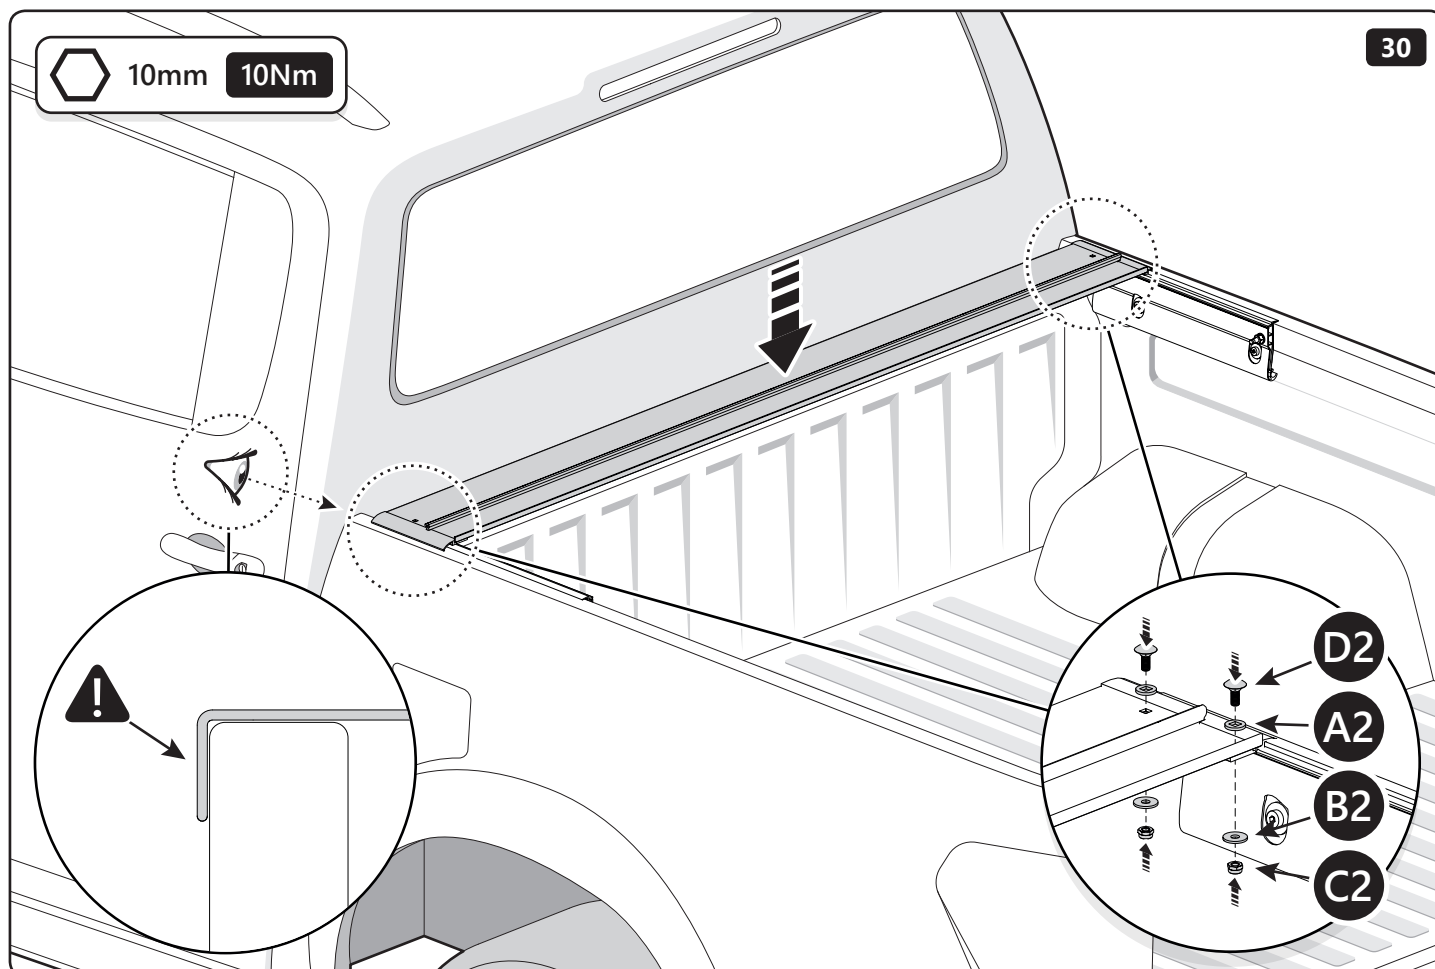
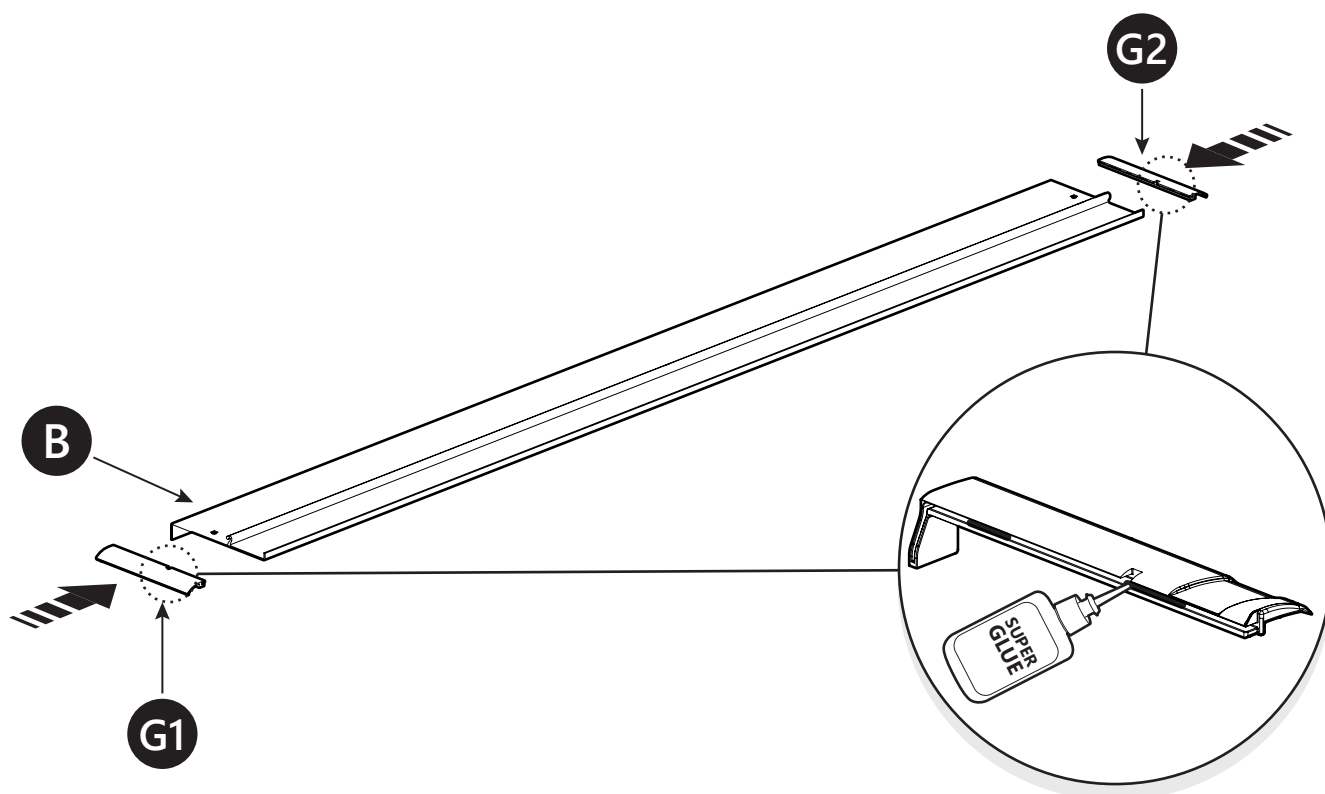


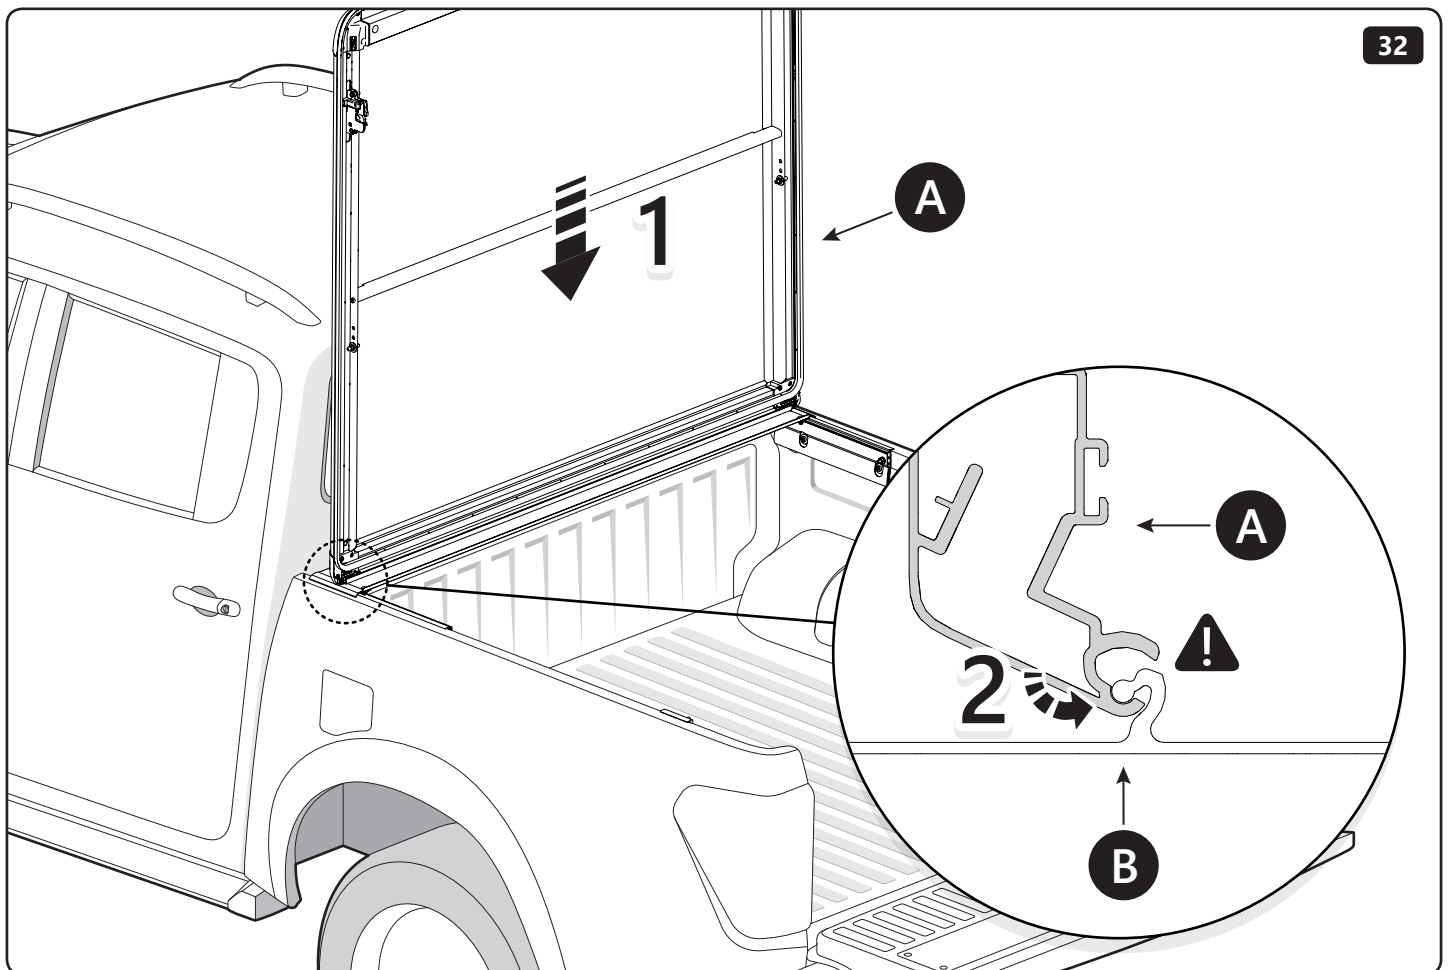
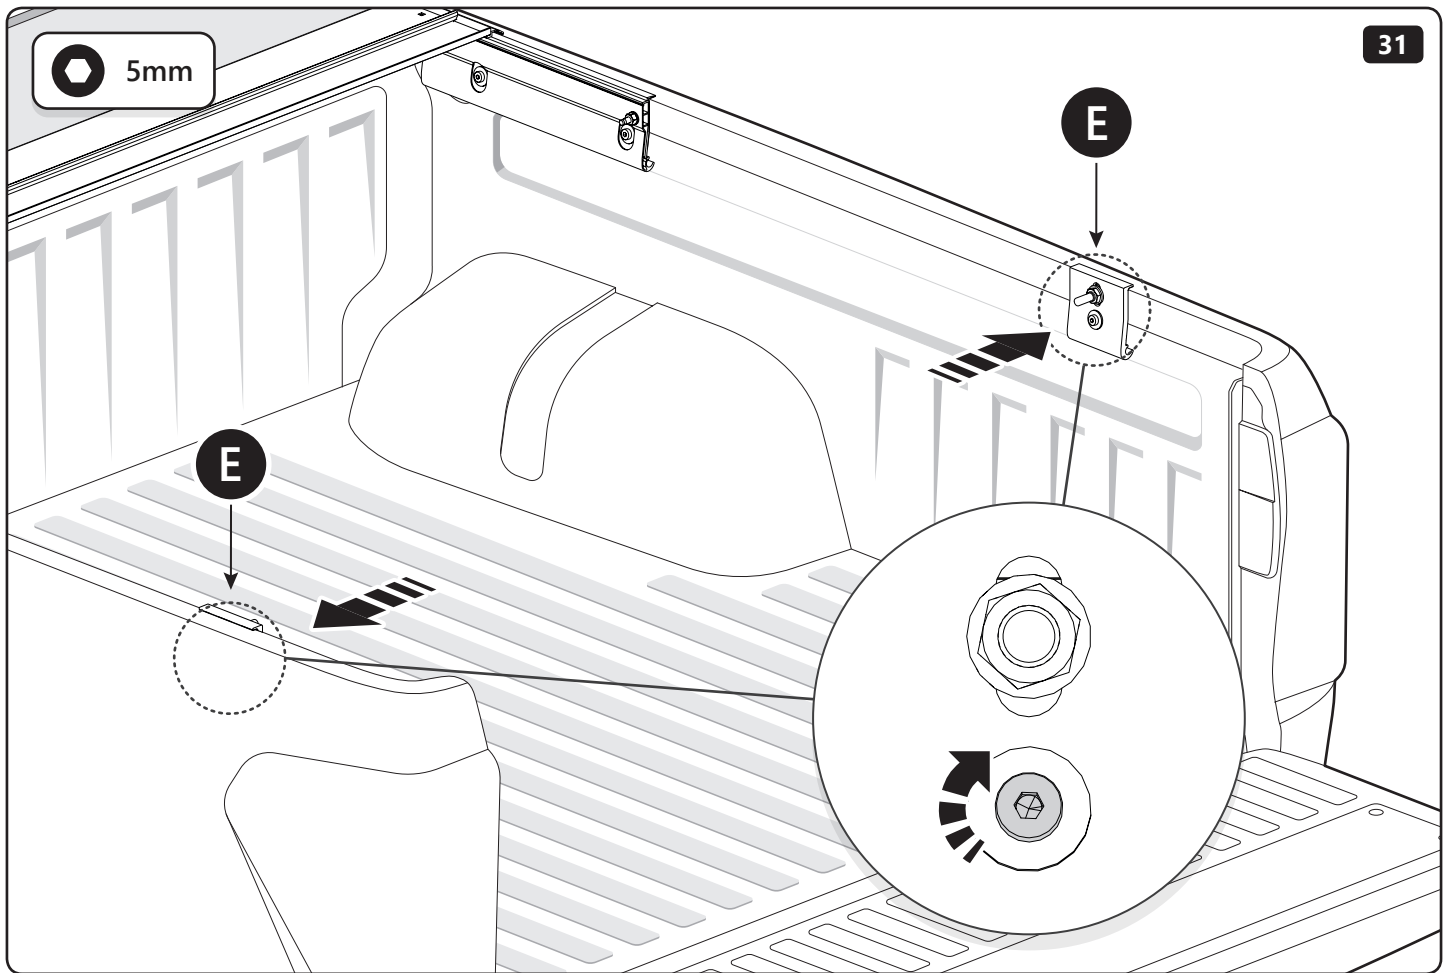


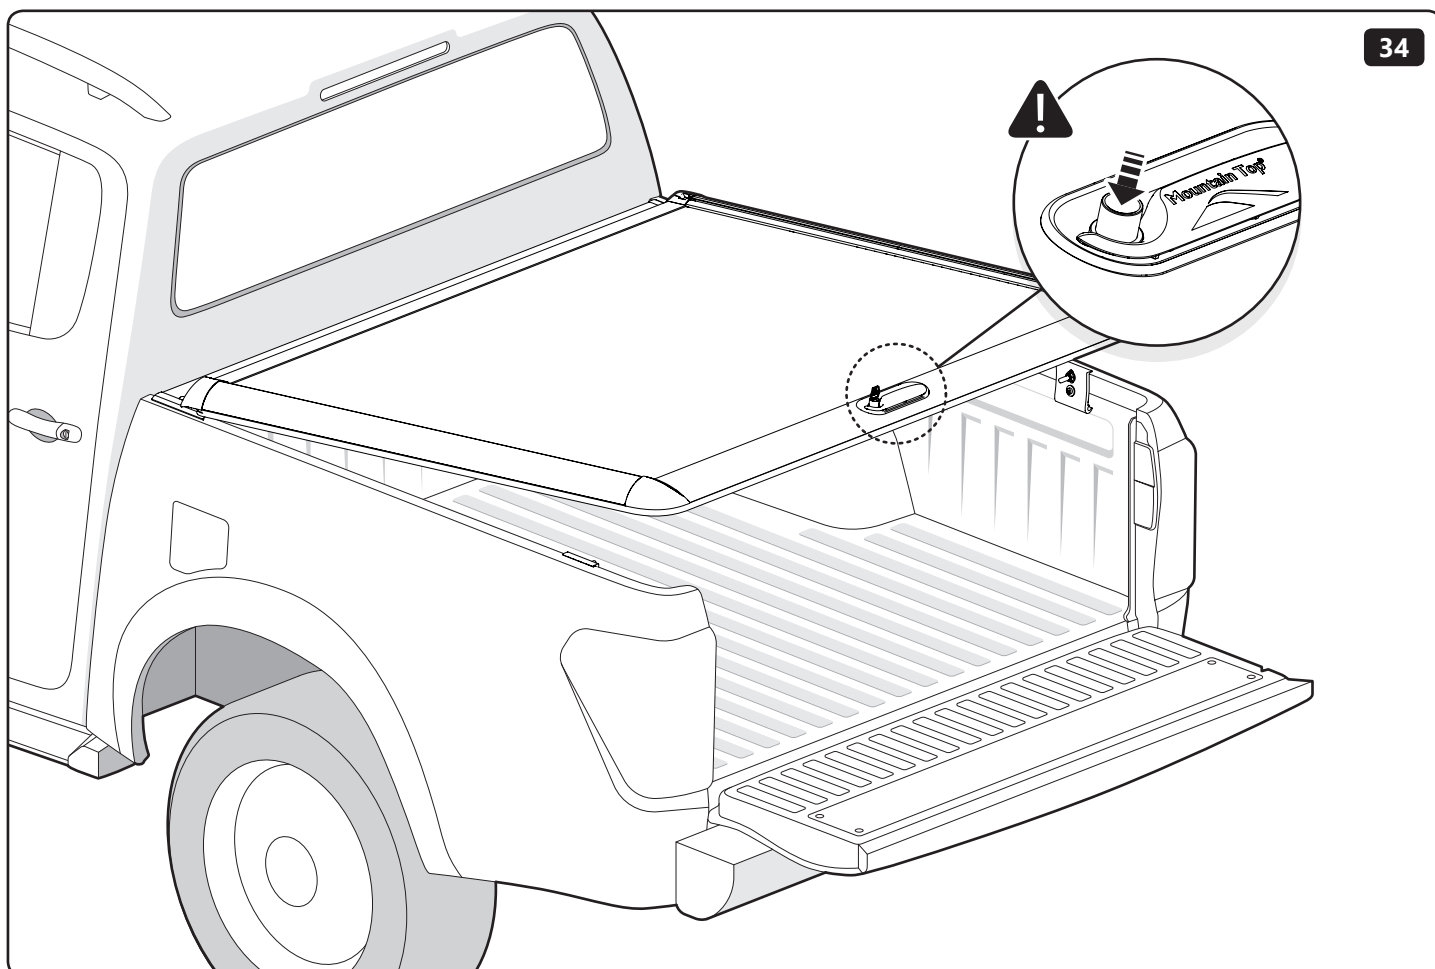
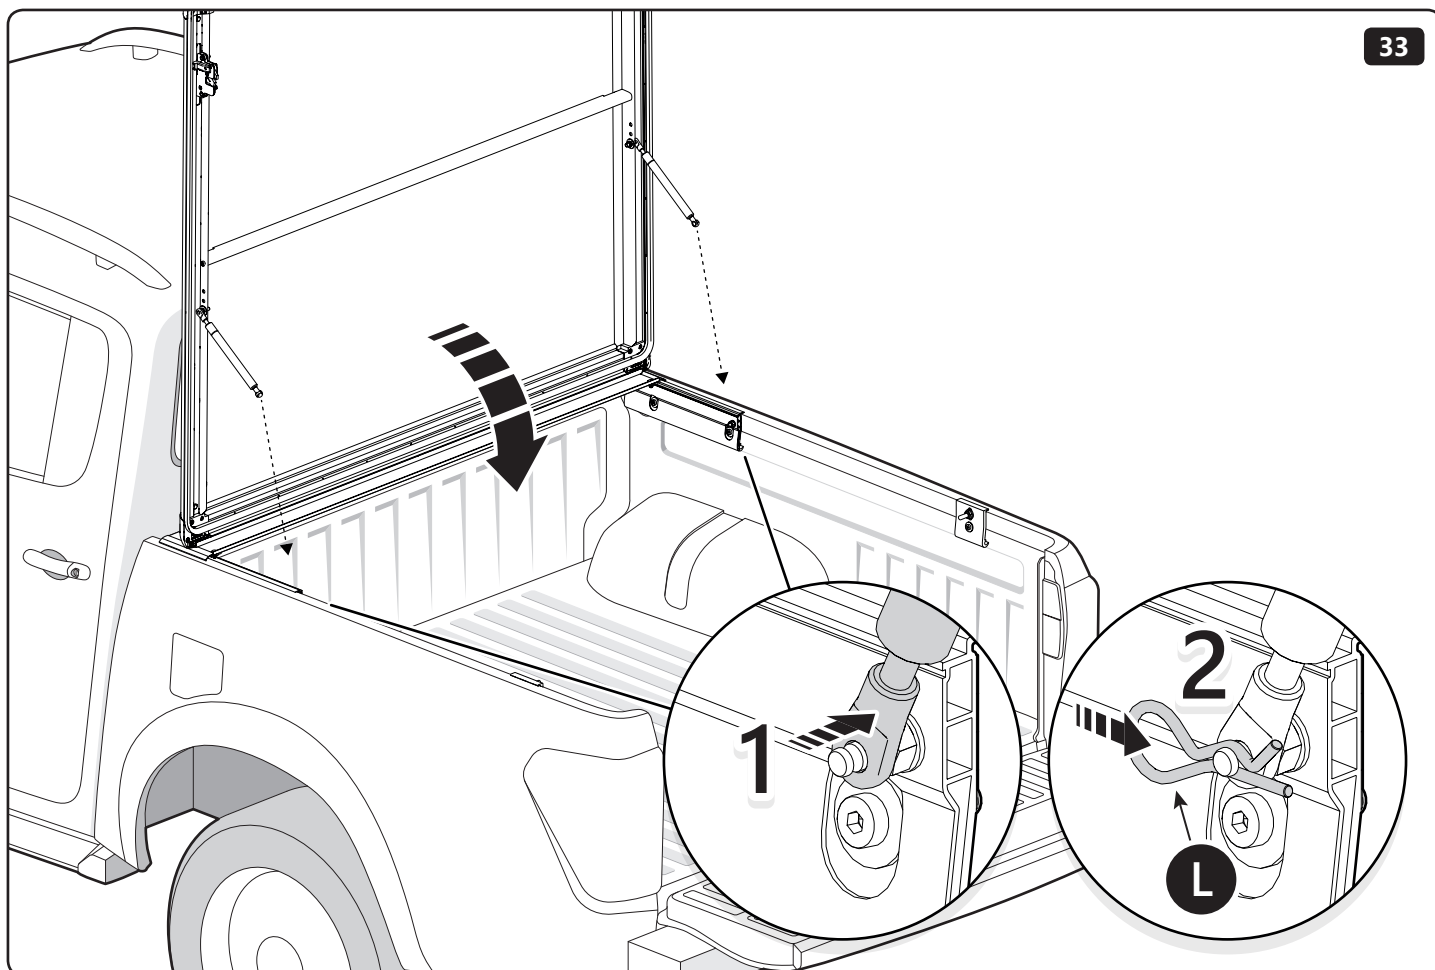


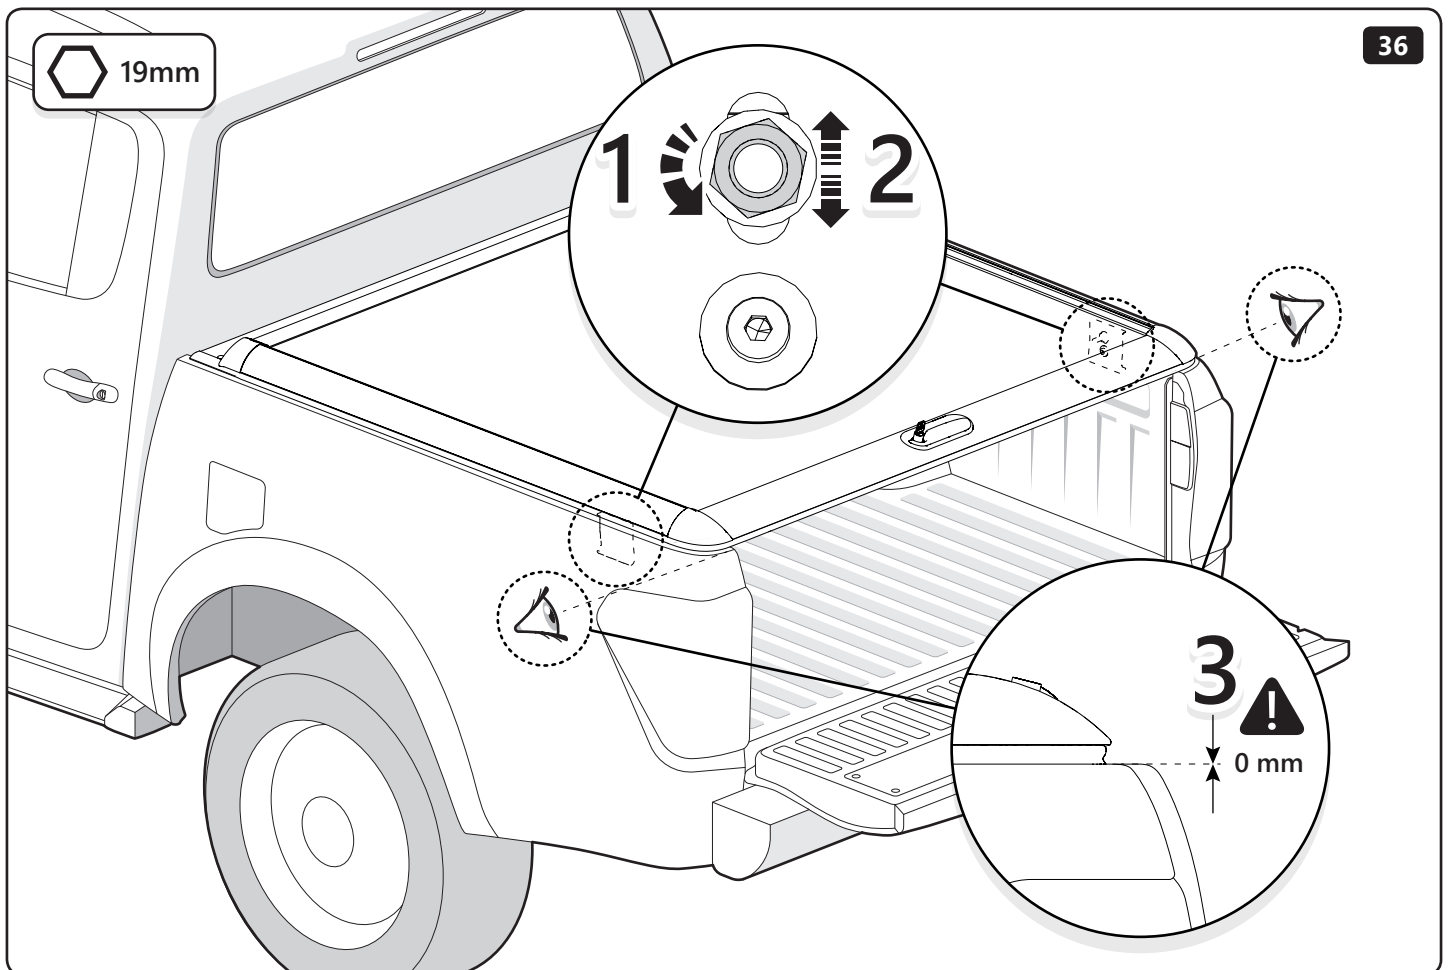
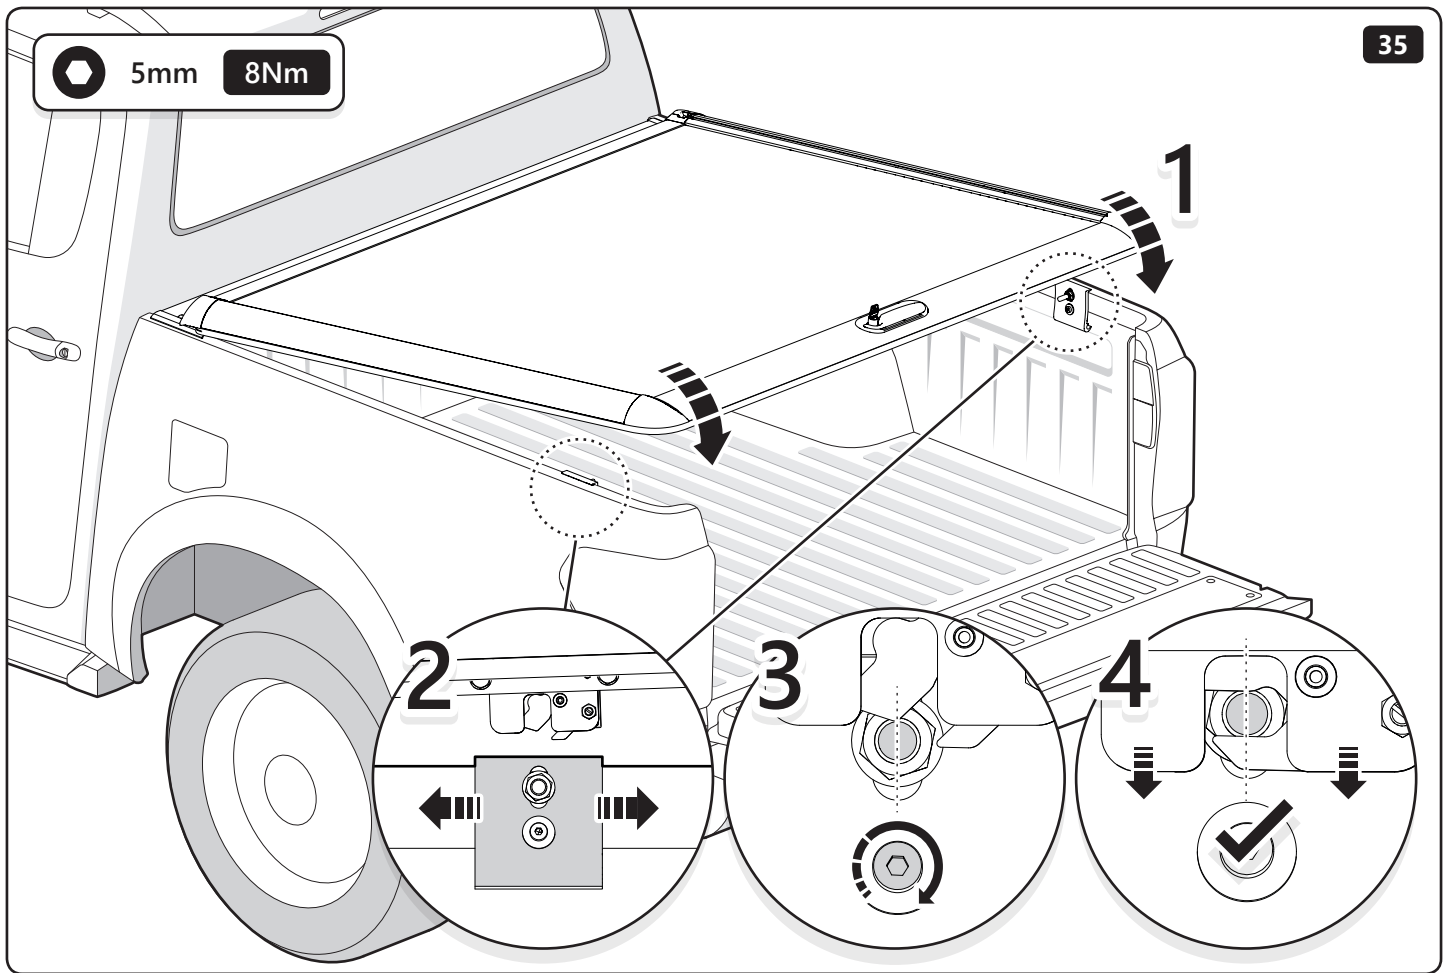


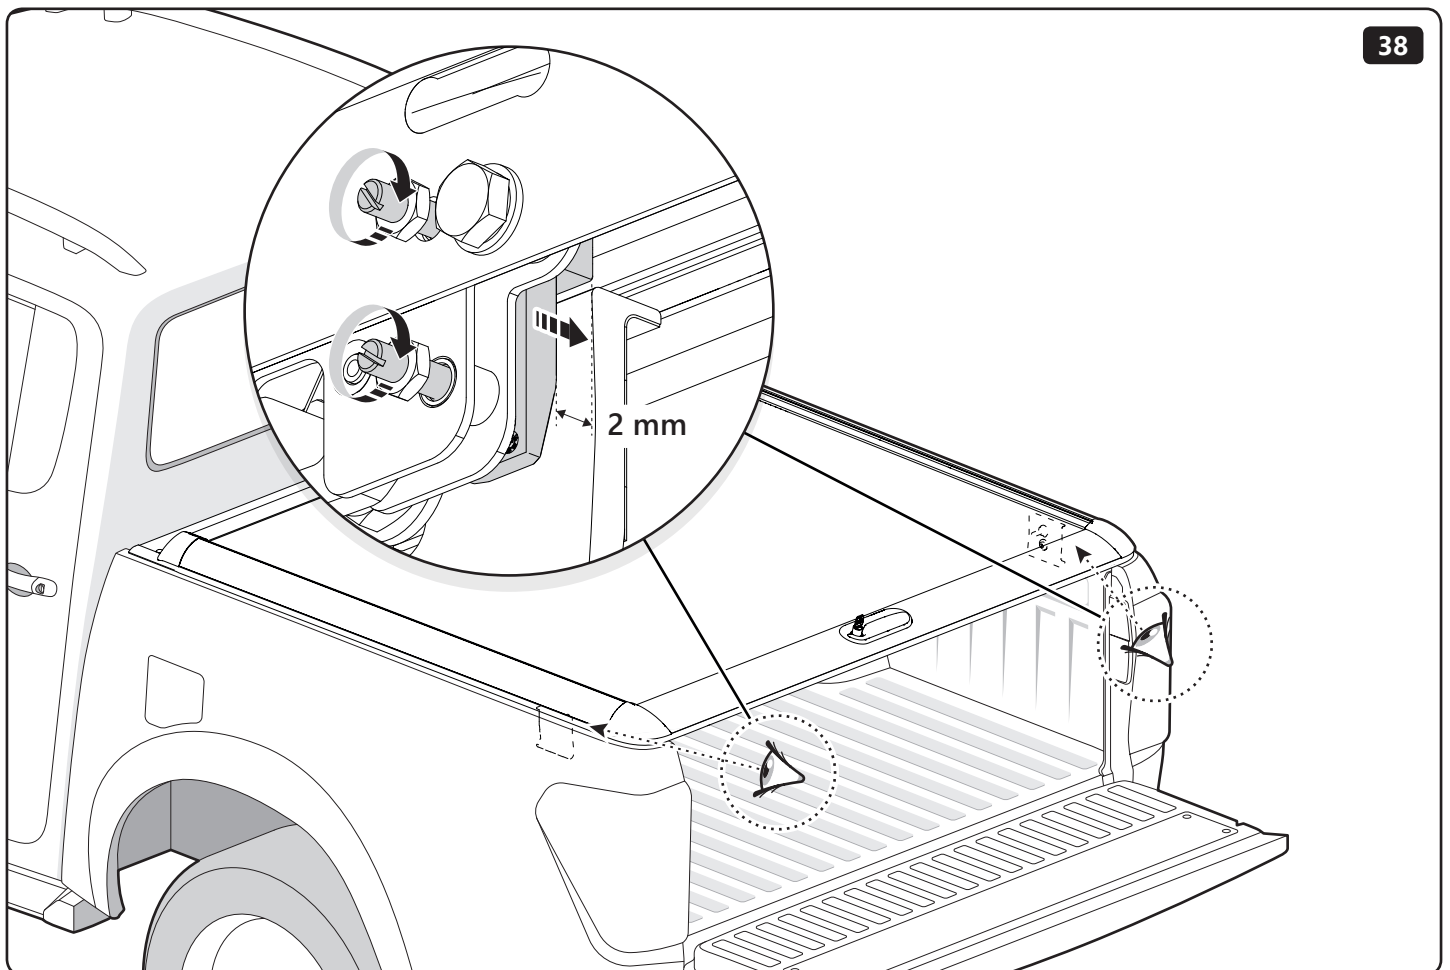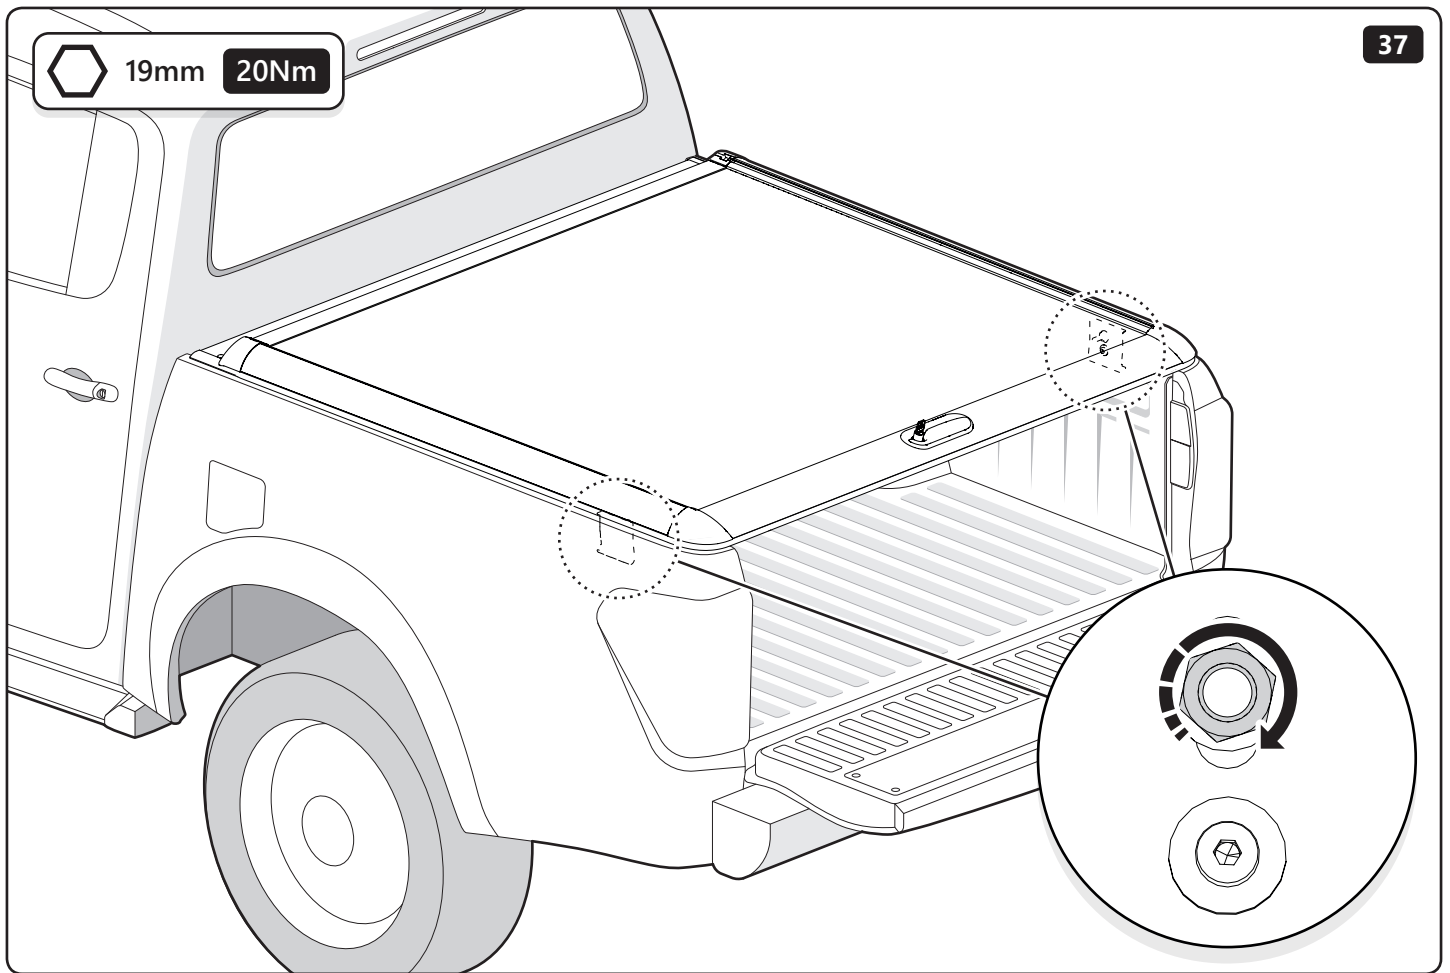

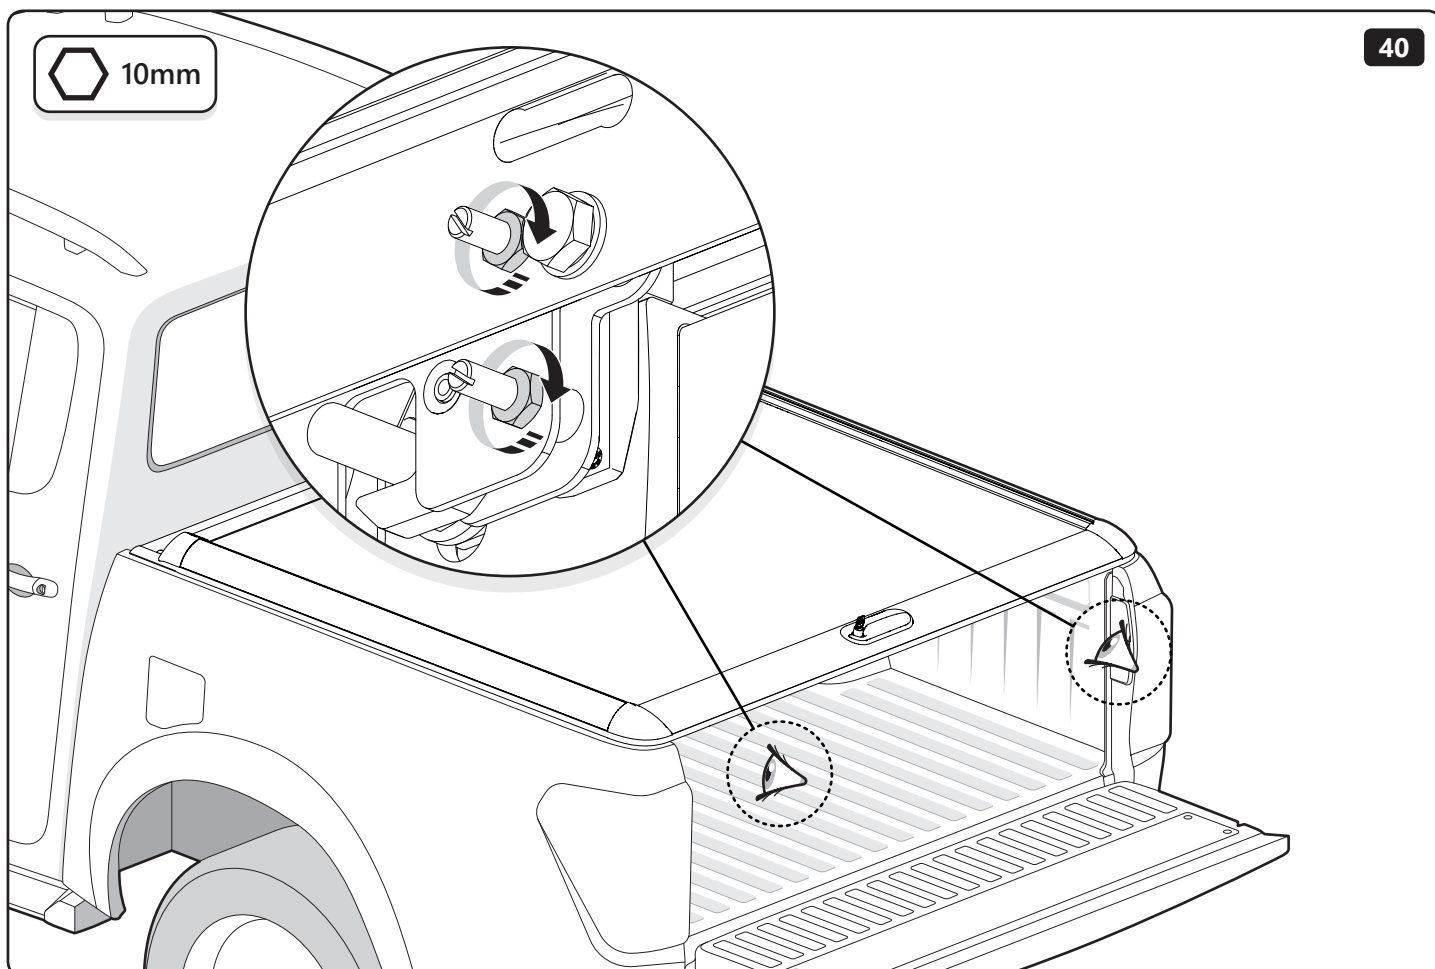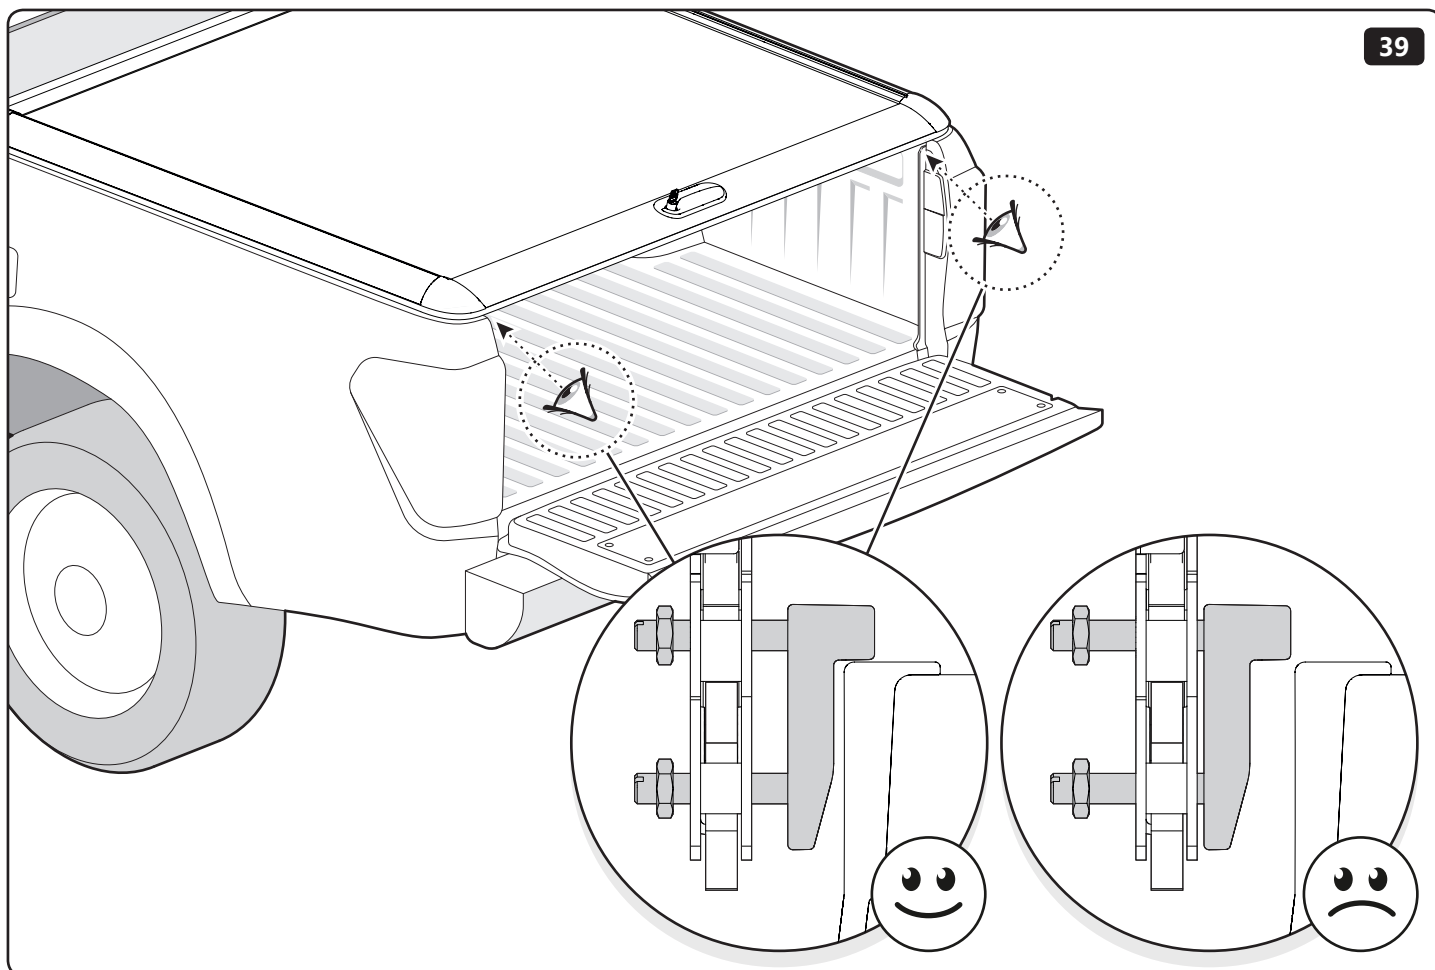

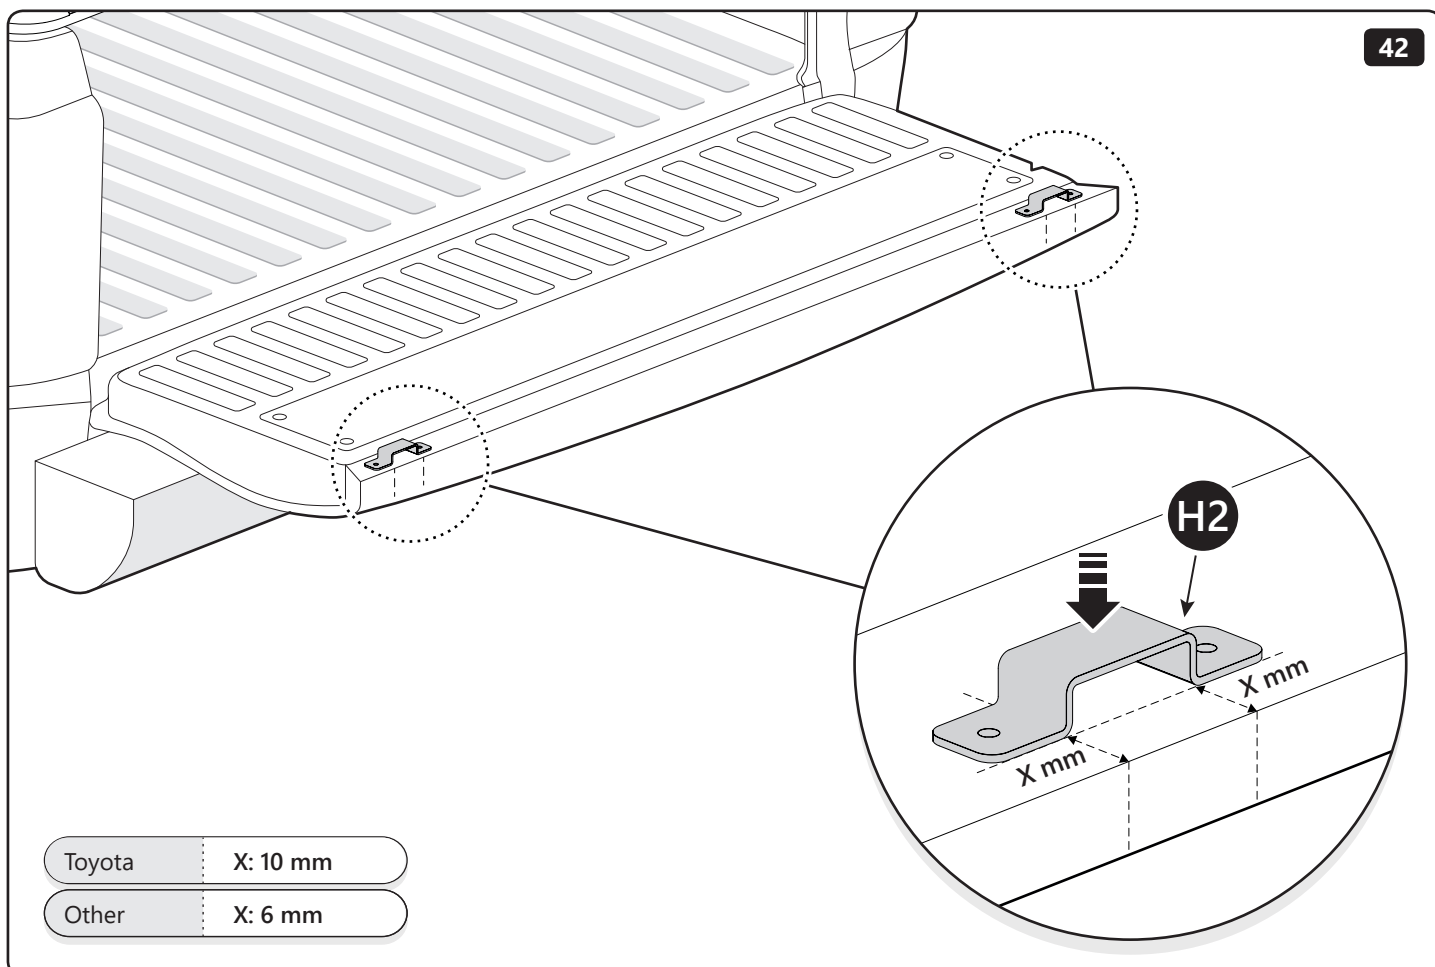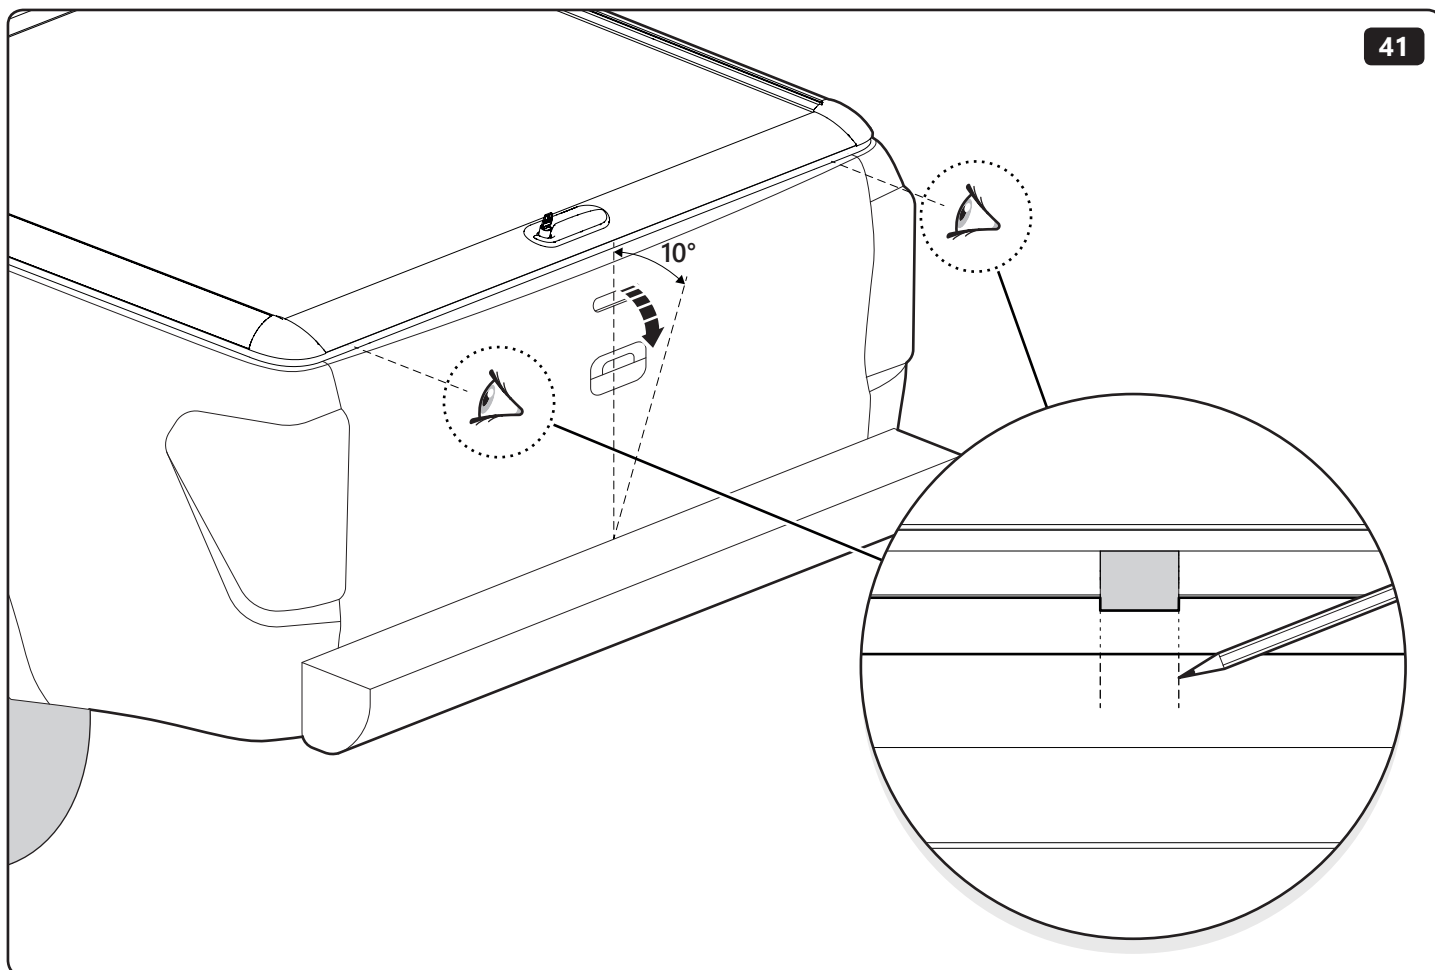

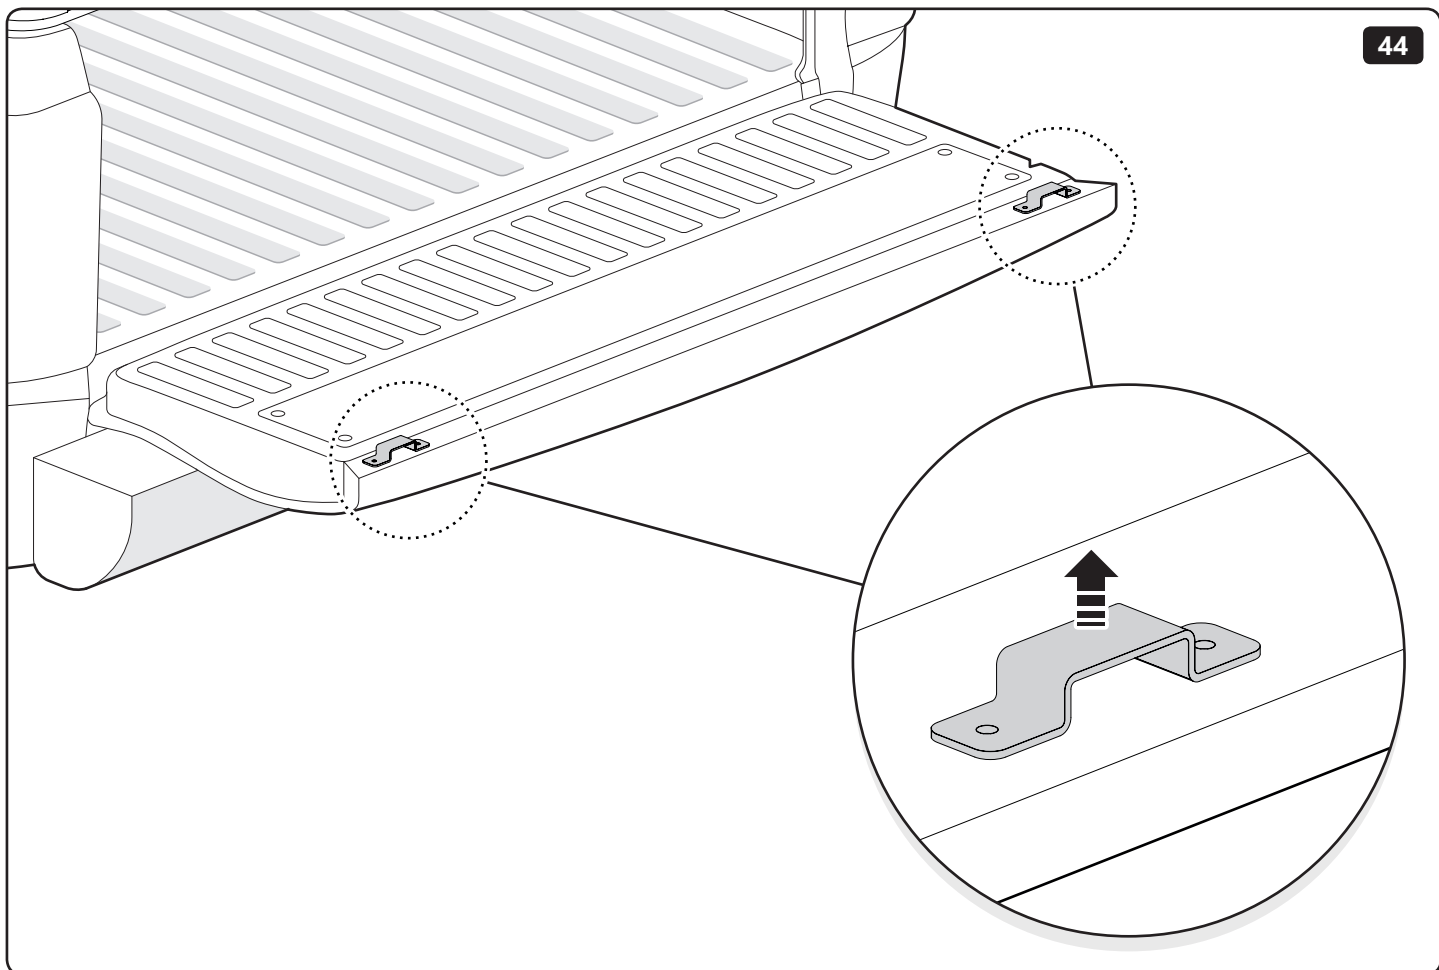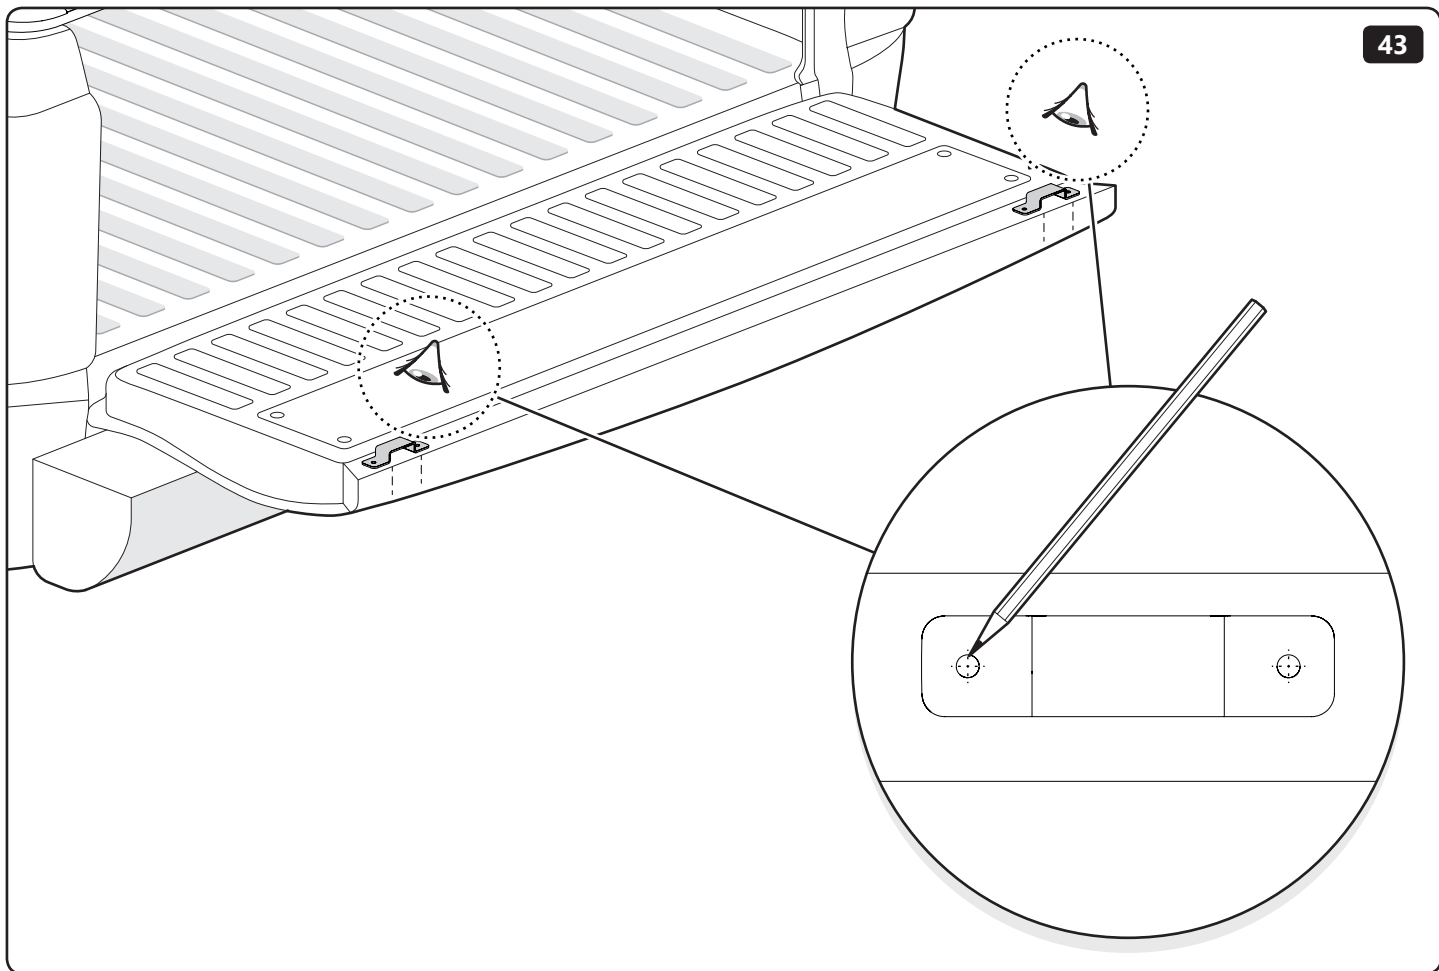

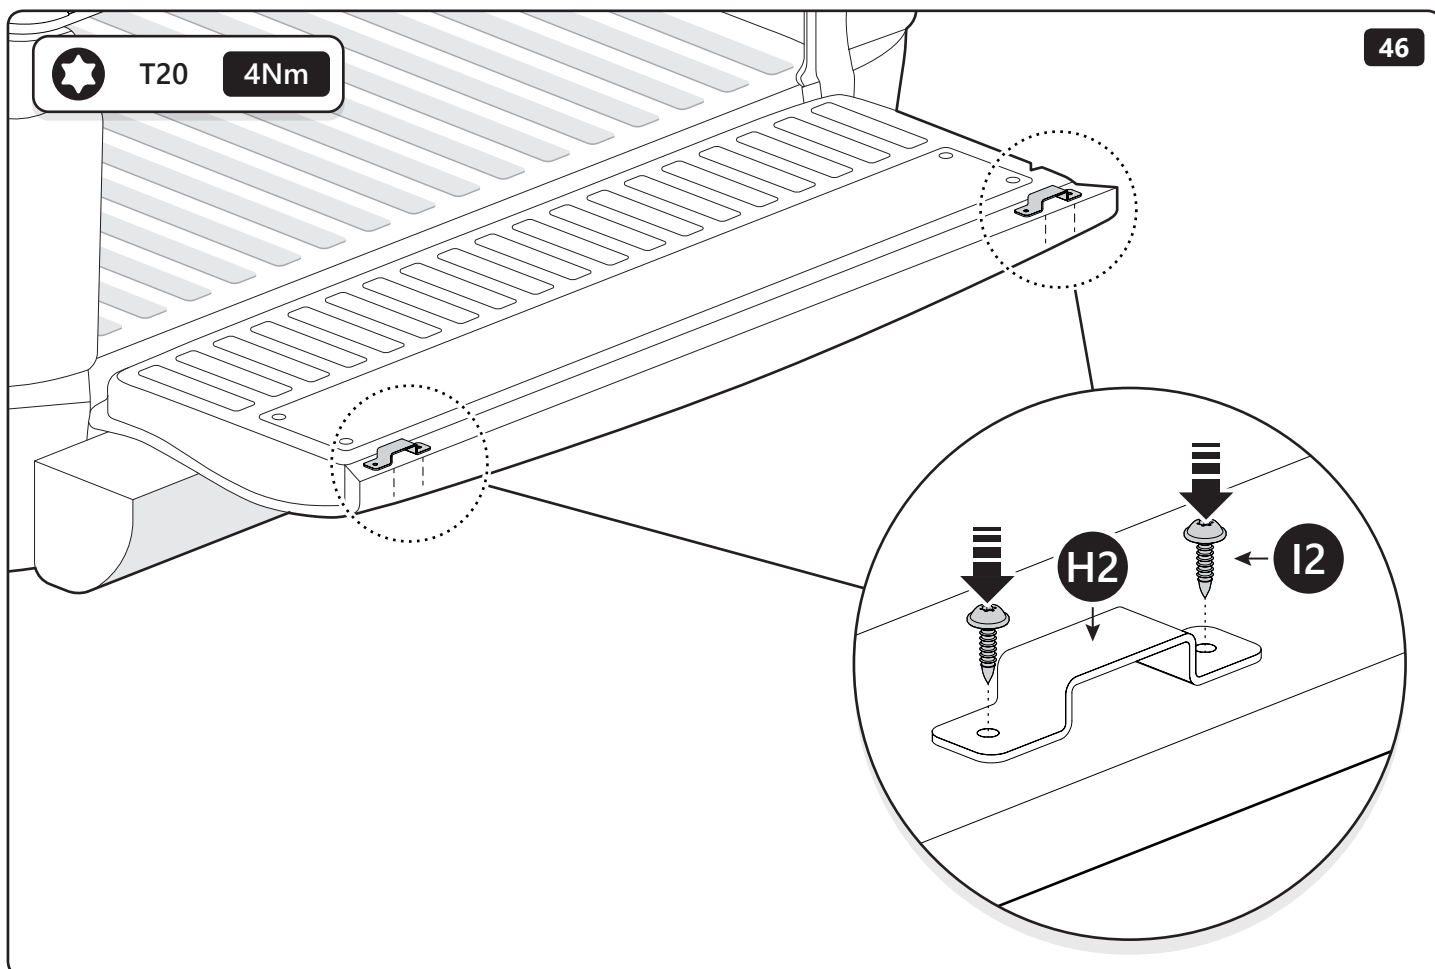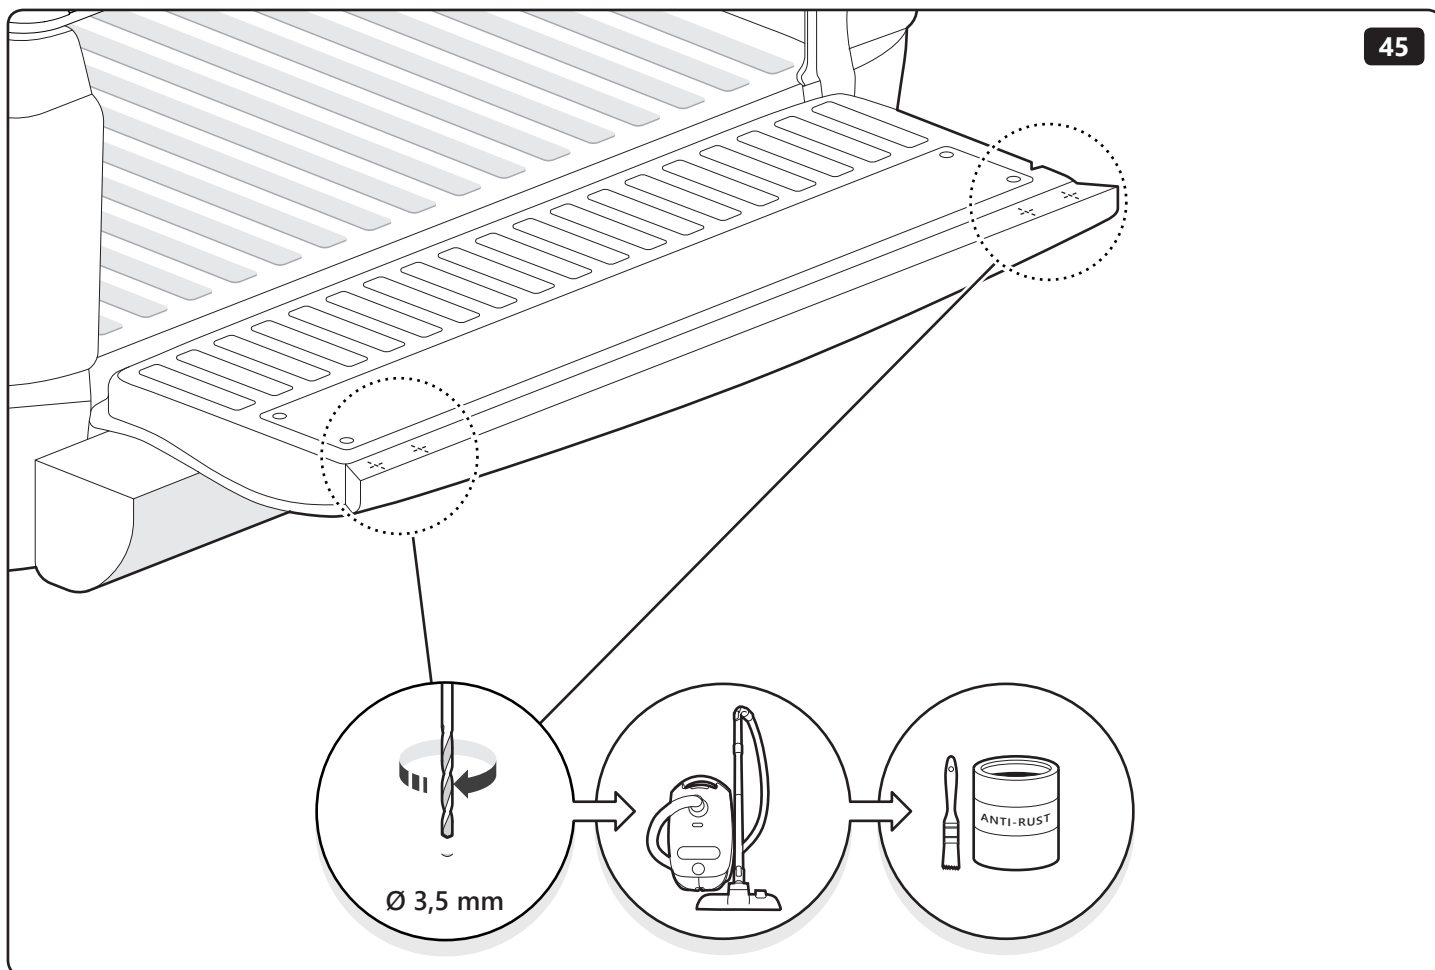



Customer Service	+45 4810 2950 (08:00 - 16:00 CET)
Fax	+45 4810 2960
Support	info@mountaintop.dk
Website	www.mountaintop.dk
Address	Pedersholmparken 10, 3600 Frederikssund, Denmark

PART NUMBER(S)	MODEL / YEAR	CAB TYPE(S)	INSTALLATION TIME	WEIGHT
MT2 TO90/91	Toyota / 2015 →	Double / Extra	1 hour(s)	29 - 40 Kg
MT2 IS90/91	Isuzu / 2006 - 2011	Double / Space	1 hour(s)	29 - 40 Kg
MT2 FO90/91	Ford / 2011 →	Double / Super	1 hour(s)	29 - 40 Kg
MT2 MI91	Mitsubishi / 2015 →	Club	1 hour(s)	29 - 40 Kg
MT2 VW80	Volkswagen / 2010 →	Double	1 hour(s)	29 - 40 Kg

GB	Installation manual	S	Monteringsanvisning	D	Einbauanleitung
SF	Asennusohje	E	Instrucciones de montaje	CZ	Návod k instalaci
F	Notice de montage	H	Szerelési utasítás	I	Istruzioni de montaggio
PL	Instrukcja montażu	P	Instruções de instalação	GR	Οδηγίες Εγκατάστασης
NL	Installatie-instructies	RUS	Инструкция по установке	DK	Monteringsvejledning
TR	Montaj Talimatı	N	Monteringsveiledning	RO	Instructiuni de instalare